CENTER OF TECHNOLOGICAL INITIATIVES, LLC

info@cti-sumy.com.ua

Custom-made machines for you



Welding machine



Semi-automatic welding machine





Welding machine

Welding machine

Contact us:

- m http://cti-sumy.com.ua
- info@cti-sumy.com.ua sales1@cti-sumy.com.ua
- https://www.facebook.com/cti.sumy
- https://www.youtube.com/channel/UCyYGmKVZ2FwZ noX4RV8Is0g

This manual is brought to you by CTI LLC.


We have more than 10 years of experience in machine building and will gladly help you to increase productivity at your manufacturing facility!

Taking into account the peculiarities of your manufacture we can make a custom machine that will help you simplify the production process.

We offer to perform the whole range of works:





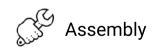

FANUC AC SERVO MOTOR @istimations i series FANUC AC SERVO MOTOR @istimations i series FANUC AC SERVO MOTOR @istimations i series

PARAMETER MANUAL

B-65270EN/06

• No part of this manual may be reproduced in any form.

• All specifications and designs are subject to change without notice.

The products in this manual are controlled based on Japan's "Foreign Exchange and Foreign Trade Law". The export from Japan may be subject to an export license by the government of Japan.

Further, re-export to another country may be subject to the license of the government of the country from where the product is re-exported. Furthermore, the product may also be controlled by re-export regulations of the United States government.

Should you wish to export or re-export these products, please contact FANUC for advice.

In this manual we have tried as much as possible to describe all the various matters. However, we cannot describe all the matters which must not be done, or which cannot be done, because there are so many possibilities.

Therefore, matters which are not especially described as possible in this manual should be regarded as "impossible".

This manual contains the program names or device names of other companies, some of which are registered trademarks of respective owners. However, these names are not followed by [®] or [™] in the main body.

The parameters described in this manual must be set correctly according to the relevant descriptions. If the parameters are not set correctly, vibrations and unpredictable motions can occur. When setting and updating the parameters, place top priority on safety in operation by taking actions, such as lowering the torque limit value, excessive error level, and operation speed, and performing an operation so that an emergency stop can be initiated immediately, until the settings are confirmed to be appropriate.

DEFINITION OF WARNING, CAUTION, AND NOTE

This manual includes safety precautions for protecting the user and preventing damage to the machine. Precautions are classified into Warning and Caution according to their bearing on safety. Also, supplementary information is described as a Note. Read the Warning, Caution, and Note thoroughly before attempting to use the machine.

Applied when there is a danger of the user being injured or when there is a damage of both the user being injured and the equipment being damaged if the approved procedure is not observed.

Applied when there is a danger of the equipment being damaged, if the approved procedure is not observed.

NOTE

The Note is used to indicate supplementary information other than Warning and Caution.

- Read this manual carefully, and store it in a safe place.

TABLE OF CONTENTS

| DE | FINITIO | ON OF | WARNING, CAUTION, AND NOTE | s-1 | | |
|----|-----------|---------------------------|--|-----|--|--|
| 1 | OVERVIEW1 | | | | | |
| | 1.1 | | | | | |
| | | MODE | ΞΔ | 2 | | |
| | 1.2 | ABBR | EVIATIONS OF THE NC MODELS COVERED BY THIS MANUA | ۶L4 | | |
| | 1.3 | RELA | TED MANUALS | 5 | | |
| 2 | SETT | ΓING α | $is/\alpha i f/\beta i s$ series servo parameters | 7 | | |
| | 2.1 | INITIA | ALIZING SERVO PARAMETERS | 8 | | |
| | | 2.1.1 | Before Servo Parameter Initialization | 8 | | |
| | | 2.1.2 | Parameter Initialization Flow | 9 | | |
| | | 2.1.3 | Servo Parameter Initialization Procedure | 10 | | |
| | | 2.1.4 | Setting Servo Parameters when a Separate Detector for the Serial Interface | is | | |
| | | | Used | 29 | | |
| | | 2.1.5 | Setting Servo Parameters when an Analog Input Separate Interface Unit is | | | |
| | | | Used | 40 | | |
| | | 2.1.6 | Setting Parameters when an αiCZ Sensor is Used | 42 | | |
| | | 2.1.7 | Setting Parameters when the PWM Distribution Module is Used | 48 | | |
| | | 2.1.8 | Actions for Illegal Servo Parameter Setting Alarms | 51 | | |
| 3 | αis/a | x <i>i</i> F/β <i>i</i> : | S SERIES PARAMETER ADJUSTMENT | 63 | | |
| | 3.1 | SERV | O TUNING SCREEN | 64 | | |
| | 3.2 | ACTIO | ONS FOR ALARMS | 67 | | |
| | 3.3 | ADJU | STING PARAMETERS FOR HIGH-SPEED AND HIGH-PRECISI | ON | | |
| | | MACH | HINING | 76 | | |
| | | 3.3.1 | Servo HRV Control Adjustment Procedure | 76 | | |
| | | 3.3.2 | High-Speed Positioning Adjustment Procedure | 99 | | |
| | | 3.3.3 | Rapid Traverse Positioning Adjustment Procedure | 102 | | |
| | | 3.3.4 | Vibration in the Stop State | 107 | | |
| | | 3.3.5 | Vibration during Travel | 109 | | |
| | | 3.3.6 | Stick Slip | 111 | | |
| | | 3.3.7 | Overshoot | 112 | | |
| 4 | SER\ | | NCTION DETAILS | 113 | | |
| | 4.1 | | O HRV CONTROL | | | |

| | 4.1.1 | Servo HRV2 Control | 117 |
|-----|-------|---|-----|
| 4.2 | HIGH- | SPEED HRV CURRENT CONTROL | 122 |
| | 4.2.1 | Servo HRV3 Control | 122 |
| | 4.2.2 | Servo HRV4 Control | 128 |
| | 4.2.3 | High-speed HRV Current Control | 133 |
| 4.3 | CUTT | ING/RAPID SWITCHING FUNCTION | 134 |
| 4.4 | VIBRA | ATION SUPPRESSION IN THE STOP STATE | 140 |
| | 4.4.1 | Velocity Loop High Cycle Management Function | 140 |
| | 4.4.2 | Acceleration Feedback Function | 142 |
| | 4.4.3 | Variable Proportional Gain Function in the Stop State | 144 |
| | 4.4.4 | N Pulses Suppression Function | 148 |
| 4.5 | MACH | INE RESONANCE ELIMINATION FUNCTION | 150 |
| | 4.5.1 | Torque Command Filter (Middle-Frequency Resonance Elimination Filter) | 150 |
| | 4.5.2 | Resonance Elimination Filter Function | |
| | | (High-Frequency Resonance Elimination Filter) | 152 |
| | 4.5.3 | Disturbance Elimination Filter Function | |
| | | (Low-Frequency Resonance Elimination Filter) | 158 |
| | 4.5.4 | Observer Function | 162 |
| | 4.5.5 | Current Loop 1/2 PI Control Function | 166 |
| | 4.5.6 | Vibration Damping Control Function | 168 |
| | 4.5.7 | Dual Position Feedback Function (Optional function) | 170 |
| | 4.5.8 | Machine Speed Feedback Function | 176 |
| 4.6 | CONT | OUR ERROR SUPPRESSION FUNCTION | 179 |
| | 4.6.1 | Feed-forward Function | 179 |
| | 4.6.2 | Advanced Preview Feed-forward Function | 183 |
| | 4.6.3 | RISC Feed-forward Function | 186 |
| | 4.6.4 | Cutting/Rapid Feed-forward Switching Function | 188 |
| | 4.6.5 | Feed-forward Timing Adjustment Function | 190 |
| | 4.6.6 | Backlash Acceleration Function | 193 |
| | 4.6.7 | Two-stage Backlash Acceleration Function | 199 |
| | 4.6.8 | Static Friction Compensation Function | 214 |
| | 4.6.9 | Torsion Preview Control Function | 217 |
| 4.7 | OVER | SHOOT COMPENSATION FUNCTION | 227 |
| 4.8 | HIGH | SPEED POSITIONING FUNCTION | 233 |
| | 4.8.1 | Position Gain Switching Function | 233 |
| | 4.8.2 | Low-speed Integral Function | 237 |
| | 4.8.3 | Fine Acceleration/Deceleration (FAD) Function | 239 |

| 4.9 | SERIA | L FEEDBACK DUMMY FUNCTIONS | . 248 |
|------|---------|--|-------|
| | 4.9.1 | Serial Feedback Dummy Functions | 248 |
| | 4.9.2 | How to Use the Dummy Feedback Functions for a Multiaxis Servo Amplifier | ſS |
| | | when an Axis is not in Use | 250 |
| 4.10 | BRAKE | E CONTROL FUNCTION | . 251 |
| 4.11 | QUICK | STOP FUNCTION | . 255 |
| | 4.11.1 | Quick Stop Type 1 at Emergency Stop | 255 |
| | 4.11.2 | Quick Stop Type 2 at Emergency Stop | 257 |
| | 4.11.3 | Lifting Function Against Gravity at Emergency Stop | 258 |
| | 4.11.4 | Quick Stop Function for Hardware Disconnection of Separate Detector | 262 |
| | 4.11.5 | Quick Stop Function at OVL and OVC Alarm | 264 |
| | 4.11.6 | Overall Use of the Quick Stop Functions | 265 |
| 4.12 | UNEXF | PECTED DISTURBANCE TORQUE DETECTION FUNCTION | |
| | (Option | nal function) | . 266 |
| | 4.12.1 | Unexpected Disturbance Torque Detection Function | 266 |
| | 4.12.2 | Cutting/Rapid Unexpected Disturbance Torque Detection Switching Function | n277 |
| 4.13 | FUNCT | FION FOR OBTAINING CURRENT OFFSETS AT EMERGENCY | |
| | STOP. | | . 279 |
| 4.14 | LINEA | R MOTOR PARAMETER SETTING | . 280 |
| | 4.14.1 | Procedure for Setting the Initial Parameters of Linear Motors | 280 |
| | 4.14.2 | Detection of an Overheat Alarm by Servo Software when a Linear Motor and | l |
| | | a Synchronous Built-in Servo Motor are Used | 307 |
| | 4.14.3 | Smoothing Compensation for Linear Motor | 310 |
| 4.15 | SYNC | HRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING | . 320 |
| | 4.15.1 | Procedure for Setting the Initial Parameters of Synchronous Built-in Servo | |
| | | Motors | 320 |
| | 4.15.2 | Detection of an Overheat Alarm by Servo Software when a Synchronous | |
| | | Built-in Servo Motor are Used | 346 |
| | 4.15.3 | Smoothing Compensation for Synchronous Built-in Servo Motor | 346 |
| 4.16 | TORQ | JE CONTROL FUNCTION | . 351 |
| 4.17 | TANDE | EM DISTURBANCE ELIMINATION CONTROL | |
| | (POSIT | FION TANDEM) (Optional function) | . 354 |
| 4.18 | SYNC | HRONOUS AXES AUTOMATIC COMPENSATION | . 362 |
| 4.19 | TORQ | UE TANDEM CONTROL FUNCTION (Optional function) | . 366 |
| | 4.19.1 | Preload Function | |
| | 4.19.2 | Damping Compensation Function | |
| | 4.19.3 | Velocity Feedback Average Function | 377 |

| | | 4.19.4 Servo Alarm 2-axis Simultaneous Monitor Function | 377 |
|--------|------|--|-----|
| | | 4.19.5 Motor Feedback Sharing Function | 379 |
| | | 4.19.6 Full-closed Feedback Sharing Function | 380 |
| | | 4.19.7 Adjustment | 381 |
| | | 4.19.8 Cautions for Controlling One Axis with Two Motors | |
| | | 4.19.9 Block Diagrams | 387 |
| | 4.20 | SERVO TUNING TOOL SERVO GUIDE | 388 |
| | | 4.20.1 SERVO GUIDE | |
| 5 | DETA | ALS OF PARAMETERS | 400 |
| | 5.1 | DETAILS OF THE SERVO PARAMETERS FOR Series 30 <i>i</i> , 31 <i>i</i> , 32 <i>i</i> , | |
| | | 15 <i>i</i> , 16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> , 0 <i>i</i> , 20 <i>i</i> , Power Mate <i>i</i> (SERIES 90D0, 90E0, 90B0, | |
| | | 90B1, 90B6, 90B5, AND 9096) | 401 |
| 6 | PAR | AMETER LIST | 427 |
| Ŭ | 6.1 | PARAMETERS FOR HRV1 CONTROL | |
| | 6.2 | PARAMETERS FOR HRV2 CONTROL | |
| | 6.3 | PARAMETERS FOR HRV1 CONTROL (FOR Series 0 <i>i</i> -A) | |
| | | | |
| AP | PEND | IX | |
| Α | ANAI | _OG SERVO INTERFACE SETTING PROCEDURE | 457 |
| в | PARA | AMETERS SET WITH VALUES IN DETECTION UNITS | 464 |
| | B.1 | PARAMETERS FOR Series 15 <i>i</i> | 465 |
| | B.2 | PARAMETERS FOR Series 16 <i>i</i> , 18 <i>i</i> , AND 21 <i>i</i> | 467 |
| | B.3 | PARAMETERS FOR THE Power Mate <i>i</i> | 469 |
| | B.4 | PARAMETERS FOR Series 30 <i>i</i> , 31 <i>i</i> , AND 32 <i>i</i> | 471 |
| С | FUNC | CTION-SPECIFIC SERVO PARAMETERS | 473 |
| D | PAR/ | AMETERS RELATED TO HIGH-SPEED AND | |
| | | PRECISION OPERATIONS | 481 |
| | D.1 | MODEL-SPECIFIC INFORMATION | |
| | 0.1 | D.1.1 Series 15 <i>i</i> -MB. | |
| | | D.1.2 Series 16 <i>i</i> /18 <i>i</i> /21 <i>i</i> /0 <i>i</i> /0 <i>i</i> Mate-MB, 0 <i>i</i> /0 <i>i</i> Mate-MC/20 <i>i</i> -FB | |
| | | D.1.3 Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> -A, 31 <i>i</i> -A5 | |
| | D.2 | SERVO PARAMETERS RELATED TO HIGH-SPEED AND | |
| | | - | |
| | | HIGH PRECISION OPERATIONS | 498 |
| F | | | |
| E F | | HIGH PRECISION OPERATIONS OCITY LIMIT VALUES IN SERVO SOFTWARE O FUNCTIONS | 505 |

| G | PARA | AMETERS FOR α AND OTHER SERIES | 513 |
|---|------|--|-----|
| | G.1 | MOTOR ID NUMBERS OF α SERIES MOTORS | 514 |
| | G.2 | MOTOR ID NUMBERS OF β SERIES MOTORS | 516 |
| | G.3 | MOTOR ID NUMBERS OF CONVENTIONAL LINEAR MOTORS | 517 |
| | G.4 | PARAMETERS FOR SERVO HRV2 CONTROL | 518 |
| | G.5 | HRV1 CONTROL PARAMETERS FOR α SERIES, β SERIES, AND | |
| | | CONVENTIONAL LINEAR MOTORS | 519 |
| | G.6 | HRV2 CONTROL PARAMETERS FOR β M SERIES MOTORS | 528 |
| Н | DETA | AILS OF HIGH-SPEED AND HIGH-PRECISION | |
| | ADJL | JSTMENT | 530 |
| | SED/ | O CHECK BOARD OPERATING PROCEDURE | 555 |
| • | | | |

OVERVIEW

This manual describes the servo parameters of the CNC models using FANUC AC SERVO MOTOR αiS , αiF , and βiS series. The descriptions include the servo parameter start-up and adjustment procedures. The meaning of each parameter is also explained.


1.1 SERVO SOFTWARE AND SERVO CARDS SUPPORTED BY EACH NC MODEL

| NC product name | Series and edition of applicable servo software | Servo card |
|---|---|---|
| | Series 9096/A(01) and subsequent editions (Supporting <i>i</i> series CNC and SERVO HRV1 control) (Note2) | 320C52 servo card |
| Power Mate <i>i</i> -MODEL D (Note1) | Series 90B0/H(08) and subsequent editions Series 90B6/A(01) and subsequent editions (Supporting <i>i</i> series CNC and SERVO HRV1, 2, and 3 control) (Note3) Series 90B1/A(01) and subsequent editions (Note3) | |
| Series 0 <i>i-</i> MODEL C Series 0 <i>i</i> Mate-MODEL C Series 20 <i>i-</i> MODEL B | Series 90B5/A(01) and subsequent editions (Supporting <i>i</i> series CNC and SERVO HRV1, 2, and 3 control) (Note4) | 320C5410 servo card |
| Series 30 <i>i-</i> MODEL A Series 31 <i>i-</i> MODEL A | Series 90D0/A(01) and subsequent editions (Supporting <i>i</i> series CNC and SERVO HRV4 control) (Note5, Note6) | Servo card for FS30 <i>i</i> servo HRV4 control |
| Series 32 <i>i</i> -MODEL A | Series 90E0/A(01) and subsequent editions (Supporting <i>i</i> series CNC and SERVO HRV2 and 3 control) (Note6) | Servo card for FS30 <i>i</i> servo HRV2 and 3 control |

NOTE

 The servo software series of the Series 21*i*-MODEL B, 0*i*-MODEL B, 0*i* Mate MODEL B, or Power Mate *i*-MODEL D/H depends on the incorporated servo card, as shown below:

| Servo software | Servo card |
|----------------------------|---------------------|
| Series 9096 | 320C52 servo card |
| Series 90B0 or Series 90B6 | 320C5410 servo card |

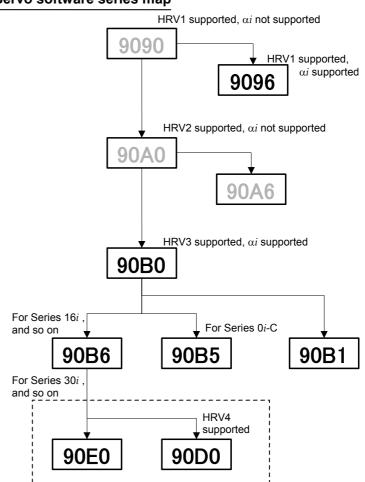

Servo software series map

NOTE

- 1 The servo software Series 9096 is compatible with the conventional servo software Series 9090 except for the following function:
 - Electric gear box (EGB) function can not be used.
- 2 The servo software Series 90B0 is upwardly compatible with the conventional servo software Series 90A0. Series 90B6 is a successor of Series 90B0. Series 90B1 is a special series compatible with Series 90B0 and is required when a PWM distribution module or pulse input DSA is used.
- 3 Servo software Series 90B5, which is a successor of Series 90B0 and supports the same functions as Series 90B6, is used in the Series 0*i*-MODEL C, 0*i* Mate-MODEL C, and 20*i*-MODEL B.
- 4 When using servo HRV4 control with Series 30*i*-MODEL A and 31*i*-MODEL A, use Series 90D0.
- 5 Servo software Series 90D0 and 90E0 is upwardly compatible with conventional servo software Series 90B0 except the following functions:
 - Fine Acc./Dec. (FAD) function can not be used.
 - HRV1 control can not be used.

1.2 ABBREVIATIONS OF THE NC MODELS COVERED BY THIS MANUAL

In this manual, the NC product names are abbreviated as follows.

| NC product name | | Abbreviations | |
|--------------------------------------|--|---|-------------------------------------|
| FANUC Series 30 <i>i</i> -MODEL A | Series 30 <i>i</i> -A | Series 30i | Series 30 <i>i</i> |
| FANUC Series 31 <i>i</i> -MODEL A | Series 31 <i>i</i> -A | Series 31 <i>i</i> | FS30 <i>i</i> |
| FANUC Series 32 <i>i</i> -MODEL A | Series 32 <i>i</i> -A | Series 32i | 1 330/ |
| FANUC Series 15 <i>i</i> -MODEL B | Series 15 <i>i</i> -B | Series 15i | Series 15 <i>i</i> FS15 <i>i</i> |
| FANUC Series 16 <i>i</i> -MODEL B | Series 16 <i>i</i> -B | Series 16i | |
| FANUC Series 18 <i>i</i> -MODEL B | Series 18 <i>i</i> -B | Series 18i | |
| FANUC Series 20 <i>i</i> -MODEL B | Series 20 <i>i</i> -B | Series 20 <i>i</i> FS20 <i>i</i> | |
| FANUC Series 21 <i>i</i> -MODEL B | Series 21 <i>i</i> -B | Series 21 <i>i</i> | Series 16 <i>i</i> and so on |
| FANUC Series 0 <i>i</i> -MODEL C | Series 0 <i>i</i> -C | | Series 16 <i>i</i> etc. |
| FANUC Series 0 <i>i</i> Mate-MODEL C | Series 0i Mate-C | Series 0 <i>i</i> | FS16 <i>i</i> and so on |
| FANUC Series 0 <i>i</i> -MODEL B | Series 0 <i>i</i> -B | FS0i | FS16 <i>i</i> etc. |
| FANUC Series 0 <i>i</i> Mate-MODEL B | Series 0i Mate-B | | |
| FANUC Power Mate <i>i</i> -MODEL D | Power Mate <i>i-</i> D PM <i>i-</i> D | Power Mate <i>i</i> Power Mate <i>i</i> -D/H | |
| FANUC Power Mate <i>i</i> -MODEL H | Power Mate <i>i</i> -H PM <i>i</i> -H | (Note 1) | |

NOTE

In this manual, Power Mate *i* refers to the Power Mate *i*-D, and Power Mate *i*-H.

1.3 RELATED MANUALS

The following seven kinds of manuals are available for FANUC AC SERVO MOTOR αiS , αiF or βiS series.

In the table, this manual is marked with an asterisk (*).

| Document name | Document number | Major contents | Major usage | |
|---|--|---|--|---|
| FANUC AC SERVO MOTOR α <i>i</i> S series FANUC AC SERVO MOTOR α <i>i</i> F series DESCRIPTIONS | B-65262EN | Specification | - Soloction of motor | |
| FANUC AC SERVO MOTOR β <i>i</i> S series DESCRIPTIONS | B-65302EN | | Selection of motorConnection of motor | |
| FANUC LINEAR MOTOR series DESCRIPTIONS | B-65222EN | Connections | | |
| FANUC SERVO AMPLIFIER α <i>i</i> SV series DESCRIPTIONS | B-65282EN | Specifications and functionsInstallation | Selection of amplifier | |
| FANUC SERVO AMPLIFIER β <i>i</i> SV series DESCRIPTIONS | B-65322EN | External dimensions and maintenance area Connections | Connection of amplifier | |
| FANUC AC SERVO MOTOR α <i>i</i> S series FANUC AC SERVO MOTOR α <i>i</i> F series FANUC AC SPINDLE MOTOR α <i>i</i> series FANUC SERVO AMPLIFIER α <i>i</i> series MAINTENANCE MANUAL | B-65285EN | Start up procedure Troubleshooting | Start up the system (Hardware) Troubleshooting | |
| FANUC AC SERVO MOTOR βi S series FANUC AC SPINDLE MOTOR βi series FANUC SERVO AMPLIFIER βi series MAINTENANCE MANUAL | B-65325EN | Maintenance of motor | Maintenance of motor | |
| FANUC AC SERVO MOTOR αi S series | | | | |
| FANUC AC SERVO MOTOR αi F series FANUC AC SERVO MOTOR βi S series PARAMETER MANUAL | Setting parameters Setting parameters Turning the system | | Start up the system (Software) Turning the system | * |
| FANUC AC SPINDLE MOTOR αi series FANUC AC SPINDLE MOTOR βi series PARAMETER MANUAL | B-65280EN | Description of parameters (Parameters) | | |

Table 1.3 Related manuals of SERVO MOTOR $\alpha i S / \alpha i F / \beta i S$ series

ne

Other manufactures' products referred to in this manual

- * IBM is registered trademark of International Business Machines Corporation.
- * MS-DOS and Windows are registered trademarks of Microsoft Corporation.

All other product names identified throughout this manual are trademarks or registered trademarks of their respective companies.

In this manual, the servo parameters are explained using the following notation:

(Example)

| Series 15i | Servo parameter function nam |
|---------------------------------------|------------------------------|
| No.1875(FS15i) | Load inertia ratio |
| No.2021(FS30 <i>i</i> , 16 <i>i</i>) | |

Series 30*i*, 31*i*, 32*i*, 16*i*, 18*i*, 21*i*, 0*i*, Power Mate *i*

The following $\alpha i/\beta i$ Pulsecoders are available.

| Pulsecoder name | Resolution | Туре |
|-------------------|----------------------|-------------|
| α <i>i</i> A1000 | 1,000,000 pulse/rev | Absolute |
| α <i>i</i> I1000 | 1,000,000 pulse/rev | Incremental |
| α <i>i</i> A16000 | 16,000,000 pulse/rev | Absolute |
| β <i>İ</i> A128 | 131,072 pulse/rev | Absolute |
| β iA64 | 65,536 pulse/rev | Absolute |

When parameters are set, these pulse coders are all assumed to have a resolution of 1,000,000 pulses per motor revolution.

| NOTE |
|---|
| The effect of $lpha i$ A16000 can be increased when |
| used together with AI nano contour control. |

2 SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS


2.1 INITIALIZING SERVO PARAMETERS

2.1.1 Before Servo Parameter Initialization

Before starting servo parameter initialization, confirm the following:<1> NC model(ex.: Series 16i-B)<2> Servo motor model(ex.: αiF8/3000)<3> Pulsecoder built in a motor(ex.: αiA1000)<4> Is the separate position detector used?(ex.: Not used)<5> Distance the machine tool moves per revolution of the motor
(ex.:10 mm per one revolution)<6> Machine detection unit(ex.:0.001 mm)<7> NC command unit(ex.:0.001 mm)

2.1.2 Parameter Initialization Flow

On the servo setting and servo adjustment screens, set the following:

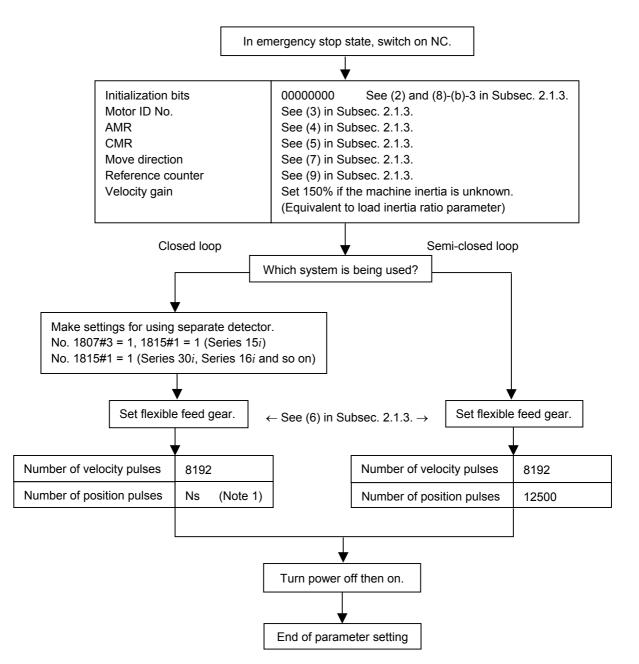

NOTE

When a separate detector of A/B phase parallel type and a serial linear scale are used, Ns indicates the number of feedback pulses per motor revolution, sent from the separate detector.
 When a serial rotary scale is used, the number of pulses is calculated using following expression: 12500 × (gear reduction ratio between the motor and table) See (8)-(b)-2 in Subsec. 2.1.3.

2.1.3 Servo Parameter Initialization Procedure

(1) Preparation

Switch on the NC in an emergency stop state. Enable parameter writing (PWE = 1). Initialize servo parameters on the servo setting screen. For a Power Mate *i* with no CRT, specify a value for an item number on the servo setting screen. See Fig. 2.1.3. To display the servo setting screen, follow the procedure below, using the key on the NC.

- Series 15*i*

Press the SYSTEM key several times, and the servo setting screen will appear.

- Series30*i*,31*i*,32*i*,16*i*,18*i*,21*i*,20*i*,0*i*

$$\overbrace{\text{SYSTEM}} \longrightarrow [\text{SYSTEM}] \rightarrow [\rhd] \rightarrow [\text{SV-PRM}]$$

If no servo screen appears, set the following parameter as shown, and switch the NC off and on again.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------|----|----|----|----|----|----|----|-----|
| 3111 | | | | | | | | SVS |
| | | | | | - | | | |

SVS (#0) 1: Displays the servo screen.

When the following screen appears, move the cursor to the item you want to specify, and enter the value directly.


| | | Power Mate |
|----------|---|---|
| 010 | 000 N0000 | |
| X axis | Z axis | |
| 00001010 | 00001010 | No.2000 |
| 16 | 16 | No.2020 |
| 00000000 | 0000000 | No.2001 |
| 2 | 2 | No.1820 |
| 1 | 1 | No.2084 |
| 100 | 100 | No.2085 |
| 111 | 111 | No.2022 |
| 8192 | 8192 | No.2023 |
| 12500 | 12500 | No.2024 |
| 10000 | 10000 | No.1821 |
| | | |
| | X axis 00001010 16 00000000 2 1 100 111 8192 12500 | 00001010 00001010 16 16 00000000 00000000 2 2 1 1 100 100 111 111 8192 8192 12500 12500 10000 10000 |

Fig. 2.1.3 Servo setting screen

Correspondence of Power Mate *i*

(2) Initialization

Start initialization. **Do not power off the NC until step (11).**

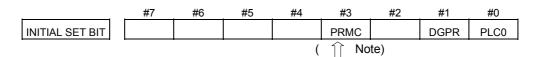

Reset initialization bit 1 to 0.

DGPR(#1)=0

After initialization is completed, DGPR (#1) is set to 1.

NOTE

Once initialization has been completed, bit 3 (PRMC) for initialization is automatically set to 1. (Except Series 30i, 31i and 32i)

(3) Motor ID No. setting

Specify the motor ID number.

Select the motor ID number of a motor to be used according to the motor model and motor specification (the middle four digits in A06B-****-B***) listed in the following tables.

When using servo HRV3 or HRV4 control, please use the motor ID number for servo HRV2 control. It is available with the series and editions listed in the table and later editions.

The mark "x" indicates a value that varies depending on the used options.

The mark "-" indicates that automatic loading of standard parameters is not supported as of December, 2005.

NOTE

- Series 30*i*, 31*i* and 32*i* Specify the motor ID number for servo HRV2 control.
- Other than the Series 30*i*, 31*i* and 32*i*

When a pair of the values set in parameter No. 1023 (servo axis number) are consecutive odd and even numbers, set motor ID numbers for servo HRV control of the same type.

(Correct examples)

Servo axes when parameter No.1023= 1,2: Motor ID number for servo HRV2 control Servo axes when parameter No.1023= 3,4: Motor ID number for servo HRV1 control (Wrong examples)

Servo axes when parameter No.1023= 1: Motor ID number for servo HRV2 control Servo axes when parameter No.1023= 2,3: Motor ID number for servo HRV1 control

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS B-65270EN/06

| Motor model | Motor specification | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 | | | | |
|----------------------|------------------------|---------------|----------------|--------------|------|--------------|------|------|--|--|--|--|
| αi S2/5000 | 0212 | 162 | 262 | А | Н | Α | А | А | | | | |
| αi S2/6000 | 0218 | - | 284 | G | - | В | В | - | | | | |
| α <i>i</i> S4/5000 | 0215 | 165 | 265 | А | Н | Α | А | А | | | | |
| lpha iS8/4000 | 0235 | 185 | 285 | А | Н | А | А | А | | | | |
| α <i>i</i> S8/6000 | 0232 | - | 290 | G | - | В | В | - | | | | |
| α <i>İ</i> S12/4000 | 0238 | 188 | 288 | Α | Н | А | Α | А | | | | |
| α <i>i</i> S22/4000 | 0265 | 215 | 315 | Α | Н | А | Α | А | | | | |
| α <i>i</i> S30/4000 | 0268 | 218 | 318 | А | Н | Α | А | А | | | | |
| α <i>i</i> S40/4000 | 0272 | 222 | 322 | А | Н | Α | А | А | | | | |
| α <i>i</i> S50/3000 | 0275-Bx0x | 224 | 324 | В | V | Α | А | F | | | | |
| lpha iS50/3000 FAN | 0275-Bx1x | 225 | 325 | А | Ν | А | А | D | | | | |
| lpha iS100/2500 | 0285 | 235 | 335 | А | Т | Α | А | F | | | | |
| α <i>i</i> S200/2500 | 0288 | 238 | 338 | А | Т | А | А | F | | | | |
| α <i>i</i> S300/2000 | 0292 | 115 | 342 | В | V | А | А | - | | | | |
| lpha iS500/2000 | 0295 | 245 | 345 | А | Т | А | А | F | | | | |

α*i*S series servo motor

α*i*F series servo motor

| Motor model | Motor specification | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 | |
|-------------------------|------------------------|---------------|----------------|--------------|------|--------------|------|------|--|
| α <i>İ</i> F1/5000 | 0202 | 152 | 252 | А | Н | А | А | А | |
| α <i>İ</i> F2/5000 | 0205 | 155 | 255 | А | Н | А | А | А | |
| α <i>İ</i> F4/4000 | 0223 | 173 | 273 | А | Н | А | А | А | |
| α <i>İ</i> F8/3000 | 0227 | 177 | 277 | А | Н | А | А | А | |
| α <i>i</i> F12/3000 | 0243 | 193 | 293 | А | Н | А | А | А | |
| α <i>i</i> F22/3000 | 0247 | 197 | 297 | А | Н | А | А | А | |
| α <i>İ</i> F30/3000 | 0253 | 203 | 303 | А | Н | А | А | А | |
| α <i>i</i> F40/3000 | 0257-Bx0x | 207 | 307 | А | Н | А | А | А | |
| α <i>İ</i> F40/3000 FAN | 0257-Bx1x | 208 | 308 | А | I | А | А | С | |

B-65270EN/06

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| als series servo motor (for 400-v driving) | | | | | | | | | | | |
|--|---------------------|---------------|----------------|--------------|------|--------------|------|------|--|--|--|
| Motor model | Motor specification | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 | | | |
| lpha iS2/5000HV | 0213 | 163 | 263 | А | Q | А | А | D | | | |
| lpha iS2/6000HV | 0219 | - | 287 | G | - | В | В | - | | | |
| lpha iS4/5000HV | 0216 | 166 | 266 | А | Q | А | А | D | | | |
| lpha iS8/4000HV | 0236 | 186 | 286 | А | Ν | А | А | D | | | |
| lpha iS8/6000HV | 0233 | - | 292 | G | - | В | В | - | | | |
| lpha iS12/4000HV | 0239 | 189 | 289 | А | Ν | А | А | D | | | |
| lpha iS22/4000HV | 0266 | 216 | 316 | А | Ν | А | А | D | | | |
| lpha iS30/4000HV | 0269 | 219 | 319 | А | Ν | А | А | D | | | |
| lpha iS40/4000HV | 0273 | 223 | 323 | А | Ν | А | А | D | | | |
| lpha iS50/3000HV FAN | 0276-Bx1x | 226 | 326 | А | Ν | А | А | D | | | |
| lpha iS50/3000HV | 0276-Bx0x | 227 | 327 | В | V | А | А | F | | | |
| lpha iS100/2500HV | 0286 | 236 | 336 | В | V | А | А | F | | | |
| lpha iS200/2500HV | 0289 | 239 | 339 | В | V | А | А | F | | | |
| α <i>i</i> S300/2000HV | 0293 | 243 | 343 | В | V | А | А | F | | | |
| α <i>i</i> S500/2000HV | 0296 | 246 | 346 | В | V | А | А | F | | | |
| lpha iS1000/2000HV | 0298 | 248 | 348 | В | V | А | А | F | | | |
| aiS2000/2000HV (Note 1) | 0091 | - | 340 | J | - | В | В | - | | | |

aiS series servo motor (for 400-V driving)

NOTE

1 The model needs manual setting. (See Subsection 2.1.7, "Setting Parameters when the PWM Distribution Module is used".) When using the torque control function, contact FANUC.

| | | | , | | | 8) | | |
|----------------------|------------------------|---------------|----------------|--------------|------|--------------|------|------|
| Motor model | Motor specification | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
| α <i>i</i> F4/4000HV | 0225 | 175 | 275 | А | Q | А | А | Е |
| lpha iF8/3000HV | 0229 | 179 | 279 | А | Q | А | А | Е |
| lpha iF12/3000HV | 0245 | 195 | 295 | А | Q | А | А | Е |
| lpha iF22/3000HV | 0249 | 199 | 299 | Α | Q | А | А | Е |

aiF series servo motor (for 400-V driving)

αC*i* series servo motor

| Motor model | Motor specification | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|--------------------|------------------------|---------------|----------------|--------------|------|--------------|------|------|
| αC4/3000 <i>i</i> | 0221 | 171 | 271 | A | Н | A | А | А |
| αC8/2000 <i>i</i> | 0226 | 176 | 276 | A | Н | A | A | A |
| αC12/2000 <i>i</i> | 0241 | 191 | 291 | A | Н | A | A | A |
| αC22/2000 <i>i</i> | 0246 | 196 | 296 | A | Н | A | A | A |
| αC30/1500 <i>i</i> | 0251 | 201 | 301 | A | Н | A | A | A |

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS

| Motor model | Motor specification | Amplifier driving | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 | | |
|----------------------|------------------------|----------------------|---------------|----------------|--------------|------|--------------|------|------|--|--|
| β i S0.2/5000 | 0111 (Note 1) | 4A | - | 260 | А | Ν | А | А | * | | |
| β i S0.3/5000 | 0112 (Note 1) | 4A | - | 261 | А | Ν | А | А | * | | |
| β i S0.4/5000 | 0114 (Note 1) | 20A | - | 280 | А | Ν | А | А | * | | |
| β i S0.5/6000 | 0115 | 20A | 181 | 281 | G | - | В | В | - | | |
| β i S1/6000 | 0116 | 20A | 182 | 282 | G | - | В | В | - | | |
| β <i>İ</i> S2/4000 | 0061 (Note 2) | 20A | 153 | 253 | В | V | А | А | F | | |
| p <i>t</i> 52/4000 | 0001 | 40A | 154 | 254 | В | V | Α | Α | F | | |
| β <i>İ</i> S4/4000 | 0063 (Note 2) | 20A | 156 | 256 | В | V | Α | Α | F | | |
| pt 34/4000 | 0003 | 40A | 157 | 257 | В | V | Α | Α | F | | |
| β <i>İ</i> S8/3000 | 0075 (Note 2) | 20A | 158 | 258 | В | V | Α | Α | F | | |
| pt56/3000 | | 40A | 159 | 259 | В | V | Α | Α | F | | |
| β i S12/2000 | 0077 (Note 2) | 20A | 169 | 269 | - | - | D | - | - | | |
| β <i>İ</i> S12/3000 | 0078 | 40A | 172 | 272 | В | V | А | А | F | | |
| β i S22/2000 | 0085 | 40A | 174 | 274 | В | V | А | А | F | | |

\blacksquare βi S series servo motor

NOTE

- 1 HRV1 control cannot be used with these motors. So, these motors cannot be used with Series 9096.
- 2 For a motor specification suffixed with "-Bxx6", be sure to use parameters dedicated to FS0*i*.

| | - | | | | | | | | |
|-----------------------|------------------------|----------------------|---------------|----------------|--------------|------|--------------|------|------|
| Motor model | Motor specification | Amplifier driving | Motor HRV1 | ID No. HRV2 | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
| β <i>İ</i> S2/4000HV | 0062 | 10A | 151 | 251 | J | - | В | С | - |
| β <i>İ</i> S4/4000HV | 0064 | 10A | 164 | 264 | J | - | В | С | - |
| β <i>İ</i> S8/3000HV | 0076 | 10A | 167 | 267 | J | - | В | С | - |
| β <i>İ</i> S12/3000HV | 0079 | 20A | 170 | 270 | J | - | В | С | - |
| β <i>İ</i> S22/2000HV | 0086 | 20A | 178 | 278 | J | - | В | С | - |

β*i*S series servo motor (for 400-V driving)

The mark "-" indicates that automatic loading of standard parameters is not supported as of December, 2005.

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| Motor model | Motor | Amplifier | Motor | ID No. | 90B5 |
|----------------------------|---------------|-----------|-------|--------|------|
| | specification | driving | HRV1 | HRV2 | 3003 |
| β i S2/4000 | 0061-Bxx6 | 20A | 206 | 306 | D |
| p <i>t</i> 32/4000 | 0001-000 | 40A | 210 | 310 | D |
| β <i>i</i> S4/4000 | 0063-Bxx6 | 20A | 211 | 311 | D |
| p <i>t</i> 3 4/4000 | 0003-8220 | 40A | 212 | 312 | D |
| β i S8/3000 | 0075-Bxx6 | 20A | 183 | 283 | D |
| p /30/3000 | 0075-БХХО | 40A | 194 | 294 | D |
| β <i>İ</i> S12/2000 | 0077-Bxx6 | 20A | 198 | 298 | D |
| 01000/1500 | 0084-Bxx6 | 20A | 202 | 302 | D |
| β i S22/1500 | 0004-800 | 40A | 205 | 305 | D |

\beta is series servo motor (dedicated to FS0*i*)

The motor models above can be driven only with Series 90B5.

Linear motor

Linear motor parameters for servo HRV2 control Note: The following linear motors are driven by 200V.

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|-----------------------|------------------------|--------------|--------------|------|--------------|------|------|
| L <i>İ</i> S300A1/4 | 0441-B200 | 351 | G | - | В | В | - |
| L <i>İ</i> S600A1/4 | 0442-B200 | 353 | G | - | В | В | - |
| L <i>İ</i> S900A1/4 | 0443-B200 | 355 | G | - | В | В | - |
| L <i>İ</i> S1500B1/4 | 0444-B210 | 357 | G | - | В | В | - |
| L <i>İ</i> S3000B2/2 | 0445-B110 | 360 | G | - | В | В | - |
| L <i>İ</i> S3000B2/4 | 0445-B210 | 362 | G | - | В | В | - |
| L <i>İ</i> S4500B2/2 | 0446-B110 | 364 | G | - | В | В | - |
| L <i>İ</i> S6000B2/2 | 0447-B110 | 368 | G | - | В | В | - |
| L <i>İ</i> S6000B2/4 | 0447-B210 | 370 | G | - | В | В | - |
| L <i>İ</i> S7500B2/2 | 0448-B110 | 372 | G | - | В | В | - |
| L <i>İ</i> S7500B2/4 | 0448-B210 | 374 | G | | В | В | - |
| L <i>İ</i> S9000B2/2 | 0449-B110 | 376 | G | - | В | В | - |
| L <i>İ</i> S9000B2/4 | 0449-B210 | 378 | G | - | В | В | |
| L <i>İ</i> S3300C1/2 | 0451-B110 | 380 | G | - | В | В | - |
| L <i>İ</i> S9000C2/2 | 0454-B110 | 384 | G | - | В | В | - |
| L <i>İ</i> S11000C2/2 | 0455-B110 | 388 | G | - | В | В | - |
| L <i>İ</i> S15000C2/2 | 0456-B110 | 392 | G | - | В | В | - |
| L <i>İ</i> S15000C2/3 | 0456-B210 | 394 | G | - | В | В | - |
| L <i>İ</i> S10000C3/2 | 0457-B110 | 396 | G | - | В | В | - |
| LiS17000C3/2 | 0459-B110 | 400 | G | - | В | В | - |

Note: The following linear motors are driven by 400V.

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|-------------------------|------------------------|--------------|--------------|------|--------------|------|------|
| L <i>İ</i> S1500B1/4 | 0444-B210 | 358 | G | - | В | В | - |
| L <i>İ</i> S3000B2/2 | 0445-B110 | 361 | G | - | В | В | - |
| L <i>İ</i> S4500B2/2HV | 0446-B010 | 363 | G | - | В | В | - |
| L <i>İ</i> S4500B2/2 | 0446-B110 | 365 | G | - | В | В | - |
| L <i>İ</i> S6000B2/2HV | 0447-B010 | 367 | G | - | В | В | - |
| L <i>İ</i> S6000B2/2 | 0447-B110 | 369 | G | - | В | В | - |
| LiS7500B2/2HV | 0448-B010 | 371 | G | - | В | В | - |
| LiS7500B2/2 | 0448-B110 | 373 | G | - | В | В | - |
| L <i>İ</i> S9000B2/2 | 0449-B110 | 377 | G | - | В | В | - |
| LiS3300C1/2 | 0451-B110 | 381 | G | - | В | В | - |
| LiS9000C2/2 | 0454-B110 | 385 | G | | В | В | |
| L <i>İ</i> S11000C2/2HV | 0455-B010 | 387 | G | - | В | В | - |
| L <i>İ</i> S11000C2/2 | 0455-B110 | 389 | G | - | В | В | - |
| L <i>i</i> S15000C2/3HV | 0456-B010 | 391 | G | - | В | В | - |
| L <i>İ</i> S10000C3/2 | 0457-B110 | 397 | G | - | В | В | - |
| L <i>İ</i> S17000C3/2 | 0459-B110 | 401 | G | - | В | В | - |

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|-----------------------|------------------------|------------------------|--------------|------|--------------|------|------|
| L <i>İ</i> S1500B1/4 | 0444-B210 | 90 | А | Α | А | А | А |
| L <i>İ</i> S3000B2/2 | 0445-B110 | 91 | А | А | А | Α | А |
| L <i>İ</i> S6000B2/2 | 0447-B110 | 92 | А | Α | А | А | А |
| L <i>İ</i> S9000B2/2 | 0449-B110 | 93 | А | А | А | Α | А |
| L <i>İ</i> S1500C2/2 | 0456-B110 | 94 | А | А | А | Α | А |
| L <i>İ</i> S3000B2/4 | 0445-B210 | 120 | А | А | А | Α | А |
| L <i>İ</i> S6000B2/4 | 0447-B210 | 121 | А | Α | А | А | А |
| L <i>İ</i> S9000B2/4 | 0449-B210 | 122 | Α | Α | А | А | А |
| L <i>İ</i> S15000C2/3 | 0456-B210 | 123 | А | А | А | А | А |
| L <i>İ</i> S300A1/4 | 0441-B200 | 124 | Α | Α | А | А | А |
| L <i>İ</i> S600A1/4 | 0442-B200 | 125 | Α | А | А | Α | А |
| L <i>İ</i> S900A1/4 | 0443-B200 | 126 | Α | Α | А | А | А |
| L <i>İ</i> S6000B2/4 | 0412-B811 | 127 (160-A driving) | А | R | А | А | D |
| L <i>İ</i> S9000B2/2 | 0413 | 128 (160-A driving) | А | N | А | А | D |
| L <i>İ</i> S9000B2/4 | 0413-B811 | 129 (360-A driving) | А | Q | А | А | D |
| L <i>İ</i> S15000C2/2 | 0414 | 130 (360-A driving) | А | Q | А | А | D |

Linear motor parameters for servo HRV1 control

(Reference)

The parameter table presented in Chapter 6 has two motor ID Nos. for the same linear motor. One of the two is for driving the α series servo amplifiers (130A and 240A). Be careful not to use the wrong ID No.

| | α servo amplifier driving | | α <i>i</i> servo amplifier driving | | |
|-----------------------|-------------------------------------|--------------|-------------------------------------|--------------|--|
| Motor model | Amplifier maximum current [A] | Motor ID No. | Amplifier maximum current [A] | Motor ID No. | |
| L <i>İ</i> S6000B2/4 | 240 | 121 | 160 | 127 | |
| L <i>İ</i> S9000B2/2 | 130 | 93 | 160 | 128 | |
| L <i>İ</i> S9000B2/4 | 240 | 122 | 360 | 129 | |
| L <i>İ</i> S15000C2/2 | 240 | 94 | 360 | 130 | |

Synchronous built-in servo motor Synchronous built-in servo motor for servo HRV2 control NOTE: The following synchronous built-in servo motors are driven by 200V.

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|---------------------|------------------------|--------------|--------------|------|--------------|------|------|
| D <i>İ</i> S85/400 | 0483-B20x | 423 | К | - | - | - | - |
| D <i>i</i> S110/300 | 0484-B10x | 425 | К | - | - | - | - |
| D <i>i</i> S260/600 | 0484-B31x | 429 | К | - | - | - | - |
| D <i>i</i> S370/300 | 0484-B40x | 431 | К | - | - | - | - |

NOTE: The following synchronous built-in servo motors are driven by 400V.

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|---------------------|------------------------|--------------|--------------|------|--------------|------|------|
| D <i>İ</i> S85/400 | 0483-B20x | 424 | К | - | - | - | - |
| D <i>İ</i> S110/300 | 0484-B10x | 426 | К | - | - | - | - |
| D <i>İ</i> S260/600 | 0484-B31x | 430 | К | - | - | - | - |
| D <i>İ</i> S370/300 | 0484-B40x | 432 | К | - | - | - | - |

(4) AMR setting

For AMR, set 00000000. When using a linear motor, set AMR according to the description in Section 4.14, "LINEAR MOTOR PARAMETER SETTING". When using a synchronous built-in servo motor, set AMR according to the description in Section 4.15, "SYNCHRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING".

| αi S/ αi F/ βi S motor | 0000000 |
|---|---------|

(5) CMR setting

Set, as CMR, a specified magnification for the amount of movement from the NC to the servo system.

| CMR | 1/2 to 48 | Setting value = CMR × 2 |
|-----|-----------|-------------------------|
| | | |

Usually, set CMR with 2, because command unit = detection unit (CMR = 1).

(6) Flexible feed gear setting

Specify the flexible feed gear (F·FG). This function makes it easy to specify a detection unit for the leads and gear reduction ratios of various ball screws by changing the number of position feedback pulses from the Pulsecoder or separate detector. It converts the incoming number of pulses from the position detector so that it matches the commanded number of pulses. When using a linear motor, set F·FG according to the description in Section 4.14, "LINEAR MOTOR PARAMETER SETTING". When using a synchronous built-in servo motor, set F·FG according to the description in Section 4.15, "SYNCHRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING".

(a) Semi-closed feedback loop

Setting for the αi Pulsecoder

| ↓ (Note 1) F·FG numerator (≤ 32767) | Necessary position feedback pulses per motor revolution | |
|--|---|---------------------|
| F·FG denominator (≤ 32767) | (as ir 1,000,000 ← (Note 2) | reducible fraction) |

NOTE

- 1 For both F·FG numerator and denominator, the maximum setting value (after reduced) is 32767.
- 2 αi Pulsecoders assume one million pulses per motor revolution, irrespective of resolution, for the flexible feed gear setting.
- 3 If the calculation of the number of pulses required per motor revolution involves π , such as when a rack and pinion are used, assume π to be approximately 355/113.

Example of setting

If the ball screw used in direct coupling has a lead of 5 mm/rev and the detection unit is 1 μ m The number of pulses generated per motor turn (5 mm) is: 5/0.001 = 5000 (pulses) Because the αi Pulsecoder feeds back 1000000 pulses per motor turn: FFG = 5000 / 1000000 = 1 / 200

Other FFG (numerator/denominator) setting examples, where the gear reduction ratio is assumed to be 1:1

| Detection | Ball screw lead | | | | | |
|----------------|-----------------|-----------|------------|------------|------------|------------|
| unit | 6mm | 8mm | 10mm | 12mm | 16mm | 20mm |
| 1μm | 6 / 1000 | 8 / 1000 | 10 / 1000 | 12 / 1000 | 16 / 1000 | 20 / 1000 |
| 0.5µm | 12 / 1000 | 16 / 1000 | 20 / 1000 | 24 / 1000 | 32 / 1000 | 40 / 1000 |
| 0. <u>1</u> μm | 60 / 1000 | 80 / 1000 | 100 / 1000 | 120 / 1000 | 160 / 1000 | 200 / 1000 |

Example of setting

If the gear reduction ratio between the rotary axis motor and table is 10:1 and the detection unit is 1/1000 degrees

The table rotates through 360/10 degrees when the motor makes one turn.

The number of position pulses necessary for the motor to make one turn is:

 $360/10 \div (1/1000) = 36,000$ pulses

| F·FG numerator | 36,000 | _ 36 |
|------------------|-----------|-------|
| F·FG denominator | 1,000,000 | 1,000 |

If the gear reduction ratio between the rotary axis motor and table is 300:1 and the detection unit is 1/10000 degrees

The table rotates through 360/300 degrees when the motor makes one turn.

The number of position pulses necessary for the motor to make one turn is:

 $360/300 \div (1/10000) = 12,000$ pulses

| F·FG numerator | 12,000 | _ 12 |
|------------------|-----------|-------|
| F·FG denominator | 1,000,000 | 1,000 |

(b) Full-closed feedback loop

Setting for use of a separate detector (full-closed)

| F⋅FG numerator (≤ 32767) | Number of position pulses corresponding to a predetermined amount of travel | |
|----------------------------|--|---------------------------|
| F·FG denominator (≤ 32767) | Number of position pulses corresponding to a predetermined amount of travel from a separate detector | (as irreducible fraction) |

Example of setting

To detect a distance of 1-µm using a 0.5-µm scale, set the following: (L represents a constant distance.)

$$\frac{\text{Numerator of F} \cdot \text{FG}}{\text{Denominator of F} \cdot \text{FG}} = \frac{L/1}{L/0.5} = \frac{1}{2}$$

| Other FFG (| (numerator/denominator) |) setting examples |
|-------------|-------------------------|--------------------|
|-------------|-------------------------|--------------------|

| Detection unit | Scale resolution | | | |
|----------------|------------------|--------|--------|---------|
| Detection unit | 1 μm | 0.5 μm | 0.1 μm | 0.05 μm |
| 1µm | 1/1 | 1/2 | 1 / 10 | 1 / 20 |
| 0.5µm | - | 1/1 | 1/5 | 1 / 10 |
| 0.1µm | - | - | 1/1 | 1/2 |


NOTE

The maximum rotation speed allowable with servo software depends on the detection unit. (See Appendix E, "VELOCITY LIMIT VALUES IN SERVO SOFTWARE".) Select a detection unit that enables a requested maximum rotation speed to be realized. When a speed of up to 6000 revolutions is used as a live tool in the direct motor connection mode, in particular, use a detection unit of 2/1000 deg (IS-B setting, CMR=1/2, flexible feed gear=18/100).

(7) Motor rotation direction setting

Set the direction in which the motor is to turn when a positive value is specified as a move command. For linear motors, set the parameter according to the description in Section 4.14, "LINEAR MOTOR PARAMETER SETTING". For synchronous built-in servo motors, set the parameter according to the description in Section 4.15, "SYNCHRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING".

| 111 | Clockwise as viewed from the Pulsecoder |
|------|--|
| -111 | Counterclockwise as viewed from the Pulsecoder |

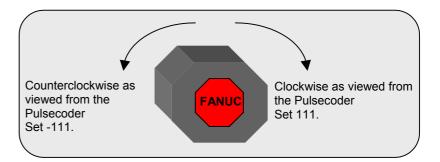

(8) Specify the number of velocity pulses and the number of position pulses.

Set the number of velocity pulses and the number of position pulses according to the connected detector. For linear motors, set these parameters according to the description in Section 4.14, "LINEAR MOTOR PARAMETER SETTING". For synchronous built-in servo motors, set these parameters according to the description in Section 4.15, "SYNCHRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING".

(a) Number of velocity pulses

Set the number of velocity pulses to 8192.

| $\alpha i S/\alpha i F/\beta i S$ motor | 8192 |
|---|------|
|---|------|

(b) Number of position pulses

(b)-1 Number of position pulses for semi-closed feedback loop

Set the number of position pulses to 12500.

| Number of position pulses | 10500 |
|---|---------|
| $(\alpha i S/\alpha i F/\beta i S$ motor, semi-closed feedback loop |) 12500 |

(b)-2 Number of position pulses for full-closed feedback loop (See Subsections 2.1.4 and 2.1.5)

Set the number of position pulses to the number of pulses fed back from the separate detector when the motor makes one turn. (The flexible feed gear has nothing to do with the calculation of the number of position pulses).

Number of position pulsesNumber of pulses fed back from the separate(full-closed feedback loop)detector when the motor makes one turn

When using a serial rotary scale with a resolution of 1,000,000 pulses per revolution, set a value assuming that 12500 is equivalent to 1,000,000 pulses.

| Number of position pulses | |
|-----------------------------|--|
| (full-closed feedback loop) | 12,500 ×(motor-table gear reduction ratio) |
| (*) 1,000,000 pulses / rev | |

Example 1:

Parallel type, serial linear scale

If the ball screw used in direct coupling has a lead of 10 mm and the separate detector used has a resolution of 0.5 μ m per pulse Number of position pulses = 10 / 0.0005 = 20,000

Example 2:

Serial rotary scale

If the motor-table gear reduction ratio is 10:1,

Number of position pulses = $12,500 \times (1/10) = 1250$

(b)-3 If the setting for the number of position pulses is larger than 32767

Conventionally, initialization bit 0 (high resolution bit) must be changed according to the command unit. For the current i series CNC, however, there is no mutual dependence between the command unit and initialization bit 0.

Of course, the conventional setting method is applicable, but using the conversion coefficient for the number of position feedback pulses makes the setting easier.

| 2628 (FS15 <i>i</i>) 2185 (FS30 <i>i</i> ,16 <i>i</i>) | Conversion coefficient for the number of position feedback pulses |
|---|---|
| 2103 (13301,101) | Series 90E0, Series 90D0, Series 90B0, Series 90B5, Series 90B6, Series 90B1 : Set the number of position pulses with a product of two parameters, using the conversion coefficient for the number of position feedback pulses. Number of feedback pulses per motor revolution, sent from the separate detector = Number of position pulses × Conversion coefficient for the number of position feedback pulses. Series 9096 : No conversion coefficient for the number of position feedback pulses and the number of position pulses the number of position pulses and the number of position pulses to 1/10 the respective values stated earlier. Number of feedback pulses per motor revolution, sent from the separate detector = Number of position pulses × 10 |
| (9) Reference counter sett | \rightarrow See Supplementary 3 of Subsection 2.1.8. |
| 、 <i>,</i> | Specify the reference counter. The reference counter is used in making a return to the reference position by a grid method. |

(a) Semi-closed loop

| (Linear axis) | | |
|---|--|--|
| Count on the reference counter | Number of position pulses corresponding to a single motor revolution or the same number divided by an integer value | |
| (Rotary axis) | | |
| Count on the reference counter | Number of position pulses corresponding to a = single motor revolution/M, or the same number divided by an integer value | |
| * When the motor-table gear reduction ratio is M/N (M and N are integers, and M/N is a fraction that is reduced to lowest terms.) | | |

NOTE

- If the calculation above results in a fraction, a setting can be made with a fraction. See (a)-1.
- 2 If the rotation ratio between the motor and table on the rotary axis is not an integer, the reference counter capacity needs to be set so that the point (grid point) where the reference counter equals 0 appears at the same position relative to the table. So, with the rotary axis, the number of position pulses per motor revolution needs to be multiplied by 1/M.

Example of setting

 αl Pulsecoder and semi-closed loop (1- μ m detection)

| Ball screw lead (mm/revolution) | Necessary number of position pulses (pulse/revolution) | Reference counter | Grid width (mm) |
|------------------------------------|--|----------------------|--------------------|
| 10 | 10000 | 10000 | 10 |
| 20 | 20000 | 20000 | 20 |
| 30 | 30000 | 30000 | 30 |

When the number of position pulses corresponding to a single motor revolution does not agree with the reference counter setting, the position of the zero point depends on the start point.

In such a case, set the reference counter capacity with a fraction to change the detection unit and eliminate the error in the reference counter. (Except Series 9096)


Example of setting

System using a detection unit of 1 $\mu m,$ a ball screw lead of 20 mm/revolution, and a gear reduction ratio of 1/17

(a)-1 Method of specifying the reference counter capacity with a fraction (except Series 9096)

The number of position pulses necessary for the motor to make one turn is: 20000/17

Set the following parameter as stated below.

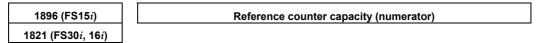

[Valid data range]

0 to 99999999

Set the numerator of a fraction for the reference counter capacity.

B-65270EN/06

 2622 (FS15*i*)
 Reference counter capacity (denominator)

 2179 (FS30*i*, 16*i*)

0 to 32767

A value up to around 100 is assumed to be set as the denominator of the reference counter capacity. Note that if a larger value is set, the grid width becomes too small, which makes it difficult to perform reference position return by grid method.

The denominator parameter is not indicated in the servo setting screen, so it must be set in the parameter screen.

In this example, set the numerator and denominator, respectively, to 20000 and 17.

NOTE

Even if a setting is made with a fraction, set the number of position pulses per motor revolution/M for a semi-closed loop rotary axis when the reduction ratio is M/N. Reference counter = Number of position pulses per motor revolution/M, or

The same number divided by an integer

(a)-2 Method of changing the detection unit

[Valid data range]

The number of position pulses necessary for the motor to make one turn is: 20000/17

In this case, increase all the following parameter values by a factor of 17, and set the detection unit to $1/17 \,\mu\text{m}$.

| Parameter modification | Series 30 <i>i</i> ,15 <i>i</i> ,16 <i>i</i> ,0 <i>i</i> , Power Mate <i>i</i> , and so on |
|--|---|
| FFG | Servo screen |
| CMR | Servo screen |
| Reference counter | Servo screen |
| Effective area | Nos. 1826, 1827 |
| Position error limit in traveling | No. 1828 |
| Position error limit in the stop state | No. 1829 |
| Backlash | Nos. 1851, 1852 |

Changing the detection unit from 1 μ m to 1/17 μ m requires multiplying each of the parameter settings made for the detection unit by 17.

In addition to the above parameters, there are some parameters that are to be set in detection units. For details, see Appendix B.

Making these modifications eliminates the difference between the number of position pulses corresponding to a single motor revolution and the reference counter setting.

Number of position pulses corresponding to a single motor revolution = 20000

Reference counter setting = 20000

(b) Full-closed loop (See Subsections 2.1.4 and 2.1.5)

| Reference | | Z-phase (reference-position) interval divided by the |
|-----------------|---|---|
| counter setting | = | detection unit, or this value sub-divided by an integer |
| counter setting | | value |

NOTE

If the separate detector-table rotation ratio for the rotary axis is not an integer, it is necessary to set the reference counter capacity in such a way that points where reference counter = 0 (grid points) appear always at the same position for the table.

Example of setting

| Example 1) | When the Z-phase interval is 50 mm and the detection |
|------------|--|
| | unit is 1 µm: |
| | Reference counter setting = $50,000/1 = 50,000$ |
| Example 2) | When a rotary axis is used and the detection unit is |
| | 0.001°: |
| | Reference counter setting = $360/0.001 = 360,000$ |
| Example 3) | When a linear scale is used and a single Z phase exists: |
| | Set the reference counter to 10000, 50000, or another |
| | round number. |


If the calculated value of the reference counter capacity is not an integer, the reference counter capacity can be set as a fraction as in the case of a semi-closed loop. For details of parameters, see (a)-1.

| NOTE |
|---|
| The following value can be set as a reference |
| counter capacity: |
| (For linear axis) |
| Number of position pulses corresponding to the |
| Z-phase interval of a separate detector (or the |
| same number divided by an integer) |
| (For rotary axis) |
| Number of position pulses per revolution of a |
| separate detector/M (or the same number divided |
| by an integer) |
| , , |
| (*) When the rotation ratio between the table and |
| separate detector is M/N (M and N are integers, |
| and M/N is a fraction that is reduced to lowest |
| terms.) |

(10) Full-closed system setting (go to (11) if a semi-closed system is in use)

For a full-closed system, it is necessary to set the following function bit.

(a) Series15*i* only

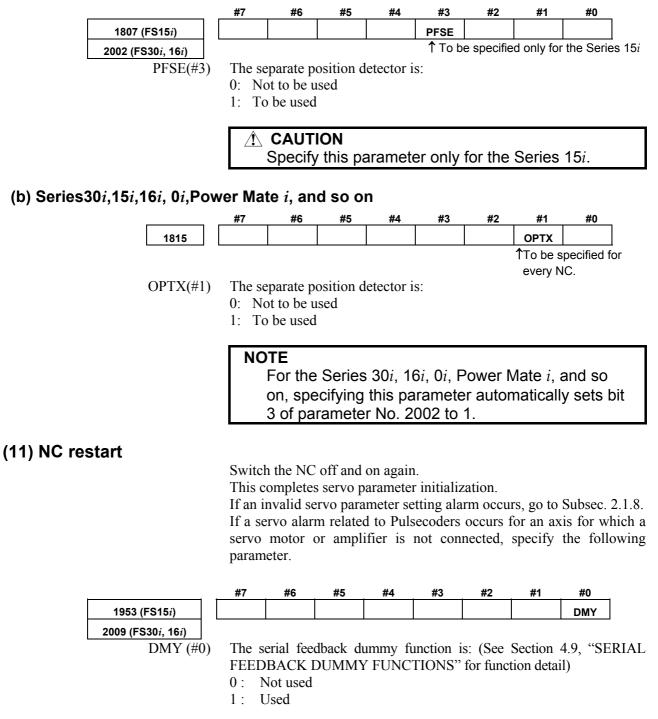

(12) Absolute position detector setting

When you are going to use an $\alpha i/\beta i$ Pulsecoder as an absolute Pulsecoder, use the following procedure.

Procedure

7.

1. Specify the following parameter, then switch the NC off.

| | 1. | specify u | C 011. | | | | | |
|-----------|-----|-------------|-----------|------------|-----------|------------|----------|--------------------------|
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1815 | | | APCx | | | | | |
| APCx (#5) | The | absolute p | osition d | letector i | s: | | | |
| | 0: | Not used | | | | | | |
| | 1: | Used | | | | | | |
| | | | | | | | | |
| | 2. | After mak | ing sure | that the | battery f | for the Pu | ulsecode | r is connected |
| | | turn off th | ne CNC. | | - | | | |
| | 3. | A request | to return | n to the r | eference | e position | n is | These step |
| | | displayed | • | | | <u>^</u> | | were added |
| | 4. | Cause the | e servo m | notor to r | nake on | e turn by | jogging | • |
| | 5. | Turn off a | | | | 5 | | for the $\alpha u \beta$ |
| | 6 | A | | | famama | | | Pulsecoder |

- 6. A request to return to the reference position is displayed.
 - Do the reference position return.

2.1.4 Setting Servo Parameters when a Separate Detector for the Serial Interface is Used

(1) Overview

When a separate detector of the serial output type is used, there is a possibility that the detection unit becomes finer than the detection unit currently used. Accordingly, a few modifications are made to the setting method and values of servo parameters. When using a separate detector of the serial output type, follow the

method explained below to set parameters.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Classification of serial detectors and usable detector examples

Usable separate detectors for the serial interface are classified into four major types as shown below. Note that parameter settings vary with these types.

(a) Serial output type linear encoder

| | Minimum resolution | Model | Backup |
|--------------------|--------------------|--------------|--------------|
| Mitutoyo Co., Ltd. | 0.05µm | AT353, AT553 | Not required |
| HEIDENHAIN | 0.05µm/0.1µm | LC191F | Not required |
| | 0.05µm/0.1µm | LC491F | Not required |

(b) Analog output type linear encoder + FANUC high-resolution serial output circuit

| | Signal pitch | Model | Backup |
|--------------------------------|--------------|--------------|----------|
| Mitutoyo Co., Ltd. | 20µm | AT402 | Required |
| HEIDENHAIN | 20µm | LS486, LS186 | Required |
| Sony Precision Technology Inc. | 20µm | SH12 | Required |

(c) Serial output type rotary encoder

| | Minimum resolution (Note 1) | Model | Backup |
|-------|-----------------------------|---------|----------|
| FANUC | 2 ²⁰ pulse/rev | αA1000S | Required |

(d) RCN220, RCN223, RCN723, and RCN727 manufactured by HEIDENHAIN

| | Minimum resolution (Note 1) | Model | Backup |
|------------|-----------------------------|-------------|--------------|
| HEIDENHAIN | 2 ²⁰ pulse/rev | RCN220 | Not required |
| | 2 ²³ pulse/rev | RCN223, 723 | Not required |
| | 2 ²⁷ pulse/rev | RCN727 | Not required |

NOTE

1 The minimum resolution of a rotary encoder is the resolution of the encoder itself. For the FANUC systems, however:

One million pulses/rev for a minimum resolution of 2^{20} pulses/rev Fight million pulses/rev for a minimum resolution of 2^{23} pulses/rev

Eight million pulses/rev for a minimum resolution of 2^{23} pulses/rev Eight million pulses/rev for a minimum resolution of 2^{27} pulses/rev

Light minion publication of a minimum resolution of

(4) Setting parameters

Set the following parameters according to the type of the detector (described in the previous item).

(a) Parameter setting for a linear encoder of a serial output type

(Parameter setting method)

In addition to the conventional settings for a separate detector (bit 1 of parameter No. 1815 (Series30*i*,15*i*,16*i*,18*i*,21*i*,20*i*,0*i*, and Power Mate *i*), bit 3 of parameter No. 1807 (Series 15*i*), and if needed, FSSB), note the following parameters:

[Flexible feed gear]

Parameter Nos. 1977 and 1978 (Series 15*i*) or Nos. 2084 and 2085 (Series 30*i*, 16*i* and so on)

Flexible feed gear (N/M) =

Minimum resolution of detector $[\mu m]$ / controller detection unit $[\mu m]$

[Number of position pulses]

Parameter No. 1891 (Series 15*i*) or No. 2024 (Series 30*i*, 16*i* and so on)

Number of position pulses =

Amount of movement per motor revolution [mm] / detection unit of the sensor [mm]

* If the result of the above calculation does not fall in the setting range (0 to 32767) for the number of position pulses, use "position feedback pulse conversion coefficient" to specify the number of position pulses according to the following procedure. Number of position pulses to be set = $A \times B$

Select B so that A is within 32767. Then, set the following:

- A: Position pulses parameter (32767 or less)
 - No.1891 (Series15*i*), No.2024 (Series 30*i*, 16*i* and so on) Position pulses conversion coefficient parameter

No.2628 (Series15*i*), No.2185 (Series 30*i*, 16*i* and so on)

B:

(Example of parameter setting)

[System configuration]

- The Series 16*i* is used.
- A linear scale with a minimum resolution of 0.1 µm is used.
- The least input increment of the controller is 1 µm.
- The amount of movement per motor revolution is 16 mm.

[Parameter setting]

- To enable a separate detector, set bit 1 of parameter No. 1815 to 1.
- Calculate the parameters for the flexible feed gear. Because flexible feed gear $(N/M) = 0.1 \ \mu m/1 \ \mu m = 1/10$: No. 2084 = 1 and No. 2085 = 10
- Calculate the number of position pulses. Number of position pulses = 16 mm/0.0001mm = 160000 Because this result does not fall in the setting range (0 to 32767), set A and B, respectively, with the "number of position pulses" and "position pulses conversion coefficient" by assuming: 160,000 = 10,000 × 16 → A = 10,000 and B = 16 No.2024 = 10,000, No.2185 = 16

(b) Parameter setting for analog output type linear encoder + FANUC high-resolution serial output circuit

(Parameter setting method)

In addition to the conventional separate detector settings (bit 1 of parameter No. 1815 (Series15*i*,30*i*,16*i*,18*i*,21*i*,20*i*,0*i*, and Power Mate *i*), bit 3 of parameter No. 1807 (Series 15*i*), and, if necessary, FSSB setting), pay attention to the following parameter settings.

First check the type of the FANUC high-resolution output circuit to be coupled to the linear encoder, and then determine the settings of the following function bits.

[Function bit]

| Circuit | Specification | Interpolation magnification |
|---|----------------|-----------------------------|
| High-resolution serial output circuit | A860-0333-T501 | 512 |
| High-resolution serial output circuit H | A860-0333-T701 | 2048 |
| High-resolution serial output circuit C | A860-0333-T801 | 2048 |

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|--------------|---|--|--|---|--|--|--|
| 2687 (FS15 <i>i</i>) | | | | | | | | HP2048 |
| 2274 (FS30 <i>i</i> , 16 <i>i</i>) HP2048(#0) | outpu 1: | 2048-mag it circuit H To be use Not to be | I or C) is d | - | oolation | circuit | (high-re | solution serial |
| | N(1 2 | set the B" usua This fur series a (Series Serie (Series Power Serie Serie (Series Serie (Series Serie (Series Serie (Series Serie (Series Serie (Series Serie (Series Serie Serie (Series Serie Serie (Series Serie Serie Serie (Series Serie Serie Serie (Series Serie | setting ally. nction k and edi 30 <i>i</i> , 31 s 90D0 s 90E0 15 <i>i</i> -B, Mate <i>i</i>) s 90B0 s 90B1 s 90B6 0 <i>i</i> -C, 0 s 90B5 it is spe of the o ler sign inimum ssary a e feed g inigh-res iniput f ced, set the sett HP2048 the miniput sign | pin SV bit can tions: $I_i, 32i$) J/A(01) J/A(01) I/A(01) J/A(01) | V3 insid be use and su and su 18 <i>i</i> -B, and su and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, 20 <i>i</i> and su -C, | de the d d with t ubseque ubseque 21 <i>i</i> -B, ubseque ubseque ubseque ubseque ibs | circuit f the follo ent edi ent edi 0 <i>i</i> -B, 0 ent edi ent edi ent edi resolu to be: itch/20 specify circuit eeds to ing A". | tions tions <i>i</i> Mate-B, tions tions tions tions 48 [μm]) /: H is used, |

[Minimum resolution of the detector]

In the following calculation of a flexible feed gear and the number of position pulses, the minimum detector resolution to be used is: (Linear encoder signal pitch/512 [µm])

(Specifying the above function bit appropriately makes it unnecessary to take the difference in the interpolation magnification among the high-resolution serial output circuits into account. So always use 512 for calculations.)

[Flexible feed gear]

Parameters Nos. 1977 and 1978 (Series 15*i*) or Nos. 2084 and 2085 (Series 30*i*, 16*i*, and so on)

Flexible feed gear (N/M)

= minimum resolution of the detector [μm] / detection unit of controller [μm]

[Number of position pulses]

Parameter No. 1891 (Series 15*i*) or No. 2024 (Series 30*i*, 16*i*, and so on)

Number of position pulses

= Amount of movement per motor revolution [mm] / minimum resolution of the detector [mm]

If the result of the above calculation does not fall in the setting range (0 to 32767) for the number of position pulses, use "position feedback pulse conversion coefficient" to specify the number of position pulses according to the following procedure. Number of position pulses to be set = $A \times B$

Select B so that A is within 32767. Then, set the following:

- A: Position pulses parameter (32767 or less) No.1891 (Series15*i*), No.2024 (Series 30*i*, 16*i*, and so on)
- B: Position pulses conversion coefficient parameter No.2628 (Series15*i*), No.2185 (Series 30*i*, 16*i*, and so on)

(Example of parameter setting)

[System configuration]

- The Series 16*i* is used.
- A linear encoder with a signal pitch of 20 µm is used.
- The linear encoder is coupled with high-resolution serial output circuit H.
- The least input increment of the controller is $1 \mu m$.
- The amount of movement per motor revolution is 16 mm.

[Parameter setting]

- To enable a separate detector, set bit 1 of parameter No. 1815 to 1.
- To use high-resolution serial output circuit H, set bit 0 of parameter No. 2274 to 1. Minimum resolution of the detector = $20 \mu m/512$ = 0.0390625 μm
- Calculate the parameters for the flexible feed gear. Because flexible feed gear (N/M)=(20/512µm)/1µm=5/128 No.2084=5, No.2085=128
- Calculate the number of position pulses. Number of position pulses = $16 \text{ mm}/(20/512\mu\text{m}) = 409,600$ Because this result does not fall in the setting range (0 to 32767), set A and B, respectively, with the "number of position pulses" and "position pulses conversion coefficient" by assuming: $409,600 = 25,600 \times 16 \rightarrow A = 25,600, B = 16$ No.2024 = 25,600, No.2185 = 16

(c) Parameter setting for the serial output type rotary encoder

* For explanations about the rotary encoders RCN220, RCN223, RCN723, and RCN727 made by HEIDENHAIN, see "Parameter setting for the rotary encoders RCN220, RCN223, RCN723, and RCN727 made by HEIDENHAIN."

(Parameter setting method)

In addition to the conventional settings for a separate detector (bit 1 of parameter No. 1815 (Series 15*i*, 30*i*, 16*i*, 18*i*, 21*i*, 20*i*, 0*i*, and Power Mate *i*), bit 3 of parameter No. 1807 (Series 15*i*), and if needed, FSSB), note the following parameters:

[Flexible feed gear]

Parameters Nos. 1977 and 1978 (Series 15*i*) or Nos. 2084 and 2085 (Series 30*i*, 16*i* and so on)

Flexible feed gear (N/M) =

(Amount of table movement [deg] per detector revolution) / (detection unit [deg]) / 1,000,000

[Number of position pulses]

Parameter No. 1891 (Series 15*i*) or No. 2024 (Series 30*i*, 16*i* and so on)

Number of position pulses = 12500×(motor-to-table deceleration ratio)

- * If the result of the above calculation does not fall in the setting range (0 to 32767) for the number of position pulses, use "position feedback pulse conversion coefficient" to specify the number of position pulses according to the following procedure. Number of position pulses to be set = $A \times B$ Select B so that A is within 32767. Then, set the following:
 - A: Position pulses parameter (32767 or less)
 - No.1891 (Series15*i*), No.2024 (Series 30*i*, 16*i* and so on)
 - B: Position pulses conversion coefficient parameter No.2628 (Series15*i*), No.2185 (Series 30*i*, 16*i* and so on)

(Example of parameter setting)

[System configuration]

- The Series 16*i* is used.
- The least input increment of the controller is 1/1000 degree.
- The amount of movement per motor revolution is 180 degrees (deceleration ratio: 1/2)
- Table-to-separate-encoder reduction ratio = 1/1

[Parameter setting]

- To enable a separate detector, set bit 1 of parameter No. 1815 to 1.
- Calculate the parameters for the flexible feed gear. Because flexible feed gear (N/M)
 =360 degrees /0.001 degrees /1,000,000 =36/100 No.2084=36, No.2085=100
- Calculate the number of position pulses. Because number of position pulses = 12500 × (1/2)=6250 No.2024=6250

(d) Parameter setting for the rotary encoders RCN220, RCN223, RCN723, and RCN727 made by HEIDENHAIN

(Series and editions of applicable servo software)

To use the high-resolution rotary encoders RCN220, RCN223, RCN723, and RCN727 manufactured by HEIDENHAIN as separate detectors, the following servo software is required: [RCN220,223,723] (Series 30*i*,31*i*,32*i*) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i) Series 90B0/T(19) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions [RCN727] (Series 30*i*,31*i*,32*i*) Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B1/B(02) and subsequent editions

(Parameter setting method)

800PLS (#0)

To specify parameters for the high-resolution rotary encoders RCN220, RCN223, RCN723, and RCN727 (supporting FANUC serial interface) made by HEIDENHAIN, use the following procedure.

In addition to the conventional separate detector settings (bit 1 of parameter No. 1815 (Series 30*i*, 15*i*, 16*i*, 18*i*, 21*i*, 0*i*, and Power Mate *i*), bit 3 of parameter No. 1807 (Series 15*i*), and, if necessary, FSSB setting), pay attention to the following parameter settings.

[Function bit]

To use the RCN220, RCN223, RCN723, or RCN727, set the following function bit to 1.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|----|----|----|----|----|----|--------|--------|
| 2688 (FS15 <i>i</i>) | | | | | | | RCNCLR | 800PLS |
| 2275 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |

A rotary encoder with eight million pulses per revolution is:

- 1: To be used. (To use the RCN223, RCN723, or RCN727, set the bit to 1.)
- 0: Not to be used. (To use the RCN220, leave this bit set to 0.)

RCNCLR (#1) The number of revolution is:

- 1: To be cleared. (To use the RCN220, RCN223, RCN723, or RCN727, set the bit to 1.)
- 0: Not to be cleared.

This function bit is to be set in combination with the number of data mask digits, described below.

| 2807 (FS15 <i>i</i>) | Number of data mask digits |
|-------------------------------------|---|
| 2394 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Settings] | 8. (To use the RCN223, RCN723, or RCN727) |

5. (To use the RCN220)

The value to be set in this parameter depends on the detector. At present, only the above detectors require clearing the speed data. This parameter is to be set in combination with RCNCLR, described above.

NOTE

The speed data of the RCN220, RCN223, RCN723, or RCN727 is maintained while the power to the separate detector interface unit is on. The data, however, is cleared when the unit is turned off. Since the speed data becomes undetermined depending on where the power is turned off, it is necessary to make a setting to clear the speed data. In addition, for this reason, the RCN220, RCN223, RCN723, and RCN727 cannot be used with a linear axis.

When using the RCN220, set the parameters for the flexible feed gear and the number of position pulses according to the setting method described in the previous item, "Parameter setting for the serial output type rotary encoder".

The following explains how to calculate the parameter values when the RCN223, RCN723, or RCN727 is used.

[Flexible feed gear]

Parameters Nos. 1977 and 1978 (Series 15*i*) or Nos. 2084 and 2085 (Series 30*i*, 16*i*, and so on)

Flexible feed gear (N/M) =

(Amount of table movement [deg] per detector revolution) / (detection unit [deg]) / 8,000,000

For the RCN223, RCN723, and RCN727, the number of pulses per detector turn is assumed to be eight million for calculation.

For the RCN727, when the detection unit is set to 1/8,000,000 revolution or less, the flexible feed gear may be set to up to 8/1. (If the flexible feed gear is set to 8/1, the detection unit is 64,000,000 pulses per revolution.)

[Number of position pulses]

Parameter No. 1891 (Series 15*i*) or No. 2024 (Series 30*i*, 16*i*, and so on)

Number of position pulses = 100,000×(motor-to-table reduction ratio)

* If the result of the above calculation does not fall in the setting range (0 to 32767) for the number of position pulses, use "position feedback pulse conversion coefficient" to specify the number of position pulses according to the following procedure. Number of position pulses to be set = $A \times B$

Select B so that A is within 32767. Then, set the following:

- A: Position pulses parameter (32767 or less)
 - No.1891 (Series15*i*), No.2024 (Series 30*i*, 16*i*, and so on)
- B: Position pulses conversion coefficient parameter No.2628 (Series15*i*), No.2185 (Series 30*i*, 16*i*, and so on)

[Reference counter capacity]

Parameter No. 1896 (Series 15*i*) or No. 1821 (Series 30*i*, 16*i*, and so on)

Specify the number of feedback pulses per table turn (detection unit).

* If bit 0 of parameter No. 2688 (Series 15*i*) or parameter No. 2275 (Series 30*i*, 16*i*, and so on) is 0, specify the number of pulses per table turn divided by 8 as the reference counter capacity. In this case, eight grid points occur per table turn.

(Example of parameter setting)

[System configuration]

- The Series 16*i* is used.
- The rotary encoder RCN223 made by HEIDENHAIN is used.
- The least input increment of the controller is 1/10,000 degree.
- The amount of movement per motor revolution is 180 degrees (reduction ratio: 1/2)
- Table-to-separate-encoder reduction ratio = 1/1

[Parameter setting]

- To enable a separate detector, set bit 1 of parameter No. 1815 to 1.
- To use the detector RCN223, set bit 0 of parameter No. 2275 to 1, bit 1 of this parameter to 1, and parameter No. 2394 to 8.
- Calculate the parameters for the flexible feed gear. Because flexible feed gear (N/M) = (360 degrees /0.0001 degrees)/8,000,000=9/20 No.2084=9, No.2085=20
- Calculate the number of position pulses. Number of position pulses = 100,000 × (1/2) = 50,000 Because this result does not fall in the setting range (0 to 32767), set A and B, respectively, with the "number of position pulses" and "position pulses conversion coefficient" by assuming: 50,000 = 12,500 × 4 → A = 12,500, B = 4 No.2024 = 12,500, No.2185 = 4

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

Calculate the reference counter capacity. Reference counter capacity = 360 degrees/0.0001 degrees =3,600,000

(About speed limit)

When the RCN223, RCN723, or RCN727 is used as a separate detector, the maximum permissible speed that can be controlled is 937 min⁻¹. ^(*) (See Appendix E.)

The above maximum speed does not include hardware (*) limitations. For the maximum permissible speed of the detector itself, refer to the specifications of the detector.

Setting the signal direction of the separate detector

When a serial type separate detector is used with its signals connected in reverse directions, the following parameter must be used:

| | _ | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--|----|----|----|----|----|----|----|-------|
| 1960 (FS15 <i>i</i>) | | | | | | | | | RVRSE |
| 2018 (FS30 <i>i</i> , 16 <i>i</i>) | - | | | | | | | | |
| RVRSE (#0 | $\sqrt{\text{RSE}(\#0)}$ The signal direction of the separate detector is: | | | | | | | | |

The signal direction of the separate detector is:

Reversed. 1:


Not reversed. 0.

(5) Reference position return when a serial type separate detector is used as an absolute-position detector

When a serial type separate detector is used as an absolute-position detector, the phase-Z position must be passed once before a reference position return is performed. Then, turn the CNC off then back on to allow reference position return.

(This description does not apply if a detector that does not require battery backup is in use.)

When reference position return is performed, adjust the deceleration dog so that the grid-shifted reference position is not too near the deceleration dog.

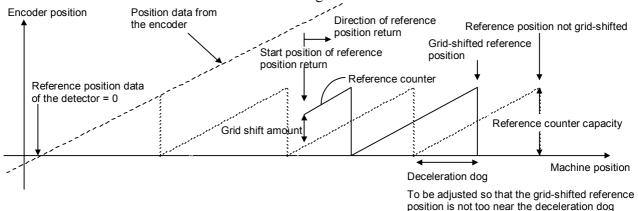

2.1.5 Setting Servo Parameters when an Analog Input Separate Interface Unit is Used

(1) Overview

An analog input separate interface unit (analog SDU) can be connected directly to an encoder having an analog output signal of 1 Vp-p. This subsection explains parameter settings to be made when this unit is connected to a separate detector. After performing the initialization procedure (full-closed loop) described in Subsection 2.1.3, change the setting described below according to the signal pitch of the detector.



(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*) Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B1/C(03) and subsequent editions

(3) Setting parameters

After performing the initialization (full-closed loop) described in Subsection 2.1.3, change the following setting according to the signal pitch of the detector:

[Setting the flexible feed gear]

| 1977 (FS15 <i>i</i>) | Numerator of flexible feed gear |
|------------------------------------|---|
| 2084 (FS30 <i>i</i> ,16 <i>i</i>) | |
| | |
| 1978 (FS15 <i>i</i>) | Denominator of flexible feed gear |
| 2085 (FS30 <i>i</i> ,16 <i>i</i>) | |
| | Set the flexible feed gear according to the following equation. |
| | (Equation for parameter calculation) |

Flexible feed gear (N/M) = $\frac{\text{Detector signal pitch } [\mu m]/512}{\text{Detection unit of controller } [\mu m]}$

B-65270EN/06

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS

| | [Setting the number of position pulses] | | | | | |
|-------------------------|--|--|--|--|--|--|
| 1891 (FS15 <i>i</i>) | Number of position pulses (PPLS) | | | | | |
| 2024 (FS30 <i>i</i> ,16 | <i>i</i>) | | | | | |
| | Set the number of position pulses according to the following equation: (Equation for parameter calculation) Number of position pulses = $\frac{\text{Amount of movement per motor revolution [mm]}}{\text{Detector signal pitch [mm]/512}}$ | | | | | |
| | If the calculation result is greater than 32767, use the following position pulse conversion coefficient (PSMPYL) to obtain the parameter setting (PPLS). | | | | | |
| 2628 (FS15 <i>i</i>) | Position pulse conversion coefficient (PSMPYL) | | | | | |
| 2185 (FS30 <i>i</i> ,16 | ii) | | | | | |
| | This parameter is used when the calculation result of the number of position pulses is greater than 32767. (Equation for parameter calculation) Set this parameter so that the following equation is satisfied: Number of position pulses = PPLS × PSMPYL | | | | | |
| | $(\rightarrow$ See Supplementary 3 in Subsection 2.1.8.) | | | | | |
| (Example of parameter | (Example of parameter setting) | | | | | |
| | [System configuration]The Series 30<i>i</i> is used. | | | | | |

[Setting the number of position pulses]

- A linear scale with a signal pitch of 20 µm is used.
- The least input increment of the controller is 1 µm.
- The amount of movement per motor revolution is 16 mm.

[Parameter setting]

- To enable a separate detector, set bit 1 of parameter No. 1815 to 1.
- Calculate the parameters for the flexible feed gear. Because flexible feed gear (N/M)=(20/512µm)/1µm=5/128 No.2084=5, No.2085=128
- Calculate the number of position pulses. Number of position pulses = 16 mm/(0.02 mm/512= 409,600 Because this result does not fall in the setting range (0 to 32767), set A and B, respectively, with the "number of position pulses" and "position pulses conversion coefficient" by assuming: 409,600 = 25,600 × 16 → A = 25,600, B = 16 No.2024 = 25,600, No.2185 = 16

2.1.6 Setting Parameters when an αi CZ Sensor is Used

(1) Overview

 $\alpha \hat{l}CZ$ sensors may be used in the following two ways:

<1> Used as a detector for a synchronous built-in servo motor

<2> Used as a separate detector

This subsection explains parameter settings to be made when the sensor is used in each of these two ways.

| The following three types of αlCZ sensor are available: |
|---|
|---|

| | Signal interval | Number of pulses at setting |
|---------------------|-----------------|-----------------------------|
| α i CZ 512S | 512λ/rev | 500,000pulse/rev |
| α i CZ 1024S | 768λ/rev | 750,000pulse/rev |
| α i CZ 1024S | 1024λ/rev | 1,000,000pulse/rev |

NOTE

- 1 When turning on and off the CNC, be sure to turn on and off the αICZ 768S if it is used.
- 2 The absolute αICZ 768S can be used only when the number of revolutions is finite (the integral number of revolutions is 10 or less).

(2) Series and editions of applicable servo software

- $\alpha i CZ 512S, \alpha i CZ 1024S$
 - (Series 30*i*,31*i*,32*i*)

Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B0/A(01) and subsequent editions ^(*)

Series 90B1/A(01) and subsequent editions

Series 90B6/A(01) and subsequent editions (*)

(Series 0*i*-C,0*i* Mate-C,20*i*-B)

Series 90B5/A(01) and subsequent editions (*)

• α*i*CZ 768S

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B1/C(03) and subsequent editions (Series 30*i*,31*i*,32*i*)

Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions

(*) With Series 90B0, 90B5, and 90B6, a αiCZ sensor cannot be used as the detector for a synchronous built-in servo motor. (The αiCZ sensor can be used as a separate detector.)

(3) Setting parameters

(a) Used as the detector for a synchronous built-in servo motor)

[Setting AMR]

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|----|------|------|------|------|------|------|------|
| 1806 (FS15 <i>i</i>) | 0 | AMR6 | AMR5 | AMR4 | AMR3 | AMR2 | AMR1 | AMR0 |
| 2001 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |

Set the value listed below according to the detector.

| Detector | Detector AMR | | | | | |
|---------------------|--|--|--|--|--|--|
| α i CZ 512S | Set the number of poles of the synchronous built-in servo motor in binary. | | | | | |
| α i CZ 768S | Set 0. | | | | | |
| α i CZ 1024S | Set a value obtained by dividing the number of poles of the synchronous built-in servo motor by 2 in binary. | | | | | |

Setting example:

When an 88-pole synchronous built-in servo motor and the $\alpha \dot{t}CZ$ 1024S are used:

Number of poles/2 = 88/2 = 44

The binary representation of the above value is 00101100. \rightarrow This value is set in AMR.

| <u> </u> | _ | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|---|----|----|----|----|----|----|----|--------|
| 2608 (FS15 <i>i</i>) | | | | | | | | | DECAMR |
| 2220 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | | |

Set one of the following values according to the detector.

| Detector | DECAMR |
|---------------------|--------|
| α i CZ 512S | Set 0. |
| α i CZ 768S | Set 1. |
| α i CZ 1024S | Set 0. |

| | Detector | AMR conversion | AMR conversion coefficient | | | | |
|------------------------------------|------------------------------|-----------------------|----------------------------|--|--|--|--|
| | Set one of the | following values acco | rding to the detector. | | | | |
| 2138 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | |
| 1761 (FS15 <i>i</i>) | AMR conversion coefficient 2 | | | | | | |
| 2112 (FS30 <i>i</i> ,16 <i>i</i>) | AMR conversion coefficient 1 | | | | | | |
| 1705 (FS15 <i>i</i>) | | | fficient 1 | | | | |

| Detector | AMR conversion coefficient 1 | AMR conversion coefficient 2 |
|---------------------|---------------------------------|-------------------------------|
| α i CZ 512S | Set 0. | Set 0. |
| α i CZ 768S | Set 768. | Set half the number of poles. |
| α i CZ 1024S | Set 0. | Set 0. |

| [Setting flexible feed gear] | | | | | | |
|------------------------------------|----------------------------------|---|--|--|--|--|
| 1977 (FS15 <i>i</i>) | Flexible feed gear (numerator) | | | | | |
| 2084 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | |
| 4070 (5045) | | | | | | |
| 1978 (FS15 <i>i</i>) | Flexible feed gear (denominator) | | | | | |
| 2085 (FS30 <i>i</i> ,16 <i>i</i>) | Q = 4 41 = | Contraction to the constitution between | | | | |
| | | feed gear according to the equation below. pulses per detector rotation is as follows: | | | | |
| | Detector | Number of pulses per detector rotation | | | | |
| | Detector | Amount of movement per motor revolution [deg]/ | | | | |
| | α i CZ 512S | detection unit [deg] | | | | |
| | arol 0120 | 500,000 | | | | |
| | | Amount of movement per motor revolution [deg]/ | | | | |
| | α i CZ 768S | detection unit [deg] | | | | |
| | | 750,000 | | | | |
| | • | Amount of movement per motor revolution [deg]/ | | | | |
| | α ί CZ 1024S | detection unit [deg] | | | | |
| | | 1,000,000 | | | | |
| | (Equation for p | arameter calculation) | | | | |
| | | Amount of movement per motor revolution [deg]/ | | | | |
| | Flexible feed gea | | | | | |
| | | Number of pulses per detector rotation | | | | |
| | [Setting numb | er of velocity pulses] | | | | |
| 1876 (FS15 <i>i</i>) | | Number of velocity pulses (PULCO) | | | | |
| 2023 (FS30 <i>i</i> ,16 <i>i</i>) | | , , , , , , , , , , , , , , , , , | | | | |
| | Set a value liste | ed in the following table according to the detector used. | | | | |
| | Detector | Number of velocity pulses | | | | |
| | α i CZ 512S | 4096 | | | | |
| | αi CZ 768S | 6144 | | | | |
| | α i CZ 1024S | 8192 | | | | |
| | [Setting numb | er of position pulses] | | | | |
| 1891 (FS15 <i>i</i>) | | | | | | |
| 2024 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | |
| | Set a value liste | ed in the following table according to the detector used. | | | | |
| | Detector | Number of position pulses | | | | |
| | α i CZ 512S | 6250 | | | | |
| | αi CZ 768S | 9375 | | | | |
| | ł . | | | | | |

12500

[Setting flexible feed gear]

α**i**CZ 1024S

B-65270EN/06

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| 1896 (FS15 <i>i</i>) | | Reference counter capacity | | | | | | | |
|------------------------------------|-------------------------------------|---|--|--|--|--|--|--|--|
| 1821 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | | |
| | Set one of the fo | llowing values according to the detector. | | | | | | | |
| | Detector Reference counter capacity | | | | | | | | |
| | $\alpha oldsymbol{i}$ CZ 512S | Set the number of pulses per motor revolution (detection unit) or a value obtained by dividing that number by an integer. | | | | | | | |
| | $\alpha oldsymbol{i}$ CZ 768S | Set the number of pulses per 120-degree motor revolution (one-third revolution) (detection unit) or a value obtained by dividing that number by an integer. | | | | | | | |
| | α i CZ 1024S | Set the number of pulses per motor revolution (detection unit) or a value obtained by dividing that number by an integer. | | | | | | | |

[Setting reference counter capacity]

(Example of parameter setting)

[System configuration]

- The Series 30*i* is used.
- An 88-pole/rev, synchronous built-in servo motor is used.
- The detector used is the $\alpha iCZ512S$.
- The least input increment of the controller is 1/1000 deg.
- Gear ratio 1:1

[Parameter setting]

AMR=01011000 (88 in decimal representation) Flexible feed gear (N/M) = 360,000/500,000 = 18/25, so parameter No. 2084 = 18, and parameter No. 2085 = 25Number of velocity pulses = 4096

Number of position pulses = 6250

Reference counter capacity = 360,000

- 45 -

(b) Used as a separate detector

After performing the initialization procedure (full-closed loop) described in Subsection 2.1.3, change the settings described below according to the signal pitch of the detector.

| 1978 (FS15 <i>i</i>) Flexible feed gear (denominator) (M) 1985 (FS30 <i>i</i> ,16 <i>i</i>) Set a value listed in the following table according to the detector us Detector Number of pulses per detector rotation αiCZ 512S Amount of movement per motor revolution [deg]/ αiCZ 768S detection unit [deg] αiCZ 768S detection unit [deg] αiCZ 768S detection unit [deg] αiCZ 768S 750,000 αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Mount of movement per motor revolution [deg]/ αiCZ 1024S Mount of movement per motor revolution [deg]/ αiCZ 1024S Set the number of velocity pulses 1876 (FS15 <i>i</i>) Number of velocity pulses (PULCO) D23 (FS30 <i>i</i> ,16 <i>i</i>) Set the number of position pulses (PULCO) Set a value listed in the following table according to the detector us Detector Number of position pulses (PPLS) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 768S 9375 × (gear reduction ratio from the motor to table) αiCZ 768S 9375 × (gear reduction ratio from the motor to table) | 1977 (FS15 <i>i</i>) | | Flexible feed gear (numerator) (N) |
|--|-------------------------------------|---|--|
| Dets (FS30 <i>i</i> ,16 <i>i</i>) Set a value listed in the following table according to the detector us Detector Number of pulses per detector rotation αiCZ 512S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Mumber of velocity pulses] 1876 (FS15 <i>i</i>) Number of velocity pulses (PULCO) 1873 (FS30 <i>i</i> ,16 <i>i</i>) Set the number of position pulses (PULCO) 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 768S 9375 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to | 084 (FS30 <i>i</i> ,16 <i>i</i>) | | |
| Dets (FS30 <i>i</i> ,16 <i>i</i>) Set a value listed in the following table according to the detector us Detector Number of pulses per detector rotation αiCZ 512S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 768S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Amount of movement per motor revolution [deg]/ αiCZ 1024S Mumber of velocity pulses] 1876 (FS15 <i>i</i>) Number of velocity pulses (PULCO) 1873 (FS30 <i>i</i> ,16 <i>i</i>) Set the number of position pulses (PULCO) 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 768S 9375 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to | 4070 (5045) | | |
| Set a value listed in the following table according to the detector usDetectorNumber of pulses per detector rotation $\alpha iCZ 512S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] 1876 (FS15 <i>i</i>)Number of velocity pulses [1,000,000 1876 (FS15 <i>i</i>)Number of velocity pulses to 8192. 1891 (FS15 <i>i</i>)Set the number of position pulses [Number of position pulses (PPLS) 224 (FS30 <i>i</i> , 16 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 512S$ $6250 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15 <i>i</i>)Conversion coefficient for the number of position feedback pulses (PSMPYL) | | 1 | Flexible feed gear (denominator) (M) |
| DetectorNumber of pulses per detector rotation $\alpha iCZ 512S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg]1876 (FS15i)Number of velocity pulsesD23 (FS30i,16i)Set the number of velocity pulses to 8192.1891 (FS15i)Number of position pulses]D24 (FS30i,16i)Set a value listed in the following table according to the detector usDetectorNumber of position pulses $\alpha iCZ 512S$ $6250 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 768S$ $9375 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction | | a value liste | d in the following table according to the detector use |
| $\alpha iCZ 512S$ Amount of movement per motor revolution [deg]/ detection unit [deg] 500,000 $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ $\alpha iCZ 768S$ $\alpha iCZ 768S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ Setting number of velocity pulses1876 (FS15 <i>i</i>)Number of velocity pulses (PULCO)123 (FS30 <i>i</i> ,16 <i>i</i>)Set the number of velocity pulses to 8192.1891 (FS15 <i>i</i>)Number of position pulses (PPLS)1891 (FS15 <i>i</i>)Number of position pulses (PPLS)1891 (FS15 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 512S$ 1892 (FS30 <i>i</i> ,16 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 512S$ 1893 (FS30 <i>i</i> ,16 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 512S$ 1894 (FS30 <i>i</i> ,16 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 512S$ 1895 (FS15 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 1024S$ 1296 (FS15 <i>i</i>)Set a value listed in the following table according to the detector us $\alpha iCZ 1024S$ 1297 (Sear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 1298 (FS15 <i>i</i>)Conversion coefficient for the number of position feedback pulses (PSMPYL) <th></th> <th></th> <th></th> | | | |
| $\alpha iCZ 512S$ detection unit [deg] $\alpha iCZ 768S$ $500,000$ $\alpha iCZ 768S$ $detection unit [deg]$ $\alpha iCZ 768S$ $750,000$ $\alpha iCZ 1024S$ $Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S Amount of movement per motor revolution [deg]/ \alpha iCZ 1024S 1,000,000 [Setting number of velocity pulses [PULCO) Set the number of velocity pulses (PULCO) 23 (FS30i,16i) Set the number of position pulses (PLS) [Setting number of position pulses (PPLS) Set a value listed in the following table according to the detector us [Setting number of position pulses \alpha iCZ 512S 6250 \times (gear reduction ratio from the motor to table) \alpha iCZ 768S 9375 \times (gear reduction ratio from the motor to table) \alpha iCZ 1024S 12500 \times (gear reduction ratio from the motor to table) If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). Conversion c$ | | | · · · · · · · · · · · · · · · · · · · |
| $\frac{500,000}{\alpha i CZ 768S} \xrightarrow{ficz 768S} \xrightarrow{ficz 768S} \xrightarrow{ficz 768S} \xrightarrow{ficz 768S} \xrightarrow{ficz 768S} \xrightarrow{ficz 750,000} \\ \hline \ $ | α1 | icz 512S | |
| $\alpha iCZ 768S$ detection unit [deg] $\alpha iCZ 768S$ $750,000$ $\alpha iCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $\alpha iCZ 1024S$ $1,000,000$ [Setting number of velocity pulses] $1,000,000$ [Setting number of velocity pulses (PULCO) Set the number of velocity pulses (PULCO) [Setting number of position pulses] Set the number of position pulses] [I891 (FS15:)] 24 (FS30:,16:) [Set a value listed in the following table according to the detector us Detector Number of position pulses $\alpha iCZ 512S$ 6250 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) | | - | |
| Totological $750,000$ Amount of movement per motor revolution [deg]/ detection unit [deg] $aiCZ 1024S$ Amount of movement per motor revolution [deg]/ detection unit [deg] $1000,000$ [Setting number of velocity pulses (PULCO)23 (FS30i,16i)Set the number of velocity pulses to 8192.[Setting number of position pulses]Number of position pulses (PPLS)24 (FS30i,16i)Set a value listed in the following table according to the detector usDetectorNumber of position pulses (PPLS)aiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 768S9375 × (gear reduction ratio from the motor to table) αiCZ 1024S12500 × (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain | | | Amount of movement per motor revolution [deg]/ |
| αiCZ 1024SAmount of movement per motor revolution [deg]/ detection unit [deg] 1,000,0001876 (FS15i)Number of velocity pulses]1876 (FS15i)Number of velocity pulses (PULCO)123 (FS30i,16i)Set the number of velocity pulses to 8192.1891 (FS15i)Set the number of position pulses]1891 (FS15i)Number of position pulses (PPLS)1891 (FS15i)Set a value listed in the following table according to the detector usDetectorNumber of position pulses αiCZ 512S6250 × (gear reduction ratio from the motor to table) αiCZ 768S9375 × (gear reduction ratio from the motor to table) αiCZ 1024S12500 × (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | α1 | CZ 768S | detection unit [deg] |
| $\alpha i CZ 1024S$ detection unit [deg] 1,000,000 [Setting number of velocity pulses] 1876 (FS15i) Number of velocity pulses (PULCO) 123 (FS30i,16i) Set the number of velocity pulses to 8192. [Setting number of position pulses] [Setting number of position pulses] 1891 (FS15i) Number of position pulses (PPLS) 124 (FS30i,16i) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12 | | | 750,000 |
| 1,000,000 1,000,000 1,000,000 ISetting number of velocity pulses] Number of velocity pulses (PULCO) Set the number of velocity pulses to 8192. [Setting number of position pulses] Number of position pulses] 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) Detector Number of position pulses $aiCZ 512S$ G250 × (gear reduction ratio from the motor to table) $aiCZ 768S$ 9375 × (gear reduction ratio from the motor to table) $aiCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $aiCZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $aiCZ 1024S$ $12500 × (gear reduction ratio from the motor to table) aiCZ 1024S 12500 × (gear reduction ratio from the motor to table) aiCZ 1024S 12500 × (gear reduction ratio from the motor to table) aiCZ 1024S 1$ | | | |
| [Setting number of velocity pulses]1876 (FS15 <i>i</i>)Number of velocity pulses (PULCO)023 (FS30 <i>i</i> ,16 <i>i</i>)Set the number of velocity pulses to 8192.1891 (FS15 <i>i</i>)Set the number of position pulses]1891 (FS15 <i>i</i>)Number of position pulses (PPLS)024 (FS30 <i>i</i> ,16 <i>i</i>)Set a value listed in the following table according to the detector usDetectorNumber of position pulses $\alpha iCZ 512S$ $6250 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table) $\alpha iCZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15 <i>i</i>)Conversion coefficient for the number of position feedback pulses (PSMPYL) | α ί | CZ 1024S | detection unit [deg] |
| 1876 (FS15i) Number of velocity pulses (PULCO) D23 (FS30i,16i) Set the number of velocity pulses to 8192. [Setting number of position pulses] Issue of position pulses] 1891 (FS15i) Number of position pulses (PPLS) D24 (FS30i,16i) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 2628 (FS15i) Conversion coefficient for the number of position feedback pulses (PSMPYL) | | | 1,000,000 |
| 1876 (FS15 <i>i</i>) Number of velocity pulses (PULCO) 1873 (FS30 <i>i</i> ,16 <i>i</i>) Set the number of velocity pulses to 8192. [Setting number of position pulses] Iset the number of position pulses] 1891 (FS15 <i>i</i>) Number of position pulses (PPLS) 1224 (FS30 <i>i</i> ,16 <i>i</i>) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 768S 9375 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 2628 (FS15 <i>i</i>) Conversion coefficient for the number of position feedback pulses (PSMPYL) | [Set | ting numbe | er of velocity pulses] |
| 23 (FS30i,16i) Set the number of velocity pulses to 8192. [Setting number of position pulses] [Setting number of position pulses] 1891 (FS15i) Number of position pulses (PPLS) 24 (FS30i,16i) Set a value listed in the following table according to the detector us Detector Number of position pulses αiCZ 512S 6250 × (gear reduction ratio from the motor to table) αiCZ 768S 9375 × (gear reduction ratio from the motor to table) αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 26228 (FS15i) Conversion coefficient for the number of position feedback pulses (PSMPYL) | | | |
| Set the number of velocity pulses to 8192.[Setting number of position pulses]Isetting number of position pulses]Number of position pulses (PPLS)24 (FS30i,16i)Set a value listed in the following table according to the detector usDetectorNumber of position pulses $\alpha i CZ 512S$ $6250 \times$ (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ $9375 \times$ (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ $12500 \times$ (gear reduction ratio from the motor to table)If the calculation result is greater than 32767 , use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | | | |
| 1891 (FS15i)Number of position pulses (PPLS)DetectorNumber of position pulses $\alpha i CZ 512S$ 6250 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | | the number of | of velocity pulses to 8192. |
| 1891 (FS15i)Number of position pulses (PPLS)DetectorNumber of position pulses $\alpha i CZ 512S$ 6250 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 768S$ 9375 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table) $\alpha i CZ 1024S$ 12500 × (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | [Set | ting numbe | er of position pulses] |
| Set a value listed in the following table according to the detector usDetectorNumber of position pulses $\alpha iCZ 512S$ $6250 \times (gear reduction ratio from the motor to table)\alpha iCZ 768S9375 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction $ | 1891 (FS15 <i>i</i>) | | Number of position pulses (PPLS) |
| Set a value listed in the following table according to the detector usDetectorNumber of position pulses $\alpha iCZ 512S$ $6250 \times (gear reduction ratio from the motor to table)\alpha iCZ 768S9375 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction ratio from the motor to table)\alpha iCZ 1024S12500 \times (gear reduction $ | 024 (FS30 <i>i</i> ,16 <i>i</i>) | | · · · · · |
| $\alpha iCZ 512S$ $6250 \times (gear reduction ratio from the motor to table)$ $\alpha iCZ 768S$ $9375 \times (gear reduction ratio from the motor to table)$ $\alpha iCZ 1024S$ $12500 \times (gear reduction ratio from the motor to table)$ If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | | a value liste | d in the following table according to the detector use |
| αiCZ 768S9375 × (gear reduction ratio from the motor to table) αiCZ 1024S12500 × (gear reduction ratio from the motor to table)If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS).2628 (FS15i)Conversion coefficient for the number of position feedback pulses (PSMPYL) | | Detector | Number of position pulses |
| αiCZ 1024S 12500 × (gear reduction ratio from the motor to table) If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 2628 (FS15i) Conversion coefficient for the number of position feedback pulses (PSMPYL) | | • | $6250 \times (\text{gear reduction ratio from the motor to table})$ |
| If the calculation result is greater than 32767, use the follow position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 2628 (FS15 <i>i</i>) Conversion coefficient for the number of position feedback pulses (PSMPYL) | | 1CZ 512S | |
| position pulse conversion coefficient (PSMPYL) to obtain parameter value (PPLS). 2628 (FS15i) Conversion coefficient for the number of position feedback pulses (PSMPYL) | α | • | |
| | | <i>i</i> CZ 768S | |
| | α α α If th posi | iCZ 768S iCZ 1024S the calculation pulse | $9375 \times$ (gear reduction ratio from the motor to table) 12500 \times (gear reduction ratio from the motor to table) on result is greater than 32767, use the follow conversion coefficient (PSMPYL) to obtain |
| | α α α If t posi para | iCZ 768S iCZ 1024S the calculation tion pulse timeter value | $9375 \times$ (gear reduction ratio from the motor to table) 12500 \times (gear reduction ratio from the motor to table) on result is greater than 32767, use the follow conversion coefficient (PSMPYL) to obtain (PPLS). |

This parameter is used when the calculated number of position pulses is greater than 32767.

(Equation for parameter calculation)

Set this parameter so that the following equation is satisfied:

- Number of position pulses = $PPLS \times PSMPYL$
- $(\rightarrow$ See Supplementary 3 in Subsection 2.1.8.)

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| | [Setting reference counter capacity] | | | | | | |
|------------------------------------|--------------------------------------|---|--|--|--|--|--|
| 1896 (FS15 <i>i</i>) | Reference counter capacity | | | | | | |
| 1821 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | |
| | Set one of the f | ollowing values according to the detector. | | | | | |
| | Detector | Reference counter capacity | | | | | |
| | α i CZ 512S | Set the number of pulses per revolution of the detector installed separately (detection unit) or a value obtained by dividing that number by an integer. | | | | | |
| | α i CZ 768S | Set the number of pulses per 120-degree revolution (one-third revolution) of the detector installed separately (detection unit) or a value obtained by dividing that number by an integer. | | | | | |
| | α i CZ 1024S | Set the number of pulses per revolution of the detector installed separately (detection unit) or a value obtained by dividing that number by an integer. | | | | | |

[Setting reference counter capacity]

(Example of parameter setting)

[System configuration]

- The Series 30*i* is used.
- The detector used is the $\alpha iCZ1024S$
- The least input increment of the controller is 1/1000 deg.
- Gear ratio 1:1

[Parameter setting]


Flexible feed gear (N/M) = 360,000/1,000,000 = 9/25, so parameter No. 2084 = 9, and parameter No. 2085 = 25 Number of position pulses = 12500 Reference counter capacity = 360,000

2.1.7 Setting Parameters when the PWM Distribution Module is Used

(1) Overview

The PWM distribution module (PDM) distributes a copy of a PWM command for one axis received from the CNC to more than one servo amplifier. When receiving current feedback signals from the servo amplifiers, the PDM obtains an average current value per servo amplifier and transfers it to the CNC. Since the CNC regards servo amplifiers connected to the PDM as one axis, use of the PDM allows large output by parallel driving without increasing the number of axes controlled by the CNC.

The PDM is used mainly for driving a servo motor having four or more windings (such as the $\alpha i S2000/2000 HV$ and $\alpha i S3000/2000 HV$).

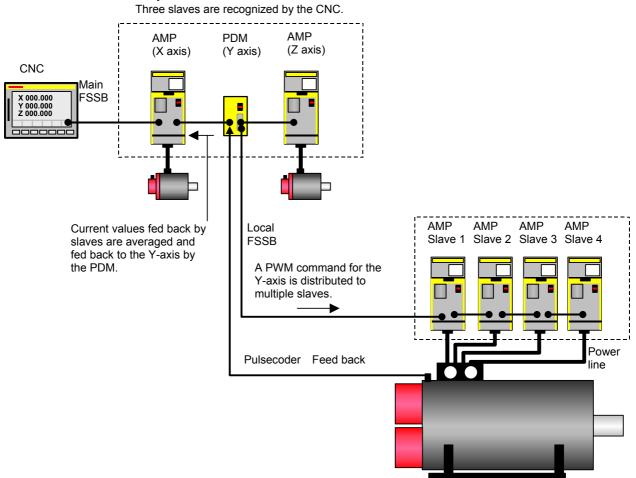

Connection example:

Servo motor (αi S2000/2000HV and so on)

(2) Series and editions of applicable servo software

(Series 16*i*-B,18*i*-B,21*i*-B, Power Mate *i*)

Series 90B1/A(01) and subsequent editions

(*) When the PDM is used, it must be supported by the CNC system software. (With the system software series listed below, the PDM can be used.)

| CNC model | Series and edition |
|-------------------------|---------------------------------|
| Series 16 <i>i</i> -MB | B0HA-17 and subsequent editions |
| Series 18 <i>i</i> -MB | BDHA-17 and subsequent editions |
| Series 18 <i>i</i> -MB5 | BDHE-07 and subsequent editions |
| Series 21 <i>i</i> -MB | DDHA-17 and subsequent editions |
| Power Mate <i>i</i> -D | 88E1-01 and subsequent editions |
| Power Mate <i>i</i> -H | 88F2-01 and subsequent editions |

(3) Setting parameters (a) Setting for the PDM

When the PDM is used for an axis, servo HRV3 control must be set for the axis. Set the parameter shown below.

After setting parameters with servo HRV2 control specified, set servo HRV3 control by parameter setting as follows (HR3 = 1). (For each axis)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ | |
|-----------------------|--------|---|----------|-----------|----------|-----------|----------|---------|---------|--|
| 2013 (FS16 <i>i</i>) | | | | | | | | HR3 | | |
| HR3(#0) | 1: U | Jses serv | o HRV3 | control. | | | | | | |
| | 0: I | Does not | use serv | o HRV3 | control. | | | | | |
| | (| (*) To use the PDM, set HR3 to 1 . In actual control, operation equivalent to HRV2 takes place. (It is also impossible to perform switching between high-speed current control modes by G5.4.) | | | | | | | | |
| | | | | | | , set the | followin | g param | eter in | |
| f | additi | on to the | above F | IR3 setti | ng. | | | | 1 | |
| 2165 (FS16 <i>i</i>) | | | | Se | t 0. | | | | | |
| | | If this setting is omitted, the invalid motor-amplifier combination state may occur. | | | | | | | | |
| | that a | When the PDM is used, this parameter needs to be set to 0. So, note that actual current display (in amperes) on the servo adjustment screen is disabled. (Indication by % is provided.) | | | | | | | | |

(b) Setting for 16-pole servo motors

For an axis for which one of the following servo motor is used, set the following parameter for 16-pole servo motors:

| Servo motor name | Motor specification |
|-------------------------|---------------------|
| αi S2000/2000HV | 0091 |
| α <i>i</i> S3000/2000HV | 0092 |

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS B-65270EN/06

| | #7 | | 3 | #6 | | #5 | 5 | #4 | #3 | #2 | #1 | #0 | _ | |
|------------------------|-----|-----|-----|---------------------|-----|-----------|------|---|-----------|-----------|------------|-------------|--------|--|
| 2220 (FS16 <i>i</i>) | | | | | | P1 | 6 | | | | | | | |
| P16(#5) | 1: | J | Jse | s a | 16- | pol | e se | ervo mot | or. | | | | - | |
| | 0: | Ι | Doe | es n | otu | ise | a 1 | 6-pole se | rvo mot | or. | | | | |
| | #7 | | ; | #6 | | #5 | 5 | #4 | #3 | #2 | #1 | #0 | | |
| 2001 (FS16 <i>i</i>) | 0 | | A | MR6 | | AMI | R5 | AMR4 | AMR3 | AMR2 | AMR1 | AMR0 |] | |
| AMR0 to 6 (#0 to 6) $$ | Set | the | A | MR | va | lue | ace | cording to | o the nu | mber of | motor po | oles. | - | |
| | - | | | | | | | | | | | | | |
| | | | - | AMF | 2 | | | | Num | nber of m | otor nol | 96 | | |
| | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | | | | | |
| | | | | 16-pole servo motor | | | | | | | | | | |
| | 0 | 0 | 0 | 1 | 0 | 0 | 0 | ⁰ α <i>i</i> S2000/2000HV, α <i>i</i> S3000/2000HV | | | | | | |
| | 0 | 0 | 0 | 0 | 0 | 0 | 0 | Other tha | n 16-pole | e servo m | otor (8-po | ole servo i | motor) | |

2.1.8 Actions for Illegal Servo Parameter Setting Alarms

(1) Overview

When a setting value is beyond an allowable range, or when an overflow occurs during internal calculation, an invalid parameter setting alarm is issued.

This section explains the procedure to output information to identify the location and the cause of an invalid parameter setting alarm.

(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series90D0/A(01) and subsequent editions
Series90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
Series9096/A(01) and subsequent editions
Series90B0/A(01) and subsequent editions
Series90B1/A(01) and subsequent editions
Series90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series90B5/A(01) and subsequent editions

(3) Illegal parameter setting alarms that can be displayed in parameter error detail display

Invalid parameter setting alarms detected by the servo software can be displayed. Alarms detected by the system software cannot be displayed here.

To check whether the servo software detects an alarm, check the following:

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------------|----|----|----|-----|----|----|----|----|
| Alarm 4 on the servo screen | | | | PRM | | | | |

- 1: Alarm detected by the servo software (See the descriptions of detailed display provided later.)
- 0: Alarm detected by the system software (With Series including 16*i*, identification is possible using DGN280.)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---------|-------|--|-----------|------------|-----------|----------|-----------|---------------------------------|
| DGN280 | | AXS | | DIR | PLS | PLC | | мот |
| MOT(#0) | 1: A | is the mo | otor num | ber in p | arametei | No. 20 | 20, a va | alue not within |
| | tł | ne specifi | able rang | ge is set. | | | | |
| | | | | | _ | | | |
| | | | e given b | elow list | ts the va | lid moto | r ID nu | mbers for each |
| | | series. | | | | _ | | |
| | | | | - | | ated ran | ige is s | set, an illegal |
| | | paramete | - | | | | | |
| | | (In this c | | | (| | | |
| | | | | e series/e | | | | tor ID No. |
| | | s 9096/A((| | | | | 1 | to 250 |
| | | s 90B0/H(| | | | | | to 350 |
| | | s 90B1/B(| | | | | | to 550 |
| | | s 90B5,90 | | | | | | to 550 |
| | Serie | s 90D0,90 | E0/B(02) | and subs | equent e | ditions | 1 | to 550 |
| PLC(#2) | | | eter No. | 2023, ar | | - | - | otor revolution number equal |
| PLS(#3) | | 1: As the number of position feedback pulses per motor revolution in parameter No. 2024, an invalid value such as a number equal to or less than 0 is set. | | | | | | |
| DIR(#4) | | As the m value (11 | | | | parame | ter No. 2 | 2022, a correct |
| AXS(#6) | 1: | Paramete | r No. 10 | 23 (servo | o axis nu | mber) is | set inco | prrectly. |

(4) Method

When an illegal parameter setting alarm detected by the servo software is issued, analyze the cause of the alarm by following the procedure explained below.

* When more than one alarm is issued, one of the causes of these alarms is displayed. Analyze the alarms one by one.

Procedure for displaying detail information about an illegal parameter setting alarm

(For the Series 15i)


On the servo alarm screen, an item indicating parameter error details is located in the lower left side. Check the number indicated here.

(For the Series 30*i*, 16*i* and so on)

On the diagnosis screen, search for No. 352. Check the number written in No. 352.

Analyzing illegal parameter setting alarms in detail

The detail alarm data basically consists of three to five digits as shown:

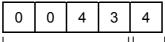

Location where an Cause of the alarm

alarm was caused

Upper four digits:

Indicate the location where an alarm was caused.

Table 2.1.8 lists the displayed numbers and corresponding parameter numbers.

- *1 Basically, the low-order three digits of the 4-digit parameter number of the Series 16*i* indicate the location where an alarm was caused. (When an alarm is due to more than one parameter, these digits and parameter numbers do not sometimes match.)
- *2 When the digits are displayed on the servo alarm screen (Series 15*i*) or diagnosis screen (Series 30*i*, 16*i*, and so on), 0s in high-order digits are not displayed.

Lowest digit:

Indicates the cause of an alarm.

The displayed numbers and their meanings are explained below:

- 2: The set parameter is invalid. The corresponding function does not operate.
- 3: The parameter value is beyond the setting range. Alternatively, the parameter is not set.
- 4 to 9: An overflow occurred during internal calculation.

| - | | | analysis of megal parameter setting | |
|--------------------------|-------------------------------------|--|---|---|
| Alarm detail No. | Parameter No. Series 15 <i>i</i> | Parameter No. Series 30 <i>i</i> , 16 <i>i</i> , and so on | Cause | Action |
| 83 | - | 2008 | Parameter settings related to learning control are illegal → See Supplementary 1. | Change the parameter settings so that they fall in the applicable range. |
| 233 | 1876 | 2023 | When initialization bit 0 is set to 1, the number of velocity pulses exceeds 13100. | Correct the number of velocity pulses so that it is within 13100. |
| 243 | 1891 | 2024 | When initialization bit 0 is set to 1, the number of position pulses exceeds 13100. | Correct the number of position pulses so that it is within 13100. \rightarrow See Supplementary 3. |
| 434 435 | 1855 | 2043 | The internal value of the velocity loop integral gain overflowed. | Decrease the value of the velocity loop integral gain parameter. |
| 443 444 445 | 1856 | 2044 | The internal value of the velocity loop proportional gain overflowed. | Use the function for changing the internal format of the velocity loop proportional gain. Alternatively, decrease the parameter setting. \rightarrow See Supplementary 4. |
| 474 475 | 1859 | 2047 | The internal value of the observer parameter (POA1) overflowed. | Correct the setting to $(-1) \times (\text{desired value})/10.$ |
| 534 535 | 1865 | 2053 | The internal value of a parameter related to dead zone compensation overflowed. | Decrease the setting to the extent that the illegal parameter setting alarm is not caused. |
| 544 545 | 1866 | 2054 | The internal value of a parameter related to dead zone compensation overflowed. | Decrease the setting to the extent that the illegal parameter setting alarm is not caused. |
| 686 687 688 | 1961 | 2068 | The internal value of the feed-forward coefficient overflowed. | Use the position gain expansion function. → See Supplementary 5. |
| 694 695 696 699 | 1962 | 2069 | The internal value of the velocity feed-forward coefficient overflowed. | Decrease the velocity feed-forward coefficient. |
| 754 755 | 1968 | 2075 | The setting for this parameter has overflowed. | This parameter is not used at present. Set 0. |
| 764 765 | 1969 | 2076 | The setting for this parameter has overflowed. | This parameter is not used at present. Set 0. |
| 843 | 1977 | 2084 | A positive value is not set as the flexible feed gear numerator. Alternatively, the numerator of the feed gear is greater than the denominator. | Set a positive value as the flexible feed gear numerator. Alternatively, correct the parameter so that the numerator of the feed gear is less than or equal to the denominator. (For other than parallel type separate detectors) |
| 853 | 1978 | 2085 | A positive value is not set as the flexible feed gear denominator. | Set a positive value as the flexible feed gear denominator. |
| 883 | 1981 | 2088 | For an axis with a serial type separate detector, a value exceeding 100 is set as the machine velocity feedback coefficient. | For an axis with a serial type separate detector, the upper limit of the machine velocity feedback coefficient is 100. Correct the coefficient so that it does not exceed 100. |

Table 2.1.8 Detail analysis of illegal parameter setting alarms

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| Alarm detail No. | Parameter No. Series 15 <i>i</i> | Parameter No. Series 30 <i>i</i> , 16 <i>i</i> , and so on | Cause | Action |
|---------------------|-------------------------------------|--|---|---|
| 884 885 886 | 1981 | 2088 | The internal value of the machine velocity feedback coefficient overflowed. | Decrease the machine velocity feedback coefficient. Alternatively, use the vibration-damping control function that has an equivalent effect. |
| 926 927 928 | 1985 | 2092 | The internal value of the look-ahead feed-forward coefficient overflowed. | Use the "position gain precision optimization function" or the "position gain increment function". \rightarrow See Supplementary 5. |
| 953 | 1988 1763 2808 | 2095 2140 2395 | The internally set value of the feed-forward timing adjustment coefficient is ± 12800 or over. | This error can be avoided by setting bit 4 of parameter No. 2612 (for the Series 15 <i>i</i>) or bit 5 of parameter No. 2224 (for the Series 16 <i>i</i> and so on) to 1 if not |
| 994 995 996 | 1992 | 2099 | The internal value for N pulse suppression overflowed. | nano-interpolation is used. Disable the N pulse suppression function. (Series 15 <i>i</i> : No.1808#4=0, Series 30 <i>i</i> , 16 <i>i</i> , and so on : No.2003#4=0) Alternatively, decrease the parameter setting so that no overflow will occur. |
| 1033 | 1996 | 2103 | There is a difference in retract distance under unexpected disturbance torque between position tandem synchronous axes (if the same-axis retract function is in use). | Set the same value for position tandem synchronous axes. |
| 1123 | 1705 | 2112 | Although a linear motor is used, the AMR conversion coefficient parameter is not input. | Set the AMR conversion coefficient. |
| 1182 | 1729 1971 1972 | 2118 2078 2079 | The dual position feedback conversion coefficient has not been specified. | Specify the dual position feedback conversion coefficient. |
| 1284 1285 | 1736 | 2128 | When a small value is set as the number of velocity pulses, the internal value of a parameter related to current control overflows. | Decrease the value in this parameter to the extent that the alarm is not caused. |
| 1294 1295 | 1752 | 2129 | When a large value is set as the number of velocity pulses, the internal value of a parameter related to current control overflows. | When the value set in this parameter is resolved to the form a × 256 + b, set a smaller value in a again. |
| 1393 | 1762 | 2139 | The AMR offset value of a linear motor exceeds ±45. | Keep the setting of this parameter within ± 45 . Alternatively, set bit 0 of parameter No. 2683 (for the Series 15 <i>i</i>) or bit 0 of parameter No. 2270 (for the Series 30 <i>i</i> , 16 <i>i</i> , and so on) to 1 to increase the setting range of the AMR offset, and then specify the parameter anywhere within ± 60 . |

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS

| Alarm detail No. | Parameter No. Series 15 <i>i</i> | Parameter No. Series 30 <i>i</i> , 16 <i>i</i> , and so on | Cause | Action |
|------------------------------|-------------------------------------|--|---|--|
| 1446 1447 1448 | 1767 | 2144 | In the cutting feed/rapid traverse FAD function, the feed-forward coefficient for cutting overflowed. | Use the position gain expansion function. \rightarrow See Supplementary 5. |
| 1454 1455 1456 1459 | 1768 | 2145 | In the cutting feed/rapid traverse FAD function, the velocity feed-forward coefficient for cutting overflowed. | Decrease the velocity feed-forward coefficient. |
| 1493 | 1772 | 2149 | A value greater than 6 is specified in this parameter. | Only 6 or less can be specified in this parameter. Change the setting to 6 or below 6. |
| 1503 | 1773 | 2150 | A value equal to or greater than 10 is set. | Set a value less than 10. |
| 1793 | 2622 | 2179 | A negative value or a value greater than the setting of parameter No. 1821 (Series 16 <i>i</i> and so on) or parameter No. 1896 (Series 15 <i>i</i>) is set. | Set a positive value less than the setting of parameter No. 1821 (Series 30 <i>i</i> , 16 <i>i</i> , and so on) or parameter No. 1896 (Series 15 <i>i</i>). |
| 1853 | 2628 | 2185 | A negative value or a value greater than the setting of parameter No. 2023 (Series 16 <i>i</i> and so on) or parameter No. 1876 (Series 15 <i>i</i>) is set. | Set a positive value less than the setting of parameter No. 2023 (Series 30 <i>i</i> , 16 <i>i</i> , and so on) or parameter No. 1876 (Series 15 <i>i</i>). |
| 2243 | 2612#5 | 2224#5 | Series 15 <i>i</i> : No.2612#5=1 and Series 16 <i>i</i> and so on : No.2224#5=1 (feed-forward timing adjustment function overflow alarm ignored) were specified and a nano interpolation command was issued. | Use either one. |
| 2713 | 1707#0 | 2013#0 | The PDM is used, but the HRV3 function bit is off. | Set the HRV3 function bit to 1. |
| 3423 | 2755 | 2342 | A negative value or a value equal to or greater than 101 is set. | Set a positive value less than 100. |
| 3433 | 2756 | 2343 | A value not within -180 to 180 is set. | Set a value within -180 to 180. |
| 8213 | 1896 | 1821 | A positive value is not set in the reference counter capacity parameter. | Set a positive value in this parameter. |
| 8254 8255 8256 | 1825 | 1825 | The internal value of the position gain overflowed. | Use the "position gain precision optimization function" or the "position gain increment function". \rightarrow See Supplementary 5. |
| 10016 10019 | 1740#0 | 2200#0 | The internal value of a parameter related to runaway detection overflowed. | Do not use the runaway detection function. (Set bit 0 to 1.) |
| 10024 10025 | | | An overflow occurred in internal calculation on the separate detector serial feedback extrapolation level. | When servo software Series 90B0 is used, change the software edition to edition D or a later edition. (For series other than 90B0, the software edition need not be changed.) |

2. SETTING $\alpha i S / \alpha i F / \beta i S$ SERIES SERVO PARAMETERS

| Alarm detail No. | Parameter No. Series 15 <i>i</i> | Parameter No. Series 30 <i>i</i> , 16 <i>i</i> , and so on | Cause | Action |
|---------------------|-------------------------------------|--|--|---|
| 10033 | 1809 | 2004 | Illegal control cycle setting This error occurs if automatic modification is carried out for the control cycle. | Correct this parameter related to interrupt cycle setting. |
| 10053 | 1960#0 | 2018#0 | When a linear motor is used, the scale reverse connection bit is set. | When the linear motor is used, the scale reverse connection bit cannot be used. |
| 10062 | 1749#4 | 2209#4 | The amplifier used does not support the HC alarm prevention function. | When you use the current amplifier continuously, set the function bit shown to the left to 0. When using the HC alarm prevention function, use an appropriate amplifier that supports the function. |
| 10072 | 1951#6 | 2007#6 | The customer's board function and FAD were specified at the same time. | The customer's board function and the FAD function cannot be used together. Turn off one of them. |
| 10082 | 2601#6 | 2213#6 | The NC does not support the improved version of the cutting/rapid position gain switching function. | Disable this function. |
| 10092 10093 | 1809 1707#0 1708#0 | 2004 2013#0 2014#0 | This alarm is issued when an invalid control cycle is set. | Change the control cycle setting to HRV1, HRV2, HRV3 or HRV4. \rightarrow See Supplementary 2. |
| | | | Different control cycles are set within one servo CPU. | Set the same control cycle for axes controlled by one servo CPU. \rightarrow See Supplementary 2. |
| | | | When HRV4 is enabled, a detector that does not support HRV4 is used. (FS30 <i>i</i> only) | Replace the detector with a detector supporting HRV4. Alternatively, disable HRV4. → See Supplementary 2. |
| | | | When HRV4 is enabled, a servo amplifier that does not support HRV4 is connected. (FS30 <i>i</i> only) | Replace the servo amplifier with a servo amplifier supporting HRV4. Alternatively, disable HRV4. → See Supplementary 2. |
| | | | HRV1 is set. (FS30 <i>i</i> only) | The Series $30i$ does not allow HRV1 setting. Set HRV2, HRV3 or HRV4. \rightarrow See Supplementary 2. |
| 10103 | 1809 1707#0 | 2004 2013#0 | If a current control cycle of 250 μ s is set, this error occurs when HRV3 is specified. | Set the control cycle correctly. \rightarrow See Supplementary 2. |
| 10113 | 1707#0 | 2013#0 | This error occurs if the specified current cycle does not match the actual setting. | An axis for which HRV3 is specified exists on the same optical cable. Review the placement of the amplifier, or disable HRV3. \rightarrow See Supplementary 2. |

B-65270EN/06

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS

| Alarm detail No. | Parameter No. Series 15 <i>i</i> | Parameter No. Series 30 <i>i</i> , 16 <i>i</i> , and so on | Cause | Action |
|---------------------|-------------------------------------|--|---|---|
| | 1707#0 | 2013#0 | This alarm is issued when the axis supports HRV3 but the other axis of the pair does not support HRV3. | Eliminate the cause of the disability in setting the other axis. Alternatively, cancel the HRV3 setting. → See Supplementary 2. |
| 10123 | 1707#0 1708#0 | 2013#0 2014#0 | When HRV4 is set, this alarm is issued if any of the following conditions is met. (FS30<i>i</i> only) Servo software not supporting HRV4 is used. The same FSSB system includes axes with HRV4 setting and axes with HRV2 or HRV3 setting. The limitation in the number of axes is not observed. (In HRV4 control, one axis/DSP is set.) | Eliminate the causes listed on the left. Alternatively, cancel the HRV4 setting. → See Supplementary 2. |
| 10133 (*4) | 1707#0 1708#0 | 2013#0 2014#0 | This alarm is issued when HRV3 or HRV4 is set, but the amplifier does not support these control types. | HRV3 or HRV4 is unusable for the axis on which the error occurred. \rightarrow See Supplementary 2. |

* The alarms indicated by "(FS30*i* only)" may be issued only when servo software Series 90D0 or 90E0 is used. When other servo software series are used, these alarms are not issued.

Supplementary 1: Details of illegal settings of learning control parameters

For the Series 16i and so on, reset parameter No. 2115 to 0, and set parameter No. 2151 to 1913, and then change the value of diagnosis information (DGN) No. 353 to binary form. If a resulting binary bit is 1, its bit position indicates the detail cause. (For the Series 15i, no learning control is available.)

| Bit position | Cause | |
|--------------|--|--|
| B3 | The band stop filter setting (No. 2244) is out of the valid range. | |
| B4 | The profile number setting (No. 2233) is out of the valid range. | |
| B5 | The command data cycle setting (Nos. 2243, 2236, 2238, 2240, and 2266) is out of the valid range. | |
| B6 | The total of the profiles (No. 2264) is out of the valid range. | |
| B7 | G05 was started during memory clear processing. | |
| B8 | The profile number (No. 2233) was 0 when the total of profiles (No. 2264) is nonzero. | |
| В9 | An automatically set value for thinning-out shift was out of the valid range because of a long command | |
| | data cycle. | |

Supplementary 2: Control cycle setting

There are four different types of control cycle setting (HRV1, HRV2, HRV3 and HRV4). Their settings are explained below.

For Series 15i

HRV1: No1809=0X000110 HRV2: No1809=0X000011, No1707#0=0 HRV3: No1809=0X000011, No1707#0=1

For Series 16*i* and so on HRV1: No2004=0X000110 HRV2: No2004=0X000011, No2013#0=0 HRV3: No2004=0X000011, No2013#0=1

For Series 30i

HRV2: No2004=0X000011, No2013#0=0, No2014#0=0 HRV3: No2004=0X000011, No2013#0=1, No2014#0=0 HRV4: No2004=0X000011, No2013#0=0, No2014#0=1

When an invalid value is set in control cycle related parameters, the following alarm messages are indicated on the CNC:

| Alarm detail No. | Alarm number | Message |
|------------------|--------------|---|
| 10092 | 456 | Invalid current control cycle setting |
| 10093 | | |
| 10103 | 457 | Invalid High-speed HRV setting |
| 10113 | 458 | Invalid current control cycle setting |
| 10123 | 459 | High-speed HRV setting not allowed |
| 10133 | 468 | High-speed HRV setting not allowed (amplifier) |

Supplementary 3: Setting the number of position pulses


If the resolution of the separate detector is high and the number of position feedback pulses becomes greater than 32767, take the following measure.

(a) For other than servo software Series 9096

Use "position feedback pulse conversion coefficient" to make settings. Number of position feedback pulses = $A \times B$ Select B so that A is within 32767.

Select B so that A is within 32/6/.

- A: Number of position feedback pulses set in the parameter (less than or equal to 32767)
- B: Conversion coefficient for the number of position feedback pulses

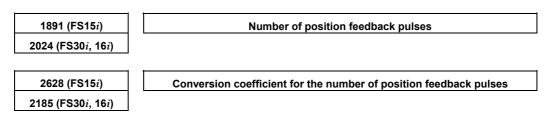

(Example of setting)

If the linear scale used has a minimum resolution of 0.1 μm and the distance to move per motor turn is 16 mm


Set A and B, respectively, to 10000 and 16, because:

Ns = distance to move per motor turn (mm)/detector minimum resolution (mm) = $16 \text{ mm}/0.0001 \text{ mm} = 160000(>32767) = 10000 \times 16$

NOTE

If the detector on the motor is an αi Pulsecoder (number of velocity pulses = 8192), select a value raised to the second power (2, 4, 8, ...) as the conversion coefficient as much as possible (so the position gain used within the software becomes more accurate).

If the setting of the number of position pulses becomes very large, a subtle difference in response may occur between two axes submitted to interpolation, because of position gain canceling. To avoid this problem, make the following setting.

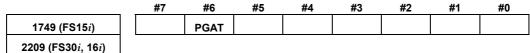

PGAT(#6)

The position gain precision optimization function is:

- 1: Enabled
- 0: Disabled (conventional method)

NOTE

- 1 Specify this function for all the simultaneous contouring axes.
- 2 In servo software Series 90D0 and 90E0, automatic format change for position gain is enabled by default regardless of the PGAT setting. So, PGAT need not be set.

(b) For servo software Series 9096

Because the "position feedback pulse conversion coefficient" is unusable, change the parameters as stated below.

(i) If the number of position pulses is in a range from 32,768 to 131,000

| Change the parameters according to the following table. | | | |
|---|--|--------------------------------|--|
| Pa | arameter number | Mathad for abanging parameters | |
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Method for changing parameters | |
| 1804#0 | 2000#0 | 1 | |
| 1876 | 2023 | (Setting target)/10 | |
| 1891 | 2024 | (Setting target)/10 | |

Change the parameters according to the following table.

2. SETTING $\alpha i S/\alpha i F/\beta i S$ SERIES SERVO PARAMETERS


(ii) If the number of position pulses is larger than 131,000 Change the parameters according to the following table. In this table, letter E satisfies:

| Parameter number | | Method for changing perometers | |
|--------------------|--|---|--|
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Method for changing parameters | |
| 1804#0 | 2000#0 | 1 | |
| 1876 | 2023 | (Setting target)/10/E | |
| 1891 | 2024 | (Setting target)/10/E | |
| 1855 | 2043 | (Setting target)/E | |
| 1856 | 2044 | (Setting target)/E | |
| 1859 | 2047 | (Setting target)×E | |
| 1865 | 2053 | (Setting target)×E | |
| 1866 | 2054 | (Setting target)/E | |
| 1871 | 2059 | (Setting target)×E | |
| 1969 | 2076 | (Setting target)/E | |
| 1736 | 2128 | (Setting target)/E | |
| 1752 | 2129 | (Quotient of setting target/256) ×E×256 +(remainder of setting target/256) | |

Number of position feedback pulses/10/E < 13100

Supplementary 4: Function for changing the internal format of the velocity loop proportional gain

An overflow may occur in the velocity loop proportional gain during internal calculation by the servo software. This can be avoided by setting the parameter shown below.

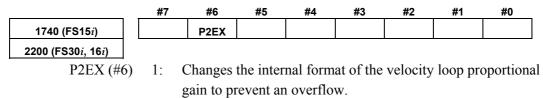


0: Uses the standard internal format for the velocity loop proportional gain.

Supplementary 5: Preventing an overflow in the position gain or the feed-forward coefficient


If the position gain or feed-forward coefficient overflows, take one of the following measures depending on the servo software series in use. In servo software Series 90D0 and 90E0 for the Series 30*i*/31*i*/32*i*, automatic format change for position gain is enabled regardless of the following setting. (Setting is unnecessary.)

(a) For other than servo software Series 9096

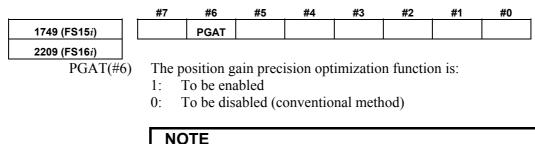

Specify this function for all the simultaneous contouring axes.

(b) For servo software Series 9096

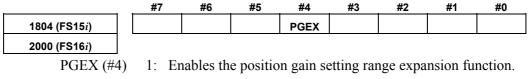

0: Disables the position gain setting range expansion function.

The setting of the number of position pulses need not be changed.

If an overflow in the position gain cannot be prevented by this function, change the CMR.

If the CMR is multiplied by N (integer), multiply also the flexible feed gear by N. This means that the detection unit is refined to 1/N. So, the settings of all parameters that need to be set in the detection unit need to be increased by N.

See Appendix B for a list of the parameters set in the detection unit.

3

$\alpha i S/\alpha i F/\beta i S$ SERIES PARAMETER ADJUSTMENT

This chapter describes parameter tuning for the FANUC AC SERVO MOTOR αiS , αiF , and βiS series. A servo tuning tool, SERVO GUIDE, is available which lets you perform parameter tuning smoothly. See Section 4.20 for the summary of SERVO GUIDE.

3.1 SERVO TUNING SCREEN

Display the servo tuning screen, and check the position error, actual current, and actual speed on the screen. Using the keys on the CNC, enter values according to the procedure explained below. (The Power Mate *i* DPL/MDI does not provide the servo tuning function.)

- Series 15*i*

Press the SYSTEM key several times to display the servo setting screen. Then press the key to display the servo tuning screen.

- Series 30*i*, 31*i*, 32*i*, 16*i*, 18*i*, 21*i*, 20*i*, 0*i*, and Power Mate *i*

 $\begin{array}{|c|} \hline \bigcirc \\ \texttt{SYSTEM} \end{array} \rightarrow [\texttt{SYSTEM}] \rightarrow [\bigcirc] \rightarrow [\texttt{SV-PRM}] \rightarrow [\texttt{SV-TUN}] \end{array}$

If the servo screen does not appear, set the following parameter, then switch the CNC off and on again.


| | #7 | #6 | #5 | #4 | #3 | 3 | #2 | #1 | # | 0 |
|----------|------|-----------|----------|---------|-------|--------|---------------|---|------|------|
| 3111 | | | | | | | | | S٧ | 'S |
| SVS (#0) | 1: D | isplays t | he servo | screen. | | ÷ | | | | · |
| | | SERVO | MOTOR | TUNING | | | | | | |
| | | X AX | IS | | | | | | | |
| | | | (PARAME | ETER) | | | CMONI | TOR) | | |
| | <1> | FUNC | . BIT | 000010 | 100 A | ALARM | 1 | 00000 | 3000 | <9> |
| | <2> | LOOP | GAIN | 30 | 100 F | ALARM | 2 | 00101 | LØ11 | <10> |
| | <3> | TUNI | NG ST. | | 0 | ALARM | 3 | 10100 | 3000 | <11> |
| | <4> | SET | PERIOD | | 0 | ALARM | 4 | 00000 | 3000 | <12> |
| | <5> | INT. | GAIN | | 87 F | ALARM | 5 | 00000 | 3000 | <13> |
| | <6> | PROP | . GAIN | -7 | '81 L | _00P (| GAIN | | 0 | <14> |
| | <7> | FILT | ER | | 0 F | POS EP | ROR | | 0 | <15> |
| | <8> | VELO | C. GAIN | 2 | .00 (| CURRE | AT (%) | e de la companya de la companya de la companya de la companya de la companya de la companya de la companya de l | 0 | <16> |
| | | | | | 0 | CURREN | AT CAD | • · · · · · | Ø | <17> |
| | | | | | 9 | SPEED | (RPM) | • | Ø | <18> |
| | | | | | | | | | | |

| | DIACUC | OTTO | ret ni | | ADM: | | | | | | DIACU | OCTIO | | | ODM: | | | | |
|------|----------|----------|---------|----------|----------|----------|----------|----------|----------|------|----------|-----------------------|----------|----------|----------|----------|----------|----------|----------|
| | DIHGHU | 12110 | L DEK | /U HL | .HKN. | • | | | | | DIHGHU | 13110 | COERY | 20 HL | .HKD. | · | | | |
| <9> | 200 X | OVL Ø | LV Ø | ovc Ø | HCA Ø | HVA Ø | DCA Ø | FBA Ø | OFA Ø | <20> | 205 X | <mark>ОНА</mark> Р | LDA Ø | BLA Ø | PHA Ø | CMA Ø | BZA Ø | PMA Ø | SPH Ø |
| <10> | 201 | ALD | - | - | EXP | | - | - | Ŭ | <21> | 206 | - | CRC | _ | Ŭ | ~ | | Ŭ | |
| 10 | x | Ø | 0 | Ø | Ø | 0 | Ø | Ø | 0 | | × | 0 | 0 | Ø | 0 | 0 | 0 | 0 | 0 |
| <11> | 202 | | CSA | BLA | PHA | RCA | BZA | СКА | SPH | | 280 | | AXS | | DIR | PLS | PLC | | MOT |
| | X | 0 | 0 | 1 | Ø | 0 | 0 | Ø | 0 | | х | 0 | Ø | Ø | Ø | Ø | 0 | 0 | 0 |
| <12> | 203 | DTE | CRC | STB | PRM | | | | | | | | | | | | | | |
| | X | 0 | 0 | Ø | Ø | 0 | 0 | 0 | 0 | | | | | | | | | | |
| <13> | 204 | RAM | OFS | MCC | LDA | PMS | FSA | | | | | | | | | | | | |
| | X | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | |

Fig. 3.1(a) Tuning screen

Fig. 3.1(b) Diagnosis screen

3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT

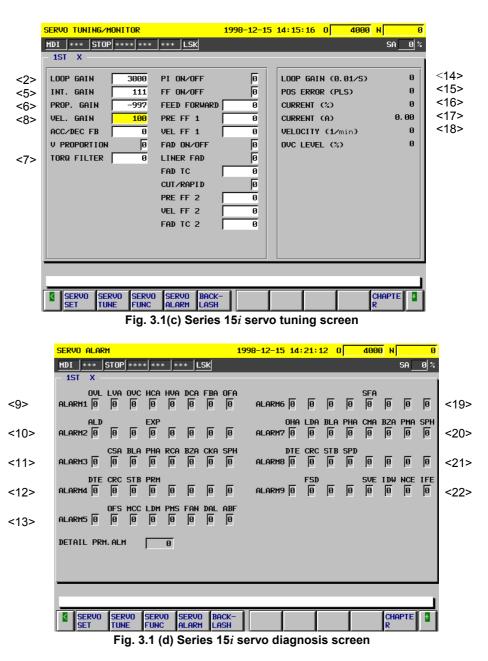

The items on the servo tuning screen correspond to the following parameter numbers:

| | Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , and so on | | | | | |
|--|--|--|--|--|--|--|--|
| <1> Function bit | No. 1808 | No. 2003 | | | | | |
| <2> Loop gain | No. 1825 | No. 1825 | | | | | |
| <3> Tuning start bit | Not used at present | | | | | | |
| <4> Setting period | Not used a | at present | | | | | |
| <5> Velocity loop integral gain | No. 1855 | No. 2043 | | | | | |
| <6> Velocity loop proportional gain | No. 1856 | No. 2044 | | | | | |
| <7> TCMD filter | No. 1857 | No. 2067 | | | | | |
| | Related to No. 1875 | Related to No. 2021 | | | | | |
| <8> Velocity loop gain | The relationship with the load inertia r follows: | atio (LDINT=No.1875,No.2021) is as | | | | | |
| | Velocity gain = $(1 + LDINT/256) \times 100$ [%] | | | | | | |
| <9> Alarm 1 diagnostic | Diagnostic Nos. 3014 + 20(X - 1) | Diagnostic No. 200 | | | | | |
| <10> Alarm 2 | Diagnostic Nos. 3015 + 20(X - 1) | Diagnostic No. 201 | | | | | |
| <11> Alarm 3 | Diagnostic Nos. 3016 + 20(X - 1) | Diagnostic No. 202 | | | | | |
| <12> Alarm 4 | Diagnostic Nos. 3017 + 20(X - 1) | Diagnostic No. 203 | | | | | |
| <13> Alarm 5 | | Diagnostic No. 204 | | | | | |
| <19> Alarm 6 | | | | | | | |
| <20> Alarm 7 | | Diagnostic No. 205 | | | | | |
| <21> Alarm 8 | | Diagnostic No. 206 | | | | | |
| <22> Alarm 9 | | | | | | | |
| <14> Loop gain or actual loop gain | The actual servo loop gain is displaye | ed. | | | | | |
| | Diagnostic No. 3000 | Diagnostic No. 300 | | | | | |
| <15> Position error diagnostic | Position error = | | | | | | |
| | (feedrate) [mm/min] / (least input increment × 60 × loop gain × 0.01) [mm] | | | | | | |
| <16> Actual current [%] | Indicates the percentage [%] of the cu | urrent value to the continuous rated | | | | | |
| | current. | | | | | | |
| <17> Actual current [Ap] | Indicates the current value (peak value | e). | | | | | |
| <18> Actual speed [min ⁻¹] or [mm/min] | Indicates the actual speed or feedrate | | | | | | |

Table 3.1 Correspondence between the servo tuning screen and diagnosis screen, and parameters

3.2 ACTIONS FOR ALARMS

If a servo alarm occurs, detail alarm information is displayed on the diagnosis screen (Figs. 3.1 (b) and (d)). Based on this information, check the cause of the servo alarm and take appropriate action. For alarms with no action number, refer to relevant manuals such as the maintenance manual on the amplifier.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---------|-----|-----|-----|-----|-----|-----|-----|-----|
| Alarm 1 | OVL | LVA | ovc | НСА | HVA | DCA | FBA | OFA |
| Alarm 2 | ALD | | | EXP | | | | |
| Alarm 3 | | CSA | BLA | РНА | RCA | BZA | СКА | SPH |
| Alarm 4 | DTE | CRC | STB | PRM | | | | |
| Alarm 5 | | OFS | мсс | LDM | PMS | FAN | DAL | ABF |
| Alarm 6 | | | | | SFA | | | |
| Alarm 7 | ОНА | LDA | BLA | РНА | СМА | BZA | РМА | SPH |
| Alarm 8 | DTE | CRC | STB | SPD | | | | |
| Alarm 9 | | FSD | | | SVE | IDW | NCE | IFE |

Table 3.2 Alarm bit names

NOTE

The blank fields do not contain any alarm code.

(1) Alarms related to the amplifier and motor

| | | | Alarm 1 | | | | Alaı | rm 5 | Ala | rm 2 | Description | Action |
|-----|-----|-----|---------|-----|-----|-----|------|------|-----|------|--|--------|
| OVL | LVA | OVC | HCA | HVA | DCA | FBA | MCC | FAN | ALD | EXP | Description | ACTION |
| | | | 1 | | | | | | 0 | 0 | Overcurrent alarm (PSM) | |
| | | | 1 | | | | | | 0 | 1 | Overcurrent alarm (SVM) | 1 |
| | | | 1 | | | | | | 0 | 1 | Overcurrent alarm (software) | 1 |
| | | | | 1 | | | | | | | Excessive voltage alarm | |
| | | | | | 1 | | | | | | Excessive regenerative discharge | |
| | | | | | 1 | | | | | | alarm | |
| | 1 | | | | | | | | 0 | 0 | Alarm indicating insufficient power | |
| | | | | | | | | | | | voltage (PSM) | |
| | 1 | | | | | | | | 1 | | Insufficient DC link voltage (PSM) | |
| | 1 | | | | | | | | 0 | 1 | Insufficient control power voltage (SVM) | |
| | 1 | | | | | | | | 1 | 1 | Insufficient DC link voltage (SVM) | |
| 1 | | | | | | | | | 0 | 0 | Overheat (PSM) | 2 |
| 1 | | | | | | | | | 1 | | Motor overheat | 2 |
| 1 | | | | | | | | | 1 | 1 | Motor overheat ^(Note) | 2 |
| | | | | | | | 1 | | | | MCC fusing, precharge | |
| | | | | | | | | 1 | 0 | 0 | Fan stopped (PSM) | |
| | | | | | | | | 1 | 0 | 1 | Fan stopped (SVM) | |
| | | 1 | | | | | | | | | OVC alarm | 3 |

NOTE

- 1 For alarms with no action number indicated, refer to the Maintenance Manual.
- 2 OVL = 1, ALD = 1, and EXP = 1 indicate an overheat alarm using DI signals in a linear motor or a synchronous built-in servo motor and are set when bit 7 of parameter No. 2713 (Series 15*i*) or bit 7 of parameter No. 2300 (Series 30*i*, 16*i*, and so on) is set to 1. When these alarms are issued, take the same action as for ordinary motor overheat alarms. (See the Subsection 4.14.2, "Detection of an Overheat Alarm by Servo Software when a Linear Motor and a Synchronous Built-in Servo Motor are Used".)

Action 1: Overcurrent alarms

This type of alarm occurs when an extremely large current flows through the main circuit.

When an overcurrent alarm always occurs after emergency stop is released or at the time of moderate acc./dec., the cause of the alarm is determined to be an amplifier failure, cable connection error, line disconnection, or a parameter setting error. First, check that standard values are set for the following servo parameters. If these parameter settings are correct, check the amplifier and cable status by referring to the maintenance manual on the servo amplifier.

| No. 1809 | No. 1852 | No. 1853 |
|----------|----------|----------|
| No. 2004 | No. 2040 | No. 2041 |

(Parameters for the Series 15i are indicated on the upper side, and parameters for the Series 30i, 16i, and so on are indicated on the lower side.)

If an overcurrent alarm occurs only when an strong acc./dec. is performed, the operating conditions may be too abrupt. Increase the acc./dec. time constant, and see whether the alarm occurs.

- 1 If an overcurrent alarm is detected, and the LED indication in the amplifier remains set to "-", the overcurrent alarm may have been detected by the servo software. The cause may be one of the following:
 - The contact of the power line is poor, or the power line is disconnected or broken.
 - The AMR conversion coefficient or AMR offset is not set correctly.
- 2 If the emergency stop state is released without connecting the power line in a test such as a test for machine start-up, the servo software may detect an overcurrent alarm. In such a case, the alarm can be avoided temporarily by setting the bit parameter indicated below to 1. However, be sure to return the bit parameter to 0 before starting up in the normal operation state after completion of a test.

To ignore the overcurrent alarm (software), set the following:

- No2207#0 (Series 30*i*, 16*i*, and so on)
- No1747#0 (Series15*i*)

Action 2: Overheat alarms

If an overheat alarm occurs after long-time continuous operation, the alarm can be determined to have been caused by a temperature rise in the motor or amplifier. Stop operation for a while. If the alarm still occurs after the power is kept off for about 10 minutes, the hardware may be defective.

If the alarm occurs intermittently, increase the time constant, or increase the programmed stop time period to suppress temperature rise.

Motor and Pulsecoder temperature information is displayed on the diagnosis screen.

| | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Series15 <i>i</i> |
|--------------------------------|--|-------------------|
| Motor temperature (°C) | Diagnosis No.308 | Diagnosis No.3520 |
| Pulsecoder temperature (°C) | Diagnosis No.309 | Diagnosis No.3521 |

Action 3: OVC alarms

When an OVC alarm occurs, check that standard values are set for the following parameters. If the parameters are correct, increase the time constant or increase the programmed stop time period to suppress temperature rise.

| No. 1877 | No. 1878 | No. 1893 | |
|----------|----------|----------|----------|
| No. 2062 | No. 2063 | No. 2065 | |
| | | | |
| No. 1784 | No. 1785 | No. 1786 | No. 1787 |
| No. 2161 | No. 2162 | No. 2163 | No. 2164 |

(Parameters for the Series 15i are indicated on the upper side, and parameters for the Series 30i, 16i, and so on are indicated on the lower side.)

For the Series 30i and 15i, OVC data is displayed on the diagnosis screen. (An OVC alarm occurs when OVC data is set to 100%.) For the Series 16i, the OVC status can be checked if thermal

| simulation data is obtained by using the waveform display function. | | | | | | | | | |
|---|---|--|--|--|--|--|--|--|--|
| | Series 30 <i>i</i> and so on Series 15 <i>i</i> | | | | | | | | |
| OVC data (%) Diagnosis No.750 Diagnosis No.3540 | | | | | | | | | |

(2) Alarms related to the Pulsecoder and separate serial Pulsecoder

(2-1) $\alpha \hat{l}$ Pulsecoder

These alarms are identified from alarms 1, 2, 3, and 5. The meanings of the bits are as follows:

| | | Alar | rm 3 | | | Alaı | rm 5 | 1 | | Alarm | 2 | Description | Action |
|-----|-----|------|------|-----|-----|------|------|-----|-----|-------|-----|--------------------------------------|--------|
| CSA | BLA | PHA | RCA | BZA | CKA | SPH | LDM | PMA | FBA | ALD | EXP | Description | ACTION |
| | | | | | | 1 | | | | | | Soft phase alarm | 2 |
| | | | | 1 | | | | | | | | Zero volts in battery | 1 |
| | | | 1 | | | | | | 1 | 1 | 0 | Count error alarm | 2 |
| | | 1 | | | | | | | | | | EEPROM abnormal alarm | |
| | 1 | | | | | | | | | | | Voltage drop in battery (Warning) | 1 |
| | | | | | | | | 1 | | | | Pulse error alarm | |
| | | | | | | | 1 | | | | | LED abnormality alarm | |

For alarms with no action number indicated, the Pulsecoder may be defective. Replace the Pulsecoder.

(2-2) Separate serial detector coder

These alarms are identified from alarm 7. The meanings of the bits are as follows:

| | | | | Description | Action | | | | |
|-----|-----|-----|-----|-------------|--------|-----|-----|--------------------------------------|--------|
| OHA | LDA | BLA | PHA | СМА | BZA | PMA | SPH | Description | ACTION |
| | | | | | | | 1 | Soft phase alarm | 2 |
| | | | | | | 1 | | Pulse error alarm | |
| | | | | | 1 | | | Zero volts in battery | 1 |
| | | | | 1 | | | | Count error alarm | 2 |
| | | | 1 | | | | | Phase alarm | 2 |
| | | 1 | | | | | | Voltage drop in battery (Warning) | 1 |
| | 1 | | | | | | | LED abnormality alarm | |
| 1 | | | | | | | | Separate detector alarm | |

For alarms with no action number indicated, the detector may be defective. Replace the detector.

Action 1: Battery-related alarms

Check whether the battery is connected. When the power is turned on for the first time after the battery is connected, a battery zero alarm occurs. In this case, turn the power off then on again. If the alarm occurs again, check the battery voltage. If the battery voltage drop alarm occurs, check the voltage, then replace the battery.

Action 2: Alarms that may occur due to noise

When an alarm occurs intermittently or occurs after emergency stop is released, there is a high possibility that the alarm is caused by noise. Take thorough noise-preventive measures. If the alarm still occurs continuously after the measures are taken, replace the detector.

(3) Alarms related to serial communication

These alarms are identified from alarms 4 and 8.

| | Alar | rm 4 | | | Alar | m 8 | | Description |
|-----|------|------|-----|-----|------|-----|-----|---|
| DTE | CRC | STB | PRM | DTE | CRC | STB | SPD | Description |
| 1 | | | | | | | | |
| | 1 | | | | | | | Communication alarm in serial Pulsecoder |
| | | 1 | | | | | | |
| | | | | 1 | | | | |
| | | | | | 1 | | | Communication alarm in separate serial Pulsecoder |
| | | | | | | 1 | | |

Action: Serial communication is not performed correctly. Check whether cable connection is correct and whether there is a line disconnection. If CRC or STB occurs, the alarm may be caused by noise. Take noise-preventive measures. If the alarm always occurs after power is turned on, the Pulsecoder, the control board of the amplifier (*i* series), or the separate detector interface unit (*i* series) may be defective.


(4) Disconnection alarms


These alarms are identified from alarms 1, 2, and 6.

| | | | Alarm 1 | | | | Alaı | 'm 2 | 6 | Description | | | |
|-----|-----|-----|---------|-----|-----|-----|------|------|-----|--|--------|--|--|
| OVL | LVA | OVC | HCA | HVA | DCA | FBA | ALD | EXP | SFA | Description | Action | | |
| | | | | | | 1 | 1 | 1 | 0 | Hardware disconnection (separate phase A/B disconnection) | 1 | | |
| | | | | | | 1 | 0 | 0 | 0 | Software disconnection (closed loop) | 2 | | |
| | | | | | | 1 | 0 | 0 | 1 | Software disconnection (α Pulsecoder) | 3 | | |

- Action 1: This alarm occurs when the separate phase A/B scale is used. Check whether the phase A/B detector is connected correctly.
- Action 2: This alarm occurs when the change in position feedback pulses is relatively small for the change in velocity feedback pulses. Therefore, with the semi-closed loop, this alarm does not occur. Check whether the separate detector outputs position feedback pulses correctly. If the detector outputs pulses correctly, the alarm is determined to have been caused by the reverse rotation of only the motor at the start of machine operation because of a large backlash between the motor position and scale position.

3. $\alpha i S / \alpha i F / \beta i S SERIES PARAMETER ADJUSTMENT$

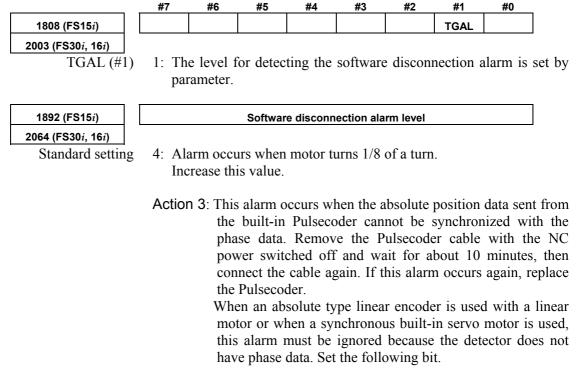

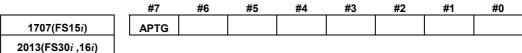

APTG(#7) 1:

1: Ignores α Pulsecoder software disconnection.

(5) Invalid parameter setting alarm

This alarm is identified from alarm 4.

| | Alaı | rm 4 | | Description | | |
|------|------|------|-----|---|--|--|
| DTER | CRC | STB | PRM | Description | | |
| | | | 1 | Invalid parameter setting detected by servo software | | |

If PRM is set to 1, an invalid parameter setting has been detected by the servo software. Investigate the cause of the alarm according to Subsec. 2.1.5, "Actions for Illegal Servo Parameter Setting Alarms."

(6) Other alarms

Alarms are identified from alarm 5. The meanings of the bits are as follows:

| | | | Alarm 5 | Description | Action | | | |
|-----|-----|-----|---------|-------------|--------|-----|--|--------|
| OFS | MCC | LDM | PMS | FAN | DAL | ABF | Description | Action |
| | | | | | | 1 | Feedback mismatch alarm | 1 |
| | | | | | 1 | | Excessive semi-closed loop error alarm | 2 |
| 1 | | | | | | | Current offset error alarm | 3 |

Action 1: This alarm occurs when the move directions for the position detector and velocity detector are opposite to each other. Check the rotation direction of the separate detector. If the direction is opposite to the direction in which the motor turns, take the following action:

Phase A/B detector:Switch the A and \overline{A} connections.Serial detector:Switch the signal direction setting for
the separate detector.

The following servo software allows the signal directions to be reversed by setting the parameter shown below even when a detector of A/B phase parallel type is used. (Series 30i,31i,32i)

Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)

Series 90B0/G(07) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B)

Series 90B5/A(01) and subsequent editions

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------|----|----|----|----|----|----|----|-------|
| 1960 (FS15 <i>i</i>) | | | | | | | | RVRSE |
| | | | | | | | | |

2018 (FS30*i*, **16***i*) RVRSE (#0)

The signal direction for the separate detector is:

0: Not reversed.

1: Reversed.

When there is a large torsion between the motor and separate detector, this alarm may occur when an abrupt acc./dec. is performed. In such a case, change the detection level.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|----|----|----|----|----|----|------|----|
| 1741 (FS15 <i>i</i>) | | | | | | | RNLV | |
| 2201 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |


RNLV (#1)

Change of the feedback mismatch alarm detection level

1: To be detected at 1000 min⁻¹ or more

0: To be detected at 600 min⁻¹ or more

Action 2: This alarm occurs when the difference between the motor position and the position of the separate detector becomes larger than the semi-closed loop error level. Check that the dual position feedback conversion coefficient is set correctly. If the setting is correct, increase the alarm level. If the alarm still occurs after the level is changed, check the scale connection direction.

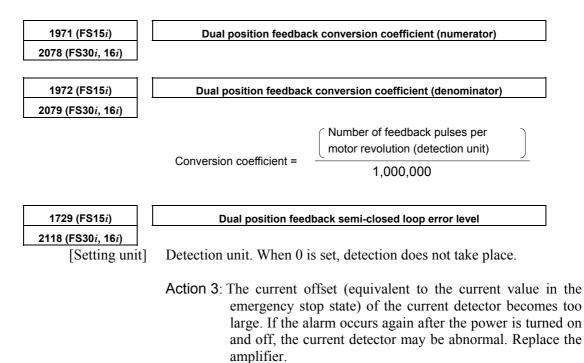

3.3 ADJUSTING PARAMETERS FOR HIGH-SPEED AND HIGH-PRECISION MACHINING

3.3.1 Servo HRV Control Adjustment Procedure


(1) Overview

For higher positioning precision, higher precision in machined surface and machining profile, shorter machining time, and other improvements in machine tools, servo adjustment is required. This subsection explains the servo adjustment procedure using servo HRV control. In the *i* series CNCs (such as the Series 30i and 16i), servo adjustments can be made easily by using SERVO GUIDE, which supports adjustments.

(2) Outline of the adjustment procedure


Before servo control performance can be improved by servo adjustment, it is necessary to understand these procedures and make adjustments step by step accordingly. Servo control is implemented by the structure shown in the block diagram below. Servo HRV current control, which is located just before the motor in the regulation loop, drives the motor according to the command output by high-speed velocity control. The performance of high-speed velocity control is supported by the performance of servo HRV current control. High-speed velocity control controls the motor speed according to the velocity command output by position control. To attain the final target, which is to improve the capability to follow up position commands, a higher position gain must be set. This requires improvement of high-speed velocity control performance. Hence, this requires improvement in servo HRV current control performance.

Therefore, in servo adjustment for improving the performance of servo control, the highest priority is given to the improvement in servo HRV current control, the next highest priority is given to the improvement in high-speed velocity control, then the third priority is given to the improvement of position control. Be sure to follow this order.

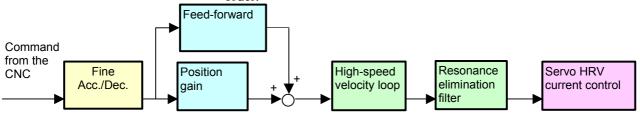

Servo HRV control improves the response speed of the current loop, therefore, higher gains can be set for the velocity loop and position loop. Increased gains lead not only to improvement in command follow-up performance and disturbance suppression performance but also to simplification in servo function adjustments such as quadrant protrusion compensation. As a result, servo adjustments can be made more easily.

The figure below shows the results of a gain adjustment for each servo HRV control type. The figure indicates that improvement in response speed of the current loop by servo HRV control further improves the response speed of velocity control and position control, and therefore quadrant protrusions can be reduced without the backlash acceleration function.

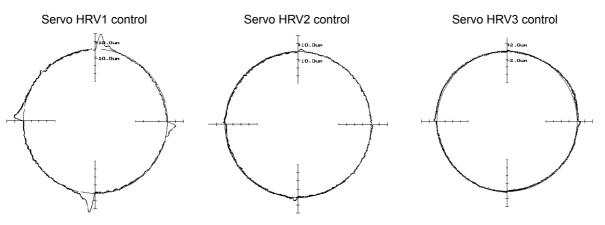

R100mm 10000mm/min without backlash acceleration function

This manual explains the servo adjustment procedure in the following order:

- Initialization of parameters related to high-speed and high-precision machining Before starting the servo adjustment for high-speed and high-precision machining, set minimum required parameters.
- Servo HRV control setting Select the servo HRV control type. Select suitable servo HRV control from servo HRV2, HRV3, and HRV4.
- Adjustment of high-speed velocity control Adjust the velocity loop gain and filter by using SERVO GUIDE.
- Adjustment of acc./dec. in rapid traverse Adjust the time constant for rapid traverse. In position gain setting made in the next step, the limit is confirmed by checking stability during rapid traverse.
- Position gain adjustment Adjust the position gain while observing the TCMD and motor speed in rapid traverse and cutting feed.
- Adjustment by using an arc Adjust the feed-forward and backlash acceleration while measuring an arc figure.
- Adjustment by using a square figure Adjust the reduced feedrate and the acceleration for deceleration at a corner while measuring the corner figure.
- Adjustment by using a square figure with 1/4 arcs Adjust the velocity in the round corners while measuring the contour error in the round corners.

(3) Initialization of parameters related to high-speed and high-precision machining

The parameter values to be set first before servo adjustments are made are listed below. Sufficient performance can be obtained just by setting these values. Furthermore, by separately adjusting the settings indicated by gray shading, much higher speed and higher precision can be obtained.

| F | Parameter No. | Standard setting value | Description | |
|---------------|---|------------------------------|--|--|
| FS15 <i>i</i> | FS30 <i>i</i> , 16 <i>i</i> , and so on | Standard Setting value | Description | |
| 1809 | 2004 | 0X000011 (Note 1) | Enables HRV2 control | |
| 1852 | 2040 | | Current integral gain | |
| 1853 | 2041 | Standard parameter (Note 1) | Current proportional gain | |
| 1808 #3 | 2003 #3 | 1 ^(Note 2) | Enables PI function | |
| 1959 #7 | 2017 #7 | 1 ^(Note 3) | Enables velocity loop high cycle management function | |
| 1884 #4 | 2006 #4 | 1 | Enables 1-ms velocity feedback acquisition | |
| 1958 #3 | 2016 #3 | 1 | Enables variable proportional gain in the stop state | |
| 1730 | 2119 | 2 (detection linit of 1 lim) | For variable proportional gain function in the stop state : judgment level for stop state (specified in detection units) | |
| 1825 | 1825 | 5000 | Servo loop gain | |
| 1875 | 2021 | 128 | Load Inertia ratio (Velocity Loop Gain) (Note 4) | |
| 1742 #1 | 2202 #1 | 1 | Cutting/rapid traverse velocity loop gain variable | |
| 1700 | 2107 | 150 | Velocity loop gain override at cutting traverse | |

[Fundamental Parameters]

NOTE

1 Optimum parameters can be loaded automatically by setting a motor ID number for servo HRV2 control.

If there is no motor ID number for servo HRV2 control, load the standard parameters for servo HRV1, then calculate parameter values as follows:

- No. 2004 = 0X000011 (Keep X unchanged.)
- No. 2040 = Standard parameter for HRV1 × 0.8
- No. 2041 = Standard parameter for HRV1 \times 1.6
- 2 To use I-P function, set 0.

PI function and I-P function have the following features:

PI function: Provides good follow-up to a target command. This function is required for high-speed and high-precision machining.

I-P function: Requires a relatively short time to attain a target position. This function is suitable for positioning applications.

- 3 With some machines, a higher velocity loop gain can be set by using neither the acceleration feedback function nor auxiliary function rather than by using these functions. If it is impossible to set a high velocity loop gain (about 300%) when the velocity loop high cycle management function is used, try to use the acceleration feedback function (See Subsection 4.4.2), and use the function that allows a higher velocity loop gain to be set.
- 4 There is the following relationship between the load inertia ratio and velocity loop gain (%).

Velocity loop gain (%) = $(1 + \text{load inertia ratio} / 256) \times 100$

| Param | eter No. | Standard aatting | | | |
|---------------|--|------------------------|---|--|--|
| FS15 <i>i</i> | FS30 <i>i</i> , 16 <i>i</i> , and so on | Standard setting value | Description | | |
| 1951 #6 | 2007 #6 | 1 | Enables FAD (Fine acc./dec.) (Note 1) | | |
| 1749 #2 | 2209 #2 | 1 | Enables FAD of linear type. | | |
| 1702 | 2109 | 16 | FAD time constant (Note 2) | | |
| 1883 #1 | 2005 #1 | 1 | Enables feed-forward | | |
| 1800 #3 | 1800 #3 | 0 | Feed-forward at rapid traverse (Note 2) | | |
| 1959 #5 | 2017 #5 | 1 | RISC feed-forward is improved | | |
| 1740 #5 | 2200 #5 | 1 | RISC feed-forward is improved | | |
| 1985 | 2092 | 10000 | Advanced preview feed-forward coefficient | | |
| 1962 | 2069 | 50 | Velocity feed-forward coefficient | | |

[Feed-forward and FAD(Fine acc./dec.)]

NOTE

- 1 With the Series 30*i*, Series 31*i*, and Series 32*i*, which use nano interpolation as a standard function, the fine acc./dec. function is not required. During AI nano contour control, AI contour control, and high precision contour control, the fine acc./dec. function is disabled. So, set the time constant of acc./dec. after interpolation on the CNC side.
- 2 As the time constant of fine acc./dec., be sure to set a multiple of 8. When using fine Acc./Dec also in rapid traverse, enable rapid traverse feed-forward, or use the cutting/rapid FAD switching function (see Subsection 4.8.3).
- 3 RISC feed-forward is enabled during AI contour control and high precision contour control and allows smoother feed-forward operation.

[Backlash Acceleration]

| Paramo | eter No. | | |
|---------------|--|---|--|
| FS15 <i>i</i> | FS30 <i>i</i> , 16 <i>i</i> , and so on | Standard setting value | Description |
| 1851 | 1851 | 1 or more | Backlash compensation |
| 1808 #5 | 2003 #5 | 1 | Enables backlash acceleration |
| 1884 #0 | 2006 #0 | 0/1 | 0 : Semi-close system 1 : Full-close system |
| 1953 #7 | 2009 #7 | 1 | Backlash acceleration stop |
| 1953 #6 | 2009 #6 | 1 | Backlash acceleration only at cutting feed (FF) |
| 2611 #7 | 2223 #7 | 1 | Backlash acceleration only at cutting feed (G01) |
| 1957 #6 | 2015 #6 | 0 | Two-stage backlash acceleration (Note) |
| 1769 | 2146 | 50 | Stage-2 backlash acceleration end timer |
| 1860 | 2048 | 100 | Backlash acceleration amount |
| 1975 | 2082 | 5 (detection unit of 1 μm) 50 (detection unit of 0.1 μm) | Backlash acceleration stop timing |
| 1964 | 2071 | 20 | Backlash acceleration time |

NOTE

The above table lists the initial values set when the conventional backlash acceleration function is used. When much higher precision is required, use the 2-stage backlash acceleration function.

[Time Constant]

Set the initial value of the time constant of acc./dec. according to the high-speed and high-precision function of the CNC used. Adjust the time constant of acc./dec. to an optimum value while checking the rapid traverse and cutting feed operations.

• AI nano contour control, AI contour control, AI advanced preview control, and advanced preview control

| Parameter No. FS16 <i>i</i> and so on | Standard setting value | Description |
|---------------------------------------|---------------------------|--|
| 1620 | 200 | Time constant of acc./dec. in rapid traverse - linear part (ms) |
| 1621 | 200 | Time constant of acc./dec. in rapid traverse - bell-shaped part (ms) |
| 1770 | 10000 | Acc./dec. before interpolation: Maximum cutting feedrate |
| 1771 | 240 | Acc./dec. before interpolation: Time (ms) \rightarrow 0.07G |
| 1772 | h4 | Acc./dec. before interpolation: Bell-shaped time constant (ms) (for other than advanced preview control) |
| 1768 | 24 | Time constant for acc./dec. after interpolation (ms) |

• AI nano high-precision contour control, AI high-precision contour control, and high-precision contour control

| Parameter No. FS16 <i>i</i> and so on | Standard setting value | Description |
|---------------------------------------|------------------------|---|
| 1620 | 200 | Time constant of acc./dec. in rapid traverse - linear part (ms) |
| 1621 | 200 | Time constant of acc./dec. in rapid traverse - bell-shaped part (ms) |
| 8400 | 10000 | Acc./dec. before interpolation: Maximum cutting feedrate |
| 19510 | 240 | Acc./dec. before interpolation: Time (ms) \rightarrow 0.07G (No. 8401 for high precision contour control) |
| 8416 | 64 | Acc./dec. before interpolation: Bell-shaped time constant (ms) |
| 1768 | 24 | Time constant for acc./dec. after interpolation (ms) |

• AI contour control I and AI contour control II (Series 30*i*, Series 31*i*, and Series 32*i*)

| Parameter No. FS30 <i>i</i> | Standard setting value | Description |
|--------------------------------|------------------------|--|
| 1620 | 200 | Time constant of acc./dec. in rapid traverse - linear part (ms) |
| 1621 | 200 | Time constant of acc./dec. in rapid traverse - bell-shaped part (ms) |
| 1660 | 700 | Acc./dec. before interpolation: Acceleration(mm/s ²) \rightarrow 0.07G |
| 1772 | 64 | Acc./dec. before interpolation: Bell-shaped time constant (ms) |
| 1769 | 24 | Time constant for Acc./dec. after interpolation (ms) |

| Parameter No. FS15 <i>i</i> | Standard setting value | Description |
|--------------------------------|------------------------|--|
| 1620 | 200 | Time constant of Acc./dec. in rapid traverse - linear part (ms) |
| 1636 | 200 | Time constant of Acc./dec. in rapid traverse - bell-shaped part (ms) |
| 1660 | 700 | Acc./dec. before interpolation: Acceleration(mm/s ²) \rightarrow 0.07G |
| 1663 | 700 | Acc./dec. before interpolation: Acceleration(mm/s ²) \rightarrow 0.07G |
| 1656 | 64 | Acc./dec. before interpolation: Bell-shaped time constant (ms) |
| 1635 | 24 | Time constant for acc./dec. after interpolation (ms) |

Series 15i

(4) Servo HRV control setting

Set the type of servo HRV control. The setting of servo HRV2 is always required. So, load the standard parameters for servo HRV2 by following the description given below. Then, set HRV3 or HRV4 as necessary.

(For Series 30i)

In standard setting, servo HRV2 control is set. However, to make high-speed and high-precision adjustments, servo HRV3 is recommended. If sufficient precision cannot be obtained with servo HRV3, consider using servo HRV4. (See Subsec. 4.2.2.)

(For other than Series 30*i*)

In standard setting, servo HRV2 control is set. However, if sufficient precision cannot be obtained with servo HRV2, consider using servo HRV3. (See Subsec. 4.2.1.)

(a) Servo HRV2 control

By setting a motor ID number for servo HRV2 control, load the standard parameters.

| NOTE |
|---|
| If there is no motor ID number for servo HRV2 |
| control, load the standard parameters for servo |
| HRV1, then calculate parameter values as follows: |
| No. 2004 = 0X000011 (Keep X unchanged.) |
| No. 2040 = Standard parameter for HRV1 \times 0.8 |
| No. 2041 = Standard parameter for HRV1 \times 1.6 |

(b) Servo HRV3 control

After setting servo HRV2 control, set the following parameters:

| Parame FS15 <i>i</i> | eter No. FS16 <i>i</i> | Recommended value | Description |
|-------------------------|---------------------------|-------------------|--|
| 1707#0 | 2013#0 | 1 | Enables HRV3 current control. |
| 1742#1 | 2202#1 | 1 | Enables the cutting/rapid velocity loop gain switching function. |
| - | 2283#0 | 1 | Enables high-speed HRV current control in cutting feed ^(Note 1) . |
| 2747 | 2334 | 150 | Current gain magnification in HRV3 mode |
| 2748 | 2335 | 200 | Velocity gain magnification in HRV3 mode |

[HRV3 parameters] (for FS15*i*, FS16*i*, and so on)

NOTE

- 1 To use high-speed HRV current control, G codes need to be set. (High-speed HRV current control is enabled between G5.4Q1 and G5.4Q0.)
- 2 With Series 90B0, 90B1, 90B6, and 90B5, the torque command during high-speed HRV current control is limited to 70% of the maximum value.

3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT

| Parameter No. FS30 <i>i</i> | Recommende d value | Description |
|--------------------------------|-----------------------|--|
| 2013#0 | 1 | Enables HRV3 current control. |
| 2202#1 | 1 | Enables the cutting/rapid velocity loop gain switching function. |
| 2334 | 150 | Current gain magnification in HRV3 mode |
| 2335 | 200 | Velocity gain magnification in HRV3 mode |

[HRV3 parameters] (for FS30*i*)

NOTE

- 1 When N2283#0=1, no G code is needed.
- 2 To use high-speed HRV current control when N2283#0=0, G codes need to be set. (High-speed HRV current control is enabled between G5.4Q1 and G5.4Q0.)
- 3 When servo HRV3 control is used with Series 90E0, such a restriction that the maximum allowable number of axes per servo card is reduced to 3 is imposed.

(c) Servo HRV4 control

After setting servo HRV2 control, set the parameters listed below. Servo HRV4 control and servo HRV3 control cannot be set at the same time.

[HRV4 parameters]

| Parameter No. FS30 <i>i</i> | Recommended value | Description |
|--------------------------------|-------------------|--|
| 2014#0 | 1 | Enables HRV4 current control. |
| 2300#0 | 1 | Enables the extended HRV function. |
| 2202#1 | 1 | Enables the cutting/rapid velocity loop gain switching function. |
| 2334 | 150 | Current gain magnification in high-speed HRV current control |
| 2335 | 200 | Velocity gain magnification in high-speed HRV current control |

NOTE

- 1 Servo HRV4 can be used with Series 90D0.
- 2 Use of servo HRV4 decreases the maximum number of axes per servo card and limits the maximum torque of the servo motor to 70%. For details, see Subsection 4.2.2, "Servo HRVV4 Control".
- 3 To use high-speed HRV current control, G codes must be set. (High-speed HRV current control is enabled between G5.4Q1 and G5.4Q0.)

(5) Adjustment of high-speed velocity control

After setting servo HRV control, adjust the velocity loop gain and the resonance elimination filter.


To obtain high servo performance, a high velocity loop gain must be set. Some machines, however, vibrate easily at a particular frequency, and setting a high velocity loop gain can cause vibration at that frequency (machine resonance). As a result, it becomes impossible to set a high velocity loop gain.

In such a case, the resonance elimination filter must be adjusted. The resonance elimination filter can lower the gain only in an area around a particular frequency, therefore allowing a high velocity loop gain to be set without the occurrence of machine resonance.

The velocity loop gain and the resonance elimination filter can be adjusted more easily by using Tuning Navigator of SERVO GUIDE.

(a) Adjusting the velocity loop gain and the resonance elimination filter (when Tuning Navigator is used)

For adjustment of the resonance elimination filter, Tuning Navigator of SERVO GUIDE can be used. On the main bar of SERVO GUIDE, press the [Navigator] button.

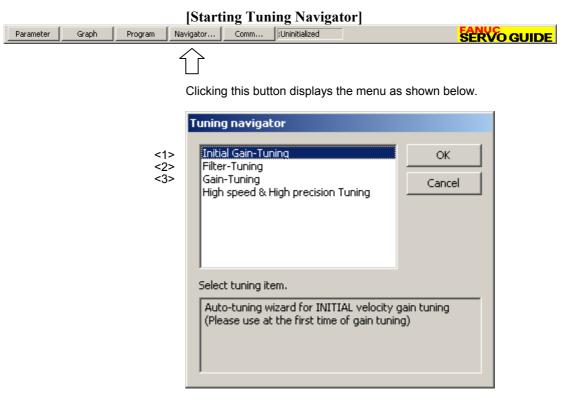


(Procedure for adjusting the velocity loop gain and the resonance elimination filter)

In the adjustment of the velocity loop gain and the resonance elimination filter, use <1> through <3> in the above figure. Make adjustments in order from <1>.

<1> Initial Gain Tuning

Initial Gain Tuning determines the velocity loop gain value with a margin for the oscillation limit. By making this adjustment, a higher velocity gain than the initial value is set, so the frequency of machine resonance can be determined clearly.

First, select Initial Gain Tuning from the dialog box of Tuning Navigator.

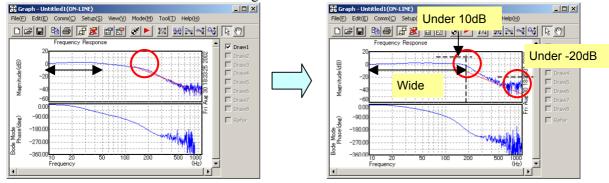


Tuning Navigator shows bode-plot of velocity loop and you can check the performance of velocity loop.


Upper line in bode-plot shows gain characteristic and lower line shows phase characteristic. Important points of this figure that you should note are as follows. (About the details of bode-plot, please refer to several books of basic control method)

- The width of 0dB level of gain line is important. By setting higher velocity loop gain, it becomes wide.
- Gain level of resonance frequency has to be suppressed at least under -10dB.
- Gain level around cut-off frequency is less than 10dB.
- Gain level near 1000Hz has to be lower than -20dB.
- <2> Filter Tuning

Next, select Filter Tuning from Tuning Navigator to adjust the resonance elimination filter to suppress machine resonance.

Following example shows that gain line at two resonance frequencies (250Hz and 530Hz) are suppressed by Filter Tuning.

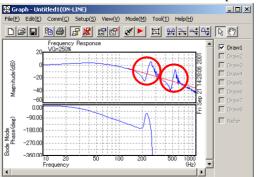

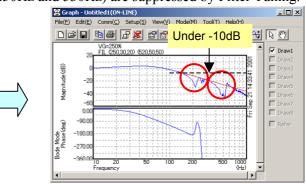

<3> Gain Tuning

Finally, select "Gain Tuning". Tuning Navigator decides the final result of gain tuning. By adjusting the resonance elimination filter, the influence of machine resonance can be eliminated, so a high velocity loop gain can be set.

(b) Adjusting the velocity loop gain and the resonance elimination filter (when Tuning Navigator is not used)

A) Adjustment by torque command waveform

1. Perform rapid traverse with a full stroke of the machine, and observe the torque command when the machine is stopped and when the machine moves at high speed. (The sampling cycle period should be $125 \ \mu s$.)

NOTE

When using the cutting/rapid velocity loop gain switching function, perform cutting feed at the maximum cutting feedrate to also check the cutting-time oscillation limit.

- 2. As the velocity loop gain is increased gradually, the following oscillation phenomena occur:
 - Vibration occurs in the torque command waveform.
 - Vibration sound is generated from the machine.
 - A large variation in positional deviation is observed when the machine movement stops.
- 3. Perform frequency analysis (Ctrl-F) for the torque command issued when the above phenomena occur, and measure the vibration frequency.
- 4. Set the measured vibration frequency as the attenuation center frequency, and set the initial values of the attenuation bandwidth and damping by consulting the setting guideline.

[Setting guideline]

| Resonance frequency | Attenuation bandwidth | Damping |
|---------------------|-------------------------------|---------------|
| Lower than 150 Hz | Decrease the velocity loop ga | ain. (Note 1) |
| 150 to 200 Hz | Decrease the velocity loop ga | ain. (Note 2) |
| 200 to 400 Hz | 60 to 100Hz | 0 to 50% |
| Higher than 400 Hz | 100 to 200Hz | 0 to 10% |

[Parameter Nos.]

| Series 30 <i>i</i> , 16 <i>i</i> | Attenuation center frequency [Hz] | Attenuation bandwidth [Hz] | Damping [%] |
|---------------------------------------|--|----------------------------------|----------------|
| Resonance elimination filter 2 | No.2360 | No.2361 | No.2362 |
| Resonance elimination filter 3 | No.2363 | No.2364 | No.2365 |
| Resonance elimination filter 4 | No.2366 | No.2367 | No.2368 |
| Resonance elimination filter 1 | No.2113 | No.2177 | No.2359 |

| Series 15 <i>i</i> | Attenuation center frequency [Hz] | Attenuation bandwidth [Hz] | Damping [%] |
|---------------------------------------|--|----------------------------------|----------------|
| Resonance elimination filter 2 | No.2773 | No.2774 | No.2775 |
| Resonance elimination filter 3 | No.2776 | No.2777 | No.2778 |
| Resonance elimination filter 4 | No.2779 | No.2780 | No.2781 |
| Resonance elimination filter 1 | No.1706 | No.2620 | No.2772 |

D Param - C

NOTE

- 1 The disturbance elimination filter (see Section 4.5) may be effective.
- 2 When the resonance elimination filter is used, set a narrow attenuation bandwidth (about 50 Hz or less) and a large damping attenuation factor (about 50%) to 80%).
- 3 When the center frequency becomes 200 Hz or lower, almost the same effect as when the velocity loop gain is decreased is obtained. Since the resonance elimination filter also has the effect in the change of phase, decreasing the velocity loop gain is recommended.
- 4 The resonance elimination filter becomes more effective as damping becomes closer to 0%. Therefore, when adjusting damping, start with a large value and decrease it gradually.

When SERVO GUIDE can be used, the resonance elimination filter can be set from the parameter window.

[Starting the parameter window]

| Parameter Graph Program Navigator. | Comm Uninitialized |
|---|--|
| $\widehat{1}$ | |
| ت Clicking this button displays the parame | er window. |
| | |
| [Parameter window main screen] | [Velocity control + filter] |
| Param - CNC-PARA.TXT(OFF-LINE:Path1) | X Param - CNC-PARA.TXT(OFF-LINE:Path1) |
| e <u>E</u> dit <u>M</u> ove <u>W</u> indow <u>H</u> elp | Eile Edit Move Window Help |
| | |

| <u>File E</u> dit <u>M</u> ove <u>W</u> indow <u>H</u> elp | <u>File Edit Move Window H</u> elp |
|---|---|
| Image: System setting ▲ Axis X ✓ Paramet CNC Options System setting Axis X ✓ ✓ | ter Hint SV SP Group(G) +Filter Axis X V Parameter Hint Filters Resonance elimination Image: Seconance elimination <td< th=""></td<> |
| Shape-error supression Acceleration trol | Axes Center Freq. Bandwidth Damping HRV Filter 1 0 2 0 2 0 2 0 2 0 2 0 2 0 2 0 2 0 2 0 |
| Jerk Control Position Control Position Control Position Control Position Control Position Control Position Control Shape error Suppression | band elimination with damping 50% HRV Filter 3 500 100 100 0 |
| Acceleration +Feedforward +Feedforward Feedforward pected Disturbance Torque Det Det Disturbance Torque Det Position Detection Check Safety Bell-shaped acc. before if Stop for protection Check Safety Bell-shaped acc. in Rapid Linear Motor Parameter Table | band elimination filter 0% HRV Filter 4 0 and 0 |
| | |

3. als/alF/bls SERIES PARAMETER ADJUSTMENT

- 5. After setting the resonance elimination filter in step 4, measure the torque command again. If there is still vibration left at the same frequency, decrease the damping setting. If vibration occurs at a frequency other than the set frequency, it may be adversely influenced by the setting of the resonance elimination filter. So, try to increase the setting of damping to about 80% to reduce the influence of the resonance elimination filter on velocity control. If vibration is still observed, stop setting the resonance elimination filter and decrease the velocity loop gain.
- 6. After determining the attenuation bandwidth and damping, increase the velocity loop gain again until vibration phenomena listed in step 2 occur. The final value of the velocity loop gain is <u>70% to 80%</u> of the velocity loop gain set when the vibration phenomena occur.

B) Adjustment using the frequency characteristics

The velocity loop gain can be adjusted also by increasing the velocity loop gain while measuring the frequency characteristics. As the velocity loop gain increases, the gain at a certain frequency swells in the frequency characteristics. The frequency corresponding to the swell is the resonance frequency. So, the velocity loop gain is increased while the swell in gain is suppressed with the resonance elimination filter.

The velocity loop gain to be set is 70% to 80% of the velocity loop gain observed when the swell can no longer be suppressed by the resonance elimination filter. It is regarded as the final setting if there is no problem during rapid traverse and cutting feed at the maximum feedrate. If vibration occurs, decrease the velocity loop gain until the vibration stops.

For measurement of the frequency characteristics, see "Details".


(6) Adjustment of acc./dec. in rapid traverse

The time constant of acc./dec. in rapid traverse is adjusted. Adjusting the time constant in rapid traverse can reduce the total machining time. While observing the torque command (TCMD) at the time of acc./dec. in rapid traverse to check that the TCMD does not reach the maximum current value, decrease the time constant of acc./dec. in rapid traverse. When bell-shaped acc./dec. in rapid traverse is used, a small TCMD value can be obtained with mechanical impact suppressed.


NOTE

Make adjustments in rapid traverse with the maximum load applied to the machine.

3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT

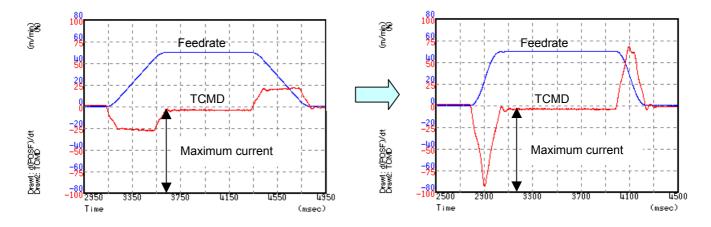


The following graphs show how the time constant in rapid traverse is adjusted.

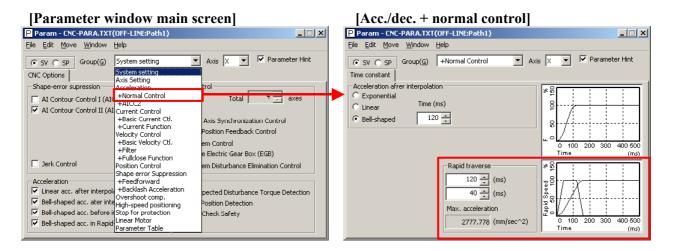

(7) Adjustment of the position gain

Observe the torque command waveform at the time of acc./dec. during rapid traverse and cutting feed at the maximum cutting feedrate. When a low frequency vibration (hunting) of about 10 to 30 Hz occurs in the torque command waveform, the corresponding position gain is regarded as the oscillation limit. The position gain to be set is about 80% of the position gain of the oscillation limit.

The standard setting is within 5000 to 10000.

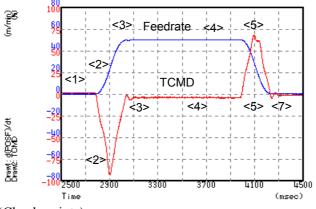

(Check points)

- No vibration is allowed in the stopped state. Also check the positional deviation on the CNC. (<1>)
- Neither vibration nor sound must be generated during acceleration and deceleration. If the TCMD level has reached the maximum value, increase T1. (<2>, <5>)
- Neither vibration nor excessive overshoot must be generated at the end of acceleration and deceleration. If the TCMD level has reached the maximum value, increase T2. (<3>, <7>)
- There must be no large variation in feedrate during movement at a constant feedrate. (<4>)

NOTE

For axes for which interpolation is performed, set the same position gain.

| [Parameter window main s | creen] | [Position control] |
|---|---|---|
| P Param - CNC-PARA.TXT(OFF-LINE:Path1) | | Param - CNC-PARA.TXT(OFF-LINE:Path1) |
| <u>Eile Edit Move Window H</u> elp | | <u>File Edit M</u> ove <u>W</u> indow <u>H</u> elp |
| Image: System setting ▼ System setting ▼ CNC Options System setting Shape-error supression Axis Setting Axis Setting Axis Setting Axis Collection +Normal Control + Al Contour Control I (Alt +Normal Control + Al Contour Control II (Alt +AicC2 Image: Weight Control +Basic Current Coll. + Current Function Velocity Control + Basic Velocity Ctl. +Bilter | Axis X Parameter Hint | SV SP Group(S) Position Control Axis X Parameter Hint Position Control Advanced Preview FF Image: Cutting / rapid-traverse position loop gain switching Position loop gain(s-1) 5000 Image: Cutting / rapid-traverse(0.01s-1) Image: Cutting / rapid-traverse(0.01s-1) Position loop gain for rapid-traverse(0.01s-1) Image: Cutting / rapid-traverse(0.01s-1) Image: Cutting / rapid-traverse(0.01s-1) Position loop gain synchronization in rigid tapping mode with FAD Image: Cutting / rapid-traverse(0.01s-1) Image: Cutting / rapid-traverse(0.01s-1) |
| Acceleration - Freedforward - Headforward - Headforward - Headforward - Backlash Acceleration Generation - Headforward - Backlash Acceleration - Headforward - Headforwa | pected Disturbance Torque Detection Position Detection Check Safety | |

(8) Adjustment by using an arc (adjustment of the feed-forward coefficient and adjustment of the servo function)

(a) Feed-forward function


For higher precision (higher performance) with small servo follow-up delay, the feed-forward function is used. When the feed-forward coefficient is set to 100%, the positional deviation can be almost eliminated.

(Feed-forward)


By adding to a velocity command value the velocity compensation value equivalent to the position command issued from the CNC, the contour error due to position loop response delay can be reduced.

(Velocity feed-forward)

The torque compensation amount equivalent to the amount of change in velocity command (acceleration) is added to a specified torque value so that the contour error due to velocity loop response delay can be reduced.

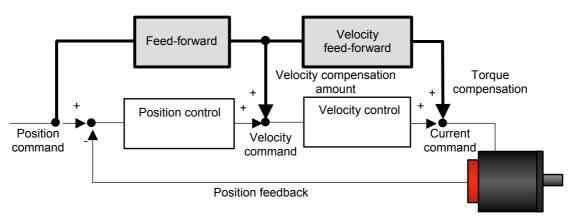


The following figure shows the effect of the feed-forward function. The figure indicates that an arc radius error of 250 μ m, which was measured before the use of the feed-forward function, has been reduced to almost 0 after the use of the feed-forward function.

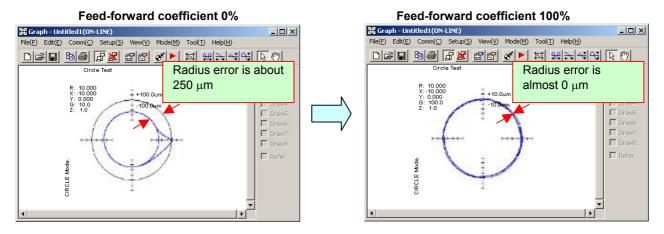

(b) Adjusting the feed-forward coefficient

The feed-forward coefficient can be adjusted on the screen shown below. Note that, however, setting the feed-forward coefficient to more than 10000 (100%) means that the actual machine position advances ahead of commands from the CNC. So, such setting is not permitted.

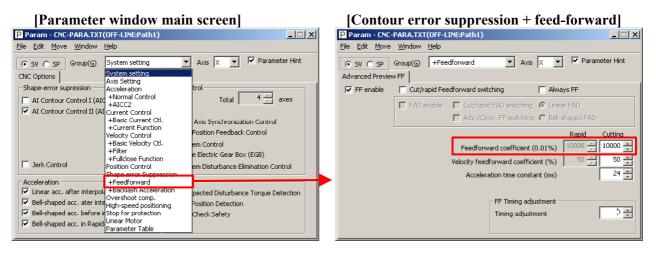


While checking fluctuation of radius by using an arc with about R10/F4000 or R100/F10000 set, make an adjustment so that the actual path matches the commanded path. At this time set the velocity feed-forward coefficient to about 100.

NOTE To f

To fine-tune the amount of arc radius, also adjust the feed-forward timing parameter after adjusting the feed-forward coefficient. (See Subsection 4.6.5.)

(c) Adjusting backlash acceleration

To reduce quadrant protrusions (errors generated where the axis move direction is reversed), the backlash acceleration function is used. While observing the quadrant protrusion size, change the backlash acceleration value in steps of about 10 to 20, and ends the adjustment immediately before undercut occurs. A large quadrant protrusion or undercut may adversely affect cutting results. So, adjust the backlash acceleration so that any quadrant protrusion is not greater than 5 μ m.

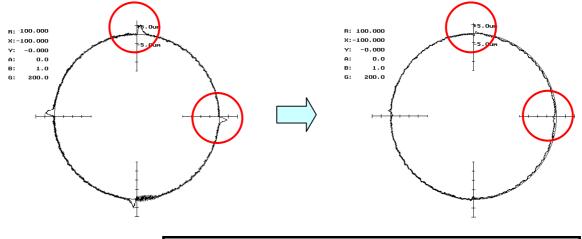

NOTE

- 1 For the adjustment of the conventional backlash acceleration function, see Subsection 4.6.6.
- 2 When higher precision is required, use the 2-stage backlash acceleration function (see Subsection 4.6.7).


| [Parameter window main | n screen] | [Contour error suppression + backlash acceleratio |
|--|--|--|
| P Param - CNC-PARA.TXT(OFF-LINE:Path1) | | X Param - CNC-PARA.TXT(OFF-LINE:Path1) |
| <u>File E</u> dit <u>M</u> ove <u>W</u> indow <u>H</u> elp | | <u>Eile Edit Move Window H</u> elp |
| SV SP Group(G) System setting CNC Options System setting Axis Setting Acceleration All Contour Control I (AI +AirCC2 ✓ AI Contour Control I (AI +Basic Velocity ✓ AI Contour Control I (AI +Basic Velocity → Basic Velocity -Fillcer → Filter +Fillces → Filter -Fillces → Faceleration +Basic Velocity ✓ Linear acc. after interpo +Backdash Acceleration ✓ Bell-shaped acc. after interpo +Backdash Acceleration ✓ Bell-shaped acc. after interpo *Stop for protection ✓ Bell-shaped acc. after interpo *Stop for protection ✓ Bell-shaped acc. after interpo *Approximation | Axis X Parameter Hint Total Axis Synchronization Control Position Feedback Control em Control e Electric Gear Box (EGB) em Disturbance Elimination Control pected Disturbance Torque Detection Position Detection Check Safety | SV SP Group(G) +Backlash Acceleration Axis X Y Parameter Hint Backlash acceleration 2-stage backlash acceleration 2-stage backlash acceleration 2 2-stage 2-stage Y Backlash acceleration 2-stage backlash acceleration 2-stage backlash acceleration 2 2-stage Y Backlash acceleration enable |

(9) Adjustment by using a square figure (adjustment of the high-speed and high-precision function and adjustment of the servo function)(a) Setting the corner deceleration function


When the automatic corner deceleration function is used, an error at the corner (overshoot) can be reduced. First, set the reduced corner feedrate to 400 mm/min.

[Parameter window main screen]

[Acc./dec. + AI contour control 2 (when AI contour control II is used)]

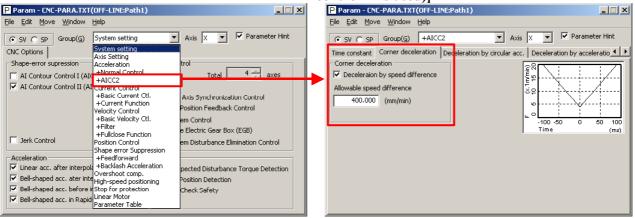


The figure below shows the effect of the corner deceleration function. Deceleration at a corner reduces the amount of the overshoot.

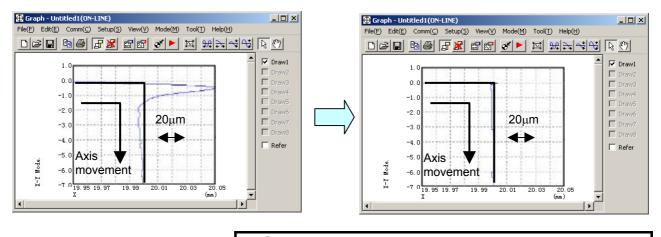

- NOTE
 - For fine-adjustment of a corner overshoot, the following parameters are also related:
 - Acc./dec. before interpolation
 - Velocity feed-forward coefficient

(b) Adjusting the time constant in cutting feed

In automatic corner deceleration, the feedrate at which the tool moves along a corner is reduced according to the permissible acceleration set for acc./dec. before interpolation. When the automatic corner deceleration function is used, the tangential feedrate at the corner changes in a V-shaped manner as shown below. As the permissible acceleration for acc./dec. before interpolation is decreased, deceleration at the corner becomes smoother, therefore, the contour error at the corner can be decreased.

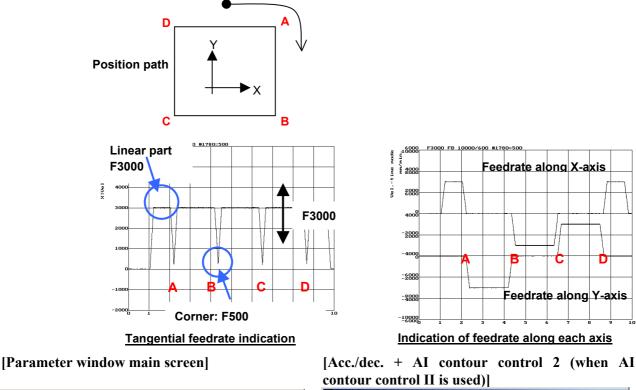

| P Param - CNC-PARA.TXT(OFF-LINE:Path1) | Param - CNC-PARA.TXT(OFF-LINE:Path1) |
|---|---|
| Eile Edit Move <u>W</u> indow Help | <u>Eile E</u> dit <u>M</u> ove <u>W</u> indow <u>H</u> elp |
| ♥ SV ○ SP Group(G) System setting ▲ xis X ▼ Parameter Hi CNC Options Axis Setting Axis Setting Axis Setting Axis Setting Axis Setting Axis Setting Axis Contour Control I (Alc +AicCc2 Total 4 ✓ AI Contour Control I (Alc +AicCc2 Total 4 ✓ AI Contour Control I (Alc +AicCc2 Axis Synchronization Control +Basic Velocity Control +Basic Velocity Cit. +Basic Velocity Cit. +Bitter +Filter +Filter +Filter +Filter = Electric Gear Box (EGB) | Time constant Corner deceleration Deceleration by circular acc. Deceleration by acceleration Acceleration before interpolation for cutting feed Max. acceleration 700.000 (mm/sec^2) Bell Time constant 64 - (ms) 0.000 (mm/min) |
| □ Jerk Control Position Control em Disturbance Elimination Control Acceleration H=edforward ✓ Bell-shaped acc. ater interpole Packlash Acceleration ✓ Bell-shaped acc. ater interpole Disturbance Torque Detection ✓ Bell-shaped acc. before if Stop for protection Check Safety ✓ Bell-shaped acc. in Rapid Parameter Table | C Exponential Time (ms) |

If the contour error at the corner cannot be reduced even by adjusting the permissible feedrate difference, increase the time constant of acc./dec. before interpolation.

When bell-shaped Acc/Dec. before interpolation is used, contour errors not only at corners but also rounded corners may be improved. Note that, however, a larger time constant extends the total machining time.


(c) Adjusting velocity feed-forward


The velocity feed-forward function has the effect of helping the torque command start earlier at the time of acc./dec. This effect is reflected in corner figures. So, adjust the velocity feed-forward coefficient so that corner figures can be improved. When nano interpolation is not used, set the coefficient value to 400 or smaller.


| [Parameter window main screen] | | [Contour error suppression + feed-forward] |
|--|---|--|
| P Param - CNC-PARA.TXT(OFF-LINE:Path1) | | P Param - CNC-PARA.TXT(OFF-LINE:Path1) |
| <u>Eile Edit M</u> ove <u>W</u> indow <u>H</u> elp | | <u>Eile Edit Move Window H</u> elp |
| ⊙ SV ○ SP Group(G) System setting CNC Options System setting | Axis X 💌 🏹 Parameter Hint | Image: Complexity of the section of the se |
| Arxis Setting Acceleration Acceleration Acceleration Arcoleration | trol Total Axis Synchronization Control Position Feedback Control em Control e Electric Gear Box (EGB) | FF enable Cut/rapid Feedforward switching Always FF FAD enable Cut/rapid FAD switching Linear FAD Adv./Conv. FF switching Bell-shaped FAD Rapid Cuting Feedforward coefficient (0.01%) Velocity feedforward coefficient (%) |
| Jerk Control Position Control Acceleration Heedforward Linear acc. after interpol Teel-shaped acc. ater interpol High-speed positioning Bell-shaped acc. before in Stop for protection Bell-shaped acc. in Rapid Linear Motor Parameter Table | em Disturbance Elimination Control pected Disturbance Torque Detection Position Detection Check Safety | Acceleration time constant (ms) 24 |


(10) Adjustment by using a square figure with 1/4 arcs (adjustment of the high-speed and high-precision function and adjustment of the servo function)

When acceleration changes suddenly at an arc part, positional deviation occurs. To reduce this positional deviation, set the permissible acceleration. Hence, the feedrate is changed depending on whether the tool moves along a linear part or an arc part in a square figure with 1/4 arcs as shown below. In this example, the feedrate decreases to F1000 in an arc part, and after the arc part is passed, the feedrate increases to restore F4000. The acc./dec. before and after an arc is determined by the time constant of acc./dec. before interpolation.

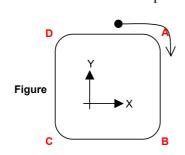

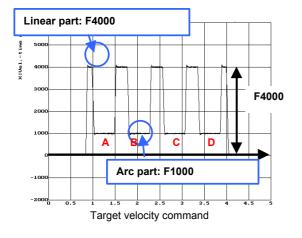

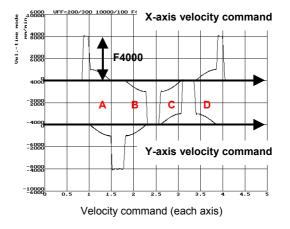

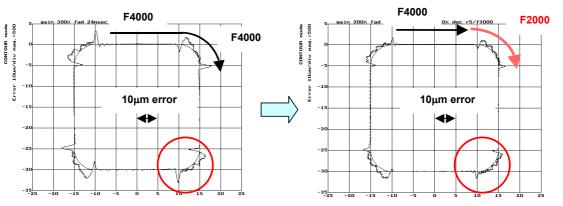


The following figure shows that this function reduces the positional deviation.

contour control II is used)] P Param - CNC-PARA.TXT(OFF-LINE:Path1) _ 🗆 🗙 Param - CNC-PARA.TXT(OFF-LINE:Path1) <u>File E</u>dit <u>M</u>ove <u>W</u>indow <u>H</u>elp <u>File Edit Move Window Help</u> Axis X 🔻 🔽 Parameter Hint ▼ Axis X ▼ Parameter Hint System setting • ● SV ● SP Group(G) +AICC2 ● SV ● SP Group(G) System setting Axis Setting Acceleration CNC Options Corner deceleration Deceleration by circular acc. Deceleration by acceleration Other setting -Shape-error supression Deceleration by acceleration AI Contour Control I (AIC + AICC2 4 -Ēο AI Contour Control II (AI Lurrent Control +Basic Current Ctl. +Current Function Axis Synchronization Control 222.220 (mm/sec^2) +Current Function Velocity Control +Basic Velocity Ctl, +Filter +Fullclose Function Position Control Shape error Suppression +Feedforward +Backlash Acceleration Overshoot comp. Max. acceleration Position Feedback Control m Control 100.000 (mm/min) Min. feedrate limit 20 40 60 80 100 e Electric Gear Box (EGB) Radius (mm) 🗌 Jerk Control em Disturbance Elimination Control Acceleration Linear acc. after interpole ected Disturbance Torque Detectio Enlinear acc. atter interpole
 Overshoot comp.
 Bell-shaped acc. atter inter
 High-speed positioning
 Bell-shaped acc. before if Stop for protection Position Detection Check Safety Bell-shaped acc. in Rapid Linear Motor

> When advanced preview control is used, the feedrate at a rounded portion is suppressed by setting the arc radius and feedrate. For example, when the arc radius is 5 mm, and the feedrate is to be decreased to F2000, set R to 5 mm, and the feedrate to F2000 mm/min.

[Parameter window main screen]


[Acc./dec. + advanced preview control (when advanced preview control is used)]

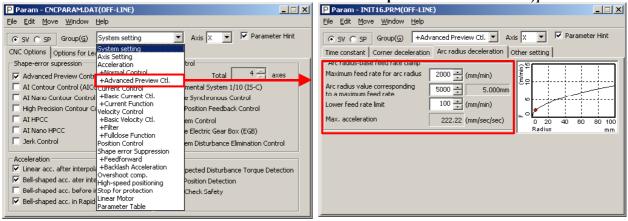

[Parameter window main screen]

[Acc./dec. + AI contour control 2 (when AI

The positional deviation in an arc part can be suppressed also by adjusting the velocity feed-forward coefficient. Since the positional deviation in an arc part is caused by velocity loop delay at the start and end of the arc, velocity feed-forward, which compensates for delay, is effective in the suppression of the positional deviation in arc parts.

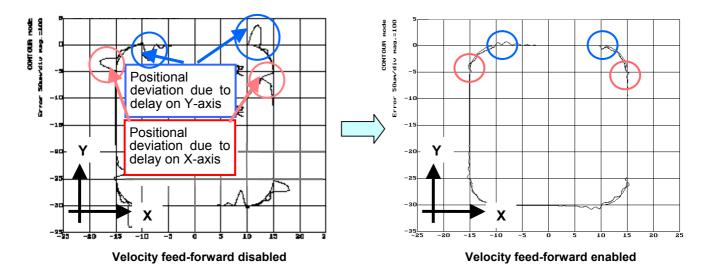

3.3.2 High-Speed Positioning Adjustment Procedure

(1) Overview

This section describes the adjustment procedure for high-speed positioning required with a punch press and PC board drilling machine.

(2) Adjustment procedure

Make a high-speed positioning adjustment while viewing the ERR (servo error amount) and TCMD. Set a measurement range as described below.

- ERR: Adjust the measurement range so that the precision required for positioning can be seen. When using the analog check board, measure VCMD instead of ERR. (Adjust the VCMD magnification and the measurement voltage level.) In the example below, a requested precision of 10 μm is assumed.
- TCMD: Make an adjustment to view a specified maximum current value. If an adjustment is made to reduce positioning time, TCMD saturation may occur. Make an adjustment so that the TCMD lies within a specified maximum current.
- <1> I-P function setting

Select I-P function for velocity loop control. In general, PI function reduces start-up time for a command, but requires a longer setting time, so that PI function is not suitable for high-speed positioning. On the other hand, I-P function reduces time required to reach a target position, so that I-P function is generally used for high-speed positioning adjustment.

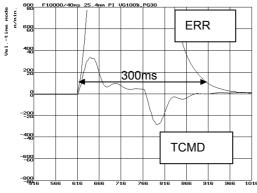


Fig. 3.3.2 (a) When PI function is used


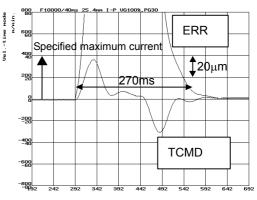


Fig. 3.3.2 (b) When I-P function is used


3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT

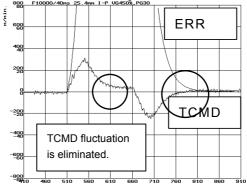


<2> Set a highest possible velocity loop gain according to Subsec. 3.3.1, "Servo HRV Control Adjustment Procedure."


Fig. 3.3.2(c) After velocity loop gain adjustment

<3> Set a switch speed of 1500 (15 min⁻¹) with the position gain switch function (see Subsec. 4.8.1).

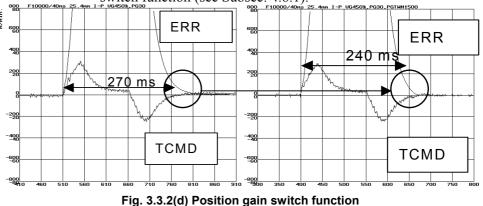

<4> Set a highest possible position gain. While viewing the ERR waveform (VCMD waveform), make an adjustment so that the overshoot value lies within a requested precision. After setting a position gain, perform rapid traverse for a long distance to check that low-frequency vibration due to an excessively increased position gain does not occur. If the set position gain is too high, vibration after an overshoot exceeds a requested precision. An overshoot itself can be suppressed to some extent by adjustment of <5>.

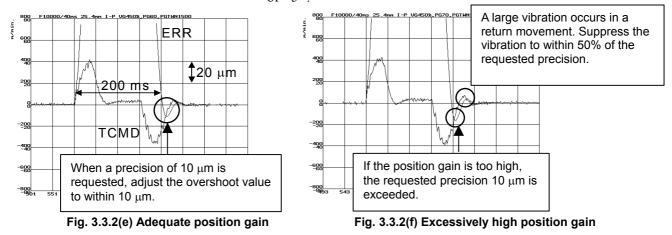

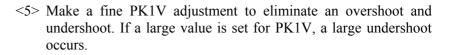

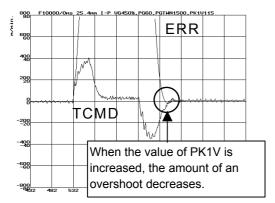


Fig. 3.3.2(g) After PK1V adjustment

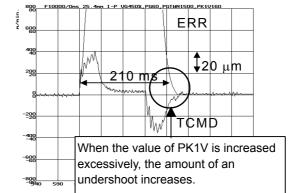


Fig. 3.3.2(h) When the value of PK1V is too large

3.3.3 Rapid Traverse Positioning Adjustment Procedure

(1) Overview

The fine acc./dec. function applies a filter to each axis in the servo software to reduce a shock associated with acc./dec. By combining the fine acc./dec. function with feed-forward, high-speed positioning can be achieved in rapid traverse. This section describes rapid traverse positioning adjustment.

NOTE

In the Series 30*i*, 31*i*, and 32*i*, smooth acc./dec. is always performed by nano interpolation, so the fine acc./dec. function is unnecessary. Please use the bell-shaped acc./dec in rapid traverse in stead of the fine acc./dec. function.

(2) High-speed positioning by a combination of fine acc./dec. and feed-forward

(Rapid traverse positioning when fine acc./dec. is not used)

A servo loop not performing feed-forward has a delay equivalent to a position loop gain. The time required for positioning after completion of distribution from the CNC is four to five times the position gain time constant (33 ms for 30 [1/s]) (133 to 165 ms for a position gain of 30). In normal rapid traverse, rapid traverse linear acc./dec. (Fig. 3.3.3 (a)) is used, so that acceleration changes to a large extent at the start and end of acceleration. However, since feed-forward is not used, acceleration change is made moderate by a position loop gain, and a shock does not occur.

If a low linear acc./dec. time constant is set for high-speed positioning, and a high position gain and feed-forward are set, the time required for positioning is reduced, but a shock occurs. In this case, a shock can be reduced by setting rapid traverse bell-shaped acc./dec. (optional function) (Fig. 3.3.3 (b)).

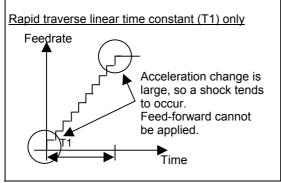


Fig. 3.3.3 (a) Rapid traverse linear acc./dec.

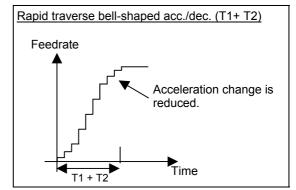


Fig. 3.3.3 (b) Rapid traverse bell-shaped acc./dec.

(Rapid traverse positioning when fine acc./dec. is used)

For further reduction in the time required for rapid traverse positioning, a delay due to position gain needs to be minimized. For this purpose, feed-forward needs to be fully utilized. When feed-forward is applied, the positional deviation decreases. Accordingly, positional deviation convergence occurs more rapidly after distribution, thus reducing the time required for positioning.

If feed-forward close to 100% is applied to normal acc./dec. (Fig. 3.3.3 (a) and (b)), a mechanical shock due to acceleration change at the start and end of acc./dec., and a torque command vibration during acc./dec. can pose a problem. To cope with this, the fine acc./dec. function is available (Fig. 3.3.3 (c) and (d)).

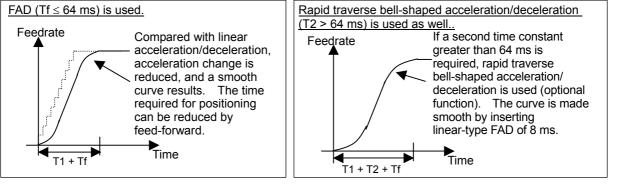


Fig. 3.3.3 (c) Fine acc./dec. (FAD)

Fig. 3.3.3 (d) Rapid traverse bell-shaped acc./dec. + FAD

Fine acc./dec. increases the time required for command distribution by a time constant. However, a time reduction in positioning achieved by feed-forward is greater than this increase, so the time required for positioning can be reduced in total. Thus, positioning can be speeded up using fine acc./dec. The adjustment procedure is described in (3) below.

(T1 + positioning time based on a position gain)

> (T1 + Tf + positioning time based on feed-forward)

A time constant up to 64 ms can be set for fine acc./dec. If a time constant greater than 64 ms is required, use rapid traverse bell-shaped acc./dec., and set 8 ms for linear-type fine acc./dec. (Fig. 3.3.3 (d)).

(3) Adjustment procedure

Make a rapid traverse positioning adjustment while viewing the ERR (servo error amount). Adjust the measurement range so that the time required for position deviation convergence within the in-position width can be seen. At the same time, observe the TCMD to check that the TCMD is not saturated. Before proceeding to the adjustment described below, adjust the velocity loop gain according to item (5), "Adjustment of high-speed velocity control" in the Subsec. 3.3.1, "Gain Adjustment Procedure."

The measurement data of Fig. 3.3.3 (e) has been obtained under the condition below. Fine acc./dec. and feed-forward are not used.

- Rapid traverse rate: 20000 mm/min
- Rapid traverse time constant: 150 ms
- Position gain: 30/s
- Travel distance: 100 mm

<u>3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT</u>

When the in-position width is 20 pulses, a time of about 180 ms is required from distribution completion to positioning. Reducing this time can speed up positioning.

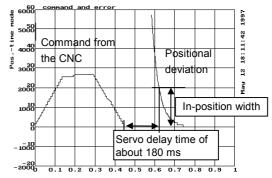


Fig. 3.3.3 (e) Measurement of time before adjustment

<1> Default parameter setting for fine acc./dec. and feed-forward Set the parameters according to Table 3.3.3. By setting the default parameters, the time required for positioning can be much reduced.

| | Default parameter | | | | | |
|------------------------------------|--------------------|------------------------------------|---------|--|--|--|
| Item | Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , | Setting | | | |
| | Genes 15 | and so on | Setting | | | |
| Rapid traverse feed-forward enable | No. 1800 #3 | No. 1800 #3 | 1 | | | |
| Fine acc./dec. function enable | No. 1951 #6 | No. 2007 #6 | 1 | | | |
| Linear-type fine acc./dec. | No. 1749, #2 | No. 2009 #2 | 1 | | | |
| Fine acc./dec. time constant | No. 1702 | No. 2109 ^(*1) | 40 | | | |
| Feed-forward enable | No. 1883 #1 | No. 2005 #1 | 1 | | | |
| Feed-forward coefficient | No. 1985 | No. 2092 ^(*1) | 9700 | | | |
| Velocity feed-forward coefficient | No. 1962 | No. 2069 ^(*1) | 100 | | | |


Table 3.3.3 Default parameters for rapid traverse positioning adjustment

*1 When using different values for cutting and rapid traverse, use the cutting feed/rapid traverse switchable fine acc./dec. function according to Section 4.3, "CUTTING FEED/RAPID TRAVERSE SWITCHABLE FUNCTION."

<2> Velocity feed-forward adjustment

When feed-forward is enabled, the time required for positioning can be reduced, but a swell may occur due to insufficient velocity loop response immediately before machining stops. A swell can be reduced by an increased velocity loop gain, but there is an upper limit on the velocity loop gain. So, adjust the velocity feed-forward coefficient to reduce a swell for positioning time reduction.

The default settings cause a swell immediately before machining stops (Fig. 3.3.3 (f)). The swell can be reduced by increasing the velocity feed-forward coefficient (Fig. 3.3.3 (g)).

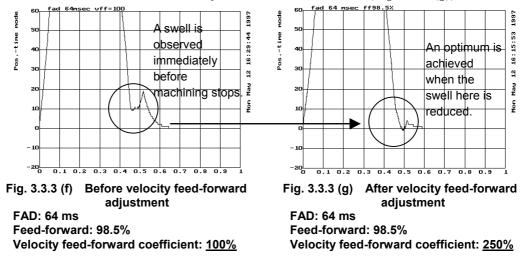

<3> Fine adjustment of feed-forward

Reduce the time required for positioning by making a fine adjustment of the feed-forward coefficient. If the feed-forward coefficient is not sufficiently large (Fig. 3.3.3 (h)), increase the feed-forward coefficient by about 0.5%. If the feed-forward coefficient is too large (Fig. 3.3.3 (i)), decrease the feed-forward coefficient by about 0.5%.

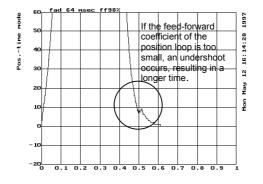


Fig. 3.3.3 (h) When the feed-forward coefficient is too small

FAD: 64 ms Feed-forward: <u>98%</u> Velocity feed-forward coefficient: 250%

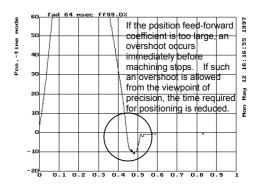


Fig. 3.3.3 (i) When the feed-forward coefficient is too high

FAD: 64 ms Feed-forward: <u>99%</u> Velocity feed-forward coefficient: 250%

3. $\alpha i S/\alpha i F/\beta i S$ SERIES PARAMETER ADJUSTMENT

If an adequate feed-forward coefficient is set, the in-position width is satisfied nearly at the same as distribution command completion, and shortest-time positioning is achieved as shown in Fig. 3.3.3 (j).


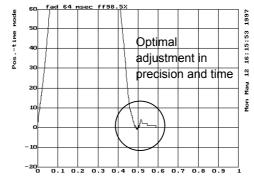



Fig. 3.3.3 (j) When an adequate feed-forward coefficient is set FAD: 64 ms Feed-forward: <u>98.5%</u> Velocity feed-forward coefficient: 250%

3.3.4 Vibration in the Stop State

Vibration generated only in the stop state is caused by the decreased load inertia in a backlash. Adjust the auxiliary functions for suppressing stop-time vibration. Vibration may be generated only in the stop state also when the position gain is too high.

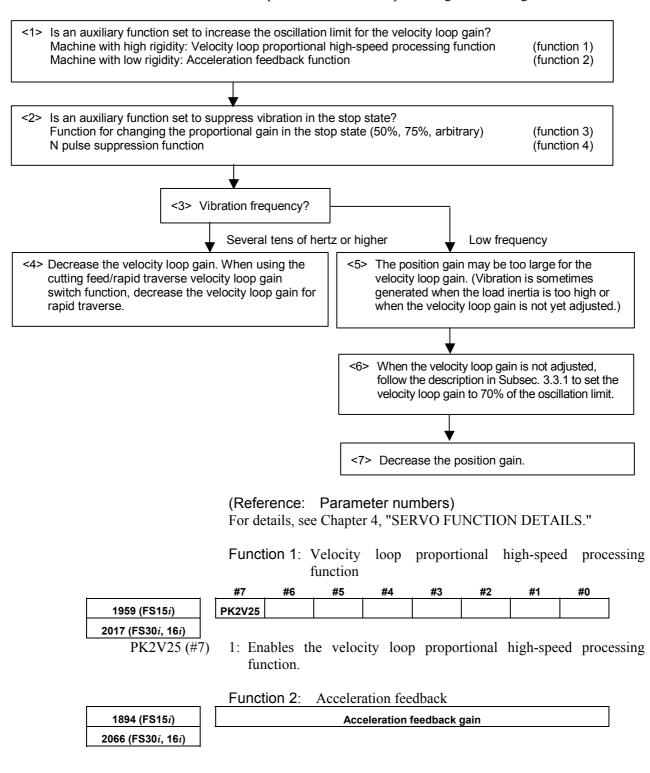


3. $\alpha i S/\alpha i F/\beta i S$ SERIES PARAMETER ADJUSTMENT

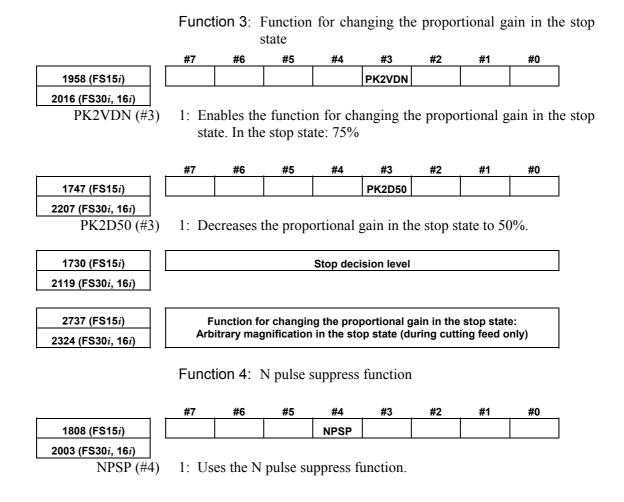

3.3.5 Vibration during Travel


Vibration is generated during travel by various causes. So, a most appropriate method must be selected after observing the vibration status carefully.

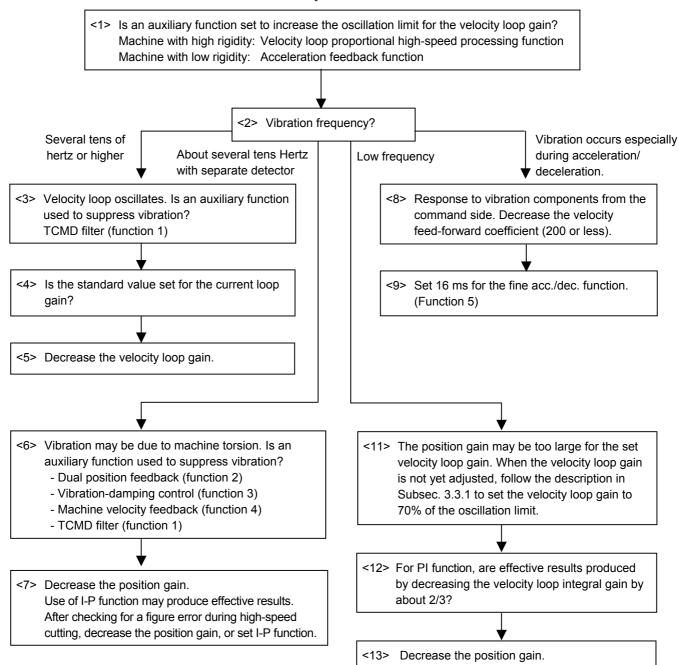


3. $\alpha i S / \alpha i F / \beta i S$ SERIES PARAMETER ADJUSTMENT

(Reference: Parameter numbers) For details, see Chapter 4, "SERVO FUNCTION DETAILS."

Function 1: TCMD filter

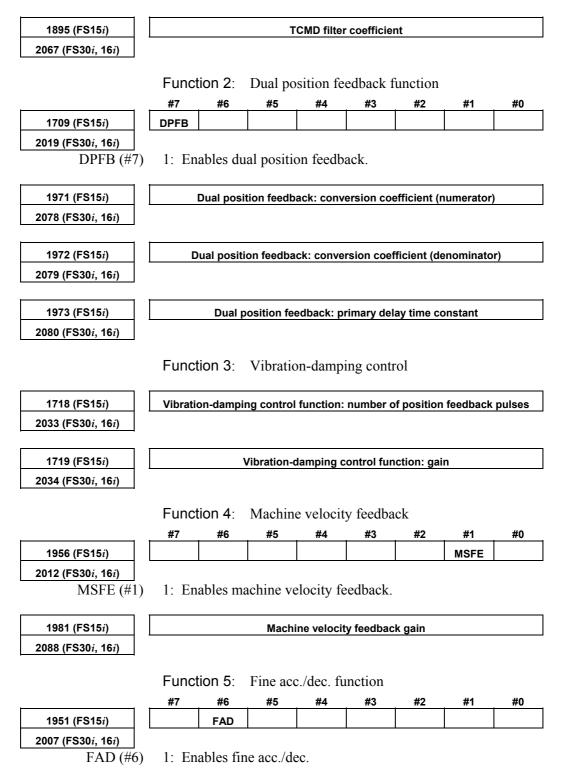


B-65270EN/06

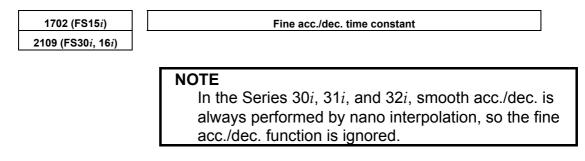

3.3.6 Stick Slip

When the time from the detection of a position error until the compensation torque is output is too long, a stick slip occurs during low-speed feed. Improvement in gain is required. However, for a machine with high friction and torsion, a higher gain cannot be set. In such a case, a stick slip phenomenon may occur.

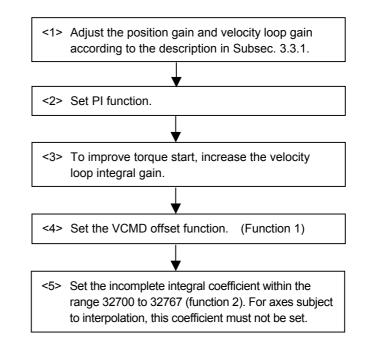

(Reference: Parameter numbers) For details, see Chapter 4, "SERVO FUNCTION DETAILS."


Function 1: VCMD offset function

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|-------|--------------------------|--------|-----------|----------|----|----|----|
| 1808 (FS15 <i>i</i>) | VOFS | | | | | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| VOFS (#7) | 1: En | ables the | e VCMD | offset fi | unction. | | | |
| | | | | | | | | |
| 1857 (FS15 <i>i</i>) | | Incomplete integral gain | | | | | | |

2045 (FS30*i*, 16*i*)

3.3.7 Overshoot

When the machine is operated at high speed or with a detection unit of $0.1 \ \mu m$ or less, the problem of overshoots may arises. Select a most appropriate preventive method depending on the cause of the overshoot.

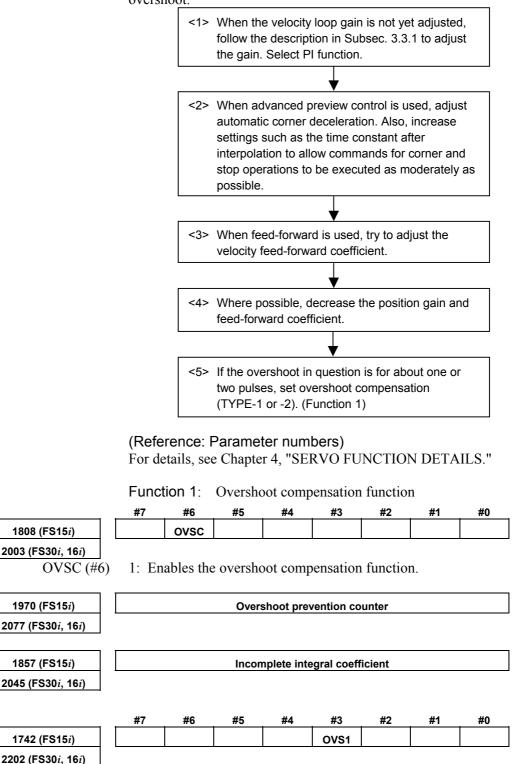


OVS1 (#3) 1: Enables overshoot compensation TYPE-2.



4.1 SERVO HRV CONTROL

(1) Overview

Servo HRV control is a digital servo control system based on high-speed, high-response current control and includes servo HRV1 control, servo HRV2 control, servo HRV3 control, and servo HRV4 control. Use of these control systems allows higher acceleration, higher speed, and higher precision.

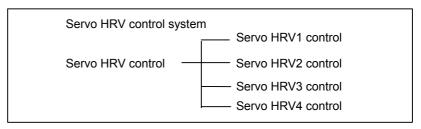

(2) Servo HRV control and Series and editions of applicable servo software

| | Serie | es30 <i>i</i> | Other than th | ne Series 30 <i>i</i> | |
|-------------------|--|---|---|---|--|
| | Series 90D0/A(01) and subsequent editions (Note 1, 2) | Series 90E0/A(01) and subsequent editions (Note 2) | Series 90B0/H(08) and subsequent editions (Note 3) | Series 9096/A(01) and subsequent editions | |
| ServoHRV1 control | × | × | 0 | 0 | |
| ServoHRV2 control | 0 | 0 | • | × | |
| ServoHRV3 control | • | • | 0 | × | |
| ServoHRV4 control | 0 | × | × | × | |

 \bigcirc : Supported (\bigcirc is recommended)

 \times : Not supported

| N | DTE |
|---|---|
| 1 | When using servo HRV4 control, use Series |
| | 90D0/J(10) and subsequent editions. |
| 2 | For Series 90D0 and 90E0, apply the same servo |
| | HRV control to all axes. |
| 3 | Series 90B1/A(01) and subsequent editions, Series |
| | 90B6/A(01) and subsequent editions, and Series |
| | 90B5/A(01) and subsequent editions are also |
| | supported. |

(3) Features of servo HRV control

(a) Servo HRV2 control

Servo HRV control is a total control technology implemented by a servo motor, servo amplifier, and control systems as shown in the figure below. Servo HRV2 control has the following features:

(1) HRV filters for eliminating vibration components of the machine system can be used.


The HRV filters include the following filters to cover a wide range of vibration from low frequency vibration to high frequency vibration:

TCMD filter (a filter for eliminating middle frequency vibration) Resonance elimination filter (a filter for eliminating high frequency vibration)

Disturbance elimination filter (a filter for eliminating low frequency vibration)

- (2) Use of a $\alpha iS/\alpha iF/\beta iS$ series motor and a $\alpha i/\beta i$ servo amplifier enables high-speed, high-precision, and smooth feed.
- (3) Use of a precise pulse coder improves control performance.

With Series 90B0, 90B1, 90B6, and 90B5, it is recommended that servo HRV2 control be used for the current loop.

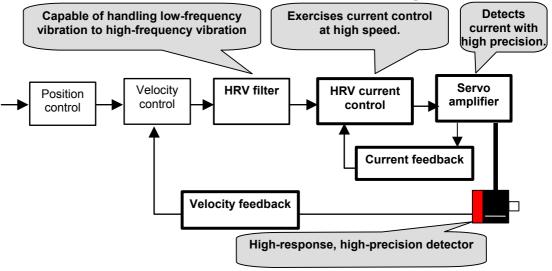

(b) Servo HRV3 control

In addition to the features of HRV2 control, servo HRV3 control has the following features:

- (1) Use of high-speed DSP enables high-speed HRV current control, therefore improving the response performance of the current loop.
- (2) When a linear motor or an αi S series servo motor are used, both high acceleration, high speed and high precision can be provided at the same time.

With Series 90D0 and 90E0, use of servo HRV3 control is recommended.

(c) Servo HRV4 control

In addition to the features of servo HRV2 and servo HRV3, servo HRV4 control has the following features:

- (1) An improved servo HRV control system is employed. (Extended HRV function)
- (2) Improved thermal resistance in the high-speed DSP and servo amplifier provides the current loop with higher response performance than the response performance provided by servo HRV3 current control.

4.1.1 Servo HRV2 Control

(1) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(2) Setting parameters

By using a motor ID number for servo HRV2 control, load the standard parameters.

Set the motor ID number supporting servo HRV2 control, listed in the table below, and perform servo initialization.

NOTE

- 1 For the motor ID number, see the table below.
- 2 With servo software editions earlier than the editions listed in the table, automatic parameter loading cannot be performed. In such cases, enter the standard parameters listed in the parameter list in Section 6.2 in this manual.

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 |
|----------------------|------------------------|--------------|--------------|------|--------------|------|
| α <i>i</i> S2/5000 | 0212 | 262 | А | Н | Α | А |
| α <i>i</i> S2/6000 | 0218 | 284 | G | - | В | В |
| α <i>i</i> S4/5000 | 0215 | 265 | Α | Н | А | А |
| α <i>i</i> S8/4000 | 0235 | 285 | А | Н | Α | А |
| α <i>i</i> S8/6000 | 0232 | 290 | G | - | В | В |
| αi S12/4000 | 0238 | 288 | А | н | Α | А |
| αi S22/4000 | 0265 | 315 | Α | Н | Α | А |
| αi S30/4000 | 0268 | 318 | А | Н | А | А |
| α <i>i</i> S40/4000 | 0272 | 322 | А | н | Α | А |
| α <i>i</i> S50/3000 | 0275-Bx0x | 324 | В | V | Α | А |
| lpha iS50/3000 FAN | 0275-Bx1x | 325 | А | N | Α | А |
| αi S100/2500 | 0285 | 335 | А | Т | А | А |
| α <i>i</i> S200/2500 | 0288 | 338 | А | Т | Α | А |
| α <i>i</i> S300/2000 | 0292 | 342 | В | V | Α | А |
| α <i>i</i> S500/2000 | 0295 | 345 | А | Т | Α | А |

αiS series servo motor

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | | |
|-------------------------|------------------------|--------------|--------------|------|--------------|------|--|--|
| α <i>i</i> F1/5000 | 0202 | 252 | Α | Н | А | А | | |
| α <i>İ</i> F2/5000 | 0205 | 255 | А | Н | А | А | | |
| α <i>i</i> F4/4000 | 0223 | 273 | А | Н | А | А | | |
| α <i>i</i> F8/3000 | 0227 | 277 | А | Н | А | А | | |
| α <i>i</i> F12/3000 | 0243 | 293 | А | Н | А | А | | |
| α <i>i</i> F22/3000 | 0247 | 297 | А | Н | А | А | | |
| α <i>İ</i> F30/3000 | 0253 | 303 | А | Н | А | А | | |
| α <i>i</i> F40/3000 | 0257-Bx0x | 307 | А | Н | А | А | | |
| α <i>İ</i> F40/3000 FAN | 0257-Bx1x | 308 | А | Ι | А | А | | |

aiF series servo motor

aiS series servo motor (for 400-V driving)

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | | |
|--|------------------------|--------------|--------------|------|--------------|------|--|--|
| lpha iS2/5000HV | 0213 | 263 | Α | Q | Α | А | | |
| lpha iS2/6000HV | 0219 | 287 | G | - | В | В | | |
| lpha iS4/5000HV | 0216 | 266 | А | Q | А | А | | |
| α <i>i</i> S8/4000HV | 0236 | 286 | Α | N | Α | А | | |
| lpha iS8/6000HV | 0233 | 292 | G | - | В | В | | |
| lpha iS12/4000HV | 0239 | 289 | А | N | А | А | | |
| α <i>i</i> S22/4000HV | 0266 | 316 | Α | N | Α | А | | |
| α <i>i</i> S30/4000HV | 0269 | 319 | А | N | А | А | | |
| α <i>i</i> S40/4000HV | 0273 | 323 | Α | N | Α | Α | | |
| lpha iS50/3000HV FAN | 0276-Bx1x | 326 | Α | N | Α | Α | | |
| lpha iS50/3000HV | 0276-Bx0x | 327 | В | V | А | А | | |
| α <i>i</i> S100/2500HV | 0286 | 336 | В | V | А | А | | |
| lpha iS200/2500HV | 0289 | 339 | В | V | A | А | | |
| lpha iS300/2000HV | 0293 | 343 | В | V | А | А | | |
| lpha iS500/2000HV | 0296 | 346 | В | V | А | А | | |
| α <i>i</i> S1000/2000HV | 0298 | 348 | В | V | А | А | | |
| α <i>i</i> S 2000/2000HV ^(Note 1) | 0091 | 340 | - | - | - | В | | |

The mark "-" indicates that automatic loading of standard parameters is not supported as of December, 2005.

| NOTE |
|---|
| 1 The model needs manual setting. (See Subsection |
| 2.1.7, "Setting Parameters when the PWM |
| Distribution Module is used".) |
| When using the torque control function, contact |
| FANUC. |

| - arr(nv) series serve motor (for 400-v arrving) | | | | | | | |
|--|------------------------|--------------|--------------|------|--------------|------|--|
| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | |
| α <i>i</i> F4/4000HV | 0225 | 275 | А | Q | А | А | |
| α <i>i</i> F8/3000HV | 0229 | 279 | А | Q | А | А | |
| α <i>i</i> F12/3000HV | 0245 | 295 | А | Q | А | А | |
| α <i>i</i> F22/3000HV | 0249 | 299 | А | Q | А | А | |

aiF(HV) series servo motor (for 400-V driving)

α*Ci* series servo motor

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 |
|--------------------|------------------------|--------------|--------------|------|--------------|------|
| αC4/3000 <i>i</i> | 0221 | 271 | А | Н | А | А |
| αC8/2000 <i>i</i> | 0226 | 276 | А | Н | А | А |
| αC12/2000 <i>i</i> | 0241 | 291 | А | Н | А | А |
| αC22/2000 <i>i</i> | 0246 | 296 | А | Н | А | А |
| αC30/1500 <i>i</i> | 0251 | 301 | А | Н | А | А |

β*i*S series servo motor Motor Amplifier Motor ID 90D0 90B5 Motor model 90B0 90B1 90B6 specification driving 90E0 No. 4A А А β*i*S0.2/5000 260 А 0111 Ν β*i*S0.3/5000 4A А А А 0112 261 Ν β*i*S0.4/5000 20A А А A 0114 280 Ν 20A G В В β*i*S0.5/6000 0115 281 β*i*S1/6000 20A G В В 0116 282 _ 20A 253 В V А A β*i*S2/4000 0061 40A 254 В V А А 20A 256 В V А А β*i*S4/4000 0063 40A 257 В V А А 20A V 258 В А А β*i*S8/3000 0075 V 40A 259 В А А 0077^(Note 1) β*i*S12/2000 20A D 269 _ -_ β*i*S12/3000 40A 272 В V А А 0078 40A βiS22/2000 В V А А 0085 274

NOTE

1 For a motor specification suffixed with "-Bxx6", be sure to use parameters dedicated to FS0*i*.

4.SERVO FUNCTION DETAILS B-65270EN/06

| = proserve meter (for 400-7 driving) | | | | | | | |
|--------------------------------------|------------------------|----------------------|-----------------|--------------|------|--------------|------|
| Motor model | Motor specification | Amplifier driving | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 |
| β <i>İ</i> S2/4000HV | 0062 | 10A | 251 | - | - | В | - |
| β <i>İ</i> S4/4000HV | 0064 | 10A | 264 | - | - | В | - |
| β <i>İ</i> S8/3000HV | 0076 | 10A | 267 | - | - | В | - |
| β <i>İ</i> S12/3000HV | 0079 | 20A | 270 | - | - | В | - |
| β <i>İ</i> S22/2000HV | 0086 | 20A | 278 | - | - | В | - |

β*i*S series servo motor (for 400-V driving)

The mark "-" indicates that automatic loading of standard parameters is not supported as of December, 2005.

| | p p sei | ries servo i | motor (dedi | cated to I |
|---------------------|------------------------|----------------------|-----------------|------------|
| Motor model | Motor specification | Amplifier driving | Motor ID No. | 90B5 |
| β <i>İ</i> S2/4000 | 0061-Bxx6 | 20A | 306 | D |
| p <i>t</i> 32/4000 | 0001-0220 | 40A | 310 | D |
| 0101/1000 | 0063-Bxx6 | 20A | 311 | D |
| β i S4/4000 | 0003-8220 | 40A | 312 | D |
| β <i>İ</i> S8/3000 | 0075-Bxx6 | 20A | 283 | D |
| p130/3000 | 0075-БХХО | 40A | 294 | D |
| β <i>İ</i> S12/2000 | 0077-Bxx6 | 20A | 298 | D |
| β <i>i</i> S22/1500 | 0084 Dwg | 20A | 302 | D |
| p <i>t</i> 322/1500 | 0084-Bxx6 | 40A | 305 | D |

B*i*S series servo motor (dedicated to FS0*i*)

The motor models above can be driven only with Series 90B5.

Linear motor (for 200-V driving)

| | Motor | | 90D0 | | 90B5 | |
|----------------------|---------------|--------------|------|------|------|------|
| Motor model | specification | Motor ID No. | 90E0 | 90B0 | 90B6 | 90B1 |
| L <i>İ</i> S300A1/4 | 0441-B200 | 351 | G | - | В | В |
| L <i>i</i> S600A1/4 | 0442-B200 | 353 | G | - | В | В |
| L <i>i</i> S900A1/4 | 0443-B200 | 355 | G | - | В | В |
| L <i>i</i> S1500B1/4 | 0444-B210 | 357 | G | - | В | В |
| LiS3000B2/2 | 0445-B110 | 360 | G | - | В | В |
| L <i>i</i> S3000B2/4 | 0445-B210 | 362 | G | - | В | В |
| LiS4500B2/2 | 0446-B110 | 364 | G | - | В | В |
| L <i>i</i> S6000B2/2 | 0447-B110 | 368 | G | - | В | В |
| L <i>i</i> S6000B2/4 | 0447-B210 | 370 | G | - | В | В |
| L <i>i</i> S7500B2/2 | 0448-B110 | 372 | G | - | В | В |
| L <i>i</i> S7500B2/4 | 0448-B210 | 374 | G | | В | В |
| L <i>i</i> S9000B2/2 | 0449-B110 | 376 | G | - | В | В |
| L <i>i</i> S9000B2/4 | 0449-B210 | 378 | G | - | В | В |
| L <i>i</i> S3300C1/2 | 0451-B110 | 380 | G | - | В | В |
| LiS9000C2/2 | 0454-B110 | 384 | G | - | В | В |
| LiS11000C2/2 | 0455-B110 | 388 | G | - | В | В |
| LiS15000C2/2 | 0456-B110 | 392 | G | - | В | В |
| LiS15000C2/3 | 0456-B210 | 394 | G | - | В | В |

4.SERVO FUNCTION DETAILS

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 |
|-----------------------|------------------------|--------------|--------------|------|--------------|------|
| L <i>i</i> S10000C3/2 | 0457-B110 | 396 | G | - | В | В |
| L <i>i</i> S17000C3/2 | 0459-B110 | 400 | G | - | В | В |

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 |
|-------------------------|------------------------|--------------|--------------|------|--------------|------|
| L <i>İ</i> S1500B1/4 | 0444-B210 | 358 | G | - | В | В |
| L <i>i</i> S3000B2/2 | 0445-B110 | 361 | G | - | В | В |
| L <i>İ</i> S4500B2/2HV | 0446-B010 | 363 | G | - | В | В |
| L <i>i</i> S4500B2/2 | 0446-B110 | 365 | G | - | В | В |
| L <i>İ</i> S6000B2/2HV | 0447-B010 | 367 | G | - | В | В |
| L <i>İ</i> S6000B2/2 | 0447-B110 | 369 | G | - | В | В |
| L <i>i</i> S7500B2/2HV | 0448-B010 | 371 | G | - | В | В |
| L <i>İ</i> S7500B2/2 | 0448-B110 | 373 | G | - | В | В |
| L <i>i</i> S9000B2/2 | 0449-B110 | 377 | G | - | В | В |
| L <i>i</i> S3300C1/2 | 0451-B110 | 381 | G | - | В | В |
| L <i>İ</i> S9000C2/2 | 0454-B110 | 385 | G | | В | В |
| L <i>İ</i> S11000C2/2HV | 0455-B010 | 387 | G | - | В | В |
| L <i>i</i> S11000C2/2 | 0455-B110 | 389 | G | - | В | В |
| LiS15000C2/3HV | 0456-B010 | 391 | G | - | В | В |
| L <i>İ</i> S10000C3/2 | 0457-B110 | 397 | G | - | В | В |
| L <i>İ</i> S17000C3/2 | 0459-B110 | 401 | G | - | В | В |

Linear motor (for 400-V driving)

The mark "-" indicates that automatic loading of standard parameters is not supported as of December, 2005.

Synchronous built-in servo motor (for 200-V driving)

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|---------------------|------------------------|--------------|--------------|------|--------------|------|------|
| D <i>i</i> S85/400 | 0483-B20x | 423 | К | - | - | - | - |
| D <i>i</i> S110/300 | 0484-B10x | 425 | К | - | - | - | - |
| D <i>i</i> S260/600 | 0484-B31x | 429 | К | - | - | - | - |
| D <i>i</i> S370/300 | 0484-B40x | 431 | К | - | - | - | - |

Synchronous built-in servo motor (for 400-V driving)

| Motor model | Motor specification | Motor ID No. | 90D0 90E0 | 90B0 | 90B5 90B6 | 90B1 | 9096 |
|---------------------|------------------------|--------------|--------------|------|--------------|------|------|
| D <i>i</i> S85/400 | 0483-B20x | 424 | К | - | - | - | - |
| D <i>i</i> S110/300 | 0484-B10x | 426 | К | - | - | - | - |
| D <i>i</i> S260/600 | 0484-B31x | 430 | К | - | - | - | - |
| D <i>i</i> S370/300 | 0484-B40x | 432 | К | - | - | - | - |

4.2 HIGH-SPEED HRV CURRENT CONTROL

4.2.1 Servo HRV3 Control


(1) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(2) Setting parameters for servo HRV3 control

<1> See Subsection 4.1.1, and make settings for servo HRV2 control.

<2> Set servo HRV3 current control. (For each axis)

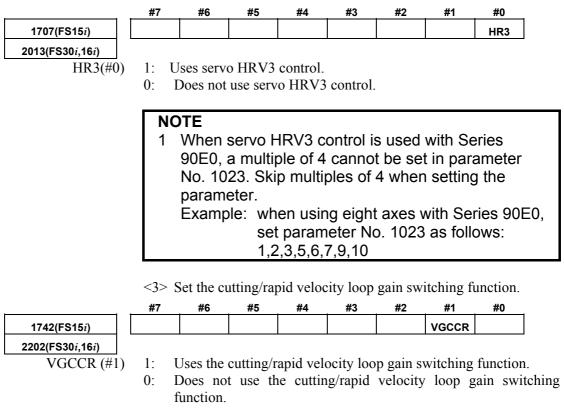

| | <4> Set the current loop gain magnification. | | | | |
|--|---|--|--|--|--|
| 2747(FS15 <i>i</i>) | Current loop gain magnification in high-speed HRV current control mode | | | | |
| 2334(FS30 <i>i</i> ,16 <i>i</i>) | | | | | |
| [Unit of data] | °⁄0 | | | | |
| [Valid data range] | 100 to 270 | | | | |
| [Recommended value] | | | | | |
| | This parameter is valid only for cutting feed in the high-speed HRV current control mode. | | | | |
| | | | | | |
| [] | <5> Set the velocity loop gain magnification. | | | | |
| 2748(FS15 <i>i</i>) | Velocity loop gain magnification in high-speed HRV current control mode | | | | |
| 2335(FS30 <i>i</i> ,16 <i>i</i>) | | | | | |
| [Unit of data] | % 100 - 100 | | | | |
| [Valid data range] | 100 to 400 | | | | |
| | This parameter is valid only for cutting feed in the high-speed HRV | | | | |
| | current control mode. | | | | |
| 1700(FS15 <i>i</i>) | Velocity loop gain magnification (cutting/rapid velocity loop gain switching) | | | | |
| 2107(FS30 <i>i</i> ,16 <i>i</i>) | | | | | |
| [Unit of data] | % | | | | |
| [Valid data range] | 100 to 400 | | | | |
| | This parameter is valid only for cutting feed when the high-speed | | | | |
| | HRV current control mode is not set. | | | | |
| | <6> Set the high-speed HRV current control mode. | | | | |
| | To use servo HRV3 control with servo software Series 90D0 and | | | | |
| | 90E0 for the Series $30i$, $31i$, and $32i$, set the following bit, which | | | | |
| | automatically sets the high-speed HRV current control mode | | | | |
| | | | | | |
| | during cutting feed: | | | | |
| | during cutting feed: #7 #6 #5 #4 #3 #2 #1 #0 | | | | |
| | | | | | |
| - 2283(FS30 <i>i</i> ,31 <i>i</i> ,32 <i>i</i>) | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 | | | | |
| - 2283(FS30 <i>i</i> ,31 <i>i</i> ,32 <i>i</i>) NOG54(#0) | #7 #6 #5 #4 #3 #2 #1 #0 | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 Image: Market state NOG54 NOG54 NOG54 NOG54 Image: Set only when both G5.4Q1 and G01 are specified. Set only when both G5.4Q1 and G01 are specified. Image: Set only when both G5.4Q1 and G01 are specified. Image: Set only when both G5.4Q1 and G01 are specified. | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE NOTE NOTE NOTE NOTE | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be Set when G0 is specified (Set Codes must be | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be programmed. (This is not required if NOG54 is set to 1. See | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be Set when G0 is specified (Set Codes must be | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be programmed. (This is not required if NOG54 is set to 1. See Subsection 4.2.3.) | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be programmed. (This is not required if NOG54 is set to 1. See Subsection 4.2.3.) NOTE | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 NOG54 NOG54 NOG54 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be programmed. (This is not required if NOG54 is set to 1. See Subsection 4.2.3.) NOTE NOTE The velocity loop gain is changed as listed below | | | | |
| | #7 #6 #5 #4 #3 #2 #1 #0 NOG54 The high-speed HRV current control mode (servo HRV3 control) is: 0: Set only when both G5.4Q1 and G01 are specified. 1: Set when G01 is specified (G5.4Q1 is not monitored). NOTE This function cannot be used during servo HRV4 control. <7> This completes parameter setting. To actually enter the high-speed HRV current control mode, G codes must be programmed. (This is not required if NOG54 is set to 1. See Subsection 4.2.3.) NOTE | | | | |

[Series30*i*,16*i*, and so on]

| | •] | |
|--|----------------|--|
| High-speed HRV current control mode | Feed | Velocity loop gain [%] |
| Set | Rapid traverse | (1 + No. 2021 / 256) × 100 |
| (G5.4Q1 - G5.4Q0) | Cutting feed | (1 + No. 2021 / 256) × No. 2335 (High-speed HRV current control: Velocity loop gain magnification) |
| | Rapid traverse | (1 + No. 2021 / 256) × 100 |
| Not set | Cutting feed | (1 + No. 2021 / 256) × No. 2107 (Cutting/rapid switching: Velocity loop gain magnification) |

[Series15*i*]


| High-speed HRV current control mode | Feed | Velocity loop gain [%] |
|--|----------------|--|
| Set | Rapid traverse | (1 + No. 1875 / 256) × 100 |
| (G5.4Q1 - G5.4Q0) | Cutting feed | (1 + No. 1875 / 256) × No. 2748 (High-speed HRV current control: Velocity loop gain magnification) |
| | Rapid traverse | (1 + No. 1875 / 256) × 100 |
| Not set | Cutting feed | $(1+No1875 / 256) \times No. 1700$ (Cutting/rapid switching: Velocity loop gain magnification) |


(3) Limitation on servo HRV3 control

(a) Servo motor output torque

(Series 90B0, 90B1, 90B6, 90B5)

During cutting operation in high-speed HRV current control, the torque command is automatically limited to 70% of the maximum current value of the servo amplifier. As a result, the torque command is easily saturated. Therefore, when determining the time constant in cutting feed, consider the cutting load and the above limitation. Normally, the high-speed HRV current control mode is used for light cutting for finish machining, so the limitation of the torque command to 70% of the maximum current value of the servo amplifier is not regarded as critical.

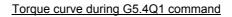

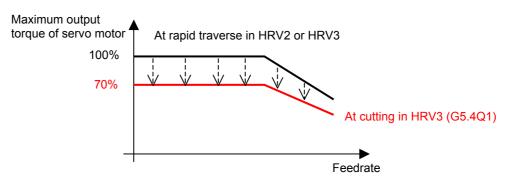

(Series 90D0, 90E0)

The servo amplifiers supporting the Series 30*i* and so on have advanced thermal resistance. So, unlike Series 90B0, 90B1, 90B6, and 90B5, there is no torque command limitation.

(4) Servo HRV3 control hardware

(a) Separate detector

(Series 90B0, 90B1, 90B6, 90B5)

When a separate detector is used for servo HRV3 control, the following separate detector interface unit supporting servo HRV3 control must be specified:

| Separate detector interface unit for servo HRV3 control | Specification drawing number |
|--|------------------------------|
| Basic 4 axes | A02B-0236-C205 |

(Series 90D0, 90E0)

When a separate detector is used with the Series 30i and so on, the following separate detector interface unit supporting the Series 30i and so on must be specified:

| Separate detector interface unit for Series 30 <i>i</i> and other CNC | Specification drawing number |
|---|------------------------------|
| Basic 4 axes | A02B-0303-C205 |

(b) Servo axis control cards

(Series 90B0, 90B1, 90B6, 90B5)


Servo axis control cards are divided into two groups: type A and type B.

Type A card: One optical connector is provided. (The maximum number of axes is 8.)

Type B card: Two optical connectors are provided. (The maximum number of axes is 8.)



Type A has one optical connector.

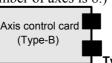


J Type B has two optical connectors.


When servo HRV3 control is used, up to four servo amplifier axes can be connected to one optical connector, and only one separate detector interface unit can be connected to one optical connector. When five or more servo amplifier axes or two separate detector interface units are to be connected, a type B card is required.

NOTE

When four servo amplifier axes and one separate interface unit are connected to one optical connector, the separate interface unit must be connected in the fifth position.

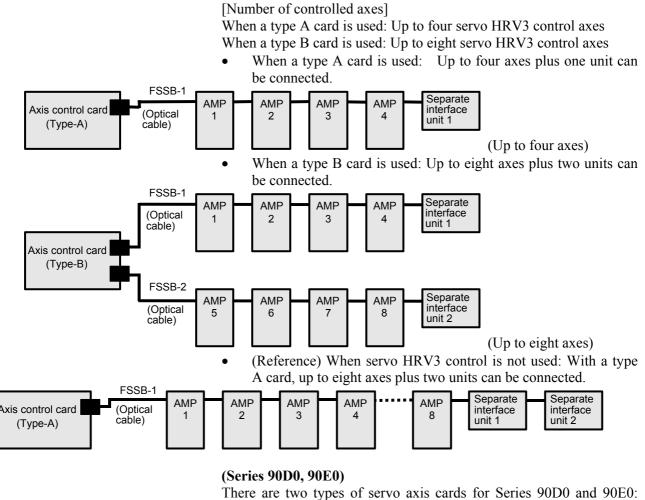

type A and type B. There is a restriction on axes as follows:

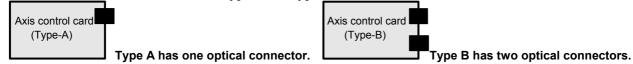


• Number of units that can be connected to one FSSB optical connector

| Servo HRV3 control is: | Amplifier | Separate detector interface unit |
|-------------------------|-----------|-------------------------------------|
| Used. ^(Note) | 10 axes | 2 units |
| Note used. | 16 axes | 2 units |

Numbers of units that can be connected to the servo cards

| Servo card | Series 90E0 servo HRV2 control | Series 90E0 servo HRV3 control | Series 90D0 servo HRV2, 3 control | Separate detector interface unit |
|---|--------------------------------------|--------------------------------------|---|--|
| Servo card B13 A02B-0303-H084 (Type-A card) | Amplifier 12 axes | Amplifier 9 axes | Amplifier 6 axes | 2 units |
| Servo card B26 A02B-0303-H085 (Type-B card) | Amplifier 24 axes | Amplifier 18 axes | Amplifier 12 axes | 4 units |

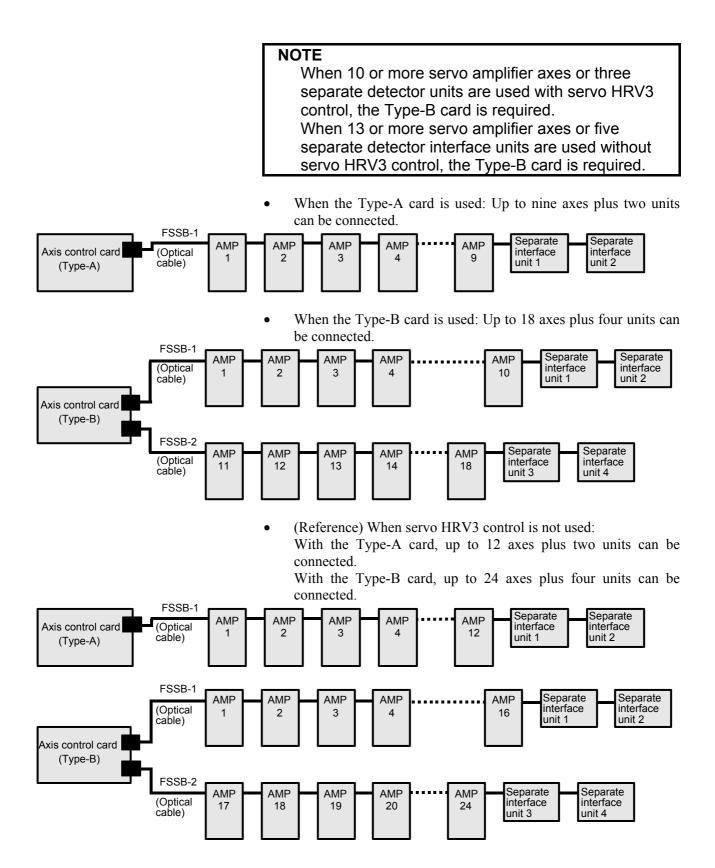

4.2.2 Servo HRV4 Control

(1) Series and editions of applicable servo software

(Series 30*i*, 31*i*) Series 90D0/J(10) and subsequent editions

(2) Setting parameters for servo HRV4 control

<1> See Subsection 4.1.1, and make settings for servo HRV2 control.

<2> Set servo HRV4 control. (For each axis)

| | #7 | Set servo #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|------------------------|--|--|--|---|--|---|---|
| | | | | | | | <i>"</i> . | HR4 |
| 2014(FS30 <i>i</i> , 31 <i>i</i>) HR4(#0) | | Uses serv Does not | | | | | | |
| | NC 1 2 3 4 | set by or serv parame HRV3 control time. (I indicati When s 90D0, No. 10 Examp If serve perform high-sp In serv is contri tanden synchr involvir | the G5 o HRV eter, is control enable f these ing inva servo F multiple 23. Sef valu 23. Sef valu 102 0 HRV ned du peed H o HRV rolled v n vibrat onization ng two | .4Q1 c 4 contr enable e bit ca bits ar alid cur IRV4 c es of 2 values en five es 1,3, 3. Contro ring rap RV cur 4 contro vith one ion-dan on cont or more | omman ol, whic d. Ther bit and not be rent con ontrol is cannot s with m axes ar 5,7,9 at bid trave rent con ol using e CPU. mping c | d, serv chever refore, d the set s set to set to 1 ntrol set be set be set nultiples re used re set i , servo erse or ntrol is g Series So, fur control d torque | o HRV set in a both the ervo HF 1 at the 1, an ala etting is with Se in para s of 2 s with 90 n parar HRV3 when disable s 90D0 nctions during e tande | e servo RV4 e same arm issued.) eries ameter kipped. DD0, neter No. control is ed. , one axis (such as m control) |
| | <3> | Enable th | e extend | led HRV | function | n. (For e | ach axis) |) |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| | | 1 | | | | | | |

2300(FS30*i*, 31*i*) HRVEN(#0)

> Uses the extended HRV function. 1:

Does not use the extended HRV function. 0:

| | <4> \$ | Set the cu | utting/raj | pid veloc | ity loop | gain sw | itching fu | nction. | |
|---|---|------------|------------|----------------------|----------------------|-------------|------------------------|-----------|-------|
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| - | | | | | | | VGCCR | | |
| 2202(FS30 <i>i</i> , 31 <i>i</i>) VGCCR (#1) | 0: I | | • | • | | • | vitching f / loop g | | |
| | <5> § | Set the cu | urrent lo | op gain r | nagnific | ation. | | | |
| _ | | | | | - | | rent contro | l mode | |
| 2334(FS30 <i>i</i> , 31 <i>i</i>) [Unit of data] [Valid data range] [Recommended value] | % 100 to 150 | | <u> </u> | | <u></u> | | | | |
| | This j currer | nt contro | l mode. | | | - | n the hig | h-speed | HRV |
| | <6> Set the velocity loop gain magnification. | | | | | | | | |
| - | Velocity loop gain magnification in high-speed HRV current control mode | | | | | | | | |
| 2335(FS30 <i>i</i> , 31 <i>i</i>) [Unit of data] [Valid data range] | | paramete | | id only | | ing feed | l when th | ne high- | speed |
| - | Velocity | loop gain | magnifica | ation (cutti | ng/rapid v | velocity lo | oop gain sw | vitching) | |
| 2107(FS30 <i>i</i> , 31 <i>i</i>) [Unit of data] [Valid data range] | | paramete | | id only node is n | | ing feed | l when th | ne high- | speed |
| | ł | nigh-spee | ed HRV | - | t contro | ol mod | o actuall e, G co | - | |
| | NC | accord | ing to v | | ⁻ the hig | | as listec ed HRV | | |

<4> Set the cutting/rapid velocity loop gain switching function.


[Series 30*i* and so on]


| High-speed HRV current control mode | Feed | Velocity loop gain [%] |
|--|----------------|--|
| Set | Rapid traverse | (1 + No. 2021 / 256) × 100 |
| (G5.4Q1 - G5.4Q0) | Cutting feed | (1 + No. 2021 / 256) × No. 2335 (High-speed HRV current control: Velocity loop gain magnification) |
| Not set | Rapid traverse | (1 + No. 2021 / 256) × 100 |
| | Cutting feed | (1 + No. 2021 / 256) × No. 2107 (Cutting/rapid switching: Velocity loop gain magnification) |

(3) Limitation on servo HRV4 control

(a) Servo motor output torque

During cutting operation in high-speed HRV current control, the torque command is automatically limited to 70% of the maximum current value of the servo amplifier. As a result, the torque command is easily saturated. Therefore, when determining the time constant in cutting feed, consider the cutting load and the above limitation. Normally, the high-speed HRV current control mode is used for light cutting for finish machining, so the limitation of the torque command to 70% of the maximum current value of the servo amplifier is not regarded as critical.

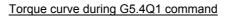

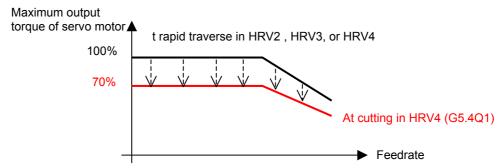

(4) Servo HRV4 control hardware

(a) Separate detector

When a separate detector is used with the Series 30i and so on, the following separate detector interface unit supporting the Series 30i and so on must be specified:

| Separate detector interface unit for Series 30 <i>i</i> and other CNC | Specification drawing number | |
|---|------------------------------|--|
| Basic 4 axes | A02B-0303-C205 | |

(b) Servo amplifiers

A servo amplifier supporting servo HRV4 control must be specified.

(c) Servo axis control cards

There are two types of servo axis cards for Series 90D0 and 90E0: Type-A and Type-B. There is a restriction on axes as follows:

| Axis control card | |
|-------------------|-----------------------------------|
| (Type-A) | |
| | Type A has one optical connector. |

| Axis control card (Type-B) | |
|-------------------------------|-----|
| | Tvr |

ype B has two optical connectors.

• Number of units that can be connected to one FSSB optical connector


| Servo HRV4 control is: | Amplifier | Separate detector interface unit | |
|------------------------|-----------|----------------------------------|--|
| Used. (Note 1) | 4 | 1 | |
| Not used. | (Note 2) | | |

| Servo card | Series 90D0 servo HRV4 control | Separate detector interface unit |
|---|-----------------------------------|-------------------------------------|
| Servo card B13 A02B-0303-H084 (Type-A card) | Amplifier 3 axes | 1 unit |
| Servo card B26 A02B-0303-H085 (Type-B card) | Amplifier 6 axes | 2 units |


Numbers of units that can be connected to the servo cards

NOTE

- 1 When four or more servo amplifier axes or two separate detector units are used with servo HRV4 control, the Type-B card is required.
- 2 See the description of the servo axis control cards for servo HRV3 control.
- When the Type-A card is used: Up to three axes plus one unit can be connected.

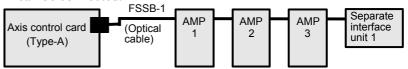

• When the Type-B card is used: Up to six axes plus two units can be connected.

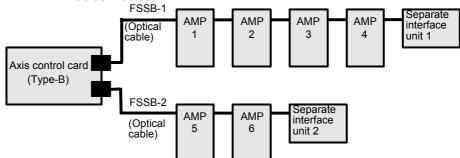

(d) Detector

To use servo HRV4 control, a detector supporting high-speed communication needs to be used for motor feedback (as a detector on the semi-closed loop side).

The table below indicates examples of detectors that support high-speed communication.

If a setting is made to enable HRV4 when a detector not supporting high-speed communication is connected, "SV0456 INVALID CURRENT CONTROL PERIOD SETTING ALARM" is issued.

| | le configuration of a detector disable with myve |
|---------------------|--|
| Manufacture | Configuration or model |
| FANUC | α <i>i</i> Pulse coder |
| FANUC | α <i>İ</i> CZ sensor (512S, 768S, 1024S) |
| FANUC | Combination of high-resolution serial output circuit H with an incremental scale supplied by a vendor other than FANUC |
| FANUC | Combination of high-resolution serial output circuit C with an incremental scale supplied by a vendor other than FANUC |
| HEIDENHAIN | RCN727 |
| MITSUTOYO Co., Ltd. | AT553 |


Table 4.2.2 (a) Sample configuration of a detector usable with HRV4

* The table above indicates the configurations and models whose support for high-speed communication is confirmed as of December, 2005. For details, contact the detector manufacturers.


4.2.3 High-speed HRV Current Control

(1) Starting the high-speed HRV current control mode

The high-speed HRV current control mode is turned on and off by using a G code (G5.4). The high-speed HRV current control mode is set for cutting commands specified between G5.4Q1 and G5.4Q0.

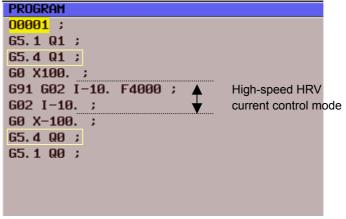

(2) Checking the high-speed HRV current control mode

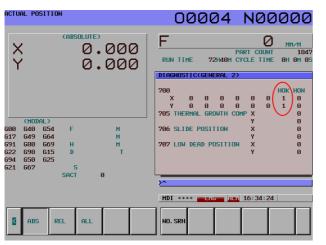

ACTUAL POSITION 00004 N00000 (ABSOLUTE) F 0 MM/M 1847 X 0.000 PART COUNT 72H40M CYCLE TIME RUN TIME OH OM 0.000 DIAGNOSTICCGENERA 1 1 640 649 680 698 650 667 706 SLIDE POSITION 654 664 669 615 625 600 617 691 622 694 621 Μ M M 707 LOW DEAD POSITION H D SAC Й MDI **** ---EMG--- ALM 16:35:05 REL ALL OPRT ABS PMC

Diagnosis No. 700 is used for checking the status of the high-speed HRV current control mode in servo HRV3 control and servo HRV4 control. After setting servo HRV3 or HRV4 control and turning the power off then back on, check that bit 1 (HOK) of diagnosis No. 700 is set. When servo HRV3 or HRV4 control can be used, HOK is set to 1.

When HOK is set to 1, specifying G5.4Q1 sets bit 0 (HON) of diagnosis DGN700 to 1 during the cutting feed command. If NOG54 is set to 1, bit 0 is set to 1 during the cutting feed command even if G5.4Q1 is not specified.

When HON is set to 1, a high-speed current control cycle is set, and the current gain magnification for high-speed HRV current control is applied.

4.3 CUTTING/RAPID SWITCHING FUNCTION

(1) Overview

Increasing the gains of the position loop and velocity loop is effective in the improvement of cutting profiles. However, the maximum feedrate and the acceleration of acc./dec. in rapid traverse are generally higher than those in cutting feed. So, vibration in the velocity loop or hunting in the position loop may occur in rapid traverse even when stable cutting feed can be performed with the same settings. To prevent this problem, the functions below are provided with a function for switching between parameters for cutting feed and parameters for rapid traverse.


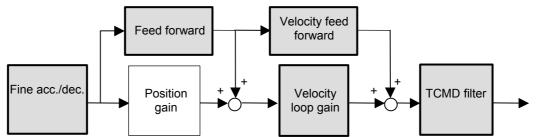


Fig. 4.3 Parameters that can be switched between parameters for cutting feed and for rapid traverse

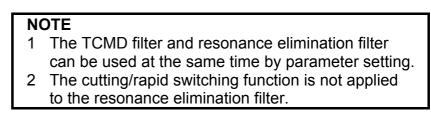

(2) Setting procedure

(a) Switching of the velocity loop gain and fine acc./dec.

[Series and editions of applicable servo software]

(Series 30*i*,31*i*,32*i*)

Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)

Series 9096/A(01) and subsequent editions

Series 90B0/A(01) and subsequent editions

Series 90B1/A(01) and subsequent editions

Series 90B6/A(01) and subsequent editions

(Series 0*i*-C,0*i* Mate-C,20*i*-B)


Series 90B5/A(01) and subsequent editions

<1> Cutting/rapid velocity loop gain switching function

When TCMD is saturated during acceleration in rapid traverse, oscillation is easily generated in the velocity loop at the end of acceleration in rapid traverse. In some machines, as the feedrate becomes higher, high-frequency oscillation easily occurs. In such cases, switching between the gain for cutting feed and the gain for rapid traverse is effective.

If the cutting/rapid velocity loop gain switching is set, the conventional velocity gain is used in rapid traverse, and the overridden value is used during cutting feed. The override value is usually set to about 150% to 200%. When vibration occurs only in the stopped state, use the variable proportional gain function in the stop state. (With Series 90D0, 90E0, 90B0, 90B1, 90B6, and 90B5, the variable proportional gain function in the stop state and the velocity loop high cycle management function can be used together.)

When servo HRV3 control or HRV4 control is used, a separate override value can be specified during high-speed HRV current control. See Section 4.2, "HIGH-SPEED HRV CURRENT CONTROL".

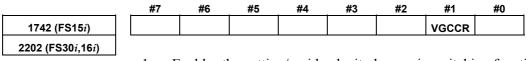

Enables the cutting/rapid velocity loop gain switching function.
 Disables the cutting/rapid velocity loop gain switching function.

| 1700 (FS15 <i>i</i>) | Override value at cutting (%) | |
|------------------------------------|-------------------------------|--|
| 2107 (FS30 <i>i</i> ,16 <i>i</i>) | | |
| [Valid data range] | 50 to 400 | |

[Series30*i*, 16*i*, and so on]


| Cutting/rapid velocity loop gain switching function | | Velocity loop gain [%] |
|--|--------------------------------|--|
| No. 2202#1=0 (disabled) | Always | (1 + No. 2021 / 256) × 100 |
| No. 2202#1=1 (enabled) | Rapid traverse Cutting feed | (1 + No. 2021 / 256) × 100 (1 + No. 2021 / 256) × No. 2107 |

[Series15i]

| Cutting/rapid velocity loop gain switching function | | Velocity loop gain [%] |
|--|----------------|--|
| No. 1742#1=0 (disabled) | Always | (1 + No. 1875 / 256) × 100 |
| No. 1712#1-1 (apphied) | Rapid traverse | (1 + No. 1875 / 256) × 100 |
| No. 1742#1=1 (enabled) | Cutting feed | (1 + No. 1875 / 256) × No. 1700 |

<2> Cutting/rapid fine acc./dec. switching function (including feed-forward switching)

Although the optimum time constant of fine acc./dec. during cutting is about 16 ms, the time constant in rapid traverse should sometimes be set to 32 to 40 ms to reduce the impact applied at the time of acc./dec. The feed-forward coefficient that minimizes cutting profile error and the feed-forward coefficient that minimizes the time for high-speed positioning in rapid traverse are not always the same. In such cases, use the cutting/rapid fine acc./dec. switching function.

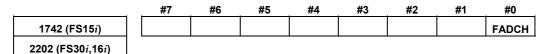

1: Enables the cutting/rapid fine acc./dec. switching function.

0: Disables the cutting/rapid fine acc./dec. switching function.

[Series30*i*, 16*i*, and so on]

| Cutting/rapid fine acc./dec. switching function | | FAD time constant | Position FF | Velocity FF |
|--|----------------|-------------------|-------------|-------------|
| No. 2202#0=0 (disabled) | Always | No. 2109 | No. 2092 | No. 2069 |
| | Rapid traverse | | | |
| No. 2202#0=1 (enabled) | Cutting feed | No. 2143 | No. 2144 | No. 2145 |

[Series15*i*]

| Cutting/rapid fine acc./dec. switching function | | FAD time constant | Position FF | Velocity FF | |
|--|----------------|----------------------|-------------|-------------|--|
| No. 1742#0=0 (disabled) | Always | No. 1702 | No. 1985 | No. 1962 | |
| No. 1712#0-1 (cooblod) | Rapid traverse | | | | |
| No. 1742#0=1 (enabled) | Cutting feed | No. 1766 | No. 1767 | No. 1768 | |

(b) Feed-forward, TCMD filter, 1/2 PI current control switching

[Series and editions of applicable servo software]

(Series 30*i*,31*i*,32*i*)

Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*) Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B)

Series 90B5/A(01) and subsequent editions

<1> Cutting/rapid feed-forward switching function

The position feed-forward coefficient and the velocity feed-forward coefficient can also be changed without using fine acc./dec. To do this, use the cutting/rapid feed-forward switching function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|----|-----------|-----------|-----------|----------|----------|-----------|----------|
| 2602 (FS15 <i>i</i>) | | | | FFCHG | | | | |
| 2214 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| | 1: | Enables t | he cuttir | g/rapid f | eed-forv | vard swi | tching fu | unction. |

Enables the cutting/rapid feed-forward switching function.

0. Disables the cutting/rapid feed-forward switching function.

[Series30*i*, 16*i*, and so on]

| Cutting/rapid feed-forward switching function | | Position FF | Velocity FF | |
|---|----------------|-------------|-------------|--|
| No. 2214#4=0 (disabled) | Always | No. 2092 | No. 2069 | |
| No. $2214#4 = 1$ (anabled) | Rapid traverse | | | |
| No. 2214#4=1 (enabled) | Cutting feed | No. 2144 | No. 2145 | |


[Series15*i*]

| Cutting/rapid feed-forward switching function | | Position FF | Velocity FF |
|---|----------------|-------------|-------------|
| No. 2602#4=0 (disabled) | Always | No. 1985 | No. 1962 |
| | Rapid traverse | | |
| No. 2602#4=1 (enabled) | Cutting feed | No. 1767 | No. 1768 |

<2> TCMD filter switching

When high frequency vibration occurs only in rapid traverse, use of the TCMD filter, rather than the resonance elimination filter, is sometimes effective. On the other hand, in cutting feed, inserting an unnecessary TCMD filter lowers the vibration limit of the velocity loop gain because of the delay in the filter. In such a case, using the TCMD filter only for rapid traverse is effective.

4.SERVO FUNCTION DETAILS

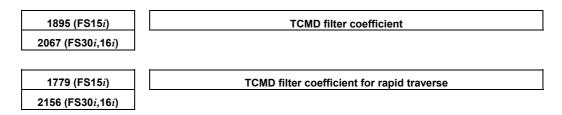

[Series30*i*. 16*i*. and so on]

| Cutting/rapid feed-forward switching function | | TCMD filter |
|---|----------------|-------------|
| No. 2156=0 (disabled) | Always | No. 2067 |
| No. 2156≠0 (enabled) | Rapid traverse | No. 2156 |
| No. 2150≠0 (enabled) | Cutting feed | No. 2067 |

[Series15i]

| Cutting/rapid feed-forward switching function | | TCMD filter |
|--|----------------|-------------|
| No. 1779=0 (disabled) | Always | No. 1895 |
| No. 1779≠0 (enabled) | Rapid traverse | No. 1779 |
| No. 177970 (enabled) | Cutting feed | No. 1895 |

<3> Switching of the current loop 1/2 PI control function in cutting feed and rapid traverse

When the cutting/rapid velocity loop gain switching function is enabled, the current loop 1/2 PI control function is turned off at the time of rapid traverse. Only when current loop 1/2 PI control must be used also for rapid traverse while the cutting/rapid velocity gain switching function is enabled, set the bit for always enabling the current loop 1/2 PI control function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|--|----|----|----|----|------|----|----|
| 1743 (FS15 <i>i</i>) | | | | | | CRPI | | |
| 2203 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| | 1: Enables the current loop 1/2 PI control function. | | | | | | | |


- Enables the current loop 1/2 PI control function.
- 0: Disables the current loop 1/2 PI control function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|----|----|----|----|----|----|-------|----|
| 1742 (FS15 <i>i</i>) | | | | | | | VGCCR | |
| 2202 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |

- Enables the current loop 1/2 PI control function for cutting only. 1:
- Enables the current loop 1/2 PI control function for both cutting 0: and rapid traverse.

NOTE

This function bit has double meanings. One is above and another is the cutting/rapid velocity loop gain switching function.

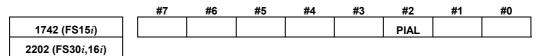

1: Always enables the current loop 1/2 PI control function.

[Series30*i*, 16*i*, and so on]

| No. 2203#2=1 | No. 2202#1 | No. 2202#2 |
|--|------------|------------|
| Always anables the surrent lean 1/2 DL control function | 0 | 0 |
| Always enables the current loop 1/2 PI control function. | 1 | 1 |
| Enables the current loop 1/2 PI control function for cutting only. | 1 | 0 |

[Series15*i*]

| No. 1743#2=1 | No. 1742#1 | No. 1742#2 |
|--|------------|------------|
| Always enables the current loop 1/2 PI control function. | 0 | 0 |
| Always enables the current loop 1/2 PT control function. | 1 | 1 |
| Enables the current loop 1/2 PI control function for cutting only. | 1 | 0 |

NOTE

To disable the current loop 1/2 PI control function, set bit 2 of parameter No. 1743 to 0 (Series 15*i*) or bit 2 of parameter No. 2203 to 0 (Series 30*i*, 16*i*, etc.).

4.4 VIBRATION SUPPRESSION IN THE STOP STATE

4.4.1 Velocity Loop High Cycle Management Function

(1) Overview


This function improves the velocity loop gain oscillation threshold. This is done by performing velocity loop proportional calculation at high speed, which determines the velocity loop oscillation threshold. The use of this function enables the following:

- Improvement of the command follow-up characteristic of a velocity loop
- Improvement of the servo rigidity

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions

(3) Setting parameters

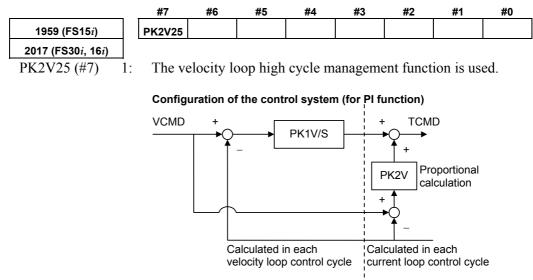

(4) Performance comparison with the acceleration feedback function

| | Acceleration feedback function | Velocity loop high cycle management function |
|-------------------|--|---|
| Control method | Acceleration feedback is performed at high speed. | Only a velocity loop proportional calculation is made at high speed. |
| Adjustment method | Set a value of –10 to –20. | Set the function bit. |
| Effect | This function may prove more effective than the velocity loop high cycle management function, depending on the machine system resonance frequency and intensity. | In general, this function is more effective than the acceleration feedback function in improving the velocity loop gain. |

(5) Caution and notes on use

Depending on the resonance frequency and resonance strength of the machine system, the use of this function may result in machine resonance.

If this occurs, do not use this function.

NOTE

- 1 When this function is used, the observer function is disabled. To remove high-frequency oscillations, use the torque command filter.
- 2 The normalization of the machine speed feedback function is disabled. If hunting cannot be eliminated by increasing the velocity loop gain, use the vibration damping control function, which provides a capability similar to the machine speed feedback function.
- 3 In (torque command) tandem control, velocity loop high cycle management function cannot be used with Series 9096. To use velocity loop high cycle management function with Series 9096, velocity command tandem control must be enabled before the high cycle management function is enabled.
- 4 When this function is used, some functions are restricted as follows:

| Unavailable function | Function with restricted usage |
|---|--|
| Velocity loop gain override | Machine speed feedback; normalization not performed |
| Variable proportional gain function in the stop state (*) | Observer used for unexpected disturbance torque detection |
| Non-linear control | |
| Notch filter | |
| Acceleration feedback | |
| N pulses suppression function | |
| the variable proportional gain | n cannot be used together wit function in the stop state. n can be used together. (See |

Subsec. 4.4.3.)


4.4.2 Acceleration Feedback Function

(1) Overview

The acceleration feedback function is used to control velocity loop oscillation by using motor speed feedback signal multiplied by the acceleration feedback gain to compensate the torque command. This function can stabilize unstable servo :

- When motor and machine have a spring coupling.
- When the external inertia is great compared to the motor inertia. This is effective when vibration is about 50 to 150 Hz.

Fig 4.4.2 is a velocity loop block diagram that includes acceleration feedback function.

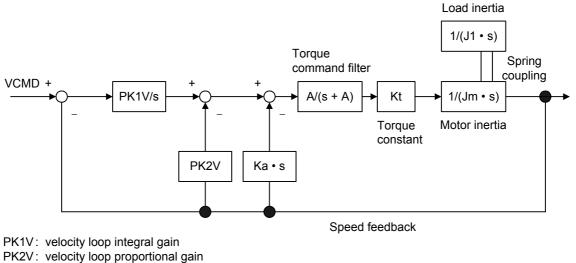

Ka : acceleration feedback gain

Fig. 4.4.2 Velocity loop block diagram that includes acceleration feedback function

(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

Specifying the following parameters as a negative value enables the acceleration feedback function.

| 1894 (FS15 <i>i</i>) | Acceleration feedback gain | |
|-------------------------------------|----------------------------|--|
| 2066 (FS30 <i>i</i> , 16 <i>i</i>) | | |
| [Valid data range] | -10 to -20 | |

(4) Caution and note

If the acceleration feedback gain is too large, abnormal sound or vibration can occur during acc./dec.

To solve this problem, reduce the gain.

NOTE

This function is disabled when the velocity loop high cycle management function (see Subsec. 4.4.1) is used.

4.4.3 Variable Proportional Gain Function in the Stop State


(1) Overview

The velocity gain or load inertia ratio is generally increased if a large load inertia is applied to a motor, or to improve the response. An excessively large velocity gain may cause the motor to generate a high-frequency vibration when it stops. This vibration is caused by excessive proportional gain of the velocity loop (PK2V) when the motor is released within the backlash of the machine in the stop state. This function decreases the velocity loop proportional gain (PK2V) in the stop state only. The function can suppress the vibration in the stop state and also enables the setting of a high velocity gain.


(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent edition
Series 90E0/A(01) and subsequent edition
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent edition
Series 90B0/A(01) and subsequent edition
Series 90B1/A(01) and subsequent edition
Series 90B6/A(01) and subsequent edition
Series 90B6/A(01) and subsequent edition
Series 90B6/A(01) and subsequent edition
Series 90B6/A(01) and subsequent edition

(3) Setting parameters

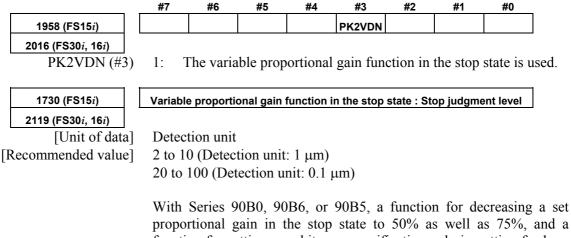

function for setting an arbitrary magnification only in cutting feed are available. When decreasing the velocity loop proportional gain in the stop state to 50%, set the following bit parameter in addition to the function bit for the function for changing the proportional gain in the stop state and the parameter for stop determination level.

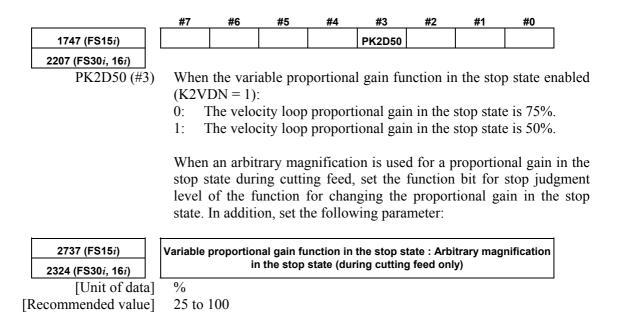

(4) Example of parameter setting

(a) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is not used, and

Bit 3 of No. 1958 (Series 15i) or bit 3 of No. 2016 (Series 30i, 16i, and so on) = 1

Actual velocity gain in the stop state=(velocity gain setting)×0.75 (b) When the cutting feed/rapid traverse switchable velocity loop

gain function (Sec. 4.3) is not used, Bit 3 of No. 1958 (Series 15*i*) or bit 3 of No. 2016 (Series 30*i*, 16*i*, and so on) = 1, and Bit 3 of No. 1747 (Series 15*i*) or bit 3 of No. 2207 (Series 30*i*, 16*i*, and so on) = 1

Actual velocity gain in the stop state=(velocity gain setting)×0.5


(c) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is not used,
Bit 3 of No. 1958 (Series 15*i*) or bit 3 of No. 2016 (Series 30*i*,


16i, and so on) = 1, and

No. 2373 (Series 15*i*) or No. 2324 (Series 30*i*,16*i*, and so on) = α Actual velocity gain in the stop state=(velocity gain setting)× α /100

When the absolute value of an error is lower than the stop judgment level, the function changes the proportional gain of the velocity loop (PK2V) to 75% or 50% of the set value.

If the machine vibrates while in the stop state, enable this function and set a value greater than the absolute value of the error causing the vibration as the stop judgment level. The function cannot stop the vibration of a machine in the stop state when the current velocity loop proportional gain is too high. If this occurs, reduce the velocity loop proportional gain.

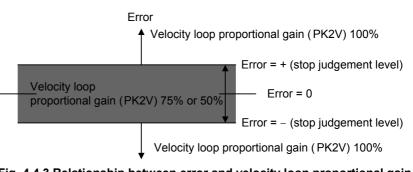

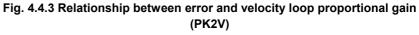

NOTE

This function is disabled when the velocity loop high cycle management function (Subsec. 4.4.1) is used with Series 9096.

[Tip] Example of setting an arbitrary magnification in the stop state

(a) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is used, and Bit 3 of No. 1958 (Series 15*i*) or bit 3 of No. 2016 (Series 30*i*,

16i, and so on) = 1

- If the mode in the stop state is the cutting mode: Actual velocity gain in the stop state = (velocity gain setting for cutting) × 0.75
- If the mode in the stop state is the rapid traverse mode: Actual velocity gain in the stop state = (velocity gain setting for rapid traverse) $\times 0.75$
- (b) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is used,

Bit 3 of No. 1958 (Series 15i) or bit 3 of No. 2016 (Series 30i, 16i, and so on) = 1, and

Bit 3 of No. 1747 (Series 15i) or bit 3 of No. 2207 (Series 30i, 16i, and so on) = 1

- If the mode in the stop state is the cutting mode: Actual velocity gain in the stop state = (velocity gain setting for cutting) × 0.5
- If the mode in the stop state is the rapid traverse mode: Actual velocity gain in the stop state = (velocity gain setting for rapid traverse) × 0.5
- (c) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is used,
 Bit 3 of No. 1958 (Series 15*i*) or bit 3 of No. 2016 (Series 30*i*, 16*i*, and so on) = 1, and

No. 2373 (Series 15*i*) or No. 2324 (Series 30i, 16i, and so on) = α

- If the mode in the stop state is the cutting mode: Actual velocity gain in the stop state = (velocity gain setting for cutting) $\times \alpha/100$
- If the mode in the stop state is the rapid traverse mode: Actual velocity gain in the stop state = (velocity gain setting for rapid traverse) × 0.75

(d) When the cutting feed/rapid traverse switchable velocity loop gain function (Sec. 4.3) is used,
 Pit 2 of No. 1058 (Series 15i) or hit 2 of No. 2016 (Series 20i)

Bit 3 of No. 1958 (Series 15i) or bit 3 of No. 2016 (Series 30i, 16i, and so on) = 1,

Bit 3 of No. 1747 (Series 15i) or bit 3 of No. 2207 (Series 30i, 16i, and so on) = 1, and

- No. 2373 (Series 15*i*) or No. 2324 (Series 30i, 16i, and so on) = α
- If the mode in the stop state is the cutting mode: Actual velocity gain in the stop state = (velocity gain setting for cutting) $\times \alpha/100$
- If the mode in the stop state is the rapid traverse mode: Actual velocity gain in the stop state = (velocity gain setting for rapid traverse) × 0.5

4.4.4 N Pulses Suppression Function

(1) Overview

Even a very small movement of the motor in the stop state may be amplified by a proportional element of the velocity loop, thus resulting in vibration. The N pulse suppression function suppresses this vibration in the stop state.

When vibration occurs as shown in Fig. 4.4.4 (a), the velocity feedback at point B generates an upward torque command to cause a return to point A. A downward torque command, generated by the velocity feedback at point A is greater than the friction of the machine, causing another return to point B. This cycle repeats itself, thus causing the vibration.



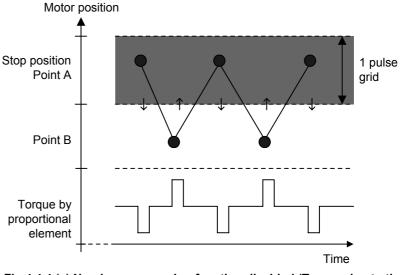


Fig.4.4.4 (a) N pulse suppression function disabled (Torque due to the proportional term keeps up, leading to vibration.)

To suppress such vibration, it is necessary to exclude from the velocity loop proportional term the speed feedback pulses generated when the motor returns from point B to point A.

If the N pulse suppression function is enabled as shown in Fig. 4.4.4 (b), the feedback pulses generated when the motor returns from point B to point A are excluded from the velocity loop proportional term. The standard setting of the grid width at point A is 1 μ m. It can be changed by specifying the level parameter.

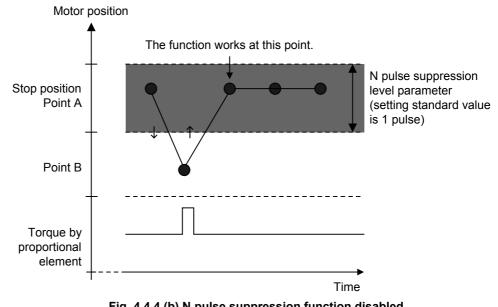

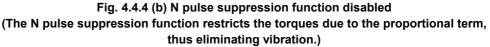

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|--|-----------|-----------|----------|----------|----------|----|----|
| 1808 (FS15 <i>i</i>) | | | | NPSP | | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| NPSP (#4) | 1: 7 | Fo enable | e the N p | ulse sup | pression | function | 1 | |
| · | | | | | | | | |
| 1992 (FS15 <i>i</i>) | N-pulse suppression level parameter (ONEPSL) | | | | | | | |
| | | | | | | | | |
| 2099 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| 2099 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] | 0 to 3 | 2767 | | | | | | |
| | 0 to 3 400 | 2767 | | | | | | |

4.5 MACHINE RESONANCE ELIMINATION FUNCTION

4.5.1 Torque Command Filter (Middle-Frequency Resonance Elimination Filter)

(1) Overview

The torque command filter applies a primary low-pass filter to the torque command.


If the machine resonates at one hundred Hz or over, this function eliminates resonance at such high frequencies.


(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Explanation

Fig. 4.5.1 shows the configuration of a velocity loop including the torque command filter.

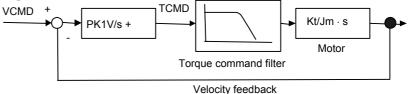

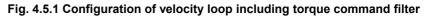


As shown in Fig. 4.5.1, the torque command filter applies a low–pass filter to the torque command. When a mechanical system contains a high resonant frequency of more than 100Hz, the resonant frequency component is also contained in the velocity feedback shown in Fig. 4.5.1 and may be amplified by proportional term. However, the resonance is prevented by interrupting the high–frequency component of the torque command using the filter.

(4) Proper use of the observer and torque command filter

The torque command filter is set in the forward direction. Therefore, there are fewer bad influences exerted upon the entire velocity control system than the observer that filters a feedback signal. If the resonance is very strong and it cannot be eliminated, use the observer.

Use the torque command filter first when the mechanical system resonates at high frequency. If the resonance cannot be eliminated, use the observer.

(5) Setting parameters

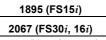

[Setting value]

Torque command filter (FILTER)

1166 (200 Hz) to 2327 (90 Hz)

When changing the torque command filter setting, see Table 4.5.1. As the cut-off frequency, select the parameter value corresponding to a half of the vibration frequency from the table below.

(Example)

In the case of 200-Hz vibration, select a cutoff frequency of 100 Hz for the torque command filter, and set FILTER = 2185.

Do not specify 2400 or a greater value. Such a high value may increase the vibration.

Table 4.5.1 Parameter setting value of torque command filter

| Cutoff frequency (Hz) | Setting value of parameter | Cutoff frequency (Hz) | Setting value of parameter |
|--------------------------|-------------------------------|--------------------------|-------------------------------|
| 60 | 2810 | 140 | 1700 |
| 65 | 2723 | 150 | 1596 |
| 70 | 2638 | 160 | 1499 |
| 75 | 2557 | 170 | 1408 |
| 80 | 2478 | 180 | 1322 |
| 85 | 2401 | 190 | 1241 |
| 90 | 2327 | 200 | 1166 |
| 95 | 2255 | 220 | 1028 |
| 100 | 2185 | 240 | 907 |
| 110 | 2052 | 260 | 800 |
| 120 | 1927 | 280 | 705 |
| 130 | 1810 | 300 | 622 |

(6) Cutting feed/rapid traverse switchable torque command filter

With this function, the torque command filter coefficient can be switched between rapid traverse and cutting feed to improve figure precision during cutting and increase a maximum feedrate and maximum acceleration during rapid traverse at the same time.

| 1779 (FS15 <i>i</i>) | TCMD filter coefficient for rapid traverse |
|-------------------------------------|---|
| 2156 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 1166 (200 Hz) to 2327 (90 Hz) |
| - | When 0 is set, the cutting feed/rapid traverse switchable torque command filter is disabled. The normal filter coefficient (No. 1895 for Series $15i$ or No. 2067 for Series $30i$, $16i$, and so on) is used at all times. |
| | When a value other than 0 is set, No. 1779 (Series 15 <i>i</i>) or No. 2156 (Series 30 <i>i</i> , 16 <i>i</i> , and so on) is used for stop time, rapid traverse, and |
| | jog feed, and No. 1895 (Series 15 <i>i</i>) or No. 2067 (Series 30 <i>i</i> , 16 <i>i</i> , and so on) is used for cutting only. |

(1) Overview


A filter function for removing high-speed resonance is added. With this function, high-speed resonance can be removed to set a higher velocity loop gain.

(2) Series and editions of applicable servo software


- (Series 30*i*,31*i*,32*i*)
 Series 90D0/A(01) and subsequent editions
 Series 90E0/A(01) and subsequent editions
 (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)
 Series 90B0/P(16) and subsequent editions ^(*)
 Series 90B1/A(01) and subsequent editions
 Series 90B6/A(01) and subsequent editions
 (Series 0*i*-C,0*i* Mate-C,20*i*-B)
 Series 90B5/A(01) and subsequent editions
- (*) With Series 90B0, resonance elimination filters that can be used are restricted depending on the edition.

| Edition of Series 90B0 | Restriction |
|---------------------------|--|
| A(01) to I(09) | Only resonance elimination filter 1 (conventional specification) can be used. Resonance elimination filters 2 to 4, damping setting, and active resonance elimination filter cannot be used. |
| J(10) to O(15) | Resonance elimination filters 1 to 4 (extended specification) and damping setting can be used. The active resonance elimination filter cannot be used. |
| P(16) or later | All resonance elimination filter functions can be used. |


(3) Control block diagram

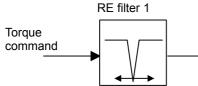

This filter can be used as a resonance elimination filter designed to the conventional specification. It can follow the resonance frequency. (RE filter 1 only)

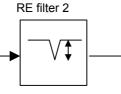

For this filter, it is possible to specify an attenuation ratio. (RE filters 1 to 4)

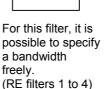

RE filter 3

RE filter 4

This filter can handle up to four resonance frequencies.

(4) Setting parameters

- 1 If the frequency of a resonance elimination filter is set to a low frequency around 100 Hz, the control system can become unstable, resulting in a large vibration.
- 2 Modify parameters in the emergency stop state.

(5) Setting parameters

<1> Setting for resonance elimination filters 2 to 4

The resonance elimination filter has a function for cutting signals of a particular frequency band. Three parameters are used for this filter. They specify the center frequency of a range to be cut, a bandwidth to be cut, and damping separately.

| , , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, , ,, | |
|--|--|
| 2773 (FS15 <i>i</i>) | RE filter 2 : Attenuation center frequency |
| 2360 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 96 to 1000(HRV1 or HRV2), 96 to 2000(HRV3), 96 to 4000(HRV4) |
| | (independent of the damping setting) |
| [Unit of data] | Hz |
| | |
| 2774 (FS15 <i>i</i>) | RE filter 2 : Attenuation bandwidth |
| 2361 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 0 to attenuation center frequency (independent of the damping setting) |
| [Unit of data] | Hz |
| 2775 (FS15 <i>i</i>) | RE filter 2 : Damping |
| 2362 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 0 to 100 (If it is 0, the attenuation ratio is maximized.) |
| [Unit of data] | 0/0 |
| 1 | Resonance elimination filters 3 and 4 have the same specification as resonance elimination filter 2. |
| 2776 (FS15 <i>i</i>) | RE filter 3 : Attenuation center frequency |
| 2363 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 2777 (FS15 <i>i</i>) | RE filter 3 : Attenuation bandwidth |
| 2364 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 2778 (FS15 <i>i</i>) | PE filter 2 : Domning |
| 2365 (FS30 <i>i</i> , 16 <i>i</i>) | RE filter 3 : Damping |
| 2303 (1 3307, 107) | |
| 2779 (FS15 <i>i</i>) | RE filter 4 : Attenuation center frequency |
| 2366 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 2780 (FS15 <i>i</i>) | RE filter 4 : Attenuation bandwidth |
| 2367 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 2781 (FS15 <i>i</i>) | RE filter 4 : Damping |
| 2368 (FS30 <i>i</i> , 16 <i>i</i>) | |

- 1 For resonance elimination filters 2 to 4, there is no specification that supports compatibility with conventional resonance elimination filters. Even if damping = 0, an arbitrary attenuation bandwidth can be specified for them.
- 2 Resonance elimination filters 2 to 4 are enabled if a nonzero value is set in the attenuation bandwidth or damping parameters for them. If you do not want use these resonance elimination filters, reset all the three parameters (attenuation center frequency, attenuation bandwidth, and damping) to 0.

<2> Setting for resonance elimination filter 1

Only resonance elimination filter 1 has the conventional specification if the damping is 0 and the improved specification if the damping is not 0.

| I | |
|-------------------------------------|---|
| 1706 (FS15 <i>i</i>) | RE filter 1 : Attenuation center frequency |
| 2113 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 250 to 992 (if damping = 0) |
| | 96 to 1000(HRV1 or HRV2), 96 to 2000(HRV3), 96 to 4000(HRV4) |
| | (if damping $\neq 0$) |
| [Unit of data] | Hz |
| [Onit of duta] | 112 |
| 2620 (FS15 <i>i</i>) | RE filter 1 : Attenuation bandwidth |
| 2177 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 20, 30, 40 (if damping = 0) |
| | 0 to attenuation center frequency (if damping $\neq 0$) |
| [Unit of data] | Hz |
| [om of aua] | 112 |
| 2772 (FS15 <i>i</i>) | RE filter 1 : Damping |
| 2359 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 0 (If it is 0, the resonance elimination filer has the conventional |
| [, | specification.) |
| | 1 to 100 (If it is 1, the attenuation ratio is maximized. For resonance |
| | elimination filer 1.) |
| [Unit of data] | % |
| [Unit of data] | /0 |

- If damping = 0 for resonance elimination filter 1, this filter has the same specification as for conventional resonance elimination filters. So, its attenuation bandwidth can be set only to 20, 30, or 40 Hz (specification compatible with conventional resonance elimination filters).
- 2 Resonance elimination filter 1 is enabled if a nonzero value is set in the attenuation bandwidth or damping parameter for it. If you do not want use the resonance elimination filter, reset all the three parameters (attenuation center frequency, attenuation bandwidth, and damping) to 0.

[Parameters for resonance elimination filters]

| 101 Series 301 01 101 | | | |
|--------------------------------|--------------------------------------|-----------------------|---------|
| | Attenuation center frequency [Hz] | Attenuation bandwidth | Damping |
| Resonance elimination filter 2 | No.2360 | No.2361 | No.2362 |
| Resonance elimination filter 3 | No.2363 | No.2364 | No.2365 |
| Resonance elimination filter 4 | No.2366 | No.2367 | No.2368 |
| Resonance elimination filter 1 | No.2113 | No.2177 | No.2359 |

For Series 30*i* or 16*i*


| For Series 1: | 5i | |
|---------------|----|--|
|---------------|----|--|

| | Attenuation center frequency [Hz] | Attenuation bandwidth | Damping |
|--------------------------------|--------------------------------------|-----------------------|---------|
| Resonance elimination filter 2 | No.2773 | No.2774 | No.2775 |
| Resonance elimination filter 3 | No.2776 | No.2777 | No.2778 |
| Resonance elimination filter 4 | No.2779 | No.2780 | No.2781 |
| Resonance elimination filter 1 | No.1706 | No.2620 | No.2772 |

<3> Setting for an active resonance elimination filter

The active resonance elimination filter is a function for setting the center frequency of a resonance elimination filter to the resonance frequency so as to maintain a high stability even when the center frequency deviates from the actual resonance frequency. It takes effect when:

- The resonance frequency shifts as the axis moves.
- The resonance frequency varies from one machine to another because of a difference among the machines.
- The resonance frequency changes with time.

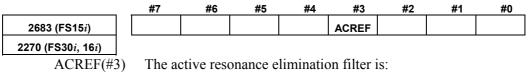

0: Disabled

1: Enabled

- The active resonance elimination filter can be used 1 with the conventional specification of resonance elimination filter 1. To use the active resonance elimination filter, specify damping = 0 for resonance elimination filter 1.
- 2 The active resonance elimination filter performs follow-up operation over ±40 Hz with respect to a specified center frequency.
- 3 The active resonance elimination filter becomes enabled when the emergency stop is released.
- 4 The active resonance elimination filter does not perform follow-up operation during acc./dec.
- 5 When the attenuation center frequency of resonance elimination filter 1 is changed, the center frequency is re-set to the specified center frequency, and then the filter restarts follow-up operation using this newly specified center frequency as an initial value.


Specify ACREF = 1, and set the center frequency of resonance elimination filter 1 to about (resonance frequency - 30 Hz). Make sure that after the emergency stop is released, resonance is eliminated immediately. If resonance cannot be eliminated immediately, set the following parameter (detection level) to about 5 to 10 to increase the detection sensitivity. If the center frequency does not settle, increase the detection level to about 20 to 100 to decrease the detection sensitivity.

| 2765 (FS15 <i>i</i>) | Active resonance elimination filter : Detection level |
|-------------------------------------|---|
| 2352 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 0 to 500 |

0 to 500


0 is handled as a detection level of 16 inside the servo software.

(6) Example of filter characteristics <1> Conventional resonance elimination filter

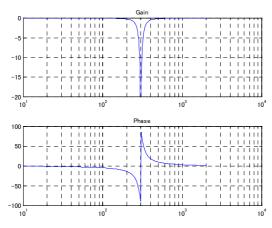


Center frequency = 300 Hz Bandwidth = 30 Hz Damping = 0

<2> Improved resonance elimination filter (with damping)

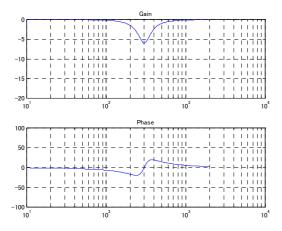

Center frequency = 300 Hz Bandwidth = 100 Hz Damping = 50%

<3> Improved resonance elimination filter (with two stages of damping)

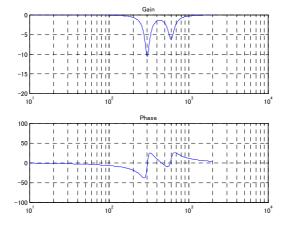

| (First stage) |
|---------------------------|
| Center frequency = 300 Hz |
| Bandwidth = 50 Hz |
| Damping = 30% |
| (Second stage) |
| Center frequency = 600 Hz |
| Bandwidth = 100 Hz |
| Damping = 50% |
| |

B-65270EN/06

(1) Overview

4.5.3

The disturbance elimination filter function estimates a disturbance by comparing a specified torque with the actual velocity, and feeds forward the estimation to the specified torque to suppress the effect of the disturbance. In particular, this function is useful for a vibration of 50 Hz to 100 Hz.

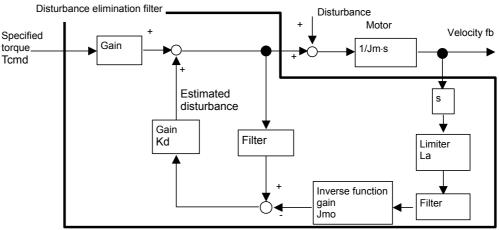



Fig. 4.5.3 Configuration of disturbance elimination filter

(2) Series and editions of applicable servo software

Resonance Elimination Filter)

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

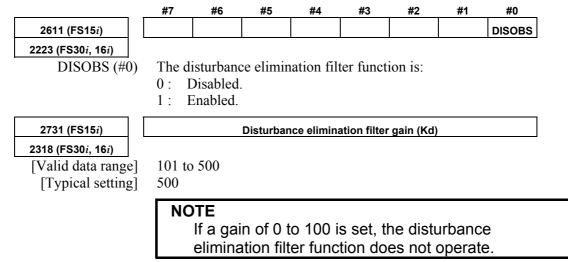

| 2732 (FS15 <i>i</i>) | Inertia ratio (Rj) (%) |
|---|--|
| 2319 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 0 to 32767 |
| [Typical setting] | 100 |
| | Set an inertia ratio (= machine inertia/motor inertia) in %. |
| | Usually, set 100%. |
| 2733 (FS15 <i>i</i>) | Inverse function gain (Jmo) |
| 2320 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range] | 100 to 2000 |
| [Initial setting] | 100 (Increase the setting step by step.) |
| | Set an inverse function gain as a conversion coefficient for |
| | acceleration-to-TCMD conversion. This parameter needs to b |
| | adjusted. As a guideline, set a value not greater than the value |
| | obtained by the following expressions: |
| | Linear motor (The detection unit of the scale is assumed to be $p \mu m$.) |
| | $Jmo = 466048 \times p \times Jm/Kt/Imax$ |
| | Rotary motor |
| | $Jmo = 1396264 \times Jm/Kt/Imax$ |
| | Jm: Weight [kg] or inertia [kgm ²] |
| | Kt: Torque constant [N/Ap] or [Nm/Ap] |
| | Imax: Maximum amplifier current [Ap] |
| | |
| | NOTE If an excessively large gain value is set, an |
| | abnormal sound and vibration can occur. |
| | |
| 2724 (EQ45i) | Filter time constant (Tp) |
| 2734 (FS15 <i>i</i>) | Filter time constant (Tp) |
| 2734 (FS15 <i>i</i>) 2321 (FS30 <i>i</i> , 16 <i>i</i>) | Filter time constant (Tp) |
| 2321 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 2321 (FS30 <i>i</i> , 16 <i>i</i>) • When HRV1, HRV | /2, or HRV3 is used: |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | /2, or HRV3 is used: 0 to 4096 |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | 72, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | 7/2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbance velocity by using the following expression: |
| 2321 (FS30<i>i</i>, 16<i>i</i>) When HRV1, HRV [Valid data range] [Typical setting] When HRV4 is use [Valid data range] | /2, or HRV3 is used: 0 to 4096 3700 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbancy velocity by using the following expression: Tp = 4096 × exp (-t/T) T: Setting time constant [sec], t = 0.001 [sec] ed: 0 to 4096 3994 (equivalent to T = 10 ms). * Usually, this value does not need to be changed. Set a filter time constant for determining an estimated disturbancy velocity by using the following expression: Tp = 4096 × exp (-t/T) |

4.SERVO FUNCTION DETAILS

| 2735 (FS15 <i>i</i>) | Acceleration feedback limit (La) | |
|-------------------------------------|----------------------------------|--|
| 2322 (FS30 <i>i</i> , 16 <i>i</i>) | | |
| [Valid data range] | 0 to 7282 | |
| [Typical setting] | 1000 | |

Set a limiter for a feedback torque calculated from acceleration. This parameter suppresses an excessive motion at the time of adjustment. The value 7282 represents a maximum amplifier current. When a 160-A amplifier is used, for example, the value 1000 is equivalent to 22 A.

NOTE


In a case where a value close to the torgue limit may be used, the torque is limited if the acceleration feedback limit is not increased.

(4) Procedure

(1) Make an adjustment according to the procedure below. First, disable those functions that operate only in the stop state such as the function for changing the proportional gain in the stop state. For determining the resonance frequency and adjusting the disturbance elimination filter, use frequency characteristics measurement by SERVO GUIDE.


(2) Enable the disturbance elimination filter function, set the disturbance elimination filter gain to 100 (not functioning), then measure the frequency characteristics.

With SERVO GUIDE, observe the response waveform obtained during the above measurement, and set the input amplitude (to about 500) to allow the waveform to be observed and machine sound to be heard. A sinusoidal torque command is used, so that the command does not generate a torque in one direction. The command is to be executed away from the machine stroke limits.

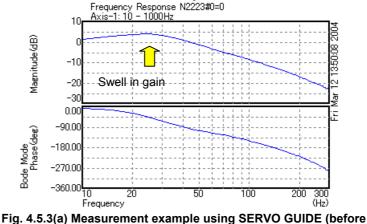

adjustment)

(3) Set the disturbance elimination filter gain to 500, and check the frequency characteristics with SERVO GUIDE while increasing the gain for inverse model starting with 100 in steps of 100. Adjust the value so that the amplitude of the gain swell part becomes small.

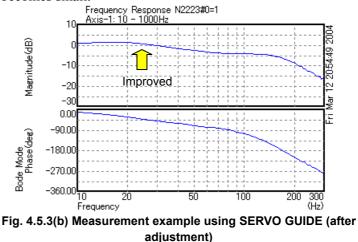

- (4) Note that the velocity loop gain of higher frequencies is increased and even a violent vibration may be caused simply by enabling the disturbance elimination filter function. If a vibration occurs, increase the inverse function gain gradually, and check the vibration of the torque command. If the vibration becomes greater, decrease the inverse function gain. If the vibration can not be reduced by increasing and decreasing the inverse function gain, change the filter time constant by ± 50 to eliminate the vibration.
- (5) If the frequency of vibration is higher than 100 Hz, use a separate machine resonance prevention function such as the vibration suppression filter and torque command filter.

4.5.4 Observer Function

(1) Overview

The observer is used to eliminate the high-frequency component and to stabilize a velocity loop when a mechanical system resonates at high frequency of several hundred Hertz.

The observer is a status observer that estimates the controlled status variables using the software.

In a digital servo system, the speed and disturbance torque in the control system are defined as status variables. They are also estimated in the observer. An estimated speed consisting of two estimated values is used as feedback. The observer interrupts the high-frequency component of the actual speed when it estimates the speed. High-frequency vibration can thus be eliminated.

(2) Explanation

Fig. 4.5.4 (a) shows a block diagram of the velocity loop including an observer.

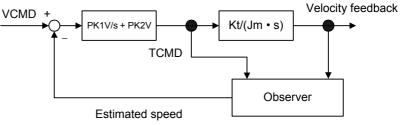
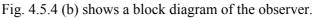


Fig. 4.5.4 (a) Configuration of velocity loop including observer



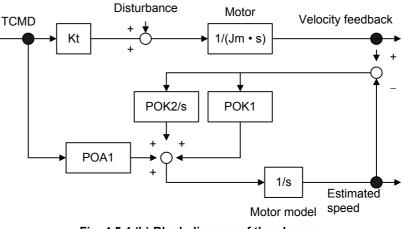


Fig. 4.5.4 (b) Block diagram of the observer

POA1, POK1, and POK2 in Fig. 4.5.4 (b) correspond to digital servo parameters. The observer has an integrator as a motor model. POA1 is a coefficient that converts the torque command into motor acceleration and is the characteristic value of the motor. The motor model is accelerated by this value. The actual motor is also accelerated by the torque and disturbance torque that it generates.

The disturbance torque works on the actual motor. There is a time lag in the current loop. The POA1 value does not completely coincide with the actual motor. This is why the motor's actual velocity differs from the motor speed estimated by an observer. The observer is compensated by this difference. The motor model is compensated proportionally (POK1), and the observer is compensated integrally (POK2/s).

POK1 and POK2 act as a secondary low-pass filter between the actual speed and estimated speed. The cutoff frequency and damping are determined by the POK1 and POK2 values. The difference between the observer and low-pass filter lies in the existence of a POA1 term. Using POA1, the observer's motor model can output an estimated speed that has a smaller phase delay than the low-pass filter.

When an observer function is validated, the estimated speed in Fig. 4.5.4 (b) is used as velocity feedback to the velocity control loop. A high–frequency component (100 Hz or more) contained in the actual motor speed due to the disturbance torque's influence may be further amplified by the velocity loop, and make the entire system vibrate at high frequency. The high frequency contained in the motor's actual speed is eliminated by using the velocity feedback that the observer outputs. High–frequency vibration can be suppressed by feeding back a low frequency with the phase delay suppressed.


In some systems, the use of the observer function can suppress vibration during movement but makes the machine unstable while it is in the stop state. In such cases, use the function for disabling the observer in the stop state, as explained in Art. (7) of this section.

(3) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(4) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|-------------------------------------|---------|------------------------------------|------------|-----------|--------|----|----|----|--|--|
| 1808 (FS15 <i>i</i>) | | OBEN | | | | | | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| OBEN (#2) |) 1: Te | 1: To enable the observer function | | | | | | | | |
| | | | | | | | | - | | |
| 1859 (FS15 <i>i</i>) | | Observer coefficient (POA1) | | | | | | | | |
| 2047 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| [Setting value] |] Keep | the stand | lard setti | ing uncha | anged. | | | | | |

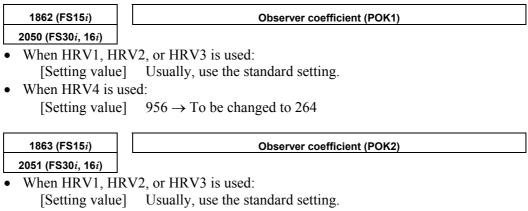

- When HRV4 is used:
 - [Setting value] $510 \rightarrow$ To be changed to 35

(5) Note

The parameter is initially set to such a value (standard setting) that the cutoff frequency of the filter becomes 30 Hz. With this setting, the effect of filtering becomes remarkable at resonance frequencies above the range of 150 Hz to 180 Hz.

To change the cutoff frequency, set parameters POK1 and POK2 to a value listed below, while paying attention to Table 4.5.4:

Generally, the observer function does not work unless its cutoff frequency is held below Fd/5 or Fd/6, where Fd is the frequency component of an external disturbance. However, if this bandwidth is some 20 Hz or lower, the velocity loop gain also drops or becomes unstable, possibly causing a fluctuation or wavelike variation.

| Table 4.0.4 onlanging the observer eater inequency | | | | | | | |
|--|----------|-----------|------|------|--|--|--|
| Cutoff frequency (Hz) | HRV1, HR | RV2, HRV3 | HRV4 | | | | |
| Cuton nequency (nz) | POK1 | POK2 | POK1 | POK2 | | | |
| 10 | 348 | 62 | 90 | 4 | | | |
| 20 | 666 | 237 | 178 | 16 | | | |
| 30 | 956 | 510 | 264 | 35 | | | |
| 40 | 1220 | 867 | 348 | 62 | | | |
| 50 | 1460 | 1297 | 430 | 96 | | | |
| 60 | 1677 | 1788 | 511 | 136 | | | |
| 70 | 1874 | 2332 | 1874 | 183 | | | |

Table 4.5.4 Changing the observer cutoff frequency

(6) Setting observer parameters when the unexpected disturbance torque detection function is used

The unexpected disturbance torque detection function (see Sec. 4.12) uses the observer circuit shown in Fig. 4.5.4 (b) to calculate an estimated disturbance. In this case, to improve the speed of calculation, change the settings of observer parameters POA1, POK1, and POK2 by following the explanation given in Sec. 4.12.

When the observer function and unexpected disturbance torque detection function are used together, however, the defaults for POK1 and POK2 must be used.

(7) Stop time observer disable function

If the observer function is enabled, the machine may fluctuate and become unstable when it stops. Such a fluctuation or unstable operation can be prevented by disabling the observer function only in the stop state.

(8) Setting parameters

| - | <1> Function bit | | | | | | | |
|-------------------------------------|---|---|------------------|------------|------------|------------|-------------|-------------|
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1960 (FS15 <i>i</i>) | | | | | | | MOVOBS | |
| 2018 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| MOVOBS (#1) | The fi | The function for disabling the observer in the stop state is: | | | | | | |
| | 0: I | 0: Disabled | | | | | | |
| | <u>1: I</u> | Enabled | \leftarrow Set | this valu | <u>e.</u> | | | |
| | <2> I | Level at | which th | e observ | er is dete | ermined | as being di | sabled |
| 1730 (FS15 <i>i</i>) | L | evel at w | hich the o | bserver is | determin | ed as beiı | ng disabled | |
| 2119 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| [Unit of data] | Detec | tion unit | | | | | | |
| [Typical setting] | 1 to 1 | 0 | | | | | | |
| | If the | absolute | value o | f the pos | ition erro | or is less | than the le | vel at whic |
| | the ob | server i | s determ | ined as | being dis | sabled, t | he observer | function |
| | disabl | ed. | | | | | | |
| | NOTE This parameter is also used for the stop determination level of the function for changing the proportional gain in the stop state. | | | | | | | |

(Usage)

Set the function bit and the level at which the observer is determined as being disabled so that it is greater than the peak absolute value of the oscillating position error.

4.5.5 Current Loop 1/2 PI Control Function

(1) Overview

To improve servo performance in high-speed and high-precision machining, high-speed positioning, ultrahigh-precision positioning, and so forth, a velocity loop gain as high as possible needs to be set stably.

To set a high velocity loop gain stably, the response of the current loop needs to be improved.


The current loop 1/2 PI control function enables the response of the current loop to be improved.

(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Control method

As shown in Fig. 4.5.5, in the area where a small current flows, a current loop calculation is based on PI control rather than on the conventional IP control method. When a large current flows, the control method returns to IP control to suppress a current overshoot.

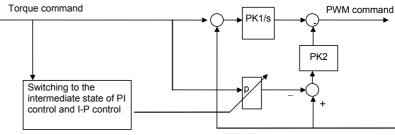

The proportional from the command is added to PWM calculation.

(4) Setting parameters

<1> Enabling the current loop 1/2 PI control function at all times

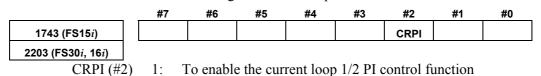


Fig. 4.5.7 Block diagram of current loop 1/2Pl control

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|----------------|---|---|------------------------------------|----------------------|----------------------------------|-------------|------------|
| 4740 (5845) | | | | "+ | | <i>"</i> 2 | | |
| 1742 (FS15 <i>i</i>) | | | | | | | VGCCR | |
| 2202 (FS30 <i>i</i> , 16 <i>i</i>) | | | - | | | | | |
| VGCCR (#1) | | | | | | | iction for | • |
| | | | | - | | the cut | ting feed/ | rapid tr |
| | vel | ocity loo | op gain s | witch fu | nction.) | | | |
| | <2> T | Ta amahl | a tha from | ation at | a 11 <i>time</i> a a | | ain a hit 1 | . f |
| | | | | | | | sing bit 1 | |
| | | | | , | | | 16i and s | · · · |
| | 1 | onowing | g bit <u>in ac</u> | | s the set | lings of | <1> and < | ~ |
| | # 7 | #0 | 45 | #4 | #0 | #0 | 44 | #0 |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1742 (FS15 <i>i</i>) | | | | | | PIAL | | |
| | | | | | | | | |
| 2202 (FS30 <i>i</i> , 16 <i>i</i>) | 4 75 | | | | (0 DI | . 1.0 | | |
| 2202 (FS30 <i>i</i> , 16 <i>i</i>) PIAL (#2) | | | | | | | iction at a | |
| · · · | (W | hen this | s functio | n is use | d togeth | ner with | the cutti | |
| · · · | (W | hen this | | n is use | d togeth | ner with | | |
| · · · | (W trav | Then this verse ve | s functio locity loo | n is use | d togeth | ner with | | |
| · · · | (W trav | then this verse ve | s functio locity loc | on is use op gain s | d togeth witch fu | ner with Inction) | the cutti | ng feed |
| · · · | (W tra | Then this verse ve CAUT If the n | s functio locity loo TION notor ac | on is use op gain s ctivatio | d togeth witch fu | ner with (netion) d or vib | the cutti | ng feed |
| · · · | (W tra | Then this verse ve CAUT If the n | s functio locity loo TION notor ac | on is use op gain s ctivatio | d togeth witch fu | ner with (netion) d or vib | the cutti | ng feed |

<2> To enable the function for cutting only, use the following bit in

(5) Current control PI rate modification

The current control PI rate (p in Fig. 4.5.5) is usually fixed at 1/2, but can be changed freely.

particular, a value greater than 1/2PI may be set. However, do not use this parameter usually.

This function cannot be used with Series 9096. *

| 2736 (FS15 <i>i</i>) | Current control PI rate |
|-------------------------------------|--|
| 2323 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Valid data range |] 0 to 4096 |
| [Unit of data | 4096 represents $p = 1.0$ (complete PI). |
| | When the value 0 is specified, the specification of 2048 (1/2PI), which is equivalent to $p = 0.5$, is assumed. |
| | CAUTION If you need to increase the velocity gain, in |

4.5.6 Vibration Damping Control Function


(1) Overview

In a closed-loop system, the Pulsecoder on the motor is used for velocity control and a separate detector is used for position control. During acc./dec., the connection between the motor and machine may be distorted, causing the speed transferred to the machine to slightly differ from the actual motor speed. In such a case, it is difficult to properly control the machine (reduce vibration on the machine). The vibration damping control function feeds back the difference between the speeds on the motor and machine (speed transfer error) to the torque command, to reduce vibration on the machine.

This function has the effect of the machine velocity feedback function, but is superior to the machine velocity feedback function in that restrictions as imposed with the machine velocity feedback function are eliminated.

(2) Control method

The following figure shows the block diagram for vibration damping control:

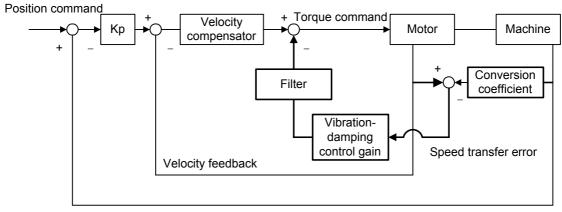

Position feedback

Fig. 4.5.5 Block diagram for vibration damping control

(3) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B, Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(4) Setting parameters

| etting | parameters | |
|--------|---|--|
| - | 1718 (FS15 <i>i</i>) | Number of position feedback pulses for vibration damping control conversion coefficient |
| L | 2033 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] | -32767 to 32767 When 0 is set, this function is disabled. If a negative value is specified, it is internally read as 10 times th specified value. (-1000=10000) |
| | | When a flexible feed gear (F·FG) is used (In the case of using the A/B phase separate type detector and analog SDU) Set value = Number of feedback pulses per motor revolution, received from a separate detector/8 |
| | | (Example 1) With a 5 mm/rev ball screw, 0.5 μ m/pulse separate detector, an a detection unit of 1 μ m, F·FG = 1/2 Then, Set value = 10,000 × 1/8 = 1250 |
| | | When a flexible feed gear (F·FG) is used (In the case of using the serial separate type detector) Set value = Number of feedback pulses per motor revolution, received from a |
| | | (Example 2) If a flexible feed gear is used under the conditions described i example 1 above, Set value = $10,000 \times 1/2 \times 1/8 = 625$ |
| | | When a flexible feed gear (F·FG) is used (In the case of using the analog SDU) Set value = (Travel distance per motor revolution [mm]) / (detector signal pitch [mm]) × 512 / 8 |
| | | <pre>(Example 3) When travel distance per motor revolution=10 [mm], an detector signal pitch=20 [μm] Set value = 10 / 0.020 × 512 / 8 = 32000</pre> |
| | | CAUTION If the above expression is indivisible, set the nearest integer. |
| [| 1719 (FS15 <i>i</i>) | Vibration-damping control gain |
| Į | 2034 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] [Standard setting] | -32767 to 32767 About 500 This is the feedback gain for vibration damping control. Adjust the value in increments of about 100, observing the actual vibration. An excessively large gain will amplify the vibration. If setting a positive value amplifies the vibration, try setting a negative value. |

Optional function


4.5.7 Dual Position Feedback Function

(1) Overview

A machine with large backlash may cause vibrations in a closed loop system even if it works steadily in a semi-closed loop system. The dual position feedback function controls the machine so that it operates as steadily as in the semi-close system. This function is <u>optional function</u>.

(2) Control method

The following block diagram shows the general method of dual position feedback control:

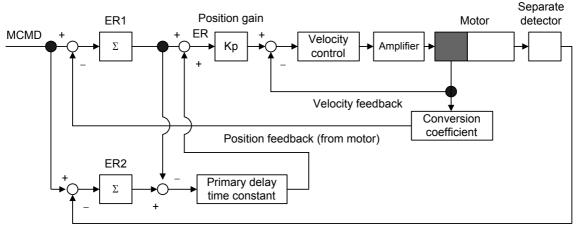

Position feedback (from separate detector)

Fig. 4.5.7 Block diagram of dual position feedback control

As shown in Fig. 4.5.7, error counter ER1 in the semi-closed loop system and error counter ER2 in the closed loop system are used. The primary delay time constant is calculated as follows:

Primary delay time constant = $(1 + \tau s)^{-1}$

The actual error, ER, depends on the time constant, as described below:

(1) When time constant τ is 0 $(1 + \tau s)^{-1} = 1$

ER = ER1 + (ER2 - ER1) = ER2 (error counter of the full-closed loop system)

(2) When time constant τ is $\infty \dots (1 + \tau s)^{-1} = 0$

ER = ER1 (error counter of the semi-closed loop system)

This shows that control can be changed according to the primary delay time constant. The semi-closed loop system applies control at the transitional stage and the full-closed loop system applies control in positioning.

This method allows vibrations during traveling to be controlled as in the semi-closed loop system.

(3) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 20*i*-B)

Series 90B5/A(01) and subsequent editions

(4) Setting parameters


| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------------------|------------|-------------|------------|------------|--------------|------------------|--------------------------|
| 1709 (FS15 <i>i</i>) | DPFB | | | | | | | |
| 2019 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DPFB (#7) | 1: To | o enable | dual pos | sition fee | edback | | | |
| 1861 (FS15 <i>i</i>) | | Du | ual positic | on feedbad | ck maximu | ım amplitı | ıde | |
| 2049 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| [Setting value] | Maxir | num an | plitude | (µm)/(n | ninimum | detectio | on unit t | for full-cl |
| | mode | | | | | | | |
| | | | | | y be set | | | |
| [Unit of data] | | | | | | | $(m/p) \times 6$ | |
| | | | | | | | | paramete |
| | | | | | | | | l value oc on is clam |
| | | - | | | | | | f the back |
| | | | | nsation a | | times ti | ic suili o | |
| | | | | | | ne param | eter to 0. | |
| | | I | | | , | 1 | | |
| 1971 (FS15 <i>i</i>) | | Dual posi | tion feed | oack conv | ersion coe | efficient (n | umerator) | |
| 2078 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | r | | | | | | | 1 |
| 1972 (FS15 <i>i</i>) | | Dual posit | ion feedba | ack conve | rsion coef | ficient (de | enominato | r) |
| 2079 (FS30 <i>i</i> , 16 <i>i</i>) | D 1 | | | | | | | |
| [Setting value] | | | tollowin | g fracti | on and | use the | e resultii | ng irredu |
| | fractio | on. | | | Number | of positio | n feedba | ok nulene |
| | | | | | | r revolutio | | sk puises |
| | Conver coeffici | | lumerato | _) = | | | y the feed | l gear) |
| | coenici | | enominate | or | | 1 millio | on | |
| | With | this setti | ng meth | od, how | ever, cai | ncellatio | n in the | servo soft |
| | intern | al coeff | icient m | ay occu | r depen | ding on | constant | s such as |
| | | | | | | e motor | to vibra | te. In su |
| | | | • | be chang | ged. | | | |
| | F 1 | | | \ · /1 · | · · | | | |

For details, see Art. (6) in this section.

| | (Example) When the αi Pulsecoder is used with a tool travel of 10 mm/motor revolution (1 μ m/pulse) Conversion coefficient ($\frac{\text{Numerator}}{\text{Denominator}}$) = $\frac{10 \times 1000}{1,000,000}$ = $\frac{1}{100}$ |
|--|---|
| 1973 (FS15 <i>i</i>) | Dual position feedback primary delay time constant |
| 2080 (FS30 <i>i</i> , 16 <i>i</i>) [Setting value] [Unit of data] | Set to a value in a range of 10 to 300 msec or so. msec Normally, set a value of around 100 msec as the initial value. If hunting occurs during acc./dec., increase the value in 50-msec steps. If a stable status is observed, decrease the value in 20-msec steps. When 0 msec is set, the same axis movement as that in full-closed mode is |
| | performed. When 32767 msec is set, the same axis movement as that in semi-closed mode is performed. For a system that requires simultaneous control of two axes, use the same value for both axes. |
| 1974 (FS15 <i>i</i>) | Dual position feedback zero-point amplitude |
| 2081 (FS30 <i>i</i> , 16 <i>i</i>) [Setting value] [Unit of data] | Zero width $(\mu m)/minimum$ detection unit for full-closed mode Minimum detection unit $(\mu m/p)$ for full-closed mode Positioning is performed so that the difference in the position between full-closed mode and semi-closed mode does not exceed the pulse width that corresponds to the parameter-set value. First set the parameter to 0. If still there is fluctuation, increase the parameter value. If this is applied to an axis with a large backlash, a large position error may remain. For details, see Art. (5) in this section. |
| 1729 (FS15 <i>i</i>) 2118 (FS30 <i>i</i> , 16 <i>i</i>) | Dual position feedback: Level on which the difference in error between the semi-closed and full-closed modes becomes too large |
| [Setting value] | Level on which the difference in error is too large (µm)/minimum detection unit for full-closed mode |
| [Unit of data] | Minimum detection unit (μ m/p) for full-closed mode If the difference between the Pulsecoder and the separate detector is greater than or equal to the number of pulses that corresponds to the value specified by the parameter, an alarm is issued. Set a value two to three times as large as the backlash. When 0 is set, detection is disabled. |

NOTE

The function for monitoring the difference in error between the semi-closed and full-closed modes is useful also for monitoring for a problem such as the feedback pulse missing of a separate detector. When only the monitoring of the difference in error between the semi-closed and full-closed modes is to be performed on a machine for which dual position feedback is not required as a stabilization function, the function for monitoring the difference in error between the semi-closed and full-closed modes can be used by not only making an ordinary full-closed loop setting but also setting a conversion coefficient for dual position feedback and the parameter for the monitoring level of the difference in error between the semi-closed and full-closed modes. (No option setting and function bit setting need to be made.)

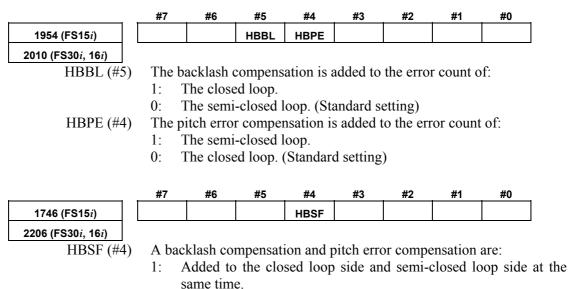

0: Added after selection according to the conventional parameter (No. 1954 (Series 15*i*) or No. 2010 (Series 30*i*, 16*i*, and so on)).


When this parameter is set to 1, the settings of No. 1954 (Series 15i) and No. 2010 (Series 30i, 16i, and so on)are ignored.

NOTE

- 1 If a setting is made to perform the function for monitoring the difference in error between the semi-closed and full-closed modes for an axis placed in a simple full-closed loop, the specification for addition of a backlash compensation and pitch error compensation is the same as in the case of using the dual position feedback function. In this case, it is recommended to make the setting above to "Add a backlash compensation and pitch error compensation and pitch error compensation to the closed loop side and semi-closed loop side at the same time".
- 2 When the dual check safety function is used with Series 16*i*, 18*i*, or 21*i*, a conversion coefficient for dual position feedback is used. In this case as well, make the setting above to "Add a backlash compensation and pitch error compensation to the closed loop side and semi-closed loop side at the same time".

(5) Zero-width setting for a machine with a large backlash or twist


Dual position feedback function (or hybrid function) is used for an axis where a machine backlash of about 1/10 revolution in terms of the motor shaft exists, the machine may stop with a position error remaining, which is greater than the dual position feedback zero-width parameter value. (In some cases, there may be ten or more pulses left.) To solve this problem, make the following settings:

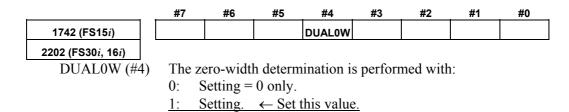

(6) Cautions on setting of the dual position feedback conversion coefficient

given below.

The dual position feedback conversion coefficient is set as explained in Art. (4). With the conventional calculation method, however, cancellation may occur in the conversion coefficient of the servo software depending on constants such as the machine deceleration ratio. If cancellation in the conversion coefficient occurs, feedback errors in the semi-closed loop system are accumulated. In some cases, this may result in motor oscillation. To prevent this problem, calculate and set the dual position feedback conversion coefficient by following the procedure

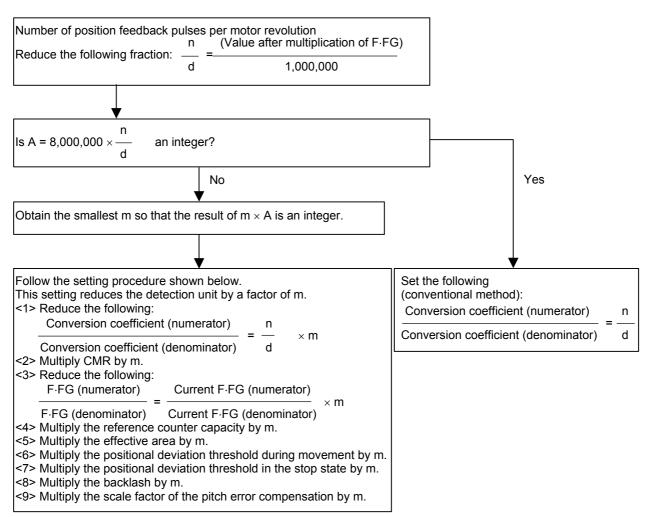

For parameters set in detection units, see the list in Appendix B.

4.5.8 Machine Speed Feedback Function


(1) Overview

In many full-closed systems, the machine position is detected by a separate detector and positioning was controlled according to the detected positioning information. The speed is controlled by detecting the motor speed with the Pulsecoder on the motor. When distortion or shakiness between the motor and the machine is big, the machine speed differs from the motor speed during acceleration and deceleration. Hence, it is difficult to maintain high position loop gain. This machine speed feedback function allows adding the speed of the machine itself to the speed control in a fully closed system, making the position loop stable.

(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B, Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Control block diagram

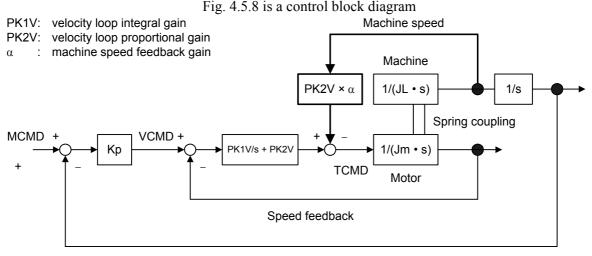

Position feedback

Fig. 4.5.1 Position loop block diagram that includes machine speed feedback function


As shown in Fig. 4.5.8, this function corrects the torque command by multiplying the machine speed by machine velocity feedback gain, α , as shown by the bold line. When $\alpha = 1$, the torque command is corrected equally by the motor speed and the machine speed.

(4) Adding the normalization function

(a) Overview

If an arc is drawn with the machine speed feedback function enabled, the arc may be elongated in the direction parallel to the axis to which the machine speed feedback function is applied. To solve this problem, the machine speed feedback function was improved.

(b) Explanation

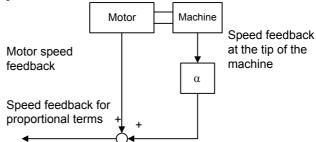

The current machine speed feedback configuration is as shown above figure. Assuming that the motor speed feedback is much the same as the speed feedback at the tip of the machine, the speed feedback for the proportional term is $(1 + \alpha)$ times the motor speed feedback. This causes a conflict to the weight of the VCMD.

So, the proportional term speed feedback is divided by (1 + $\alpha)$ to eliminate the conflict.

* The normalization function cannot be used when the velocity loop proportional high-speed processing function is used.

(5) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|----|-----------|---|--|------------------------------------|-------------------------|----------------------------------|-----------------------|
| 1956 (FS15 <i>i</i>) | | | | | | | MSFE | |
| 012 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| MSFE (#1) | 1: | To enable | e the mad | chine spe | ed feedb | ack fun | ction | |
| 1981 (FS15 <i>i</i>) | | | Machine s | peed feed | back gain | (MCNFB |) | |
| 2088 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | | | feed gear 7 and 19 range: 1 t setting) ormalizati | r (param 78) is set to 100 or ion functio | to $1/1$ to $1/1$ -1 to -1 | os. 2084 00) sed: | or is used and 208 MCNFB = | 85, para = 30 to 1 |
| | • | | n flexibl ange: 10 | e feed ge | ear (No. 2 | 2084, 20 | 085, 1977 | |

(6) Note


It the machine has a resonance frequency of 200 to 400 Hz, using this function may result in a resonance being amplified, thus leading to abnormal vibration or sound. If this happens, take either of the following actions to prevent resonance.

- Using an observer (⇒ Subsec. 4.5.4) (If the machine speed feedback function is used together with the observer function, the motor speed and machine speed are filtered out simultaneously.)
- Using a torque command filter (\Rightarrow Subsec. 4.5.1)

4.6 CONTOUR ERROR SUPPRESSION FUNCTION

4.6.1 Feed-forward Function


(1) Principle

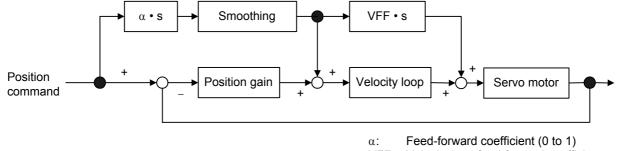


VFF: Velocity loop feed-forward coefficient

Fig. 4.6.1 (a) Feed-forward control block diagram

Adding feed-forward term α to the above servo system causes the position error to be multiplied by $(1 - \alpha)$.

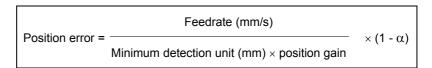

Adding feed-forward term α also causes figure error $\Delta R1$ (mm) due to a radial delay of the servo system during circular cutting to be multiplied by $(1 - \alpha^2)$.

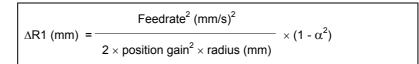

(Example) If $\alpha = 0.7$, $\Delta R1$ is reduced to about 1/2.

Beside $\Delta R1$, figure error $\Delta R2$ (mm) may occur in a position command when an acc./dec. time constant is applied after interpolation for two axes.

Therefore, total radial figure error ΔR during circular cutting is:

 $\Delta R = \Delta R1 + \Delta R2$

This section describes the conventional feed-forward function. However, when using feed-forward for high-speed and high precision machining, be sure to use advanced preview feed-forward described in Subsec. 4.6.2 or RISC feed-forward described in Subsec. 4.6.3. The shape error in the direction of the radius during circular cutting is as shown in Fig. 4.6.1 (b) below.

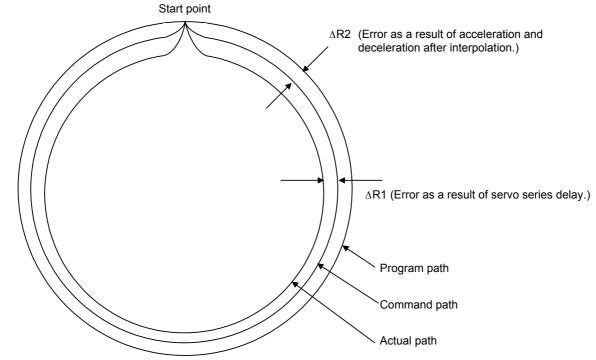



Fig. 4.6.1 (b) Path error during circular cutting

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions^(*)
Series 90E0/A(01) and subsequent editions^(*)
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(*) With Series 90D0 and 90E0, the advanced preview feed-forward function is applied unless the EGB synchronous mode is set.

(3) Setting parameters

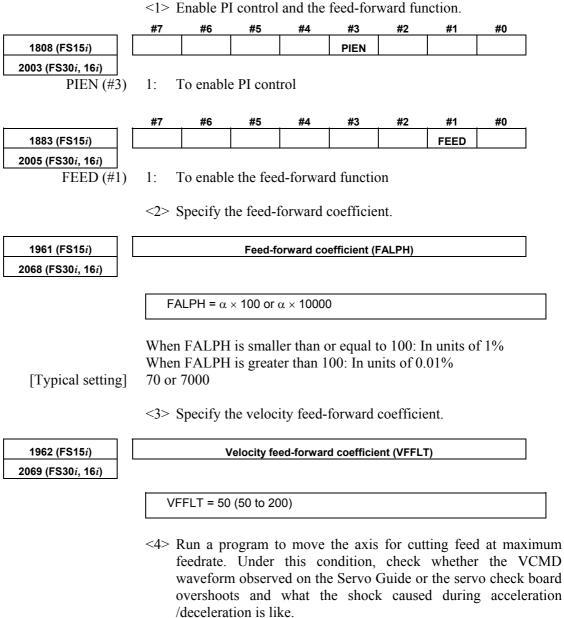


- \Rightarrow If an overshoot occurs, or the shock is big, increase the acc./dec. time constant, or reduce α .
- \Rightarrow If an overshoot does not occur, and the shock is small, reduce the acc./dec. time constant, or increase α .

Linear acc./dec. is more effective than exponential acc./dec.

Using acc./dec. before interpolation can further reduce the figure error.

4.SERVO FUNCTION DETAILS

<5> By setting the parameter below, the feed-forward function can be used for cutting feed as well.

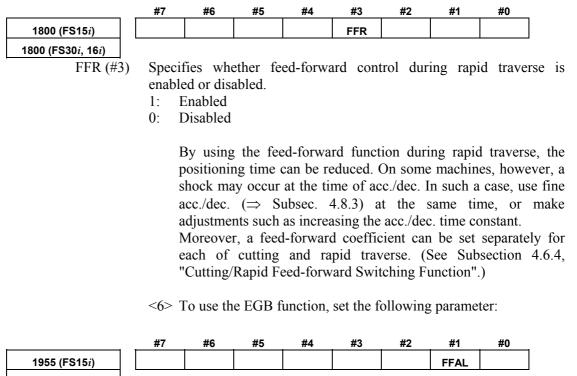

2011 (FS30*i*, **16***i*) FFAL (#1)

Feed-forward control is:

1: Always enabled regardless of the mode.

4.6.2 Advanced Preview Feed-forward Function


(1) Overview

The advanced preview feed-forward function is part of the advanced preview control function. It enables high-speed and high precision machining. The function creates feed-forward data according to a command which is one distribution cycle ahead, and reduces the delay caused by smoothing. This new function can upgrade the high-speed, high precision machining implemented under conventional feed-forward control. The conventional feed-forward control function executes smoothing in order to eliminate the velocity error of each distribution cycle (see Fig. 4.6.2 (a)). This smoothing, however, causes a delay in the feed-forward data.

The new advanced preview feed-forward control function uses the distribution data which is one distribution cycle ahead and generates delay-free feed-forward data (Fig. 4.6.2 (b)). The function can provide higher controllability than the conventional feed-forward control function.





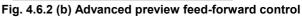


(2) Series and editions of applicable servo software


(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions

(3) Setting parameters

<1> Set the following parameters in the same way as for conventional feed-forward control.

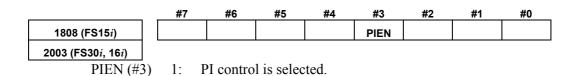

4.SERVO FUNCTION DETAILS

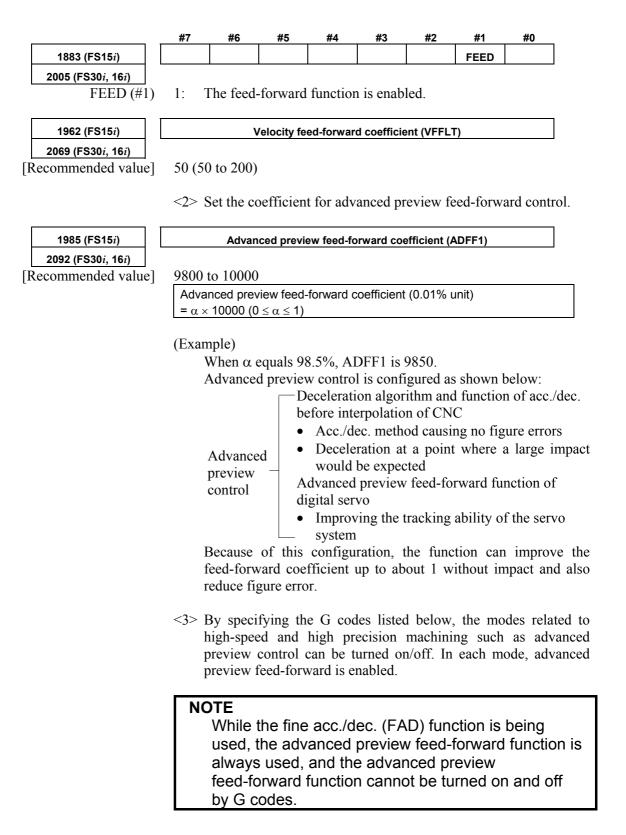

| G co | ode | Mode |
|-----------|----------|---|
| Mode ON | Mode OFF | Mode |
| G08P1 | G08P0 | Advanced preview control mode |
| | | Acc./dec. mode before look-ahead interpolation |
| G05.1Q1 | G05.1Q0 | AI nano-contour control mode |
| | | AI contour control mode |
| | | AI advanced preview control mode |
| | | High-precision contour control |
| | | $(\Rightarrow$ Subsec.4.6.3) |
| G05P10000 | G05P0 | AI high precision contour control |
| | | AI nano high precision contour control |
| | | Fine HPCC |
| G05.1Q1 | G5.1Q0 | AI contour control I mode |
| 605. IQT | 65.100 | AI contour control II mode |

* With the Series 30*i*/31*i*/32*i* (servo software Series 90D0 and 90E0), the advanced preview feed-forward function is always applied regardless of G codes.

* For a CNC that supports this function, see Appendix D.

(Example)

G08P1; Advanced preview control mode on

Advanced preview feed-forward enabled

G08P0; Advanced preview control mode off

4.6.3 RISC Feed-forward Function

(1) Overview

The feed-forward system is used during high precision contour control based on RISC (HPCC mode) or AI contour control (AICC mode) in order to shorten the interpolation cycle, improving the performance of high-speed, high precision machining.

(This function is insignificant for AI nano-contour control complying with nano-interpolation as a distribution system, AI high-precision contour control, AI nano high-precision contour control, and fine HPCC.)

By using this function, the response of the servo side can be improved when the distribution period is 4 ms, 2 ms, or 1 ms.

(2) Series and editions of applicable servo software

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)

Series 9096/A(01) and subsequent editions^(*) Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B)

Series 90B5/A(01) and subsequent editions

(*) Series 9096 supports distribution periods of 1 ms and 2 ms only, and it does not support 4 ms.

(3) Setting parameters

- <1> Set the following parameters in the same way as for the advanced preview feed-forward function.
- <2> Set the parameters (RISCFF and RISCMC) below.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ |
|-------------------------------------|------|----------|-----------|----------|----------|---------|-----------|-----------|------|
| 1959 (FS15 <i>i</i>) | | | RISCFF | | | | | | |
| 2017 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| RISCFF (#5 |) 1: | Feed-for | ward resp | oonse in | proves v | when RI | SC is use | ed. | |
| | 0: | Feed-for | ward resp | ponse re | mains ur | changed | d when R | LISC is u | sed. |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|------|---------|---------|----|----|----|----|----|
| 1740 (FS15 <i>i</i>) | | | RISCMC | | | | | |
| 2200 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| RISCMC (#5) | When | RISC is | s used: | | | | | |

1: Feed-forward response improves.

0: Feed-forward response remains unchanged.

| G co | de | Mode | | | | | | |
|-----------|----------|-------------------------|--|--|--|--|--|--|
| Mode ON | Mode OFF | Wode | | | | | | |
| G05.1Q1 | G05.1Q0 | AI contour control mode | | | | | | |
| G05P10000 | G05P0 | HPCC mode | | | | | | |
| * Annendi | | | | | | | | |

Appendix D lists the supported CNCs.

If the modes above are off, the normal feed-forward coefficient is enabled.

NOTE

- 1 Use this function only when very high command response is required.
- 2 When using this function, set a detection unit of 0.1 μ m wherever possible.

(To set a detection unit of 0.1 μ m, the IS-C system must be used, or the CMR and flexible feed gear must be multiplied by 10 with the IS-B system.)

4.6.4 Cutting/Rapid Feed-forward Switching Function

(1) Overview

To use a separate feed-forward coefficient for each of cutting feed and rapid traverse, the use of the cutting/rapid fine acc./dec. switching function has been required conventionally. The cutting feed/rapid traverse switchable feed-forward function allows a separate coefficient to be used for each of cutting feed and rapid traverse, without using the cutting feed/rapid traverse switchable fine acc./dec. function.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Cautions

This function is usable with the modes below. Note that this function cannot be used with the normal mode. [Usable modes]

Advanced preview control mode

- AI contour control mode
- AI nano contour control mode
- High precision contour control mode
- AI high precision contour control mode
- AI nano high precision contour control mode
- (*) With the Series 30i/31i/32i, this function can be used regardless of the specified mode.

(4) Setting parameters

<1> First, set the parameters below in the same way as for the current feed-forward function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|------|----------|---------|-----------|--------|----|------------|----|
| 1808 (FS15 <i>i</i>) | | | | | PIEN | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| PIEN(#3) | 1: . | A switch | is made | to PI con | ntrol. | | | |
| | | | | | | | | |
| | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1883 (FS15 <i>i</i>) | #7 | #6 | #5 | #4 | #3 | #2 | #1 FEED | #0 |
| 1883 (FS15 <i>i</i>) 2005 (FS30 <i>i</i> , 16 <i>i</i>) | #7 | #6 | #5 | #4 | #3 | #2 | 1 | #0 |
| · · · | | #6 | | | | | 1 | #0 |

B-65270EN/05

4.SERVO FUNCTION DETAILS

<2> Next, set the cutting/rapid feed-forward switching function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------|-----------------------|-------------|---------------------|------------|-------------|------------|-----------|
| 2602 (FS15 <i>i</i>) | | | | FFCHG | | | | |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| FFCHG (#4 |) 1: 7 | The cutti | ng/rapic | l feed-for | ward sw | vitching | function | is enable |
| | | With the are enabl | • | of the pa tting. | rameter | rs above | e, the par | rameters |
| 1768 (FS15 <i>i</i>) | | Ve | elocity fee | ed-forward | coefficie | nt for cutt | ing | |
| 2145 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| 1 | · | | | | | | | |
| 1767 (FS15 <i>i</i>) | | Advanc | ced previe | w feed-for | ward coe | fficient fo | r cutting | |
| 2144 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | The p | arametei | rs below | are enabl | led in ra | pid trav | erse. | |
| 1962 (FS15 <i>i</i>) | | Veloc | city feed-f | orward coe | fficient f | or rapid tr | averse | |
| 2069 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| 1 | · | | | | | | | |
| 1985 (FS15 <i>i</i>) | | Advanced | preview f | eed-forwar | d coeffic | ient for ra | pid traver | se |
| 2092 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |

4.6.5 Feed-forward Timing Adjustment Function

| (1) Overview | |
|------------------------------|---|
| | If the feed-forward function is applied with the aim of decreasing contour errors, the same feed-forward coefficient must be used for all axes. Even if a unified feed-forward coefficient is used, however, the axes may not necessarily behave in the same manner because of differences in the mechanical characteristic and velocity loop response among the axes. The feed-forward timing adjustment function is intended to change the feed-forward timing so as to make the characteristics of each axis at high-speed movement. It does not change the feed-forward coefficient. So it can change the characteristic of a portion where the acceleration is high without affecting the operation for straight portions. If the radius of an arc subjected to high-speed cutting differs among axes, resulting in a vertical or horizontal oval, this function is useful in improving roundness through fine adjustment. |
| (2) Control method | |
| | When an arc is cut at high speed, delaying the feed-forward timing causes the path to bulge. On the contrary, advancing the feed-forward timing causes the path to shrink. The feed-forward timing adjustment function lets you make fine adjustments on the characteristic of servo axes. |
| | Let the radius, feedrate, and position gain be, respectively, R, V, and Kp. Delaying the feed-forward timing by $\tau(s)$ increases the radius of the arc by: $\Delta R = \tau \times V^2/(Kp \times R)$ To be specific, assume radius R = 10 mm, feedrate V = 4000 mm/min, and position gain Kp = 40/s. Shifting the timing by 1 ms corresponds to: $\Delta R = 11 \ \mu m$ |
| (3) Series and editions of a | nnlicable serve software |
| | (Series 30i,31i,32i) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i) Series 9096/A(01) and subsequent editions Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0i-C,0i Mate-C,20i-B) |

Series 90B5/A(01) and subsequent editions

(4) Setting parameters

| , | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|----------------------------------|-------|--|----------------------|-------------------|------------|------------|-------------------------------------|-----------|--|--|
| _ | | | | | | | IAHDON | | | |
| (FS30 <i>i</i>) | | | | | | | | | | |
| IAHDON(#1) | | efault va). | alue of th | ne feed-fe | orward ti | ming ac | ljustment | parame | | |
| | | 1: Compatible with that of Series 16 <i>i</i> . (See the table below.) | | | | | | | | |
| | | | | ON=1 an ible with | | | the feed-f | òrward | | |
| | | actually lt value" | . . | feed-for | ward tim | ning is | "setting c | of No. 2 | | |
| | has a | • | et in No. | | | | or a system ated from | | | |
| | 1 | | (value | | • | etting bi | t 1 of No | . 2415 | | |
| | | | | |)efault fe | ed-forw | ard timing | value | | |
| | | | | No. | 2415#1=(| 0 | No.2 | 415#1=1 | | |
| | | IRV2 con | | | 0 | | | 3900 | | |
| | | IRV3 con | | | 0 | | | 3900 | | |
| | | IRV4 con | | | 0 | | | 3792 (*1) | | |
| | í | | he defau peed pro | It value | | any of | the follow | ving lur | | |
| | | | | | ning | | | | | |
| | | High-speed cycle machining Series and editions of applicable servo software (Series 30<i>i</i>,31<i>i</i>,32<i>i</i>) Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions | | | | | | | | |
| | | | | | | | | | | |
| 988 (FS15 <i>i</i>) | | Fee | d-forward | timing ad | justment o | coefficien | it ^(*1) | | | |
| 5 (FS30 <i>i</i> , 16 <i>i</i>) | Speci | fying -4 | 096 caus | ses the fe | ed-forwa | ard timii | ng to adv ng to dela at high- | y by 1 n | | |
| | | | | it by abo | | | | speca c | | |

If you want to increase the radius of an arc at high-speed cutting, decrease the coefficient by about 300 at each step.

This parameter is valid for advanced preview feed-forward control (parameter Nos. 1985 and 1767 (Series 15*i*) and parameter Nos. 2092 and 2144 (Series 30*i*, 16*i*, and so on). It is invalid for conventional feed-forward control type (parameter No. 1961 (Series 15*i*) and parameter No. 2068 (Series 16*i* and so on)).

(*1) Old documents may refer to this function as "machine distortion compensation coefficient."

With the following servo software, the feed-forward timing slightly differs when the fine acc./dec. function is used, so a separate parameter is prepared for independent setting.

Series and editions of applicable servo software (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B0/J(10) and subsequent editions Series 90B1/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

| 2808 (FS15 <i>i</i>) | Feed-forward timing adjustment coefficient (to be used when fine acc./dec. |
|-------------------------------------|--|
| 2395 (FS30 <i>i</i> , 16 <i>i</i>) | is enabled) |

- * If fine acc./dec. is specified and is used in one of the following modes:
 - Simple cutting feed (no high-precision mode)
 - Advanced preview control
 - AI advanced preview control (Series 21*i*)

This parameter can set the timing adjustment coefficient to parameter No. 1988 + parameter No. 2808 (for the Series 15i) and

parameter No. 2095 + parameter No. 2395 (for the Series 16*i* and so on).

In other high definition modes (modes in which fine acc./dec. is disabled, such as AI contour control), the timing adjustment coefficient is set to

parameter No. 1988 (for the Series 15*i*)

parameter No. 2095 (for the Series 16*i* and so on).

This parameter allows setting of different timing adjustment coefficients depending on whether fine acc./dec. is enabled or disabled.

4.6.6 Backlash Acceleration Function

(1) Overview

If the influence of backlash and friction is large in the machine, a delay may be produced on reversal of motor, thus resulting in quadrant protrusion on circular cutting.

This is a backlash acceleration function to improve quadrant protrusion.

(2) Series and editions of applicable servo software

Backlash acceleration function (Series 30*i*,31*i*,32*i*) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 9096/A(01) and subsequent editions Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

Override function

(Series 30*i*,31*i*,32*i*)
Series 90D0/J(10) and subsequent editions
Series 90E0/J(10) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/W(23) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

<1> Set the backlash compensation.

| 1851 (FS15 <i>i</i>) | Backlash compensation | | | | | | |
|-------------------------------------|---|--|--|--|--|--|--|
| 1851 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | |
| | In semi-closed mode: | | | | | | |
| | Set the machine backlash. (Minimum value $= 1$) | | | | | | |
| | In full-closed mode: | | | | | | |
| | Set the minimum value of 1. To prevent the backlash compensation from being reflected in positions, set the following: | | | | | | |
| | NOTE Always set a positive value. If a negative value or 0 is set, the backlash acceleration function is not | | | | | | |


enabled.

4.SERVO FUNCTION DETAILS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | | |
|-------------------------------------|------------------------------|---|-----------|-------------|------------|-----------|-------------|-----------|---------|--|--|
| 1884 (FS15 <i>i</i>) | | | | | | | | FCBL | | | |
| 2006 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | • | | | | | |
| FCBL (#0) | 1: I | 1: Do not reflect the backlash compensation in positions. | | | | | | | | | |
| | Gener | rally, for | a mach | ine in fu | ll-closed | l mode, l | backlash | compen | sation | | |
| | | - | | | | | | s parame | | | |
| | applic | able also | o to a ma | chine wi | th a sem | ni-closed | loop.) | | | | |
| | | Enable th | | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | 1 | | |
| 1808 (FS15 <i>i</i>) | | | BLEN | | | | | | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | 1 7 | г 11 | 1 11 | | <i>.</i> . | | | | | | |
| BLEN (#5) | 1: 7 | Fo enable | e backlas | sh accele | ration | | | | | | |
| 1860 (FS15 <i>i</i>) | | | Back | lash accel | eration ar | nount | | | | | |
| 2048 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | |
| [Typical setting] | 20 to | 600 | | | | | | | | | |
| | Offse | t for the | velocity | commar | nd that is | s to be a | dded imi | nediately | y after | | |
| | a reve | erse. | | | | | | | | | |
| 1964 (FS15 <i>i</i>) | F | Period dur | ina which | backlash | accelerat | ion remai | ns effectiv | e |] | | |
| 2071 (FS30 <i>i</i> , 16 <i>i</i>) | - | | | (in units o | | | | - | | | |
| [Typical setting] | 20 to | 100 | | | | | | | 1 | | |
| | The p | eriod du | ring whi | ch the ac | celeratio | on amou | nt is add | ed. At th | e start | | |
| | of ad | justment | , set 20 | . When | a long | quadran | t protru | sion is a | found, | | |
| | gradu | ally incr | ease the | setting in | n steps o | f 10. | | | | | |
| | <3> V | When the | e optimu | m backla | ash acce | leration | amount | varies wi | ith the | | |
| | ľ | nachinin | g feedra | te, use tł | ne accele | eration a | mount ov | verride a | nd the | | |
| | 1 | imit of t | he accele | eration a | nount. | | | | | | |
| 1725(FS15 <i>i</i>) | Acceleration amount override | | | | | | | | | | |
| 2114(FS16 <i>i</i>) | | | | | | | | | | | |
| [Valid data range] | 0 to 32767 | | | | | | | | | | |
| 2751(FS15 <i>i</i>) | | | Limi | t of accele | eration am | ount | | |] | | |
| 2338(FS16 <i>i</i>) | | | | | | | | | | | |
| [Valid data range] | 0 to 3 | 2767 (W | Then 0 is | set, the a | accelerat | tion amo | unt is no | t limited | .) | | |

[Example] Example of setting the acceleration amount when a model such as the Series 16i is used

Acceleration amount (parameter No. 2048) = 46, acceleration amount override (parameter No. 2114) = 23, limit of acceleration amount (parameter No. 2338) = 500

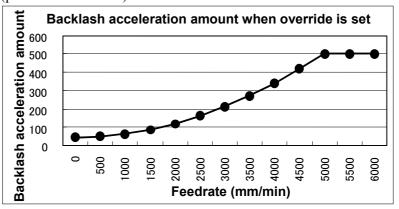

<4> Setting the direction-based backlash acceleration function

When the optimum acceleration amount differs between a reverse operation in the positive direction and a reverse operation in the negative direction, set the acceleration amount used for the reverse operation from the negative direction to positive direction in the following parameter:

| 1987(FS15 <i>i</i>) 2094(FS16 <i>i</i>) | Backlash acceleration amount (for reverse from negative to positive direction) |
|--|--|
| [Typical setting] | 20 to 600 |
| 2753(FS15 <i>i</i>) 2340(FS16 <i>i</i>) | Acceleration amount override (for reverse from negative to positive direction) |
| [Valid data range] | 0 to 32767 |
| 2754(FS15 <i>i</i>) | Limit of acceleration amount (for reverse from negative to positive direction) |
| 2341(FS16 <i>i</i>) [Valid data range] | 0 to 32767 (When 0 is set, the acceleration amount is not limited |

[Parameters used for direction-based setting]

Series30*i*,16*i*, and so on

| Direction-based setting | Reverse direction | Backlash acceleration amount | Acceleration amount override | Limit of acceleration amount |
|-------------------------|-------------------|---------------------------------|---------------------------------|---------------------------------|
| None | Common | NI. 0040 | NL 0444 | NL 0000 |
| Dresent | From + to - | No. 2048 | No. 2114 | No. 2338 |
| Present | From - to + | No. 2094 | No. 2340 | No. 2341 |

Series 15i

| Direction-based setting | Reverse direction | Backlash acceleration amount | Acceleration amount override | Limit of acceleration amount |
|----------------------------|-------------------|---------------------------------|---------------------------------|---------------------------------|
| None | Common | NI. 4000 | NI. 4705 | NI- 0754 |
| Dresent | From + to - | No. 1860 | No. 1725 | No .2751 |
| Present | From - to + | No. 1987 | No. 2753 | No. 2754 |

4.SERVO FUNCTION DETAILS

| | | | If a rev function. | | occurs, | , use th | e back | lash acc | eleration | stop |
|-------------|--|-----------------------|---|--|--|--|--|--|---|---|
| | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| | 1953 (FS15 <i>i</i>) | BLST | | | | | | | | |
| | 2009 (FS30 <i>i</i> , 16 <i>i</i>) BLST (#7) | 1: | To enabl | e the bac | klash acc | celeration | n stop fi | unction | | |
| | | NC | enable value i param | n the ba eter de s set, b | BLST = acklash scribed | = 1), be accele below. | e sure t eration (If 0 o | o set a stop tir r a neg | positive ning | <u>,</u> |
| | 1975(FS15 <i>i</i>) | | | Backlas | n accelera | tion stop (| distance | | | |
| | 2082(FS30 <i>i</i> ,16 <i>i</i>) [Typical setting] | This ends. This | paramete Determi | er is relane the pattern the the pattern the pattern the pattern the pattern the the pattern the patte | ted to the rameter | ne distan value by | checkir | backlas | f 0.1µm) sh acceler tual profil the bac | le. |
| | | | | | | | | | | |
| (4) Setting | parameters | | | methods | | - | | ion amo | unt overri | de as |
| | | | <1> Wit opti qua acco <2> Set and valu opti <3> Fina figu qua | mum ba drant pro- eleration the accel maximu- ie, obse mum over ally, set to ire. If an | extrastic action of the second | minimu accelerat Set the (setting). o a midd s, and drant p lue. mum acc t is gene celeratio | um acc tion am obtained lle point while in protrusio celeratic grated at on amou | eleration ount wild d value a between hereasing ns to on, and c the switt nt limit | n, obtain hile obse as the bac n the mini g the ove determine observe th tching poi to prever ely. | rving klash imum erride e the ne arc int of |
| | | | Obtain a different intermed accelerat equation sh tion = | acceleration accel | num bac tions (an eleration d substit acklash a sh tion × | cklash a assumed between ute the c accelerat | accelerated d minim the minim obtained ion amore cceleration | tion am um acce inimum value ir punt over | ount for leration and and maxi the follo ride: Acceleratio | nd an imum owing |

Acceleration = $\frac{(\text{Feedrate [mm/min]})^2}{\text{Radius [mm]}} \times \frac{128}{\text{Detection unit } [\mu m] \times 1000}$ Find a solution of the simultaneous equations. The results are as follows:

| Acceleration - | (. | Acceleration amount 2) - (Acceleration amount 1) |
|-----------------------|------------------------|--|
| amount override = | (Acceleration amount 1 | $\sim (\Delta cceleration 2)$ |
| | | |
| Backlash acceleration | amount = | $ \begin{array}{c} (Acceleration \\ amount 1) \end{array} \times (Acceleration 2) - \begin{array}{c} (Acceleration \\ amount 2) \end{array} \times (Acceleration 1) \\ \end{array} $ |
| (setting) | | (Acceleration 2) - (Acceleration 1) |

Finally, operate at the maximum acceleration, and adjust the limit of the acceleration amount.

(5) Ignoring the backlash acceleration function at handle feed

To disable the backlash acceleration function at handle feed, set the following:

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------|------|----|----|----|----|----|----|
| 1953 (FS15 <i>i</i>) | | BLCU | | | | | | |
| 2009 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |

BLCU (#6)

1: To enable the backlash acceleration function during cutting feed only

NOTE


If bit 3 of parameter No. 1800 is set to 1, the backlash acceleration function is always enabled, and it cannot be disabled.

With following series and editions of servo software, the bit shown below can also be used to enable the backlash acceleration function only during cutting.

- Series 90B0/C(03) and subsequent editions
- Series 90B6/A(01) and subsequent editions
- Series 90B5/A(01) and subsequent editions
- Series 90D0/A(01) and subsequent editions
- Series 90E0/A(01) and subsequent editions

Use of this bit enables and disables the backlash acceleration function even when bit 3 of parameter No. 1800 is set to 1. Backlash acceleration is enabled even at the hole bottom during rigid tapping.

4.SERVO FUNCTION DETAILS

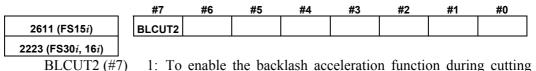

1: To enable the backlash acceleration function during cutting feed only

[Reference]

Adjustment the backlash acceleration

Run a program for an arc, and make an adjustment while checking the arc figure on SERVO GUIDE.

(6) Disabling backlash acceleration after a stop

When using the function for disabling backlash acceleration after a stop, make the setting below. For details, see "(7) Adjustment of backlash acceleration" in Appendix H.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------------------|--------|----|----|----|----|----|----|----|
| 2696(FS15 <i>i</i>) | BLSTP2 | | | | | | | |
| 2283(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |


BLSTP2(#7) 1: Disables backlash acceleration after a stop.

4.6.7 Two-stage Backlash Acceleration Function

(1) Overview


When the machine reverses the direction of feed, two types of delay are likely to occur; one type due to friction in the motor and the other due to friction in the machine.

The two-stage backlash acceleration function compensates for two types of delays separately, thus enabling two-stage compensation.

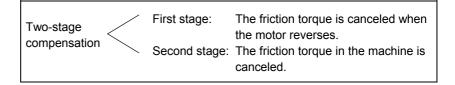

Furthermore, optimum compensation can be performed at all times for first stage against changing speed and load.

The two-stage backlash acceleration function performs compensation as shown below:

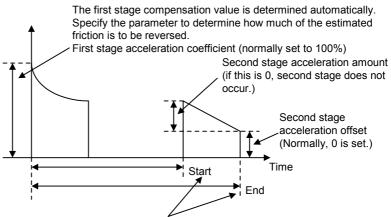

Second stage start and end parameters (detection unit) The start point of second stage is specified as a distance relative to the start of first stage.

The end point is determined automatically. Normally, if the setting is positive, the end point is set at a distance two times greater than the start point distance. If the setting is negative, the end point is set at a distance three times greater than the start point distance. An arbitrary end point can also be set by setting the end scale factor parameter.

Fig. 4.6.7 (a) Backlash acceleration under control of the two-stage backlash acceleration function


(2) Series and editions of applicable servo software

Series 9096/A(01) and subsequent editions Series 90B0/A(01) and subsequent editions (specifying a direction-specific second stage acceleration amount and a limit value) Series 90B0/J(10) and subsequent editions Series 90B6/A(01) and subsequent editions Series 90B5/A(01) and subsequent editions

(3) Setting parameters

- <1> With SERVO GUIDE, make settings for measuring the motor speed and estimated disturbance value. (See Sec. 4.20 for SERVO GUIDE.)
- <2> Turn on the power to the NC.
- <3> Specify the backlash compensation value.

| 1851 (FS15 <i>i</i>) | | | Back | lash com | pensation | value | | | |
|--|---|-----------------------|---------------------------------|-----------------------------------|---------------------|---------------------------------|---------------------|---|------|
| 1851 (FS30 <i>i</i> , 16 <i>i</i>) | 1). For cor | r full- | closed ion from | mode, | specify | 1. T | o prev | h (minimu: vent back t the follow | klas |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1884 (FS15 <i>i</i>) | | | | | | | | FCBL | |
| FCBL (#0) | Backlash compensation is not performed for the position in the full-closed mode. Valid Invalid NOTE Be sure to set a positive value for backlash compensation. If 0 or a negative value is specified, backlash compensation is not performed. | | | | | | | | |
| | | | | | | | | | |
| | E: in | nable P ertia rat | tio) as m | ol, and uch as p | increase | | | oop gain (3.1.) | (loa |
| | * | improveloci the ad | ves, and ty loop justment | l quadra gain is c ts becom | nt protri hanged | usions c in the solicate. So | an be r ubsequer | se of the m reduced. If nt adjustme use the velo | f th |
| | | | | • | lash acc | | | | |
| 1000 (50 (5)) | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1808 (FS15 <i>i</i>) 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | BLEN | | | | | | |
| BLEN (#5) | 1: T | o enable | e the bac | klash ac | celeratio | n functio | on | | |

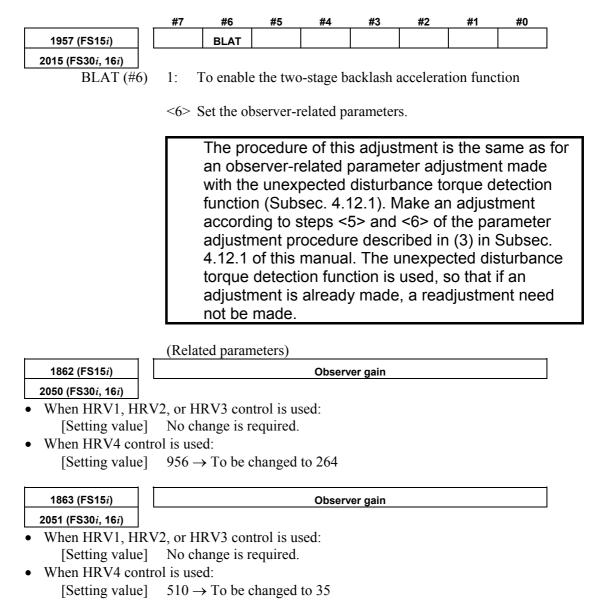


* When setting an observer gain, follow the settings of other functions (observer, unexpected disturbance torque detection). When the two-stage backlash acceleration function is used, the settings need not be changed.

<7> Adjust observer parameter POA1.

The 2-stage backlash acceleration function takes the friction torque as an estimated disturbance value by using the observer circuit and determines the first stage acceleration amount. Therefore, observer parameter POA1 must be adjusted to obtain correct acceleration. While observing estimated disturbance value DTRQ, perform acc./dec. to adjust POA1 to the optimum value.

The procedure for this adjustment is similar to the procedure for adjusting observer-related parameters in the unexpected disturbance torque detection function (Subsection 4.12.1). Make an adjustment by following steps <5> and <6> in (3), "Parameter adjustment methods", in Subsection 4.12.1 in this parameter manual. When the unexpected disturbance torque detection function is used, and the adjustment has already been made, re-adjustment is not needed.

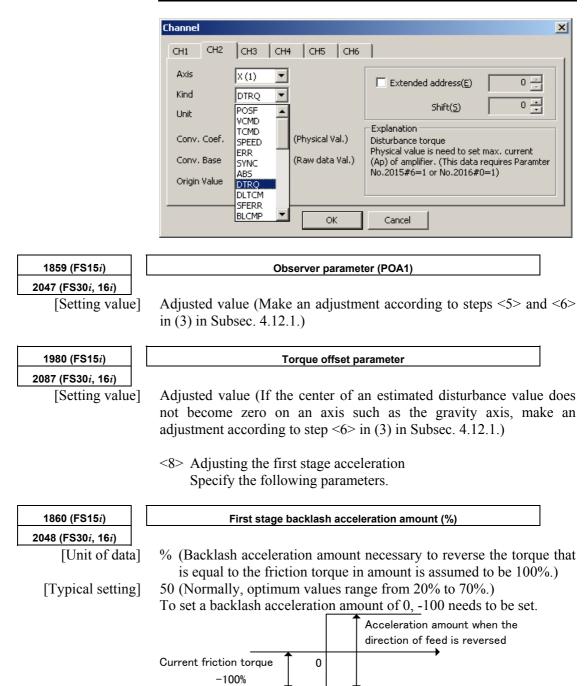


| 1987 (FS15 <i>i</i>) | | First stage acceleration amount from negative direction to positive direction |
|-------------------------------------|----|---|
| 2094 (FS30 <i>i</i> , 16 <i>i</i>) | | (%) |
| [Unit of data | a] | % |

Normally, this parameter is set to 0. If the quadrant protrusion varies with the reverse direction of the position command in the machine conditions, set an appropriate value in this parameter.

When this parameter is set, parameter No. 1860 (Series 15i) or No. 2048 (Series 30i, 16i, and so on) specifies the first stage positive-to-negative backlash acceleration amount.

(Setting the first stage acceleration in the parameter window)

| P Param - CNC-PARA.TXT(OFF-LINE:Path1) | |
|--|----------------------------|
| <u>File E</u> dit <u>M</u> ove <u>W</u> indow <u>H</u> elp | |
| ⊙ SV ○ SP Group(G) +Backlash Acceleration ▲ Axis | |
| Backlash acceleration 2-stage backlash acceleration 2-stage back | lash acceleration 2 2-stag |
| Backlash acceleration enable | |
| V Two-stage acceleration enable | 8 |
| Acceleration enable only on cutting | |
| Backlash comp | 5 |
| Backlash comp. 1 📩 1.000um | -10 0 10 20 30 |
| Backlash comp. disable for position | Time (ms) |
| 1st-stage acceleration | Dver rid & 100 %) |
| 1st stage backlash acceleration target | |
| 1st-stage acceleration goal(> +) (%) | |
| Stage 1 override | |
| POA1 2137 🛫 | 0246810 F m/min |
| Offset torque 0.0% | |

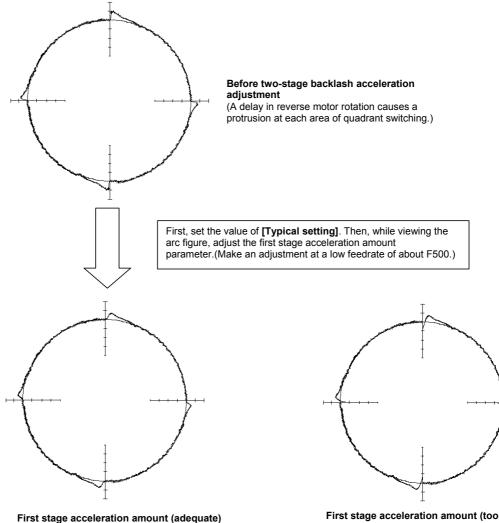


First stage acceleration amount (adequate) (Protrusions caused by machine friction remain, but these protrusions are corrected later when second stage acceleration is adjusted.) First stage acceleration amount (too large) (Cuts are caused by excessively high acceleration at the time of reverse motor rotation.)




| 1975 (FS15 <i>i</i>) | Second stage start position (detection unit) |
|-------------------------------------|--|
| 2082 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Unit of data] | Detection unit |
| [Typical setting] | 10 (For a detection unit of 1 µm) |
| | 100 (For a detection unit of $0.1 \mu\text{m}$) |
| | |
| | |
| | NOTE |
| | NOTE 1 As the second stage start position, the absolute value of the setting is used. |


| 1982 (FS15i)Second stage end scale factor2089 (FS30i, 16i)In units of 0.1[Unit of data]In units of 0.1[Valid data range]Series 90B0, 90B6, 90B5, 90D0, 90E0: 0 to 10279 (multiplication 0 to 1027.9)[Typical setting]Normally, this value may be set to 0. | on t |
|---|------|
| [Unit of data] In units of 0.1 [Valid data range] Series 90B0, 90B6, 90B5, 90D0, 90E0: 0 to 10279 (multiplicatio 0 to 1027.9) Series 9096: 0 to 642 (multiplication by 0 to 64.2) | on t |
| [Valid data range] Series 90B0, 90B6, 90B5, 90D0, 90E0: 0 to 10279 (multiplicatio 0 to 1027.9) Series 9096: 0 to 642 (multiplication by 0 to 64.2) | on t |
| 0 to 1027.9) Series 9096: 0 to 642 (multiplication by 0 to 64.2) | on t |
| Series 9096: 0 to 642 (multiplication by 0 to 64.2) | |
| | |
| 1 1 Vn(2) setting 1 = Normally this value may be set to 11 | |
| [Typical setting] Normany, this value may be set to 0. | |
| When the second stage end scale factor is set to 0, the second s acceleration distance is assumed as follows: | stag |
| If a positive value is set as the second stage start position, a v | valu |
| obtained by multiplying the start position by 2 is assumed. | |
| If a negative value is set as the second stage start position, a v | valu |
| obtained by multiplying the start position by 3 is assumed. | |
| By setting the second stage end scale factor, the second s | stag |
| acceleration distance may be set to any value. | |
| (Setting example) | |
| When the second stage start position is set to 10, and the set stage end scale factor is set to 50 (meaning multiplication by second stage acceleration is performed as shown below. | |
| First stage Second stage acceleration amount | |
| | |
| | |
| | |
| | |
| 10 50 | |
| Second stage acceleration distance= | |
| Second stage start position × 5 | |
| | |
| Second stage start position Second stage end position | |
| =Second stage start position | |
| +Second stage acceleration distance | e |
| Fig. 4.6.7 (c) Second stage end scale factor | |

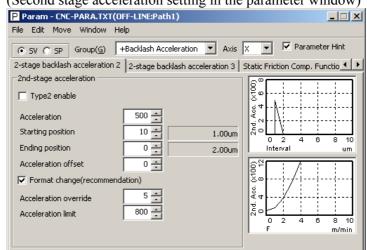


(Second stage acceleration setting in the parameter window)

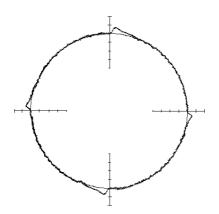

Before start/end parameter adjustment

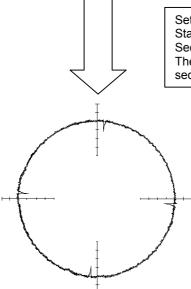

Set the following: Start/end parameter = Value of **[Typical setting]** Second stage acceleration amount = 500 Then, adjust the start/end parameter while viewing the timing of second stage acceleration from the arc figure.

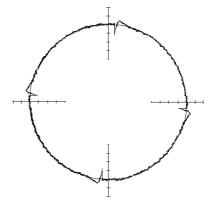

Start/end parameter (adequate) (A larger second stage acceleration amount is set to view the timing of second stage acceleration, so that cuts occur. This is corrected later.) **Start/end parameter (insufficient)** (The time for second stage acceleration is too short, so that second stage protrusions are not fully eliminated.)

Fig. 4.6.7 (d) Two-stage backlash acceleration (adjustment of start position and end scale factor)

| | NOTE Note that the two-stage backlash acceleration cannot be used together with the backlash stop function. Second stage acceleration is not completed by nature until a distance specified by "Second stage end scale factor" is moved. For example, if only several microns are moved after the direction is reversed, second stage acceleration continues. To prevent such continued acceleration from occurring, set a maximum allowable duration of time with the parameter below. |
|-------------------------------------|--|
| 1769 (FS15 <i>i</i>) | Two-stage backlash acceleration end timer |
| 2146 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Unit of data] | ms |
| [Typical setting] | 50 |
| | <9> Second stage acceleration adjustment The two-stage backlash acceleration function has effect even if only first stage is used. However, a protrusion may linger because of machine friction. In such a case second stage is useful. Adjust the second stage acceleration so that it falls in a range where no cut occurs. |
| 1724 (FS15 <i>i</i>) | Second stage acceleration amount for two-stage backlash acceleration |
| 2039 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Typical setting] | 100 (Too large a value could cause a cut at low feedrate.) |
| | NOTE When second stage acceleration is not used, set second stage acceleration amount = 0. The setting of second stage start position = 0 alone cannot disable second stage acceleration. |

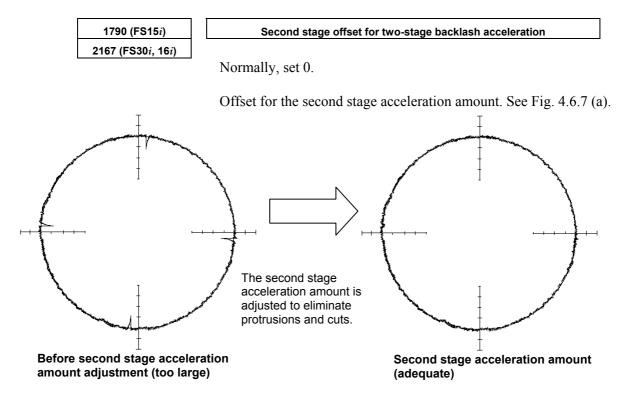


Fig. 4.6.7 (e) Two-stage backlash acceleration (second stage acceleration amount adjustment)

<10>Second stage acceleration override adjustment Second stage acceleration amounts can be overridden according to the circular acceleration.

When using the second stage acceleration override function, set the following.

| | #7 | #6 | #5 | #4 | | #3 | #2 | #1 | #0 | | |
|-------------------------------------|-----|------------|-----------|----------|-------|-------|--------|---------|----------|----|----|
| 1960 (FS15 <i>i</i>) | | | | | | | OVR8 | | | | |
| 2018 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | |
| OVR8 (#2) | 0: | The for | mat of | the s | econd | stage | accele | eration | override | is | in |
| | | reference | e to 4096 | . | | | | | | | |
| | 1: | The for | mat of | the s | econd | stage | accele | eration | override | is | in |
| | | reference | e to 256. | | | | | | | | |
| | Nor | mally, set | it to 1. | | | | | | | | |
| | | | | | | | | | | | |

| 1725 (FS15 <i>i</i>) | Second stage acceleration override | | | | | | | |
|-------------------------------------|------------------------------------|--|--|--|--|--|--|--|
| 2114 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| [Valid data range] | 0 to 32767 | | | | | | | |
| | | | | | | | | |

When the second stage acceleration override function is used, the second stage acceleration amount of two-stage backlash acceleration is found from the following formula:

(Second stage acceleration amount)=

(Second stage acceleration amount setting) $\times \left\{ 1 + \alpha \times \frac{(\text{Second stage override setting})}{a} \right\}$

If OVR8 = 1,
$$a = 256$$

If OVR8 = 0, a = 4096

Here, let α be a circular acceleration, R be a radius (mm), F be a circular feedrate (mm/min), and P be a detection unit (mm). Then, α can be expressed as:

$$\alpha = \left\{\frac{2}{R} \left(F / 60 \times 0.008\right)^2\right\} / F$$

So, the second stage override setting and acceleration amount are related as follows:

(Second stage override setting) =
$$\frac{a}{\alpha} \times \left\{ \frac{(\text{Second stage acceleration amount})}{(\text{Second stage acceleration amount setting})} - 1 \right\}$$

Example)

When using a second stage acceleration amount override, adjust the backlash second stage acceleration amount for two types of feedrates. Suppose that the adjusted values below are obtained.

No. 1960#2 (Series 15*i*)=1, No. 2018#2 (Series 30*i*, 16*i*, and so on)=1

- i) In the case of R10, F1000 (detection unit of 1 μ m), the optimal second stage acceleration amount is 40.
- ii) In the case of R10, F6000 (detection unit of 1 μ m), the optimal second stage acceleration amount is 100.

From the results above, the expressions below are obtained. For i)

$$\alpha = \left\{ \frac{2}{10} \left(1000/60 \times 0.008 \right)^2 \right\} / 0.001 = 3.56$$

Expressions <1>

(Second stage override setting) = $\frac{256}{3.56} \times \left\{ \frac{40}{(\text{Second stage acceleration amount setting)}} - 1 \right\}$ For ii)

$$\alpha = \left\{\frac{2}{10} \left(6000/60 \times 0.008\right)^2\right\} / 0.001 = 128$$

Expressions <2>

(Second stage override setting) = $\frac{256}{128} \times \left\{ \frac{100}{(\text{Second stage acceleration amount setting)}} - 1 \right\}$ From expressions <1> and <2>, the following is obtained:

$$\frac{256}{3.56} \times \left\{ \frac{40}{(\text{Second stage acceleration amount setting)}} - 1 \right\}$$
$$= \frac{256}{128} \times \left\{ \frac{100}{(\text{Second stage acceleration amount setting)}} - 1 \right\}$$

Accordingly, (second stage acceleration amount setting) = $38.3 \div 38$ From expression <2> (or from expression <1>), (second stage override setting) = $3.3 \div 3$

Set these values in No. 1724 and No. 1725 (Series 15*i*) or No. 2039 and No. 2114 (Series 30*i*, 16*i*, and so on). This completes the setting of a second stage acceleration override.

NOTE Second stage override is effective for second stage offset.

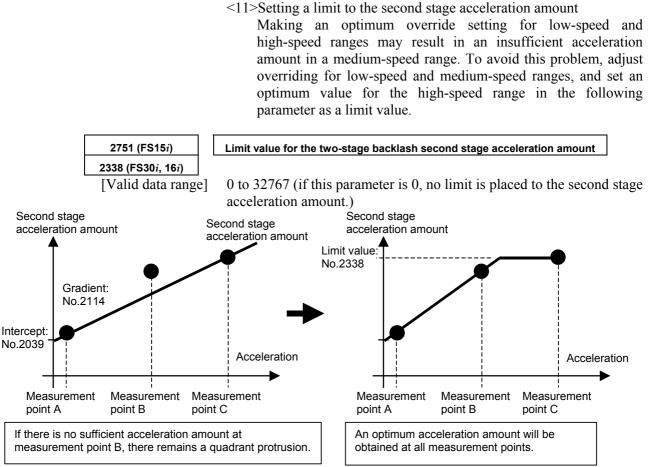


Fig. 4.6.7 (f) Override adjustment for the second stage acceleration amount of two-stage backlash acceleration

<12>Direction-specific setting for second stage acceleration

If the optimum second stage acceleration amount varies depending on the direction in which turn-over occurs, specify the following parameters.

| | following parameters. |
|---|---|
| 2752 (FS15 <i>i</i>) | Two-stage backlash second stage acceleration amount override for turn-over from the negative direction to the positive direction |
| 2339 (FS30 <i>i</i> , 16 <i>i</i>) Recommended value] | 100 |
| 2753 (FS15 <i>i</i>) 2340 (FS30 <i>i</i> , 16 <i>i</i>) | Second stage acceleration amount override for turn-over from the negative direction to the positive direction |
| [Valid data range] | 0 to 32767 Not used if the two-stage backlash second stage acceleration amou from the negative direction to the positive direction (parameter N 2752 (for the Series 15<i>i</i>) and No. 2339 (for the Series 30<i>i</i>, 16<i>i</i>, and on)) is 0. This parameter takes effect when a reverse from the negative direction to the positive direction takes place if the two-stage backlash secon stage acceleration amount from the negative direction to the positive direction (parameter No. 2752 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 (for the Series 15<i>i</i>) and No. 2339 |

the Series 30*i*, 16*i*, and so on)) is not 0.

It is not overridden if the setting is 0.

4.SERVO FUNCTION DETAILS

| 2754 (FS15 <i>i</i>) 2341 (FS30 <i>i</i> , 16 <i>i</i>) | Second stage acceleration limit value for turn-over from the negative direction to the positive direction |
|--|---|
| [Valid data range] | 0 to 32767 |
| | Not used if the two-stage backlash second stage acceleration ar |

Not used if the two-stage backlash second stage acceleration amount from the negative direction to the positive direction (parameter No. 2752 (for the Series 15*i*) and No. 2339 (for the Series 30*i*, 16*i*, and so on)) is 0. This parameter takes effect when a reverse from the negative direction to the positive direction takes place if the two-stage backlash second stage acceleration amount from the negative direction to the positive direction (parameter No. 2752 (for the Series 15*i*) and No. 2339 (for the Series 30*i*, 16*i*, and so on)) is not 0.

If the setting is 0, the second stage acceleration amount is not limited.

[Parameters used for direction-based setting]

Series30*i*,16*i*, and so on

| Direction-based setting | Reverse direction | Second stage acceleration | Acceleration amount override | Acceleration limit value | |
|-------------------------|-------------------|------------------------------|------------------------------|-----------------------------|--|
| None | Common | No.2039 | No.2114 | No.2338 | |
| Dresert | From + to - | 10.2039 | 10.2114 | NU.2330 | |
| Present | From - to+ | No.2339 | No.2340 | No.2341 | |

Series 15i

| Direction-based setting | Reverse direction | Second stage acceleration | Acceleration amount override | Acceleration limit value |
|----------------------------|-------------------|---------------------------|---------------------------------|-----------------------------|
| None | Common | No.1724 | No.1725 | No.2751 |
| Dresent | From + to - | NO. 1724 | 10.1725 | NU.2751 |
| Present | From - to+ | No.2752 | No.2753 | No.2754 |

(4) Neglecting backlash acceleration during feeding by the handle

By enabling the bit below, the backlash acceleration function can be enabled only during cutting feed.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------|----|------|----|----|----|----|----|----|
| 1953 (FS15 <i>i</i>) | | BLCU | | | | | | |
| | | | | | | | | |

2009 (FS30*i*, 16*i*) BLCU (#6)

1: To enable backlash acceleration only during cutting feed


NOTE

When bit 3 of No. 1800 is set to 1, the backlash acceleration function is enabled at all times, and switching is disabled.

With following series and editions of servo software, the bit 7 of parameter No. 2752 (for the Series 15i) or bit 7 of No. 2339 (for the Series 30i, 16i, and so on) can also be used to enable the backlash acceleration function only during cutting feed.

- Series 90B0/C(03) and subsequent editions
- Series 90B6/A(01) and subsequent editions
- Series 90B5/A(01) and subsequent editions
- Series 90D0/A(01) and subsequent editions
- Series 90E0/A(01) and subsequent editions

By using this bit, switching is enabled even when bit 3 of No. 1800 is set to 1. Backlash acceleration is enabled even at the hole bottom during rigid tapping.

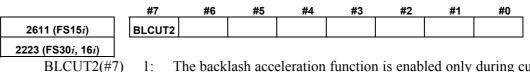

: The backlash acceleration function is enabled only during cutting feed.


(5) Two-stage backlash acceleration function (type 2)

When the 2-stage backlash acceleration function is used, quadrant protrusions may be reduced more effectively by starting the second stage acceleration as early as possible. The 2-stage backlash acceleration function type 2 enables the second stage acceleration immediately after a reverse operation takes place.

- Series and editions of applicable servo software

(Series 30i,31i,32i)
90D0/A(01) and subsequent editions
90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
90B0/W(23) and subsequent editions
90B1/A(01) and subsequent editions
90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
90B5/A(01) and subsequent editions

- Comparison with the conventional second stage acceleration

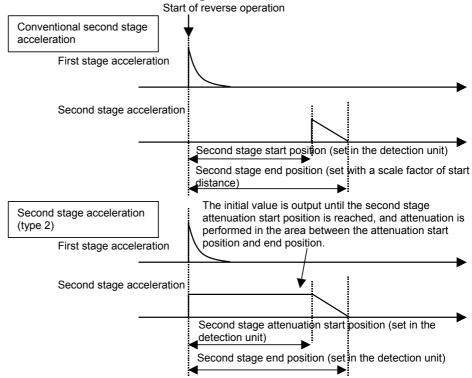

Normally, second stage acceleration is not output until the second stage start distance is reached. The 2-stage backlash acceleration type 2 starts outputting the acceleration amount immediately after the reverse operation, and starts attenuation after the start distance.

- Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------------------|--------|---|------------|-----------|----------|-----------|----|-----------------------|
| 2684(FS15 <i>i</i>) | | | 2NDTMG | | | | | |
| 2271(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| 2NDTMG(#5) | 0: D | oes not | use the 2- | -stage ac | celerati | on type 2 | 2. | |
| | 1: U | Ises the 2 | 2-stage ac | ccelerati | on type | 2. | | |
| | | | | | | | | |
| 1975(FS15 <i>i</i>) | | Second stage attenuation start position | | | | | | |
| 2082(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| [Valid data range] | 0 to 3 | 2767 | | | | | | |
| [Unit od data] | Detec | tion unit | - | | | | | |
| [Typical setting] | 0 to 1 | 0 µm | | | | | | |
| | | | | | | | | |
| 1982(FS15 <i>i</i>) | | | Sec | ond stage | end pos | ition | | |
| 2089(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| [Valid data range] | 0 to 3 | 2767 | | | | | | |
| [Unit od data] | Detec | tion unit | - | | | | | |
| [Typical setting] | 20 to | 30 µm | | | | | | |
| | _ | | | | | | | |
| | NC | 2, the | • | stage | | | | ction typ ectly in |

4.6.8 Static Friction Compensation Function


(1) Overview

When a machine, originally in the stop state, is activated, the increase in speed may be delayed by there being a large amount of static friction. The backlash acceleration function (see Subsec. 4.6.6 and Subsec. 4.6.7) performs compensation when the motor rotation is reversed. This function adds compensation data to a velocity command when the motor, originally in the stop state, is requested to rotate in the same direction, thus reducing the activation delay.

(2) Series and editions of applicable servo software


(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Block diagram

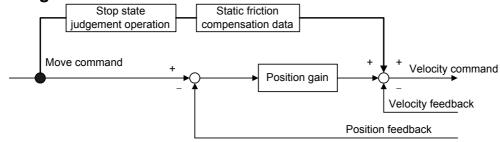

(4) Setting parameters

<1> Enable this function.

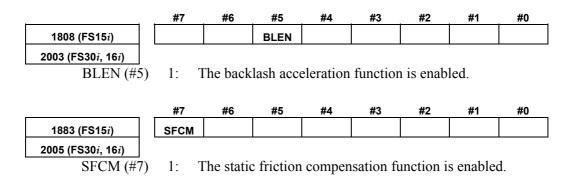

| 1964 (FS15 <i>i</i>) | Time during which the static friction compensation function is enabled (in | | | | | |
|--|---|--|--|--|--|--|
| 2071 (FS30 <i>i</i> , 16 <i>i</i>) | 2-ms units) | | | | | |
| [Valid data range] | 0 to 32767 | | | | | |
| [Recommended value] | 10 | | | | | |
| · · · · · · · · | | | | | | |
| 1965 (FS15 <i>i</i>) | Static friction compensation | | | | | |
| 2072 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | |
| [Valid data range] | 0 to 32767 | | | | | |
| [Recommended value] | 100 | | | | | |
| | Offset for the velocity command that is to be added at the start of | | | | | |
| | travel from a stopped state | | | | | |
| | | | | | | |
| 1966 (FS15 <i>i</i>) | Stop state judgement parameter | | | | | |
| 2073 (FS30 <i>i</i> , 16 <i>i</i>) | 1. 207/7 | | | | | |
| [Valid data range] | 1 to 32767 | | | | | |
| [Method of setting] | Stop determination time = (parameter setting) \times 8 ms If the machine starts moving after stopping for the time set in this | | | | | |
| | parameter or more, this compensation function is enabled. | | | | | |
| | parameter of more, this compensation function is enabled. | | | | | |
| | NOTE 1 If a small value is set in this parameter, feed at a low feedrate is regarded by mistake as stop state, and compensation may not be performed correctly. In such a case, increase the setting of this parameter. 2 When the static friction compensation function is enabled, be sure to set a nonzero positive value in this parameter. | | | | | |
| · | #7 #6 #5 #4 #3 #2 #1 #0 | | | | | |
| 1953 (FS15 <i>i</i>) | BLST | | | | | |
| 2009 (FS30 <i>i</i> , 16 <i>i</i>) BLST (#7) | 1: The function used to release static friction compensation is enabled. | | | | | |
| 1990 (FS15 <i>i</i>) | Parameter for stopping static friction compensation | | | | | |
| 2097 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | |
| [Valid data range] | 0 to 32767 | | | | | |
| [Recommended value] | 5 | | | | | |
| | Parameter related to the distance the tool travels until the end of the | | | | | |
| | static friction compensation function. Determine the setting by | | | | | |
| | looking at the actual shape. | | | | | |

<2> Set adjustment parameters.

4.SERVO FUNCTION DETAILS

| - | |
|----------------------|----|
| 2347(FS30 <i>i</i>) | |
| [Valid data rang | e] |

0 to 32767

Speed command offset applied when a movement is started from a stop in the minus (-) direction.

Static friction compensation (minus direction)

When No. $2347 \neq 0$, direction-by-direction static friction compensation is enabled. When a movement is made in the minus (-) direction, the value set in parameter No. 2347 is applied as a static friction compensation value. When a movement is made in the plus (+) direction, the value set in parameter No. 2072 is applied.

When No. 2347=0, the value set in parameter No. 2072 is used as a static friction compensation value.

| No.2347 | Applied sta compe | Remarks | |
|-------------------|--|----------|---|
| NU.2347 | Movement in Movement in + direction – direction | | Remarks |
| 0 | No.2072 | No. 2072 | Disables direction-by-direction static friction compensation. |
| Non-zero value | rero No.2072 No. 2347 direction-by-direction s | | Enables direction-by-direction static friction compensation. |

Series and editions of applicable servo software (Series 30*i*,31*i*,32*i*)

Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions

4.6.9 Torsion Preview Control Function

(1) Overview

For relatively large machines having torsion, torsion occurs between the motor and the machine end during acceleration and deceleration. In machines of this type, positional deviation is caused by torsion during acceleration and deceleration.

Torsion preview control compensates the speed command by estimating the amount of torsion from the position command. This reduces the amount of positional deviation during acceleration and deceleration.

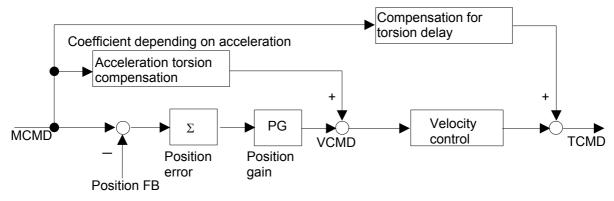


Fig. 4.6.9(a) Torsion preview control structure

(2) Series and editions of applicable servo software

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B0/W(23) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

(3) Notes

- This function works only in the nano interpolation mode.
- Because this function requires the user to observe the machine operation at the time of adjustment, a separate detector is needed.
- Enable the feed-forward function.
- The function is more effective when the time constant of acc./dec. is set so that acceleration changes smoothly. (Example: Bell-shaped acc./dec. before interpolation plus linear-shaped acc./dec. after interpolation)

(4) Setting parameters <1> Setting feed-forward

Torsion preview control uses feed-forward processing. Therefore, the following parameter must be set:

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|----------------------|-------------|------------|------------|------------|-------------|--------------|--------------|------------|-----|
| 1883(FS15 <i>i</i>) | | | | | | | FEED | | |
| 2005(FS16 <i>i</i>) | | | | | | | | | |
| FEED(#1) | The fe | ed-forwa | ard funct | ion is: | | | | | |
| | 0: N | lot used. | | | | | | | |
| | <u>1:</u> L | | | | | | | | |
| | | - | | | | | | Since an | |
| | | | | | | | | lue durin | - |
| | 0 | - | | | | ard coef | ficient fo | or the fee | ed |
| | which | torsion J | preview | control 1 | s used. | | | | |
| | | | | | | | | | I |
| 1985(FS15 <i>i</i>) | | Advan | ced previe | ew feed-fo | orward co | efficient (A | ADFF1) | | l |
| 2092(FS16 <i>i</i>) | | | | | | | | | |
| | [| | | | | | | 1 | 1 |
| 1961(FS15 <i>i</i>) | | | Feed-fo | orward co | efficient (| FALPH) | | | l |
| 2068(FS16 <i>i</i>) | | | | | | | | | |
| | | | | | | | | | |
| 1767(FS15 <i>i</i>) | P | osition ad | vanced pr | eview feed | d-forward | coefficier | nt for cutti | ng | l |
| 2144(FS16 <i>i</i>) | | | | | | | | | |
| , , , , , | | | | | | | | | |
| | When | enabling | o torsion | nreview | control | also in | ranid tra | verse set | t F |

When enabling torsion preview control also in rapid traverse, set FFR to 1 to enable feed-forward control during rapid traverse.

| . <u></u> | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|----------------------|--------|------------|-----------|-----------|-----------|---------|----|----|
| 1800(FS15 <i>i</i>) | | | | | FFR | | | |
| 1800(FS16 <i>i</i>) | | | | | | | | |
| FFR(#3) | Feed-f | forward of | control d | uring raj | pid trave | rse is: | | |

Feed-forward control during rapid traverse is:

Enabled. 0:

Disabled. 1:

<2> Operation measurement and time constant setting

To make adjustments, measure the velocity waveform and error amount.

The waveform may be measured using either the waveform display screen or SERVO GUIDE. When operating the machine at a feedrate of about F10 m/min, check that the following waveform is observed:

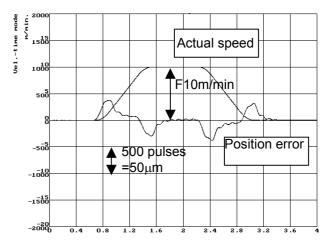


Fig. 4.6.9(b) Position error and actual speed

Torsion preview control differentiates position commands, so attention should be given to the command mode and time constant setting.

To ensure continuity of position command differential values, the bell-shaped time constant and the time constant of acc./dec. after interpolation must be set as well as the time constant of acc./dec. before interpolation. The adjustment examples presented here assume a large machine with a low resonance frequency of about 10 Hz and set a time constant that prevents the machine from shaking largely at the time of acc./dec.

Time constant of acc./dec. before interpolation

750 ms taken to reach F12000 mm/min

Acc./dec. before interpolation: bell-shaped time constant 200ms


Time constant of acc./dec. after interpolation 100ms

By setting the three time constants as explained above, the acceleration component of position commands form a bell shape, and the compensation value of torsion preview control also becomes smooth. The values of the time constants depend on the vibration status of the machine. So, set the time constants not to allow acc./dec. to cause large vibration.

For position command data resolution and smoothness, nano interpolation is used. When using torsion preview control, be sure to perform operation in a nano interpolation mode such as AI nano contour control or AI nano high precision contour control (when nano interpolation is disabled, torsion preview control is also disabled.)

<3> Setting the acceleration

In torsion preview control, three acceleration areas can be specified, and compensation coefficients can be set separately for these areas. In a machine having the spring characteristic assumed by torsion preview control, there are almost proportional relationships between the acceleration and the torsion amount and position error. Therefore, setting the acceleration set for the time constant of acc./dec. before interpolation and one acceleration which is about 1/2 to 3/4 of the acceleration is normally sufficient.

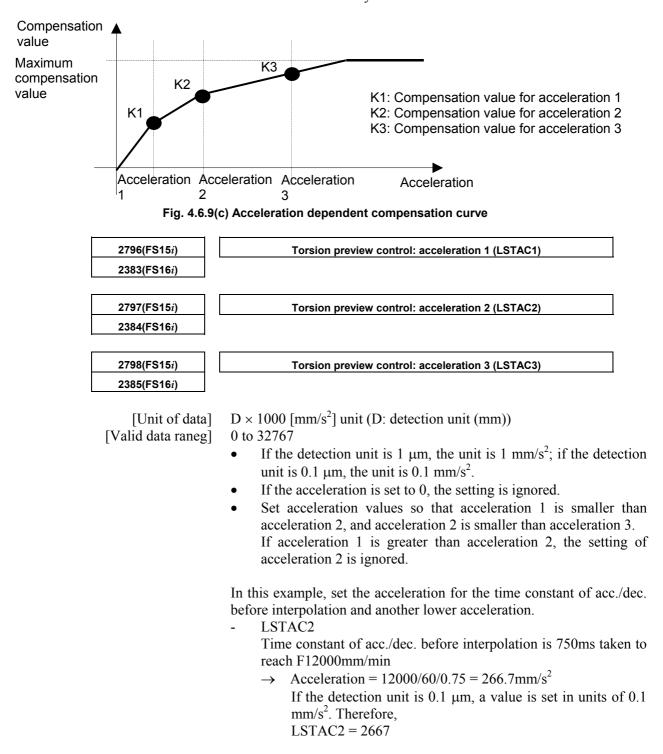

LSTAC1

Acceleration that is 3/4 of LSTAC2, 1000 ms taken to reach F12000 mm/min

- \rightarrow Acceleration = 12000/60/1 = 200 mm/s², therefore, LSTAC1 = 2000
- LSTAC3
 - LSTAC3 = 0 because LSTAC3 is not used.



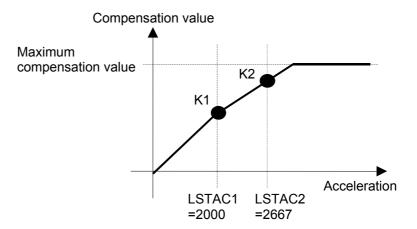


Fig. 4.6.9(d) Example of compensation curve

<4> Setting the acceleration torsion compensation value


The acceleration torsion compensation value is used to compensate the amount of torsion generated at a constant acceleration. While changing the acceleration setting, measure the position error generated at a constant acceleration.

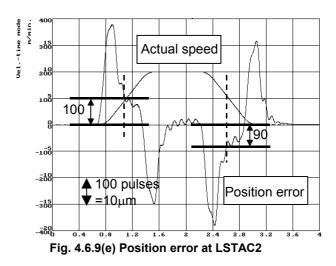

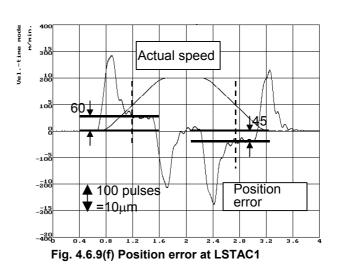


Set the values measured in Fig. 4.6.9 (e) and Fig. 4.6.9 (f) above in the acceleration torsion compensation values shown below.

| (Acceleratio | n torsion amount) |
|--|---|
| 2799(FS15 <i>i</i>) 2386(FS16 <i>i</i>) | Torsion preview control: Acceleration torsion compensation value K1 (LSTK1) |
| [Unit of data] [Valid data raneg] | Detection unit 0 to 32767 Set the torsion amount generated at acceleration 1 in the detection unit. When 0 is set, compensation is disabled. |
| 2800(FS15 <i>i</i>) 2387(FS16 <i>i</i>) | Torsion preview control: Acceleration torsion compensation value K2 (LSTK2) |
| [Unit of data] [Valid data raneg] | Detection unit 0 to 32767 Set the torsion amount generated at acceleration 2 in the detection unit. When 0 is set, acceleration 1 and the K1 setting are applied. (See Fig. 4.6.9(g).) |
| 2801(FS15 <i>i</i>) 2388(FS16 <i>i</i>) | Torsion preview control: Acceleration torsion compensation value K3 (LSTK3) |
| [Unit of data] [Valid data raneg] | Detection unit 0 to 32767 Set the torsion amount generated at acceleration 3 in the detection unit. When 0 is set, acceleration 2 and the K2 setting are applied. (See Fig. 4.6.9(h).) The compensation values are corrected automatically so that the following is satisfied: $K1 \le K2 \le K3$. (See Fig. 4.6.9(i).) |

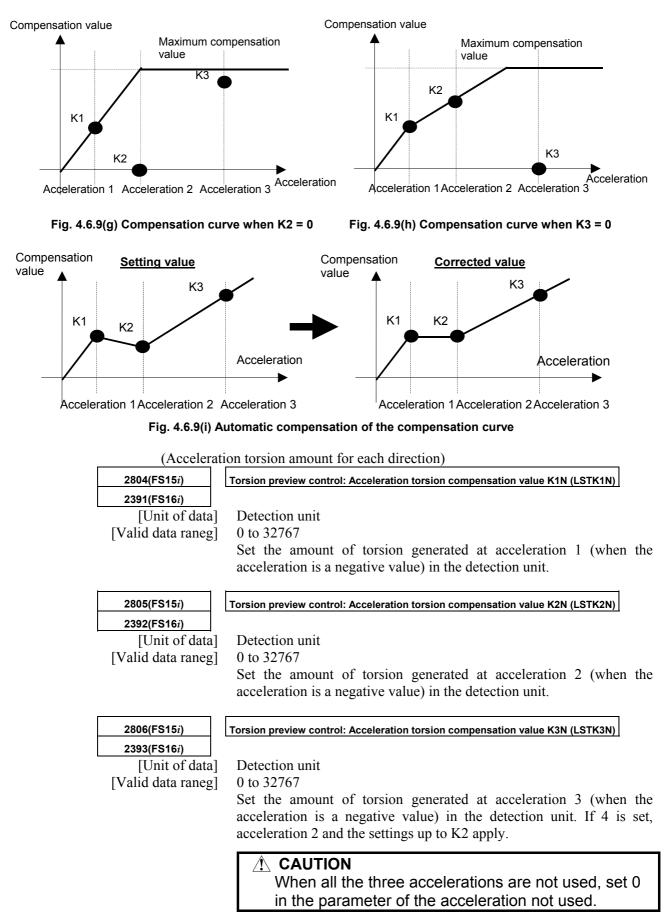

From Fig. 4.6.9 (e) and Fig. 4.6.9 (f), LSTK1 through LSTK3 and LSTK1N through LSTK3N are set as follows: LSTK1=60, LSTK2=100, LSTK3=0 LSTK1N=45, LSTK2N=90, LSTK3N=0

<5> Setting the maximum compensation value (enabling torsion preview control)

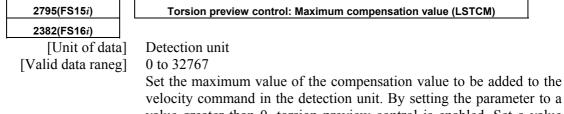

velocity command in the detection unit. By setting the parameter to a value greater than 0, torsion preview control is enabled. Set a value greater than the maximum position error value measured (a value obtained by multiplication by about 1.2 to 2).

LSTCM=500 ne above setting enables this compo

The above setting enables this compensation, which reduces the position error generated at the time of acc./dec.


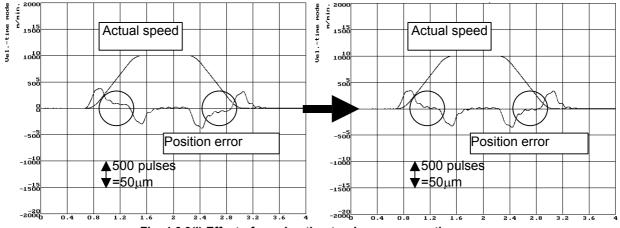



Fig. 4.6.9(j) Effect of acceleration torsion compensation

<6> Setting the torsion delay compensation value

Just with the acceleration torsion compensation value, the torsion amount generated at the start of acc./dec. due to delay in velocity control cannot be corrected, therefore there is a position error still left. Adjust the torsion delay compensation value while observing the waveform plotted at the time of acc./dec.

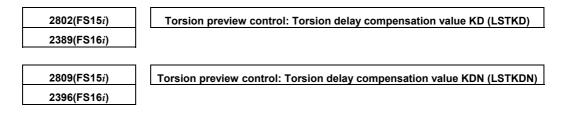

LSTKDN is used when there is a difference in delay between the start of acceleration and the start of deceleration.

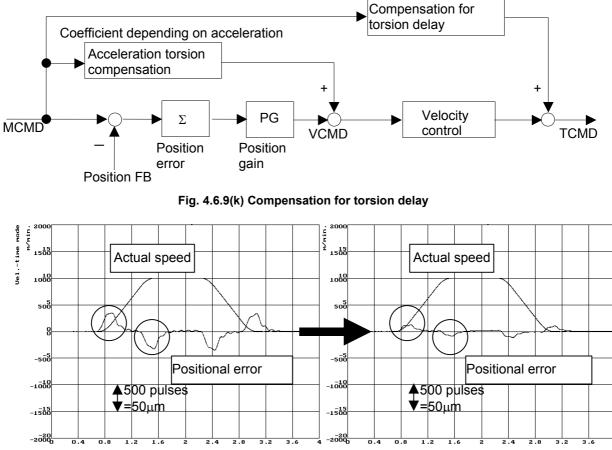



When the torsion delay compensation value is set to 2000, there is slight position error still left, so a fine adjustment is made. Then, the position error is decreased to 10 µm or less as shown in the figure below.

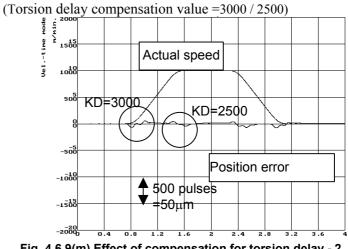


Fig. 4.6.9(m) Effect of compensation for torsion delay - 2

<7> Setting the torsion torque compensation coefficient

Torsion torque compensation is set when an adequate velocity loop gain cannot be obtained and acceleration torsion compensation does not work efficiently. The delay in velocity control can be compensated by adding the differential of the compensation value to TCMD.

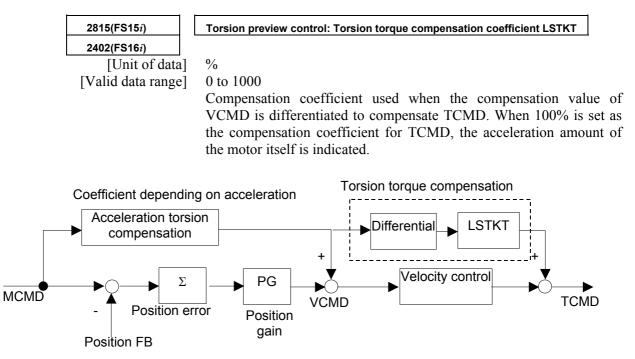


Fig. 4.6.9(n) Torsion torque compensation

4.7 OVERSHOOT COMPENSATION FUNCTION

(1) Setting parameters

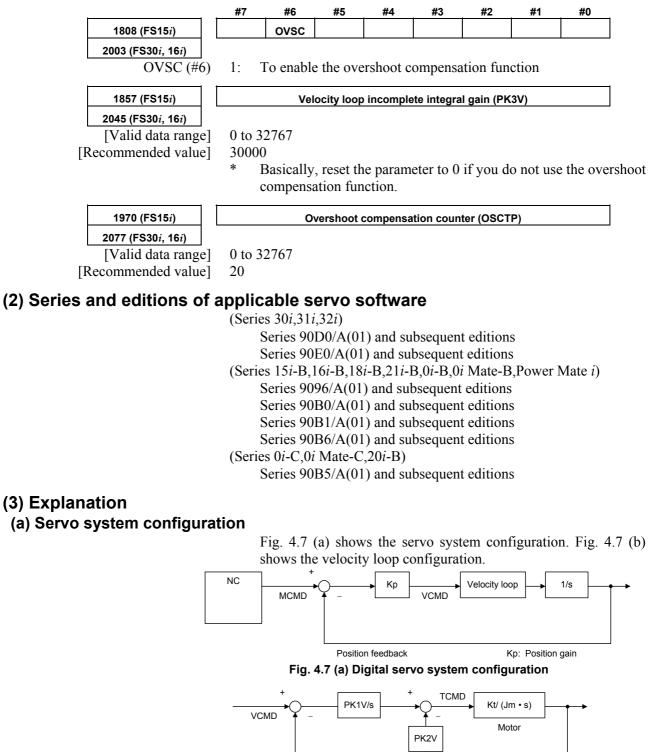


Fig. 4.7 (b) Velocity loop configuration

PK1V: PK2V:

/s:

Velocity loop integral gain

Integrator

Velocity loop proportional gain

Velocity feedback

(b) When incomplete integration and overshoot compensation are not used.

First, 1–pulse motion command is issued from NC. Initially, because the Position Feedback and Velocity Feedback are "0", the 1–pulse multiplied position gain Kp value is generated as the velocity command (VCMD).

Because the motor will not move immediately due to internal friction and other factors, the value of the integrator is accumulated according to the VCMD. When the value of this integrator creates a torque command, large enough to overcome the friction in the machine system, the motor will move and VCMD will become "0" as the value of MCMD and the Position Feedback becomes equal.

Furthermore, the Velocity Feedback becomes "1" only when it is moved, and afterwards becomes "0". Therefore the torque command is held fixed at that determined by the integrator.

The above situation is shown in Fig. 4.7 (c).

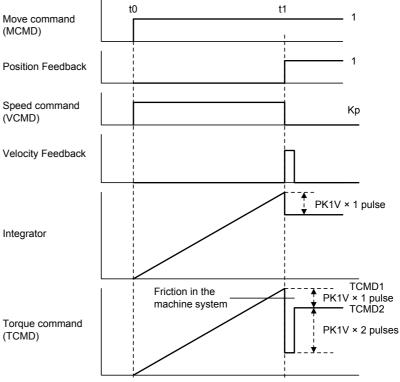


Fig. 4.7 (c) Response to 1 pulse movement commands


If Fig. 4.7 (c) on the previous page, the torque (TCMD1) when movement has started becomes greater than the machine static friction level. The motor will move 1 pulse, and finally stops at the TCMD2 level.


Because the moving frictional power of the machine is smaller than the maximum rest frictional power, if the final torque TCMD2 in Fig. 4.7 (c) is smaller than the moving friction level, the motor will stop at the place where it has moved 1 pulse, Fig. 4.7 (d). When the TCMD2 is greater than the moving friction level the motor cannot stop and overshoot will occur Fig. 4.7 (e).

The overshoot compensation function is a function to prevent the occurrence of this phenomenon.

(c) Response to 1 pulse movement commands

(i) Torque commands for standard settings (when there is no overshoot)

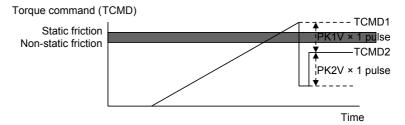

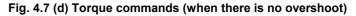

(ii) Torque commands for standard settings (during overshoot)

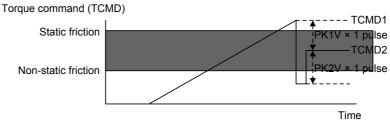



Fig. 4.7 (e) Torque commands (during overshoot)

Conditions to prevent further overshoot are as follows. When


TCMD1 > static friction > non-static friction > TCMD2...... <1> and there is a relationship there to

TCMD1 > static friction > TCMD2 > non-static friction..... <2> regarding static and non-static friction like that of (ii), use the overshoot compensation in order to make <2> into <1>. The torque command status at that time is shown in (iii).

(iii) Torque command when overshoot compensation is used

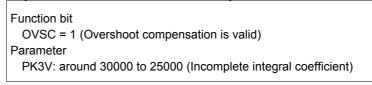

(Example)

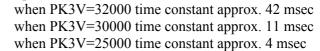

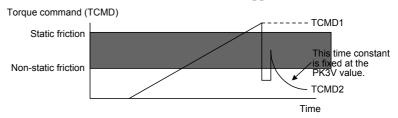


Fig. 4.7 (f) Torque command (when overshoot is used)

If this overshoot compensation function is used, it is possible to prevent overshoot so that the relationship between machine static and non–static friction and TCMD2 satisfies <1>, however the torque TCMD during machine stop is

TCMD2 = 0

the servo rigidity during machine stop is insufficient and it is possible that there will be some unsteadiness at ± 1 pulse during machine stop.

There is an additional function to prevent this unsteadiness in the improved type overshoot prevention function and the status of the torque command at that time is shown in (iv).

(iv) Torque command when the improved type overshoot compensation is used

| Function bit | | npensation is valid) | |
|--------------|--------------|-----------------------------------|--|
| Parameter | · | · · · | |
| PK3V: | around 32000 | (Incomplete integral coefficient) | |
| OSCTP: | around 20 | (Number of incomplete integral) | |
| | | | |

When overshooting with this parameter, try increasing the value of the overshoot protection counter (OSCTP) by 10. Conversely, when there is no overshooting, but unsteadiness occurs easily during machine stop, decrease the overshoot protection counter (OSCTP) value by 10. When overshoot protection counter (OSCTP) = 0 it is the same as existing overshoot compensation.

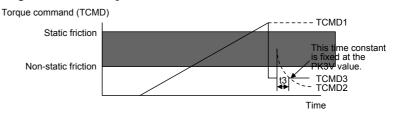


Fig. 4.7 (g) Torque command (using improved type overshoot compensation)

If this function is used, the final torque command is TCMD3. If the parameter PK3V (t3) is fixed so that this value becomes less than the non-static friction level, overshoot is nullified. Because torque command is maintained to some degree during machine stop, it is possible to decrease unsteadiness during machine stop.

(4) Improving overshoot compensation for machines using a 0.1- μ m detection unit

(a) Overview

Conventional overshoot compensation performs imperfect integration only when the error is 0.

A machine using a 0.1-µm detection unit, however, has a very short period in which the error is 0, resulting in a very short time for imperfect integration.

The new function judges whether to execute overshoot compensation when the error is within a predetermined range.

(b) Setting parameters

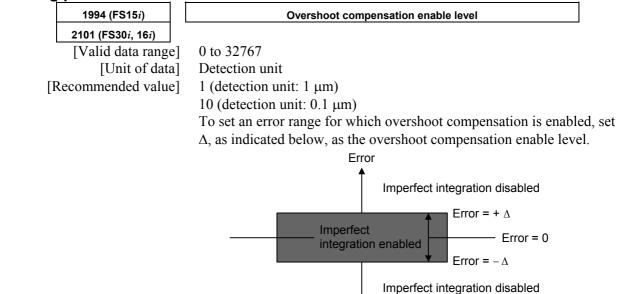


Fig. 4.7 (h) Relationship between error and overshoot compensation

(5) Overshoot compensation type 2

(a) Overview

For a machine using, for example, 0.1-µm detection units, the use of the conventional overshoot compensation function may generate minute vibrations when the machine stops, even if the parameter for the number of incomplete integration is set.


This is caused by the repeated occurrence of the following phenomena:


- While the machine is in the stopped state, the position error falls within the compensation valid level, and the integrator is rewritten. Subsequently, the motor is pushed back by a machine element such as a machine spring element, causing the position error to exceed the compensation valid level.
- While the position error is beyond the threshold, a torque command is output to decrease the position error, then it decreases to below the threshold again.

In such a case, set the bit indicated below to suppress the minute vibration.

4.SERVO FUNCTION DETAILS

(b) Setting parameters

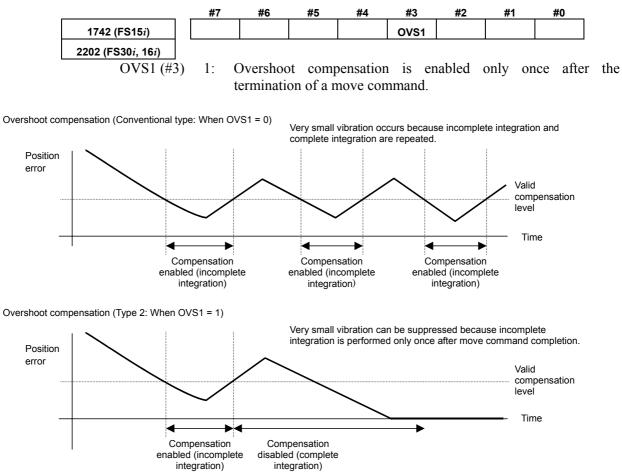

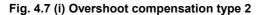

4.8 HIGH-SPEED POSITIONING FUNCTION

High-speed positioning is used in the following cases:

- <1> To perform point-to-point movement quickly, where the composite track of two or more simultaneous axes can be ignored such as, for example, in a punch press
- <2> To speed up positioning in rapid traverse while errors in the shape during cutting must be minimized (reduction of cycle time) In case <1>, the position gain switching function and the low-speed integral function are effective (⇒ See Subsec. 3.3.2, "High-Speed Positioning Adjustment Procedure"). For the application of <2> above, a combination of the fine acc./dec. (FAD) function and rapid traverse feed-forward is useful. In the Series 30*i*, 31*i*, and 32*i*, nano interpolation is always enabled, so the fine acc./dec. function is unnecessary. For the use in <2> above, only the setting of the feed-forward function is required.

This section explains these functions.

4.8.1 Position Gain Switching Function

(1) General

An increase in the position gain is an effective means of reducing the positioning time when the machine is about to stop.

An excessively high position gain decreases the tracking ability of the velocity loop, making the position loop unstable. This results in hunting or overshoot. A position gain adjusted in high-speed response mode produces a margin in the position gain when the machine is about to stop.

Increase the position gain in low-speed mode so that both the characteristics in high-speed response mode and a short positioning time are achieved.

(2) Series and edition of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

| <1> This | parameter | specifies | whether | to | enable | the | position | gain |
|----------|-------------|-------------|---------|----|--------|-----|----------|------|
| swite | hing functi | on as follo | ows: | | | | | |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|----------------|-----------|--------------------|---------------------------------|------------|----------------------|----------|----------|--------|
| 1957 (FS15 <i>i</i>) | | | | | | | | PGTW | |
| 2015 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| PGTW (#0) | The p | osition g | ain swit | ching fur | nction is | used. | | | |
| | | /alid | | | | | | | |
| | 0: I | nvalid | | | | | | | |
| | < ? > 1 | This nor | matar | manifias | whatha | r to sot | the vel | oity of | which |
| | | | | tching is | | | | ocity at | which |
| 1713 (FS15 <i>i</i>) | | | - | Ŭ | | - | | | |
| | | LIIII | i speeu io | r enabling | position | gam switt | uning | | I. |
| 2028 (FS30 <i>i</i> , 16 <i>i</i>) | Tho n | ogition | nin ia d | oublad y | with a ar | and low | or than | or aqual | to the |
| | | specifie | | | vitil a sp | Jeeu Iow | | or equal | to the |
| [Unit of data] | | y motor: | | | | | | | |
| | | | | 1 mm/mi | in | | | | |
| [Valid data range] | | | | | | | | | |
| [Recommended value] | | to 5000 | | | | | | | |
| | | | | | | | | | |
| | | system | the higi n magn | h-speed ificatior rease t | n functi | on (\rightarrow (| (5) in S | | ent |

Fig. 4.8.1 (a) shows the relationships between the position error and velocity command.

(4) When the feed-forward function is used at the same time (position gain switching function type 2)


When using the position gain switching function together with the feed-forward function, make the setting below.

(a) Overview

When the conventional position gain switching function is used in conjunction with the feed-forward function, it can cause an overshoot at a relative low feed-forward coefficient, sometimes resulting in a difficulty in adjustment, because also the feed-forward term-based effect is doubled. Position gain switch function type 2 has been improved to make position gain switching independently of the feed-forward function.

(b) Setting parameters

In addition to the parameter of the position gain switching function described earlier, set the following parameter.

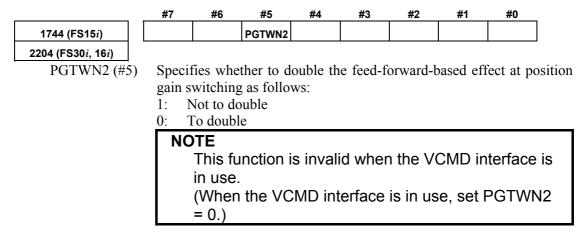


(5) High-speed positioning velocity increment system magnification function (a) Overview

This function increases the velocity increment system for the effective velocity parameter of the high-speed positioning functions (position gain switch and low-speed integral functions) to ten times.

(b) Setting parameters

Using the following parameter can change the increment system for the effective velocity.

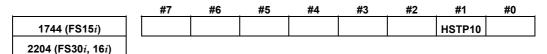

HSTP10 (#1) Specifies the effective velocity increment system for the high-speed positioning functions (position gain switch and low-speed integral functions) as follows:

- 1: 0.1 min⁻¹ (rotary motor), 0.1 mm/min (linear motor)
- 0: 0.01 min⁻¹ (rotary motor), 0.01 mm/min (linear motor)

NOTE

- 1 The value set in this function applies to the increment system of both the "position gain switching function" and "low-speed integral function."
- 2 When this function is set, the error amount in constant-speed feed and the actual position gain indication on the CNC do not match the logical values.

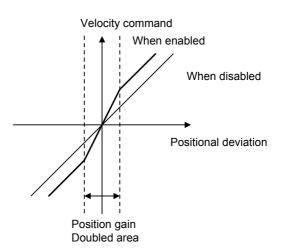


Fig. 4.8.1 (a) Position gain switching

4.8.2 Low-speed Integral Function

(1) Overview

To ensure that the motor responds quickly, a small time constant must be set so that a command enabling quick startup is issued.

If the time constant is too small, vibration or hunting occurs because of the delayed response of the velocity loop integrator, preventing further reduction of the time constant.

With the low-speed integral function, velocity loop integrator calculation is performed in low-speed mode only. This function ensures quick response and high stability while maintaining the positioning characteristics in the low-speed and stop states.

(2) Series and edition of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

<1> Specify whether to enable the low-speed integral function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------|------------|------------|----------------------|-----------|------------|------------|-------------|
| 1957 (FS15 <i>i</i>) | | | | | | | SSG1 | |
| 2015 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| SSG1 | The lo | ow-speed | l integra | l functio | n is used | • | | |
| | 1: 1 | Valid | | | | | | |
| | 0: 1 | Invalid | | | | | | |
| | <2> \$ | Specify v | whether t | to enable | integrat | ion at ac | c./dec. ti | ime. |
| 1714 (FS15 <i>i</i>) | | Limit spee | d for disa | bling low- | speed int | egral at a | celeratio | ı |
| 2029 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | The i | ntegral g | ain is in | validate | d during | acceler | ation at | a speed hig |
| | than c | or equal t | | | peed. | | | |
| [Unit of data] | Rotar | y motor: | 0.0 | 1 min^{-1} | | | | |
| | Linea | r motor: | 0.0 | 1 mm/m | in | | | |
| [Valid data range] | 0 to 3 | 2767 | | | | | | |
| Recommended value] | 1000 | | | | | | | |

4.SERVO FUNCTION DETAILS

B-65270EN/05

| 1715 (FS15 <i>i</i>) |
|-------------------------------------|
| 2030 (FS30 <i>i</i> , 16 <i>i</i>) |

[Unit of data]

[Valid data range]

Limit speed for enabling low-speed integral at deceleration

The integral gain is validated during deceleration at a speed lower than or equal to the specified speed. Rotary motor: 0.01 min⁻¹ Linear motor: 0.01 mm/min 0 to 32767

[Recommended value] 1500

REFERENCE

Using the high-speed positioning velocity increment system magnification function (\rightarrow (5) in Subsec. 4.8.1) can increase the effective velocity to ten times.

This function can specify whether to enable the velocity loop integration term for two velocity values, the first for acceleration and the second for deceleration. It works as shown in Fig. 4.8.1 (b).

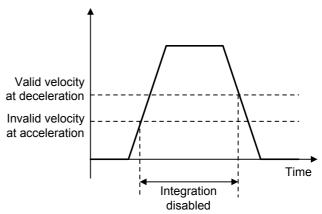


Fig. 4.8.1 (b) Integration invalid range at low-speed integral

4.8.3 Fine Acceleration/Deceleration (FAD) Function

(1) Overview

The fine acceleration/deceleration (fine acc./dec.) function enables smooth acc./dec. This is done by using servo software to perform acc./dec. processing, which previously has been performed by the CNC. With this function, the mechanical stress and strain resulting from acc./dec. can be reduced.

(2) Features

- Acc./dec. is controlled by servo software at short intervals, allowing smooth acc./dec.
- Smooth acc./dec. can reduce the stress and strain applied to the machine.
- Because of the reduced stress and strain on the machine, a shorter time constant can be set (within the motor acceleration capability range).
- Two acc./dec. command types are supported: bell-shaped and linear acc./dec. types.
- An application of the fine acc./dec. function is found in the cutting and rapid traverse operations; for each operation, the FAD time constant, feed-forward coefficient, and velocity feed-forward coefficient can be used separately.

(3) Series and editions of applicable servo software

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 9096/A(01) and subsequent editions Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 00B5/A(01) and subsequent editions

Series 90B5/A(01) and subsequent editions

NOTE

In the Series 30i, 31i, and 32i, smooth acc./dec. is always performed by nano interpolation, so the fine acc./dec. function is unnecessary. (The settings for the function are also ignored.)

d

(4) Setting basic parameters


| F | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|-------------------------------------|----|-----------------|-----------|-----------|-----------|--------|---------|----------|
| | 1951 (FS15 <i>i</i>) | | FAD | | | | | | |
| | 2007 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| _ | FAD (#6) | 1: | Enables t | he fine a | acc./dec. | function | • | | |
| | | N | DTE | | | | | | |
| | | | To ena off ther | | | tting, th | e powe | er must | be turne |


4.SERVO FUNCTION DETAILS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|--------|--|-----------------------------|------------------------------|--------------|-----------------------|-------------------|-------------------|
| 1749 (FS15 <i>i</i>) | | | | | | FADL | | |
| 2209 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| FADL (#2) | | FAD bell | | | | | | |
| | | FAD line | | | | | | |
| | * | Set 1 (lin | ear type |) usually | | | | |
| | N | OTE | | | | | | |
| | | To ena | able this | s bit se | tting, th | ne powe | r must | be turne |
| | | off the | n back | on. | | | | |
| <u>.</u> | | | | | | | | |
| 1702 (FS15 <i>i</i>) | | | Fine a | cc./dec. tir | ne consta | ant (ms) | | |
| 2109 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| [Valid data range] | 8 to | 64 (Star | ndard set | ting: 24) | | | | |
| | | | | | data ran | ge is cla | mped to | o the upper |
| | | r limit of | | | | | | |
| | | | | | | | ions are | used toget |
| | | ne coeffic | | | | | | |
| | · · | * | er No. 19 | s the same | ne as tl | hat used | for adv | anced prev |
| | contr | :ol.) | | | | | | |
| (005 (50 (5) | | – | | | . | | | |
| 1985 (FS15 <i>i</i>) | | Positi | on teed-to | orward coe | efficient (I | n units of 0 | 0.01%) | |
| 2092 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] | 100 4 | to 10000 | | | | | | |
| [vanu uata range] | 100 | 0 10000 | | | | | | |
| | | OTE | | | | | | |
| | 1 | - | orward | contro | l is ens | abled by | settin | g bit 1 of |
| | ' | | | | | | | s 16 <i>i</i> and |
| | | so on) | • | | 701110 | . 2000 | | |
| | 2 | | | aad for | ward o | oefficier | nt is sc | at in |
| | | | | | | s $15i$) or | | |
| | | • | | | • | , | | 009 |
| | | Series | 5 101 ar | | n) whic | ch is the | | |
| | | • | | 11 1 | | | | |
| | | param | | | | normal | • | |
| | 3 | param Genera | ally, the | e fine a | | | • | ion. nabled in |
| | _ | param Genera cutting | ally, the mode | e fine a only. | cc./dec | . functio | n is ei | nabled in |
| | 3 4 | param Genera cutting If bit 3 | ally, the mode of No. | e fine a only. 1800 is | cc./dec | . functic 1, the F | on is ei AD fu | |

(5) Setting parameters for the fine acc./dec. function, used separately for cutting and rapid traverse

As mentioned above, set the fine acc./dec. function bit and the bit for selecting the bell-shaped or linear type. Then, set the following:

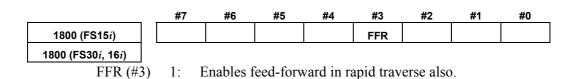

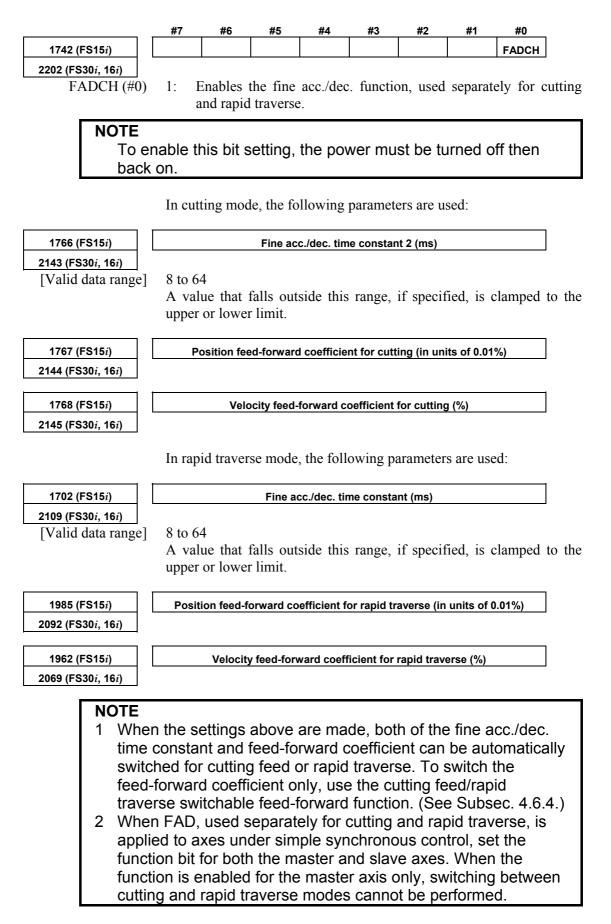

4.SERVO FUNCTION DETAILS

| Table 4.8.3 Feed-forward coefficient and fine acc./dec. time constant parameters classified | by use |
|---|--------|
| Series 16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> , 0 <i>i</i> | |

| | F | Paramet | er settin | g | Param | neters for o | cutting | Parameters for rapid traverse | | |
|---|---------------|---------------|---------------|---------------|----------------------|-------------------------------|-------------------|----------------------------------|-------------------------------|-------------------|
| | No.2005 #1 | No.2007 #6 | No.1800 #3 | No.2202 #0 | FF | Velocity FF coefficient | FAD time constant | Position FF coefficient | Velocity FF coefficient | FAD time constant |
| Cutting FF | 1 | 0 | 0 | 0 | No. 2068 No. 2092 | No. 2069 | - | - | - | - |
| Usual FF (cutting FF + rapid traverse FF) | 1 | 0 | 1 | 0 | No. 2068 No. 2092 | No. 2069 | - | No. 2068 No. 2092 | No. 2069 | - |
| Cutting FAD | 0 | 1 | 0 | 0 | - | - | No. 2109 | - | - | - |
| Cutting/rapid traverse-specific FAD | 0 | 1 | 1 | 1 | - | - | No. 2143 | - | - | No. 2109 |
| Cutting FAD + cutting FF | 1 | 1 | 0 | 0 | No. 2092 | No. 2069 | No. 2109 | - | - | - |
| Cutting FAD + usual FF | 1 | 1 | 1 | 0 | No. 2092 | No. 2069 | No. 2109 | No. 2092 | No. 2069 | - |
| Cutting/rapid traverse-specific FAD + cutting/rapid traverse-specific FF | 1 | 1 | 1 | 1 | No. 2144 | No. 2145 | No. 2143 | No. 2092 | No. 2069 | No. 2109 |

Series 15*i*

| | F | Paramet | er settin | g | Parameters for cutting | | | Parameters for rapid traverse | | | |
|--|---------------|---------------|---------------|---------------|------------------------|-------------------------------|-------------------|----------------------------------|-------------------------------|-------------------|--|
| | No.1883 #1 | No.1951 #6 | No.1800 #3 | No.1742 #0 | FF | Velocity FF coefficient | FAD time constant | Position FF coefficient | Velocity FF coefficient | FAD time constant | |
| Cutting FF | 1 | 0 | 0 | 0 | No. 1961 No. 1985 | No. 1962 | - | - | - | - | |
| Usual FF | 1 | 0 | 1 | 0 | No. 1961 No. 1985 | No. 1962 | - | No. 1961 No. 1985 | No. 1962 | - | |
| Cutting FAD | 0 | 1 | 0 | 0 | - | - | No. 1702 | - | - | - | |
| Cutting/rapid traverse-specific FAD | 0 | 1 | 1 | 1 | - | - | No. 1766 | - | - | No. 1702 | |
| Cutting FAD + cutting FF | 1 | 1 | 0 | 0 | No. 1985 | No. 1962 | No. 1702 | - | - | - | |
| Cutting FAD + usual FF | 1 | 1 | 1 | 0 | No. 1985 | No. 1962 | No. 1702 | No. 1985 | No. 1962 | - | |
| Cutting/rapid traverse-specific FAD + cutting/rapid traverse-specific FF | 1 | 1 | 1 | 1 | No. 1767 | No. 1768 | No. 1766 | No. 1985 | No. 1962 | No. 1702 | |

NOTE

- 1 In the above tables, the abbreviations "FF" and "FAD" refer to the feed-forward function and fine acc./dec. function, respectively.
- 2 Of two parameter numbers stacked one on the other in each field of the above tables, the upper one is used in non-advance mode, and the lower one, in advance mode.

(6) Cautions for combined use of the synchronization function with the spindle axis and fine acc./dec.

The restrictions listed below are imposed on the combined use of the synchronization function between the servo axis and spindle axis and the fine acc./dec. function.

(Disable the fine acc./dec. function if the combine use is impossible.)

| | Use of FAD f | or servo axis | |
|--|---|--|---|
| Function | When FAD is disabled for spindle axis | When FAD is enabled for spindle axis | Cautions for combined use |
| Rigid tapping | Allowed | Allowed | When FAD is disabled for spindle axis : During rigid tapping, FAD and feed-forward control are disabled. For synchronization, the position gain for the servo axis must be changed. See (7). When FAD is enabled for spindle axis : The same FAD time constant, acc./dec. type, feed-forward coefficient, and position gain must be used for the servo axis (during cutting) and the spindle axis. |
| Advanced preview control rigid tapping | Not allowed | Allowed | The same FAD time constant, acc./dec. type, feed-forward coefficient, and position gain must be used for the servo axis (during cutting) and the spindle axis. |
| Cs axis contour control | Not allowed | Allowed | The same FAD time constant, acc./dec. type, feed-forward coefficient, and position gain must be used for the servo axis (during cutting) and the spindle axis. |
| Hob function | Not allowed | Not allowed | Disable the fine acc./dec. function. |
| EGB function | Not allowed | Not allowed | Disable the fine acc./dec. function. |
| Flexible synchronization | Not allowed | Allowed | The same FAD time constant, acc./dec. type, feed-forward coefficient, and position gain must be used for the servo axis (during cutting) and the spindle axis. |

NOTE

The spindle FAD function can be used when an αi spindle amplifier and FANUC Series 16i/18i/21i MODEL B CNC are used.

Spindle software : Series 9D50/E(05) and subsequent editions

CNC software : M series : Series B0H1/M(13) and subsequent editions, Series BDH1M(13) and subsequent editions, Series DDH1/M(13) and subsequent editions, Series BDH5/C(03) and subsequent editions T series : Series B1H1/M(13) and subsequent editions Series BEH1/M(13) and subsequent editions Series DEH1/M(13) and subsequent editions

For details of the spindle FAD function, refer to "FANUC AC SPINDLE MOTOR αi series Parameter Manual (B-65280EN)".

| Function | Combined use with FAD function | Cautions for combined use | | | | | |
|--------------------------|--------------------------------------|--|--|--|--|--|--|
| Flexible synchronization | Allowed | For the axes to be synchronized with each other, the same FAD time | | | | | |
| (between servo axes) | Allowed | constant, feed-forward coefficient, and position gain must be set. | | | | | |

(a) Overview

Because using fine acc./dec. causes the servo axis delay (error) to increase by 1 ms, rigid tapping with fine acc./dec. set up results in an increase of synchronization error against the spindle. To avoid this increase, use the following procedure to change the servo axis position gain for rigid tapping.


NOTE

In advanced preview control mode, rigid tapping cannot be used together with fine acc./dec. In this case, disable fine acc./dec.

(b) Setup procedure

By setting the parameter below, the position gain can be automatically changed only for the servo axis to establish synchronization.

(Parameter)

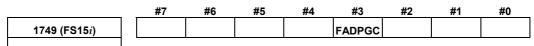

2209 (FS30*i*, 16*i*) FADPGC (#3)

Specifies whether to perform synchronization in rigid tapping mode when FAD is set up, as follows:

- 1: <u>To perform \leftarrow To be set</u>
- 0: Not to perform

NOTE


- 1 After setting this bit, switch the power off and on again.
- 2 If this parameter is set, the servo position gain increases by 1 ms even when rigid tapping is not used.
- 3 It is necessary to set this parameter for all axes that are subjected to contouring.

(Reference)

With Series 16*i* and so on, two types of parameters are available for position gain setting. By setting the parameters as described below, a position gain match can be ensured between the servo axis and spindle.

NOTE Do not make following setting when FADPGC = 1 is set.

a. Nos. 4065 to 4068: Spindle servo mode position gain b. Nos. 5280 to 5284: Rigid tapping position loop gain Parameter type "a" corresponds to the spindle position loop gain for rigid tapping, and parameter type b, to the servo axis position loop gain. Usually, both parameter types take the same values. For a servo axis with fine acc./dec. specified, however, set parameter type b with the values obtained using the following calculation:

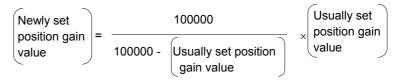

Example of parameter setting)

| Position gain (1/s) | Usually set value | Newly set value |
|---------------------|-------------------|-----------------|
| 15 | 1500 | 1523 |
| 16.66 | 1666 | 1694 |
| 20 | 2000 | 2041 |
| 25 | 2500 | 2564 |
| 30 | 3000 | 3093 |
| 33.33 | 3333 | 3448 |
| 35 | 2500 | 3627 |
| 40 | 4000 | 4167 |
| 45 | 4500 | 4712 |
| 50 | 5000 | 5263 |

(8) Other specifications to note regarding the fine acc./dec. function

- Advanced preview control and fine acc./dec. can be used together. (The time constants before and after advanced preview interpolation, and the fine acc./dec. time constant are effective.)
- If FAD is set, then the G05 P10000 command is issued with HPCC, FAD is disabled.
- Using the FAD function increases the position error as follows:
 For FAD bell-shaped

Deviation incerase (pulses) =

$$\frac{\text{Feedrate (mm/min)}}{60 \times 1000 \times \text{Detection unit (mm)}} \times \left(\frac{\text{FAD time constant (ms)}}{2} + 1\right)$$

For FAD linear type
Deviation incerase (pulses) =
$$\frac{\text{Feedrate (mm/min)}}{60 \times 1000 \times \text{Detection unit (mm)}} \times \left(\frac{\text{FAD time constant (ms)} + 1}{2} + 1\right)$$

Example)

_

When feed operation is performed using F1800 with a position gain of 30 (1/s) and a detection unit of 0.001 mm, the position error is normally expressed as follows: Normal deviation (pulses) =

$$\frac{\text{Feedrate (mm/min)}}{60 \times \text{Position gain (1/s)} \times \text{Detection unit (mm)}}$$
$$= \frac{1800}{60 \times 30 \times 0.001} = 1000(pulses)$$

When the FAD function (FAD bell-shaped) is used with the time constant set to 64 ms, the deviation increases as follows: Deviation increase (pulses) =

$$\frac{1800}{60 \times 1000 \times 0.01} \times \left(\frac{64}{2} + 1\right) = 990(pulses)$$

When FAD is used, the entire deviation is then obtained as follows:

Deviation when FAD is used (pulses) = 1000 + 990 = 1990 (pulses)

The combined use of the FAD function and the feed-forward function does not increase the position error so much as expected, because the feed-forward function decreases a delay against the command. When the FAD function is used alone, however, a higher error overestimation level must be set, considering the increase in the deviation.

881 10:10:81

fue Jan 30


Motor velocity

Torque command


(9) Examples of applying the fine acc./dec. function

tim nude n/nin.


ŝ

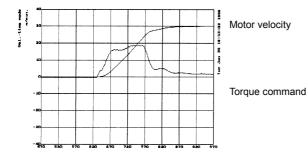

Conventional control in which the feed-forward function is not used

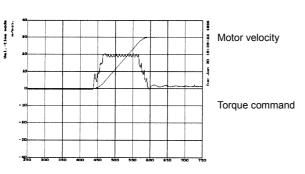

When the feed-forward and rapid traverse bell-shaped acc./dec. (Acc./dec. by the CNC) functions are used When the feed-forward function is used

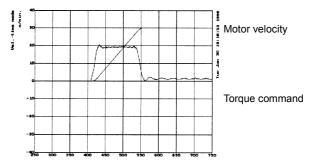

When the feed-forward and fine acceleration/ deceleration functions are used

4.9 SERIAL FEEDBACK DUMMY FUNCTIONS

4.9.1 Serial Feedback Dummy Functions

(1) Overview

The serial feedback dummy functions ignore servo alarms of non-servo axes.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

Series 9096 does not support the settings of such dummy axes. (This series is not planed to support this function in the future. If necessary, use a series supporting this function.)

(3) Setting the built-in Pulsecoder-based feedback dummy function

Setting the function bit shown below enables ignoring of alarms related to the servo amplifier and built-in Pulsecoder for an axis not connected to a servo control circuit.


| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ | | | | |
|-------------------------------------|--------------------------------------|--|----|----|----|----|----|-----|---|--|--|--|--|
| 1953 (FS15 <i>i</i>) | | | | | | | | DMY | | | | | |
| 2009 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | | | |
| DMY (#0) | Speci | Specifies whether to enable the serial feedback dummy function a | | | | | | | | | | | |
| | follov | follows: | | | | | | | | | | | |
| | 1: 7 | 1: To enable | | | | | | | | | | | |
| | 0: To disable | | | | | | | | | | | | |
| · | | | | | | | | | | | | | |
| 1788 (FS15 <i>i</i>) | | Set 0. | | | | | | | | | | | |
| 2165 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | | | |
| <u> </u> | To us | To use the serial feedback dummy functions, a non-zero value must be | | | | | | | | | | | |
| | entere | entered as the motor ID number. | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| 1874 (FS15 <i>i</i>) | Motor ID number | | | | | | | | | | | | |
| 2020 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | | | |
| | Enter an appropriate non-zero value. | | | | | | | | | | | | |
| | Exam | Example) 15 | | | | | | | | | | | |

(4) Handling of dummy axes in the *i* series CNC

Usually in the i series, the number of amplifiers must match that of axes. A dummy axis can be set normally if the axis to be set as the dummy axis has an amplifier. However, if an attempt is made to set an axis that does not have an amplifier as a dummy axis, an alarm may be issued, indicating that amplifiers are insufficient.

In such a case, make FSSB settings as if a series of existing amplifiers were followed by another amplifier.

Example When there are only two amplifiers for a 3-axis NC

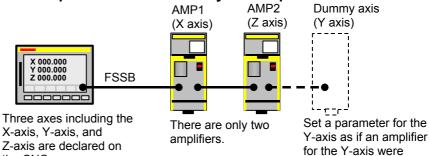

the CNC. present at the end. Let us consider how to make the Y-axis (second axis) a dummy axis in the above configuration. Set up the parameters as follows: (Series 15*i*-B,16*i*-B, and so on) No.1023 X:1 <u>Y:2</u> Z:3 No.1902 bit1=0, bit0=1 No.1905 bit0 X:0 Y:0 Z:0

No.1910=0 No.1911=2 <u>No.1912=1</u> ← Add a dummy axis. Nos.1913 to 1919=40 Nos.1970 to 1989=40 No.2009 bit0 Y:1 No.2165 Y:0

(Series 30i,31i,32i) No.1023 X:1 <u>Y:2</u> Z:3 No.1902 bit1=0, bit0=1 No.1905 bit0 X:0 Y:0 Z:0 No.14340=0 No.14341=2 <u>No.14342=1</u> Nos.14343 to 14375= -96 No.2009 bit0 Y:1 No.2165 Y:0

* For detailed descriptions about FSSB-related setting, refer to the respective CNC parameter manuals.

(5) Separate detector-based dummy feedback

The separate detector-based dummy feedback function is intended to ignore alarms for an axis when the separate detector has been disconnected from the axis temporarily. Set the following bit.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ | |
|-------------------------------------|---|-----------|------------|-----------|--------|------------|----------|---------|-------|--|
| 1745 (FS15 <i>i</i>) | | | | | | FULDMY | | | | |
| 2205 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| FULDMY (#2) | Speci | fies whe | ether to | enable | the se | eparate d | etector- | based | dummy | |
| | feedba | ack func | tion as fo | ollows: | | | | | | |
| | | | | | | | | | | |
| | 0:] | Fo disabl | e | | | | | | | |
| | | TE | | | | | | | | |
| | NC |)TE | امدمهما | | | | | | | |
| | | | | • | | nction wi | | | | |
| | | | | | enarie | edback | aumm | y iunc | uon | |
| | | | follows | - | : D! | | | | | |
| | | | | | | secoder | | a seria | al | |
| | | | | | | is enab | | | | |
| | | | | | | ilt-in Pul | secoa | erano | | |
| | | • | | e ignor | | - 4 4 | | | | |
| | | | | | | etector- | pased | aumn | ny | |
| | | | | inction i | | | ataata | | | |
| | | | | | ine se | parate d | etecto | r are | | |
| | | • | ored. | h a £ | 4: | | la di | | | |
| | When both the functions are enabled: Alarms related to the built-in Pulsecoder, | | | | | | | | | |
| | | | | | | | | • | | |
| | | sep | arate d | etector, | and a | mplifier | are ig | nored. | | |

4.9.2 How to Use the Dummy Feedback Functions for a Multiaxis Servo Amplifiers when an Axis is not in Use

If an axis connected to a multiaxis amplifier is not in use, it is necessary to set the dummy function bit described in Subsec. 4.9.1 and connect a dummy connector to the amplifier.

| Information about dummy connector | Location |
|-----------------------------------|----------|
| Jumper between pins 11 and 12. | JFx |

4.10 BRAKE CONTROL FUNCTION

(1) Overview

This function prevents the tool from dropping vertically when a servo alarm or emergency stop occurs. The function prevents the motor from being immediately deactivated, instead keeping the motor activated for the period specified in the corresponding parameter, until the mechanical brake is fully applied.

(2) Hardware configuration

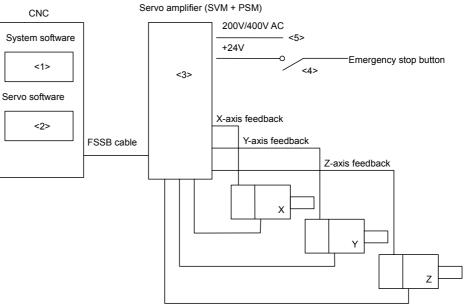


Fig. 4.10 (a) Example of configuration

The numbers of the following descriptions correspond to those in the figure:

<1> Applicable system software

Any system soft can be used.

- <2> Applicable servo software
 - (Series 30*i*,31*i*,32*i*)

Series 90DO/A(01) and subsequent editions Series 90EO/A(01) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)

- Series 9096/A(01) and subsequent editions
- Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions
- Series 90B1/A(01) and subsequent editions
- Series 90B6/A(01) and subsequent editions

(Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

<3> Servo amplifier

Use a single-axis servo amplifier (SVM1) to which the brake control function is applied. See NOTE below.

For an axis to which the brake control function is not applied, any servo amplifier can be used.

NOTE

If you want to control the brake for an axis with a two- or three-axis amplifier, specify the brake control parameter for all axes on the multiaxis amplifier including the target axis. If an alarm is generated for any of the axes connected to the two- or three-axis amplifier, brake control does not operate effectively.

<4> Emergency stop signal

With the αi series, a timer for the emergency stop signal is built into the SVM. While motor activation is kept by brake control, the timer in the SVM is used to extend the activation time that lasts until the emergency stop signal operates. Motor deactivation can be delayed by the SVM for 50 ms to 400 ms. To delay motor deactivation by brake control for 400 or more, insert a timer in the contact signal of the emergency stop signal and +24V, and delay the emergency stop signal to be input to the PSM, as traditionally done. (For SVM timer setting, see Item (3) "Setting parameters" below.)

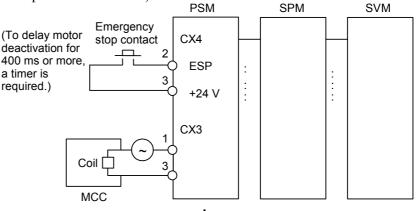


Fig. 4.10 (b) αi series amplifier


<5> 200/400 VAC

If the 200 VAC or 400 VAC supply to the servo amplifier is cut, the brake control function cannot operate.

To cause the brake control function to work effectively even at a power break, apply the power brake machine protection function.

(3) Setting parameters

<1> Brake control function enable/disable bit

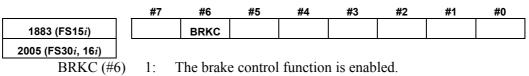

200ms

400ms

| | <2> Activation | on delay | | | | | | | | |
|---|-----------------------------------|---|-----------|------------|----|-----------|------|--|--|--|
| 1976 (FS15 <i>i</i>) | | | Brake cor | ntrol time | r | | | | | |
| 2083 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| [Increment system] | msec | | | | | | | | | |
| [Valid data range] | 0 to 16000 | | | | | | | | | |
| | (Example) | | | | | | | | | |
| | timer us greater. contact v | To specify an activation delay of 200 ms, set the brake control timer usually with 200 (appropriately). Do not set it with 500 or greater. Also set the timer connected to the emergency stop contact with the same value as set in the parameter. 3> Setting the emergency stop timer built into the α<i>i</i> amplifier | | | | | | | | |
| | #7 #6 | #5 | #4 | #3 | #2 | #1 | #0 | | | |
| 1750 (FS15 <i>i</i>) | ESPTM1 | ESPTM0 | | | | | | | | |
| 2210 (FS30 <i>i</i> , 16 <i>i</i>) ESPTM0 (#5), ESPTM1 (#6) | | | | | | | | | | |
| | ESPTM1 | ESF | РТМ0 | | D | elay time | 1 | | | |
| | 0 | | 0 | | 50 | ms (defau | ilt) | | | |
| | 0 | | 1 | | | 100ms | | | | |

1

1

1

1

NOTE

When using brake control, set a time longer than the setting of the brake control timer (No. 1976 for Series 15*i* or No. 2083 for Series 16*i* and so on).

| NOTE |
|---|
| For those axes that are connected to a two-axis |
| amplifier or three-axis amplifier, the parameters |
| above need to be set in the same way. |
| |

(4) Detailed operation


Suppose that there is a machine having horizontal and vertical axes of motion. When a <u>servo alarm</u>^(*) occurs on the horizontal axis but no error occurs on the vertical axis, the MCCs of the amplifiers for all axes are turned off. When the emergency stop button is pressed, the MCCs of the amplifiers for all axes are turned off.

Standard machines have a mechanical brake that prevents the tool from dropping vertically in such cases. The mechanical brake may actually function according to the timing shown in Fig. 4.10 (c). If this occurs, the tool will drop vertically, causing the tool or workpiece to be damaged.

This function changes the timing to force MCC off, using a software timer, thus preventing the tool from dropping. Fig. 4.10 (d) shows the timing diagram.

4.SERVO FUNCTION DETAILS

B-65270EN/05

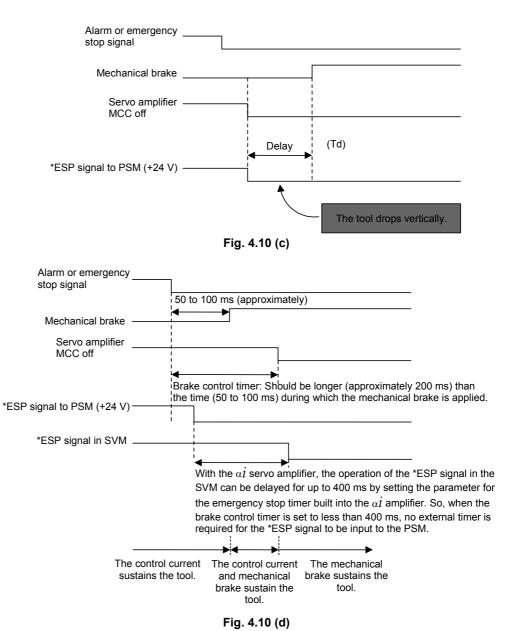

NOTE

 The servo alarm mentioned in the above description refers to a servo alarm detected by the software (OVC alarm, motor overheat alarm, software disconnection alarm, etc.), an alarm detected by the servo amplifier, or a servo alarm detected by the Servo amplifier, or a servo alarm detected by the CNC (excessive error). If a servo alarm occurs on the axis using this function, no brake control is performed on the axis (except for a motor overheat alarm).
 For brake control, use the SA signal (F0.6, which is common to all axes).

4.11 QUICK STOP FUNCTION

The functions described below prevent the tool from colliding with the machine or workpiece by reducing the distance required for the motor to come to a stop if a usual emergency stop condition occurs or if a separate detector disconnection alarm, overheat alarm, or OVC alarm is issued.

4.11.1 Quick Stop Type 1 at Emergency Stop

(1) Overview

This function reduces the stop distance by resetting the velocity command for a servo motor to 0 at a position where an emergency stop signal is detected for the servo motor. To further reduce the stop distance required for the motor to stop, use quick stop type 2 at emergency stop described in Subsec. 4.11.2.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 9096/A(01) and subsequent editions Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions (Series 90B6/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

(3) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|-----|-----|--------|-----|-------|----|-----|------|--|
| 1959 (FS15 <i>i</i>) | | | | | | | | DBST | |
| 2017 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| |) C | · c | 1 /1 / | 1.1 | · 1 / | | 1 / | | |

DBST (#0)

Specifies whether to enable quick stop type 1 at emergency stop as follows:

1: To enable

0: To disable

To use the quick stop at emergency stop, enable the brake control function to all axes, which use the quick stop function.

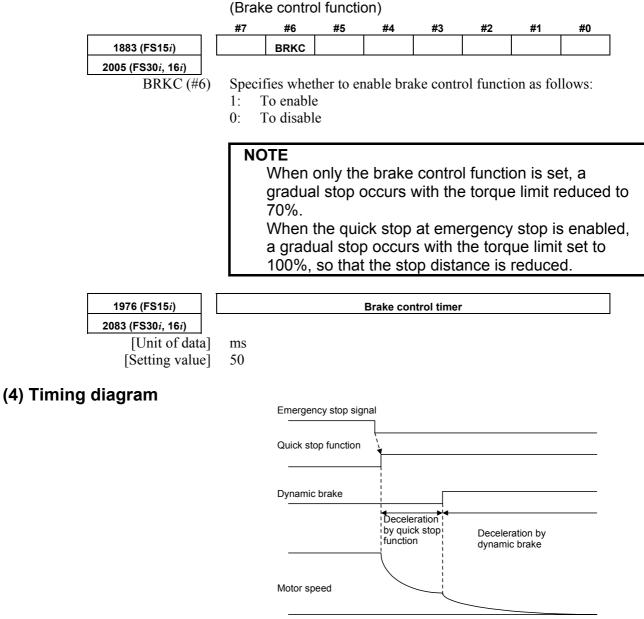


Fig. 4.11.1 (a) Timing diagram of quick stop function

(5) Connection of amplifier


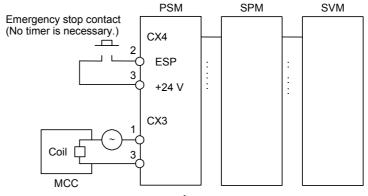


Fig. 4.11.1 (b) αi series amplifier

4.11.2 Quick Stop Type 2 at Emergency Stop

(1) Overview

This function returns a servo motor to a position where an emergency stop signal is detected for the servo motor, thereby assuring a shorter stop distance than with quick stop type 1 at emergency stop.

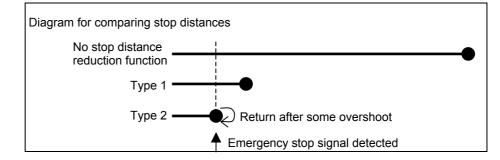

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ |
|-------------------------------------|---------|----------|---------|-----------|------------|----------|---------|---------|----|
| 1744 (FS15 <i>i</i>) | DBS2 | | | | | | | | |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | - |
| DBS2 (#7 |) Speci | fies whe | ther to | enable of | quick stop | b type 2 | at emer | gency s | to |

7) Specifies whether to enable quick stop type 2 at emergency stop as follows:

- 1: To enable
- 0: To disable

NOTE

- 1 Like type 1, type 2 requires that the brake control parameter be set.
- 2 The method of connecting the amplifier for type 2 is the same as for type 1.
- 3 If both type 1 and type 2 function bits are set, type 2 function is assumed.

4.11.3 Lifting Function Against Gravity at Emergency Stop

(1) Overview

This function is intended to lift and stop the vertical axis (Z-axis) of a vertical machining center when the machine comes to an emergency stop or power failure.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/P(16) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

Because this function uses quick stop at emergency stop type 2, the following function bit must be set to 1 (enable).

: Approximately 5000

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | - |
|-------------------------------------|----------|-----------|-----------|------------|-----------|-----------|-----------|-------------|--------|
| 1744 (FS15 <i>i</i>) | DBS2 | | | | | | | | |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| DBS2 (#7) |) Specif | fies whe | ther to e | enable qu | uick stop | type 2 | at emer | rgency s | top as |
| | follow | /S: | | | | | | | |
| | 1: 7 | To enable | e | | | | | | |
| | 0: T | To disabl | e | | | | | | |
| | | | | | | | | | - |
| 2786 (FS15 <i>i</i>) | | | | Distanc | e to lift | | | | |
| 2373 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| | This p | paramete | r is for | determin | ning a di | stance t | o lift at | an emer | gency |
| | stop.] | The large | er the va | lue, the l | arger bee | comes th | e distan | ce to lift. | |
| [Unit of data] |] Detect | tion unit | | | | | | | |
| [Valid data range] |] -3276 | 7 to 327 | 67 | | | | | | |
| [Recommended value] |] Detect | tion unit | 1µm | : A | Approxin | nately 50 | 00 | | |

Detection unit 0.1µm

| | NOTE If the brake is in use, it starts working while the vertical axis is being lifted. So the distance through which the axis is actually lifted differs from the setting. Whether the parameter values is positive or negative matches whether the machine coordinate value is positive or negative. Using this function causes the load to stop after moving it to one side of the machine. So, it should be used for the vertical axis (Z-axis) of a vertical machining center in which an axis retracts in a fixed single direction at an emergency stop. |
|---|---|
| 2787 (FS15 <i>i</i>) | Lifting time |
| 2374 (FS30 <i>i</i> , 16 <i>i</i>) | ¥ |
| [Unit of data] [Valid data range] [Recommended value] | 8 to 32767 Approximately 16 or 24 ms |
| | NOTE Specify an integer multiple of 8 as the lifting time To use the lifting function against gravity at emergency stop, specify 8 ms or longer as the lifting time. If the distortion easing function is not used, specify the time longer than or equal to the one set in the brake control timer as the lifting time. |

• Velocity command

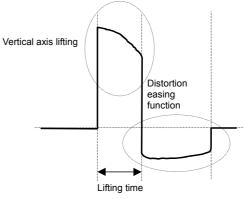
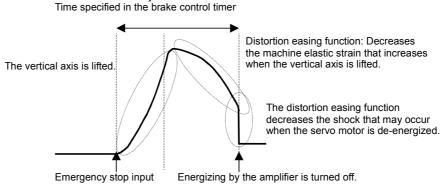


Fig. 4.11.3 (a) Velocity command




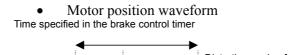


Fig. 4.11.3 (b) Motor position waveform

Using this function requires specifying the following brake control parameters.

Brake control function bit

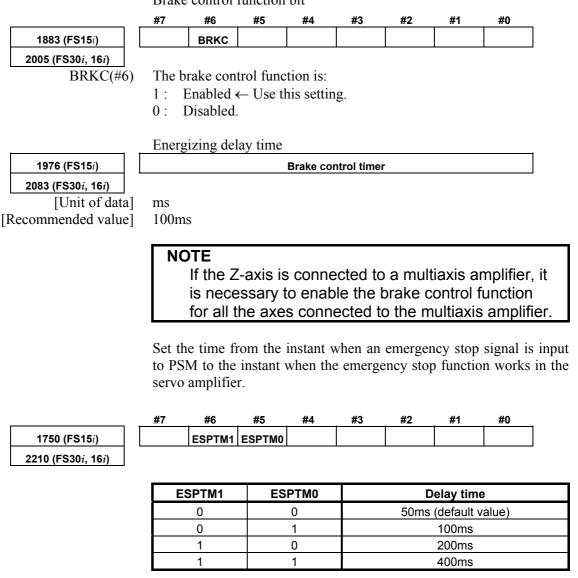

It is necessary to specify the time longer than or equal to the brake control timer value.

If the brake control timer value is 100 ms, for example, specify ESPTM1 (bit 6) and ESPTM2 (bit 5) to be, respectively, 0 and 1 (100 ms).

NOTE

For a multiaxis amplifier, the largest of the values specified for the axes is assumed to be the delay time.

(4) Example of using the parameter

The following example shows the effect of using the lifting function against gravity at emergency stop for the vertical axis (Z-axis). In this example, the distance to lift is 500, and the lifting time is 16 ms. The vertical axis of the graph is graduated 2 μ m/div.

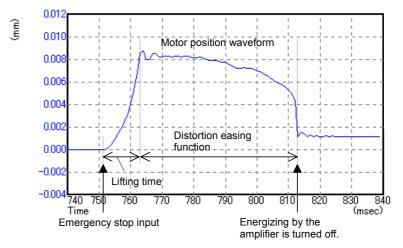


Fig. 4.11.3 (c) Motor position waveform

As seen from the graph, the motor is lifted through a large distance after an emergency stop signal is input. The graph also shows that the distortion easing function decreased the machine elastic strain and kept the motor from falling when the amplifier stopped energizing. Also as seen from the graph, the position where the motor finally rested is higher than the position where the motor was before the emergency stop signal was input.

NOTE

- 1 In this example, positive coordinates of the machine coordinate system correspond to the direction in which the axis is lifted.
- 2 Variation occurs in the position where the Z-axis stops depending on the direction in which the Z-axis is moving before an emergency stop. When tuning the parameter, it is necessary to take, into account, both the position where the motor rests before the axis is moved up and the position where the motor rests after the axis is moved down.

4.11.4 Quick Stop Function for Hardware Disconnection of Separate Detector

(1) Overview

This function reduces the stop distance by resetting the velocity command for a servo motor to 0 when the separate detector for the servo motor encounters a hardware disconnection condition. It also causes the other axes to stop sooner than they would when a usual alarm occurs.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

| <u>_</u> | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|--|--|--------------------------------------|----------|-------------|--------|----------|---------------------|-------|
| 1745 (FS15 <i>i</i>) | | | | HDIS | HD2O | | | | |
| 2205 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| HD2O (#5) | Specif | fies whe | ether to | apply 1 | the quick | k stop | function | for har | dware |
| HDIS (#4) | contro 1: T 0: N Specif discon 1: T | l, as foll to apply lot to ap fies wh | ows: pply ether to of separ | enable | | stop f | 5 | o synchr for har | |
| 1976 (FS15 <i>i</i>) | | | | Brake co | ntrol timer | | | | |
| 2083 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| [Unit of data] | ms | | | | | | | | |
| [Setting value] | 100 | | | | | | | | |

NOTE

- 1 When applying this function to axes under synchronous control (including simple synchronous control), follow the steps below:
 - 1) Change the servo axis setting (No. 1023) for two axes subjected to simple synchronous control so that the two axes can be controlled on 1DSP.
 - 2) Set HD2O (bit 3) to 1 for both axes under synchronous control.
- 2 This function is implemented using part of the "unexpected disturbance torque detection function" option. So, using it requires that option.
- 3 Usually, when a separate detector disconnection alarm occurs for an axis, not only this axis but also the others are brought to an emergency stop. If an unexpected disturbance torque detection group function (not supported in the Series 15*i*) is set up, however, only the axes in the same group as the axis for which an alarm condition has occurred are brought to an emergency stop.
- 4 If the value (No. 1738 for the Series 15*i* or No. 1880 for the Series 30*i*, 16*i*, and so on) specified as an interval between the detection of an unexpected disturbance torque and the occurrence of an emergency stop is small, it may impossible to keep the sufficient stop time. The value should be at least greater than or equal to the one specified in the brake control timer parameter (there is no problem with a setting value of 0, because it means 200 ms).

4.11.5 Quick Stop Function at OVL and OVC Alarm

(1) Overview

This function reduces the stop distance for a servo motor when an OVL (motor overheat or amplifier overheat) or OVC alarm condition is detected for the servo motor. It also causes the other axes to stop sooner than they would when a usual alarm occurs.

(2) Series and editions of applicable servo software


(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions

(3) Series and editions of applicable system software

Completely same as those described in (3) in Subsec. 4.11.4.

If this function is specified in any system software that does not support it, not only the OVC or OVL alarm condition but also an "unexpected disturbance torque detection alarm" condition occurs simultaneously.

(4) Setting parameters

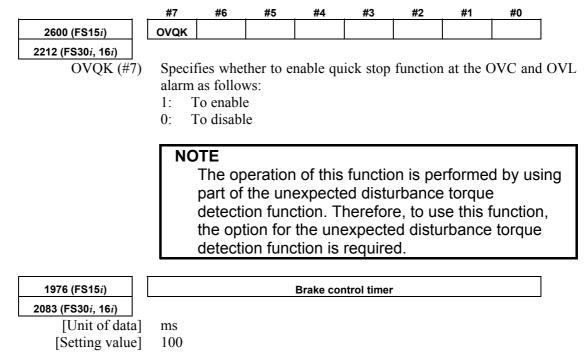

4.11.6 Overall Use of the Quick Stop Functions

To sum up, setting up the following parameters as stated can reduce the stop distance for an emergency stop, separate detector hardware disconnection, and OVL and OVC alarm occurrence.

- <1> Specify the unexpected disturbance torque detection option.
- <2> Specify quick stop type 2 at emergency stop.
- <3> For a vertical axis, specify the function for lifting up a vertical axis at emergency stop, if required.
- <4> For full-closed loop axes, specify the quick stop function for hardware disconnection of separate detector. Also if they are subjected to synchronous control, set the **HD2O** bit.
- <5> Specify the quick stop function at the OVC and OVL alarm.
- <6> Set the brake control function bit and the brake control timer.

4.12 UNEXPECTED DISTURBANCE TORQUE DETECTION FUNCTION Optional function


4.12.1 Unexpected Disturbance Torque Detection Function


(1) Overview

When a tool collides with the machine or workpiece, or when a tool is faulty or damaged, a load torque greater than that experienced during normal feed is imposed.

This function monitors the load torque to the motor at servo high-speed sampling intervals. If it detects an abnormal torque, it brings the axis to an emergency stop by issuing an alarm, or reverses the motor by an appropriate amount.

In addition, the function enables the PMC to be used to switch the speed at warning occurrence or load fluctuation.

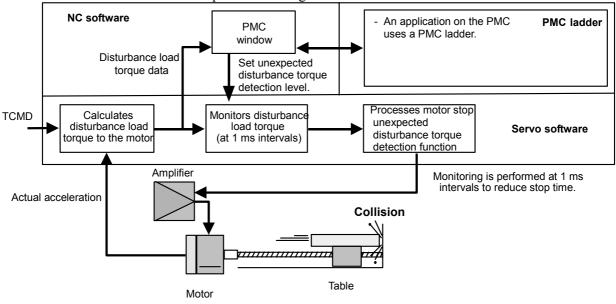

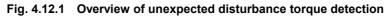

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions

(3) Parameter adjustment methods

<1> Use SERVO GUIDE to observe the motor speed (SPEED) and estimated disturbance torque (DTRQ).

| (Example of channe | l settings on | SERVO | GUIDE) |
|--------------------|---------------|-------|--------|
|--------------------|---------------|-------|--------|

| GraphSetting | | | | | × |
|-----------------|---------------------|--------------------|---------------------------|------------------------------|---|
| Detail 💌 | | | | | |
| Measure setting | peration and Displa | ay Scale(Y-Time |) Scale(XY) Scale(Cir | cle) | |
| Data Points | 3000 💌 Triç | ger Path/Seq.No | . 🔽 1 | BIN compatible | |
| Sampling Cycle | 1msec 💌 Sar | npling Cycle(Spind | dle) 1msec | Auto Origin | |
| Comment 1 | | | | Auto-scaling | |
| Comment 2 | | | | C Once | |
| Time and Date | | | | C Always | |
| Property | | | D | ata Shift <u>T</u> ime Shift | |
| Axis | Kind Unit | Coef | Meaning | Origin Shift | |
| CH1 🗹 X1 (1) | SPEED 1/min | 3750.000 | Motor speed (SPEED) | 0.0000000003 | |
| СН2 🗹 Х1 (1) П | DTRQ A(p) | 160.0000 | Disturbance torque | 0.000000000 0 | |
| снз | | | | | |
| | | | | | |
| сна | | | | | |
| СН6 | | | | | |
| • | | | | Þ | |
| | | ОК | Cancel | | |

(See Sec. 4.20 for detailed descriptions about how to use the SERVO GUIDE.)

- <2> Switch on the CNC.
- <3> Enable the unexpected disturbance torque detection function

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|--------|----|----|----|----|----|----|------|--|
| 1958 (FS15 <i>i</i>) | | | | | | | | ABNT | |
| 2016 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |

 ABNT (#0)
 Specifies whether to enable the unexpected disturbance torque detection function as follows:

- 1: To enable
- 0: To disable

Moreover, be sure to set also the following parameters.

| _ | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ |
|---|-------------------------------------|----------|----------|-----------|----------|----------|-----------|-----------|-----------|-------|
| | 1740 (FS15 <i>i</i>) | | | | | | IQOB | | | |
| | 2200 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| | IQOE | S Specia | fies whe | ther to e | liminate | influenc | ce of cor | ntrol vol | tage sati | ırati |

Specifies whether to eliminate influence of control voltage saturation when estimating disturbance, as follows: 1: To eliminate influence of control voltage saturation when

- 1: To eliminate influence of control voltage saturation when estimating disturbance
- 0: Not to take influence of control voltage saturation when estimating disturbance into consideration

4.SERVO FUNCTION DETAILS

<4> Set up the parameters related to the observer.

| 1862 (FS15 <i>i</i>) | Observer gain |
|-------------------------------------|---------------|
| 2050 (FS30 <i>i</i> , 16 <i>i</i>) | |

• When HRV1, HRV2, or HRV3 control is used:

[Standard setting value] $956 \rightarrow$ To be changed to 3559.

• When HRV4 control is used:

[Standard setting value] $264 \rightarrow$ To be changed to 1420

| 1863 (FS15 <i>i</i>) | Observer gain |
|-------------------------------------|---------------|
| 2051 (FS30 <i>i</i> , 16 <i>i</i>) | |

• When HRV1, HRV2, or HRV3 control is used:

[Standard setting value] $510 \rightarrow$ To be changed to 3329.

• When HRV4 control is used:

[Standard setting value] $35 \rightarrow$ To be changed to 332

NOTE

When using this function together with the observer, do not modify the standard setting of the parameter above. Observer: Bit 2 of No.1808 (Series 15*i*) Bit 2 of No.2003 (Series 30*i*, 16*i*, and so on)


<5> Make adjustments on the **POA1** observer parameter.

1859 (FS15*i*)

2047 (FS30i, 16i)

Observer parameter (POA1)


Turn the servo motor to perform linear back and forth operation at a speed equal to about 50% of the rapid traverse rate, and observe the motor speed and the estimated disturbance value. The waveform observed before the adjustment should show one of the following features:

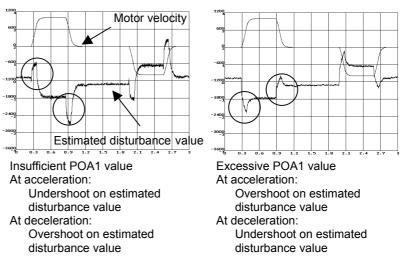

Measurement example: 1000 min⁻¹ (rotary motor)

Make adjustments on the **POA1** parameter so that neither an overshoot nor an undershoot will not be observed on the estimated disturbance value at acc./dec. After adjustment, the waveforms shown below should be obtained.

(A clear waveform like the one shown below may not be obtained in some machines. In such machines, find the POA1 value that can minimize the overshoot and undershoot by watching the estimated disturbance waveform at acc./dec.)

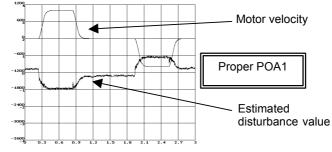

NOTE

The POA1 parameter is related to the load inertia ratio parameter ("velocity gain" on the servo screen) through the inside of the software. When the load inertia ratio parameter is changed, the POA1 parameter must also be changed. So, first determine the load inertia ratio (velocity gain) when adjusting the servo.

If you must change the load inertia ratio (velocity gain) after the POA1 parameter is determined, re-set the POA1 parameter using the following expression.

(New POA1 value) =

(Previous POA1 value) ×

(Load inertia ratio value set after adjustment+256) /

(Load inertia ratio value set before adjustment+256) Load inertia ratio:

No. 1875 (Series 15*i*), No. 2021 (Series 16*i* and so on) The velocity gain magnification (in cutting or high-speed HRV current control) does not affect the setting of POA1.


(Details)

The observer estimates a disturbance torque by subtracting the torque required for acc./dec. from the entire torque. The torque required for acc./dec. is calculated using a motor model. The POA1 parameter corresponds to the inertia of the motor model. If the parameter value differs from the actual value, it is impossible to estimate a correct disturbance torque. To detect an unexpected disturbance torque correctly, therefore, you must adjust the value of this parameter.


An estimated disturbance value when a usual condition is supposed to be related only to frictional torque (for the horizontal axis), and proportional to the velocity. Therefore, a program, like the one used for adjustment, that merely repeats simple acc./dec. is supposed to generate a trapezoidal estimated disturbance torque waveform like a velocity waveform. <6> <u>For the vertical axis</u>, adjust the torque offset. (This is unnecessary for the horizontal axis.) For the vertical axis, the estimated disturbance value is not centered at level 0. Torque offset adjustment is done to center the estimated disturbance value at level 0.

| 1980 (FS15 <i>i</i>) | Torque offset parameter |
|-------------------------------------|--|
| 2087 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Unit of data] | TCMD unit (7282 with the maximum current value of the amplifier) |
| [Valid data range] | -7282 to 7282 |
| - | (Example of torque offset setting) |

Estimated disturbance values for constant-velocity movements in the + direction and - direction are read. In the figure below, minimum value A (signed) is read in a movement in the + direction, and maximum value B (signed) is read in a movement in the - direction. A torque offset parameter setting is given using the following expressions:

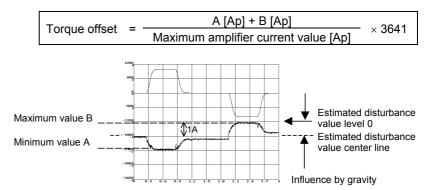

If you read the minimum and maximum values as -1.9 [Ap] and -0.1 [Ap] in the above chart (the amplifier used is rated at 40 [Ap] maximum), the torque offset parameter = $-\{(-1.9) + (-0.1)\}/40 \times 3641$ = 182. The following chart applies when the parameter is set with 182.

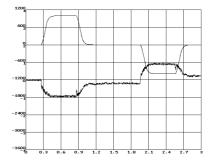


If the torque offset parameter is specified, <u>**be sure to specify</u>** the following parameter also.</u>


| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|--|--|---|---|--|---------------------------------|--|--|
| 2603 (FS15 <i>i</i>) | | | | | | | TCPCLR | |
| 2215 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| TCPCLR(#1) | emerg 0: I 1: H <7> (| ency sto Disabled Enabled Compens | p in the ate for d | velocity ynamic | loop inte riction. | egrator i | s: | ie offset at a |
| | (| velo Mea velo dyna | <u>city</u> sure an city. T amic fri | estima Then, by ction, s | ted dist assumi et the p | urbance ng this proportio | value a measure | proportion at a constand d value as fficient for alue. |
| 1727 (FS15 <i>i</i>) | | D | ynamic fri | ction com | pensation | coefficie | ent | |
| 2116 (FS30 <i>i</i> , 16 <i>i</i>) [Unit of data] [Valid data range] Measurement velocity] | 0 to 20 -264 Series Rotary Measu then s comp | to 264 (90B6, S y motor: ure an es et the res ynamic fr ensation of DTE If the m measu disturb obtain | es 9096 c Series 9 eries 90 1000 mi stimated sults of c iction coefficien neasure rement ance va the est | br Series 20B0/E a B5, Serie alsturba $alculation t = \frac{E}{Ma}ement value$. By | and subs s 90D0, ar motor ince values stimated kimum an velocity y, and y propo disturb | is too measu ance v | es 90E0) mm/s measuren ing to the nce value urrent valu high, lo | wer the estimated tion, |
| | No.172 No.211 so on) Dynam | namic fricti 7(Series 1 6(Series 1 ic friction nsation coe | 5 <i>i</i>) 6 <i>i</i> and efficient | 1000 n t a compe | nin ⁻¹ (rotar nm/s (linea nsation va | ar motor) lue at a m | → Veloc | nt |

velocity, and correct the value proportional to the

velocity as a dynamic friction.

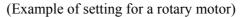


- Suppose that the estimated disturbance value at 1000 min⁻¹ is 1 [Ap] (the maximum amplifier current value is 40 [Ap]).
 - Dynamic friction compensation coefficient = $1/40 \times 440 = 11$

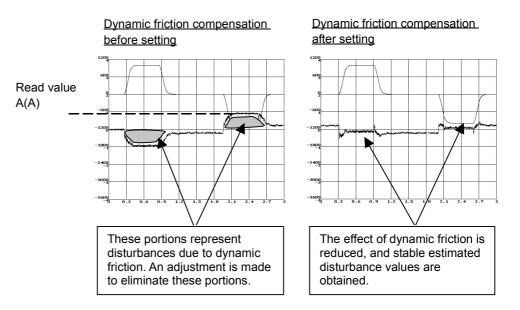

(ii) <u>Method of setting a dynamic friction as "portion</u> proportional to velocity + constant portion" and imposing a <u>limit</u>

If the compensation value for stop time to low-velocity movement is insufficient in adjustment of (i), set a dynamic friction compensation value in the stop state. If the compensation value for high-speed movement is excessive, a limit is imposed on the compensation value.

Dynamic friction compensation value

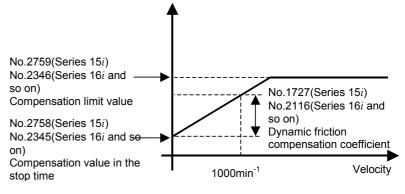

Set a compensation value in the stop time and a compensation limit value in addition to a compensation value at 1000 min⁻¹.

| | NOTE |
|---|---|
| | This method can be used with the following servo |
| | software: |
| | |
| | (Series 30 <i>i</i> , 31 <i>i</i> , 32 <i>i</i>) |
| | Series 90D0/A(01) and subsequent editions |
| | Series 90E0/A(01) and subsequent editions |
| | (Series 15 <i>i</i> -B, 16 <i>i</i> -B, 18 <i>i</i> -B, 21 <i>i</i> -B, 0 <i>i</i> -B, 0 <i>i</i> Mate-B, |
| | Power Mate <i>i</i>) |
| | Series 90B0/E(05) and subsequent editions |
| | Series 90B1/A(01) and subsequent editions |
| | Series 90B6/A(01) and subsequent editions |
| | (Series 0 <i>i</i> -C, 0 <i>i</i> Mate-C, 20 <i>i</i> -B) |
| | Series 90B5/A(01) and subsequent editions |
| | |
| 2759 (5945) | Dynamic friction companyation value in the stan state |
| 2758 (FS15 <i>i</i>) | Dynamic friction compensation value in the stop state |
| 2345 (FS30 <i>i</i> , 16 <i>i</i>) [Unit of data] | TCMD unit (7282 when the estimated disturbance value is equivalent |
| [Onit of data] | to the maximum current value of the amplifier) |
| [Valid data range] | 0 to 7282 |
| [Measurement velocity] | 10 min ⁻¹ (rotary motor), 10 mm/s (linear motor) |
| | The absolute value of a setting is used. |
| | |
| 2759 (FS15 <i>i</i>) | Dynamic friction compensation limit value |
| 2346 (FS30 <i>i</i> , 16 <i>i</i>) | , |
| [Unit of data] | TCMD unit (7282 when the estimated disturbance value is equivalent |
| | to the maximum current value of the amplifier) |
| [Valid data range] | 0 to 7282 |
| [Measurement velocity] | Maximum feedrate |
| | The absolute value of a setting is used. |
| | |
| (Method of setting) | |
| | First, measure an estimated disturbance value when a movement |
| | is made at a maximum feedrate on the axis, then set the results of |
| | calculations made according to the table below in "dynamic |
| | friction compensation limit value". |
| | Dynamic friction compensation limit value = <u> Estimated disturbance value [Ap] </u> × 7282 Maximum amplifier current value [Ap] |
| | |
| | Next, measure an estimated disturbance value when a movement |
| | is made on the axis at the measurement velocity (10 min ⁻¹ or 10 |
| | mm/s) for "dynamic friction compensation value in the stop |
| | state", then set the results of calculations made according the |
| | table below in "dynamic friction compensation value in the stop |
| | state". |
| | Dynamic friction [Estimated disturbance value [Ap]] |
| | compensation value in = Maximum amplifier current value [Ap] |
| | the stop state |


Finally, measure an estimated disturbance value when a movement is made on the axis at the measurement velocity (1000 min^{-1} or 1000 mm/s) for "dynamic friction compensation coefficient", then set the results of calculations made according the table below in "dynamic friction compensation coefficient".

| Dynamic friction | Estimated disturbance value [Ap] × 440 |
|--------------------------|---|
| compensation coefficient | Maximum amplifier current value [Ap] |

<8> Set an unexpected disturbance torque detection alarm level.

Perform several different operations (sample machining program, simultaneous all-axis rapid traverse acc./dec., etc.), and observe estimated disturbance values, and measure the maximum (absolute) value.

Then, set up an alarm level.

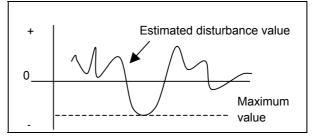

1997 (FS15*i*) 2104 (FS30*i*, 16*i*) Unexpected disturbance torque detection alarm level

Alarm level conversion uses the following expression.


Unexpected disturbance torque detection alarm level =

Estimated disturbance value [Ap] Maximum amplifier current value [Ap] × 7282+500 to 1000 approximately

NOTE

- 1 Add some margin (usually about 500 to 1000) to the alarm level to be set.
- 2 If the "unexpected disturbance torque detection alarm level" parameter is 32767, no unexpected disturbance torque alarm detection is performed.
- <9> Set a distance to be retraced at unexpected disturbance torque detection.

If the retrace amount parameter is 0, the motor stops at the point where an unexpected disturbance torque was detected. To retract the tool from the location of collision quickly, set the retrace distance parameter.

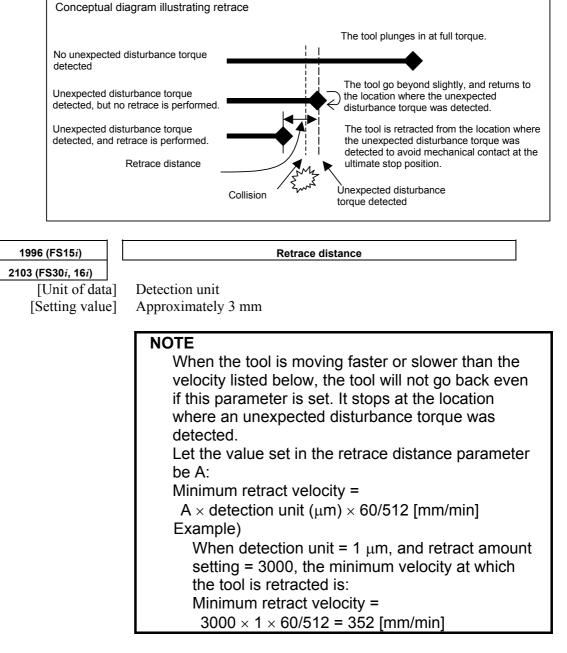


[2-axis simultaneous retract function at detection of an unexpected disturbance torque]

Because the 2-axis simultaneous retract function at detection of an unexpected disturbance torque is executed only for an axis on which an unexpected disturbance torque is detected, it has conventionally been unable to be applied to a position tandem (simple synchronous control) axis.

The following setting adds a function for retracting an axis in position tandem when an unexpected disturbance torque is detected on the other axis. This function enables a retract function to be applied also to position tandem axes. (Series and editions of applicable servo software)
(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/E(05) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(Setting parameters)

To use the unexpected disturbance torque detection function, set the following bit to 1 for both the master and slave axes.

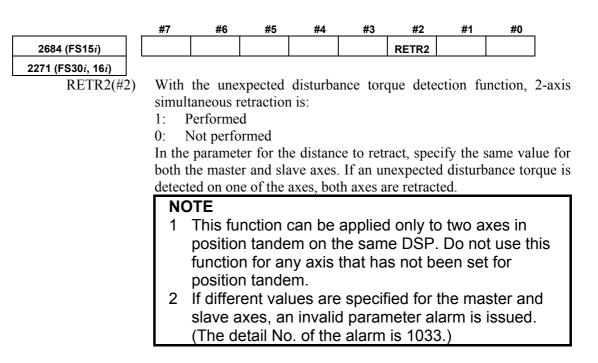

<10> Run the machine with the alarm level set up.

If the unexpected disturbance torque detection function works incorrectly, increase the alarm level.

<11>Now adjustment is completed.

4.12.2 Cutting/Rapid Unexpected Disturbance Torque Detection Switching Function

(1) Overview


An alarm threshold for unexpected disturbance torque detection is set separately for cutting and rapid traverse.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions


(3) Setting parameters

A threshold can be set separately for cutting and rapid traverse by setting the following bit when the unexpected disturbance torque detection function is used:

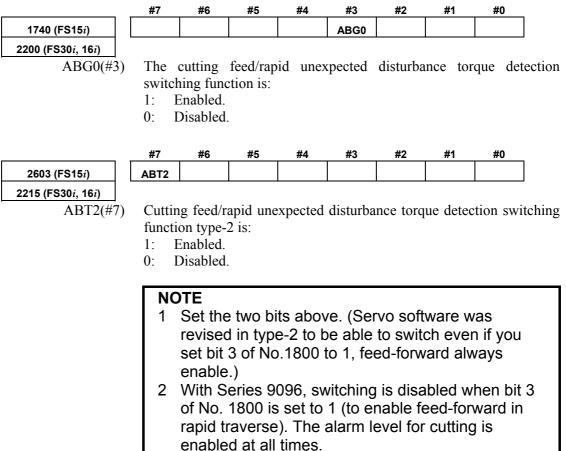

4.SERVO FUNCTION DETAILS

Alarm thresholds for unexpected disturbance torque detection are set in the following parameters:

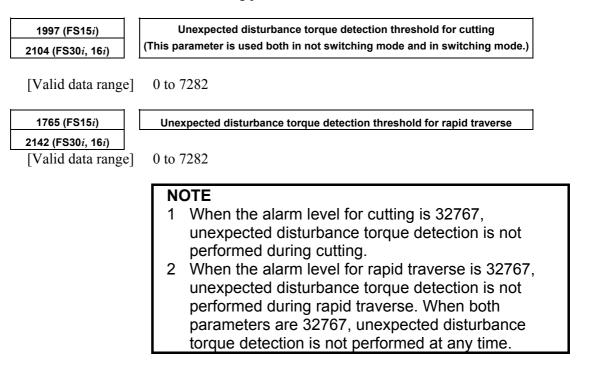

4.13 FUNCTION FOR OBTAINING CURRENT OFFSETS AT EMERGENCY STOP

(1) Overview


The current offset is a current feedback offset value arising from the analog offset voltage of the current detector. If the current offset is measured incorrectly, motor current feedback can be adversely affected, resulting in very small motor rotation fluctuations (four components per motor revolution).

A current offset measurement is made when the power is turned on. This function performs a current offset measurement not only at power-on time but also in each emergency stop state.

(2) Series and editions of applicable servo software

(Series 30i,31i,32i)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15i-B,16i-B,18i-B,21i-B,0i-B,0i Mate-B,Power Mate i)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0i-C,0i Mate-C,20i-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

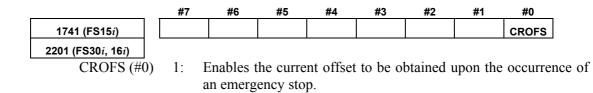

If the above setting is made, the current offset is obtained again during an emergency stop.

4.14 LINEAR MOTOR PARAMETER SETTING

4.14.1 Procedure for Setting the Initial Parameters of Linear Motors

(1) Overview

The following describes the procedure for setting the digital servo parameters to enable the use of a FANUC linear motor.

(2) Series and editions of applicable servo software

| | (Series 30 <i>i</i> ,31 <i>i</i> ,32 <i>i</i>) | | | | | | | | |
|-------------|---|--|--|--|--|--|--|--|--|
| | Series 90D0/A(01) and subsequent editions | | | | | | | | |
| | Series 90E0/A(01) and subsequent editions | | | | | | | | |
| | (Series 15 <i>i</i> -B,16 <i>i</i> -B,18 <i>i</i> -B,21 <i>i</i> -B,Power Mate <i>i</i>) | | | | | | | | |
| | Series 9096/A(01) and subsequent editions | | | | | | | | |
| | Series 90B0/A(01) and subsequent editions | | | | | | | | |
| | Series 90B1/A(01) and subsequent editions | | | | | | | | |
| | Series 90B6/A(01) and subsequent editions | | | | | | | | |
| | (Series 20 <i>i</i> -B) | | | | | | | | |
| | Series 90B5/A(01) and subsequent editions | | | | | | | | |
| (3) Warning | | | | | | | | | |
| | | | | | | | | | |
| | The linear motor can make an unpredictable movement, resulting in a very dangerous situation, if an error is made in linear motor assembly, power line cabling, detector installation direction setting, or basic parameter setting. It is recommended to take the following actions until normal operation is confirmed: Lower the excessive error level so that an alarm is issued immediately when an unpredictable movement is made. Lower the torque limit value to disable abrupt acceleration. Ensure that the emergency stop switch can be pressed immediately. | | | | | | | | |

(4) Linear encoders

The position and velocity of the linear motor are detected using a linear encoder. Two types of linear encoders are available: incremental type and absolute type. The parameter setting and connection vary according to the type of encoder.

For incremental type

The linear encoder of incremental type is connected to a servo amplifier via a position detection circuit (A860-0333-T001, -T002, -T201, -T202, -T301, -T302) for linear motor manufactured by FANUC. Values to be set in parameters vary depending on the signal pitch of the linear encoder. Therefore, check the signal pitch of the encoder first.

If a position detection circuit (A860-0333-T201, -T202, -T301, or -T302) having an interpolation magnification of 2048 is used, it is necessary to specify additional parameters so that both the maintenance of a maximum feedrate and the realization of a higher resolution can be supported.

Table 4.14.1 (a) lists examples of usable incremental linear encoders.

| Table 4.14.1 (a) Examples of usable linear encoders (incremental) | | | | | | |
|---|-------------------|----------------------|--|--|--|--|
| Encoder maker | Signal pitch (µm) | Model | | | | |
| | 20 | LS486, LS186, etc. | | | | |
| | 40 | LB382, LIDA185, etc. | | | | |
| HEIDENHAIN | 2 | LIP481 | | | | |
| | 4 | LF481R, LIF181, etc. | | | | |
| | 100 | LB382 | | | | |
| Mitutoyo | 20 | AT402 | | | | |
| Optodyne | 40.513167 | LDS | | | | |
| Renishaw | 20 | RGH22 | | | | |
| Renisnaw | 40 | RGH41 | | | | |
| SAMTAK | 20 | FTV, FMV | | | | |
| (FUTABA CORPORATION) | 20 | ΓΙV, Γ ΙVΙV | | | | |
| Sony Precision | 20 | SH12, SH52 | | | | |
| Technology Inc. | 20 | 3112, 3132 | | | | |

 Table 4.14.1 (a) Examples of usable linear encoders (incremental)

When a linear encoder of incremental type is used, a linear motor pole detector (A860-0331-T001, -T002) is also needed.

For absolute type

The linear encoder of absolute type is directly connected to a servo amplifier. Depending on the resolution of an encoder used, the parameter setting varies. First, check the resolution. Table 4.14.1(b) lists examples of absolute type linear encoders currently usable.

| Table 4.14.1 (b) Usable linear encoders (absolute) | | | | | | | | |
|--|-----------------|----------------|--|--|--|--|--|--|
| Encoder maker | Resolution (µm) | Model | | | | | | |
| HEIDENHAIN | 0.05 (0.1)* | LC191F, LC491F | | | | | | |
| Mitutoyo | 0.05 | AT353, AT553 | | | | | | |

Table 4.14.1 (b) Usable linear encoders (absolute)

* Encoders with resolutions of 0.05 μ m and 0.1 μ m are available.

NOTE

- 1 For details of the linear encoders usable with FANUC linear motors, refer to "FANUC LINEAR MOTOR Lis series DESCRIPTIONS (B-65382EN)".
- 2 For details of the linear encoders, contact the manufacturer of each linear encoder.
- 3 When servo HRV4 control is to be used with a linear motor, the AT553 (Mitutoyo Co., Ltd.) or a high-resolution serial output circuit must be used.

(5) Parameter settings

Set the parameters according to the procedure below. Note the points below when setting the parameters.

[Cautions for using incremental linear encoders]

The following parameter setting procedure involves a parameter to be specified according to the resolution of the linear encoder. If an incremental linear encoder is to be used, convert the encoder signal pitch to the resolution for parameter calculation, using the following equation.


Resolution $[\mu m]$ = Encoder signal pitch $[\mu m] / 512$


Parameter setting procedure (1)

Procedure (1) can be used to initialize the parameters (such as current gain) necessary to drive a linear motor. After initialization, <u>parameters</u> depending on the linear encoder resolution (or the value obtained by dividing the signal pitch of the linear encoder by the interpolation magnification of the position detection circuit) must be set. Set these parameters by following parameter setting procedure (2).


Parameters related to initialization

For incremental type, For absolute type

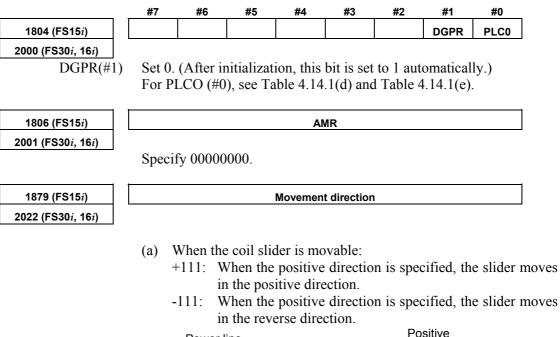

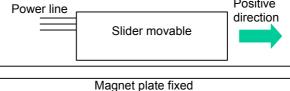

- (b) When the magnet plate is movable:
 - +111: When the positive direction is specified, the magnet plate moves in the positive direction.
 - -111: When the positive direction is specified, the magnet plate moves in the reverse direction.

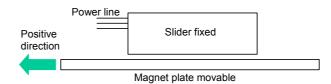

Motor ID number

For incremental type, For absolute type

1874 (FS15*i*) 2020 (FS30*i*, 16*i*) Motor ID number

Standard parameters are prepared for the linear motors listed below as of February, 2005. When the standard parameters are not included in the servo software used, see the parameter list shown in this manual, and set the parameters.

| [200-V drivin | ng] | | | | |
|-----------------------|------------------------|--------------|--------------|-------|--------------|
| Motor model | Motor specification | Motor ID No. | 90B6 90B5 | 90B1 | 90D0 90E0 |
| L <i>i</i> S300A1/4 | 0441-B200 | 351 | B(02) | B(02) | G(07) |
| L <i>i</i> S600A1/4 | 0442-B200 | 353 | B(02) | B(02) | G(07) |
| L <i>i</i> S900A1/4 | 0443-B200 | 355 | B(02) | B(02) | G(07) |
| L <i>i</i> S1500B1/4 | 0444-B210 | 357 | B(02) | B(02) | G(07) |
| L <i>i</i> S3000B2/2 | 0445-B110 | 360 | B(02) | B(02) | G(07) |
| L <i>i</i> S3000B2/4 | 0445-B210 | 362 | B(02) | B(02) | G(07) |
| L <i>i</i> S4500B2/2 | 0446-B110 | 364 | B(02) | B(02) | G(07) |
| LiS6000B2/2 | 0447-B110 | 368 | B(02) | B(02) | G(07) |
| LiS6000B2/4 | 0447-B210 | 370 | B(02) | B(02) | G(07) |
| L <i>i</i> S7500B2/2 | 0448-B110 | 372 | B(02) | B(02) | G(07) |
| L <i>i</i> S7500B2/4 | 0448-B210 | 374 | B(02) | B(02) | G(07) |
| L <i>i</i> S9000B2/2 | 0449-B110 | 376 | B(02) | B(02) | G(07) |
| L <i>i</i> S9000B2/4 | 0449-B210 | 378 | B(02) | B(02) | G(07) |
| LiS3300C1/2 | 0451-B110 | 380 | B(02) | B(02) | G(07) |
| LiS9000C2/2 | 0454-B110 | 384 | B(02) | B(02) | G(07) |
| L <i>i</i> S11000C2/2 | 0455-B110 | 388 | B(02) | B(02) | G(07) |
| L <i>i</i> S15000C2/2 | 0456-B110 | 392 | B(02) | B(02) | G(07) |
| L <i>i</i> S15000C2/3 | 0456-B210 | 394 | B(02) | B(02) | G(07) |
| L <i>i</i> S10000C3/2 | 0457-B110 | 396 | B(02) | B(02) | G(07) |
| L <i>i</i> S17000C3/3 | 0459-B110 | 400 | B(02) | B(02) | G(07) |

The motor ID numbers are for SERVO HRV2. Loading is possible with the servo software of the series and edition listed above or subsequent editions.


| [400-V drivin | ng] | | | | |
|-------------------------|------------------------|--------------|--------------|-------|--------------|
| Motor model | Motor specification | Motor ID No. | 90B6 90B5 | 90B1 | 90D0 90E0 |
| L <i>i</i> S1500B1/4 | 0444-B210 | 358 | B(02) | B(02) | G(07) |
| L <i>i</i> S3000B2/2 | 0445-B110 | 361 | B(02) | B(02) | G(07) |
| L <i>i</i> S4500B2/2HV | 0446-B010 | 363 | B(02) | B(02) | G(07) |
| L <i>i</i> S4500B2/2 | 0446-B110 | 365 | B(02) | B(02) | G(07) |
| L <i>i</i> S6000B2/2HV | 0447-B010 | 367 | B(02) | B(02) | G(07) |
| L <i>i</i> S6000B2/2 | 0447-B110 | 369 | B(02) | B(02) | G(07) |
| L <i>i</i> S7500B2/HV2 | 0448-B010 | 371 | B(02) | B(02) | G(07) |
| L <i>i</i> S7500B2/2 | 0448-B110 | 373 | B(02) | B(02) | G(07) |
| L <i>i</i> S9000B2/2 | 0449-B110 | 377 | B(02) | B(02) | G(07) |
| L <i>i</i> S3300C1/2 | 0451-B110 | 381 | B(02) | B(02) | G(07) |
| L <i>i</i> S9000C2/2 | 0454-B110 | 385 | B(02) | B(02) | G(07) |
| L <i>i</i> S11000C2/2HV | 0455-B010 | 387 | B(02) | B(02) | G(07) |
| L <i>i</i> S11000C2/2 | 0455-B110 | 389 | B(02) | B(02) | G(07) |
| L <i>i</i> S15000C2/3HV | 0456-B010 | 391 | B(02) | B(02) | G(07) |
| L <i>i</i> S10000C3/2 | 0457-B110 | 397 | B(02) | B(02) | G(07) |
| LiS17000C3/2 | 0459-B110 | 401 | B(02) | B(02) | G(07) |

The motor ID numbers are for SERVO HRV2. Loading is possible with the servo software of the series and edition listed above or subsequent editions.

NOTE

For the motor ID number of the conventional models, see Appendix G.

After parameter initialization, check that the function bit for linear motor control is set to 1 (linear motor control is enabled).

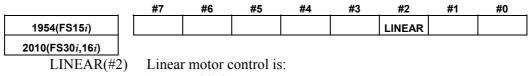

- 1: Enabled
- 0: Disabled

When using position detection circuit H or C for linear motor For incremental type

When a position detection circuit having an interpolation magnification of 2048 is used with an incremental type linear encoder, the parameter shown below must be set to maintain both the maximum feedrate and high resolution. Set the parameter before proceeding to procedure (2).

| | Series and editions of applicable servo software (Series 30i,31i,32i) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15i-B,16i-B,18i-B,21i-B,0i-B,Power Mate i) Series 90B0/Q(17) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions (Series 0i-C, 20i-B) Series 90B5/A(01) and subsequent editions | | | | | | | |
|-----------------------------------|---|-------------------|-----------|----------|-----------|----------|----------------|----------------|
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 2687(FS15 <i>i</i>) | | | | | | | | HP2048 |
| 2274(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| HP2048(#0) | | | | | | | ion of | 2048 (position |
| | | ion circu Jsed | ut H or (| for line | ear motor | :) 1S: | | |
| | | Jsed Not used | | | | | | |
| | 0. 1 | NOT USED | | | | | | |
| | | TE | | | | | | |
| | | | this na | aramete | er(No.2 | 274(FS | 30 <i>i</i> 16 | i) or |
| | • | | • | | 'enable' | • | | , |
| | | | • | | | | | Procedure |
| | | (2). | arame | | ings as | explai | | FIOCEGUIE |
| | 2 | • • | ina thia | norom | otor ro | sulto in | 2 000 | or off |
| | 2 | alarm l | | | eter res | suits in | a pow | 61-011 |
| | 3 | | - | | r is sat | the de | tection | unit in the |
| | 5 | | | | signal p | | | |
| | | | | • | • • | | | 2048 [μm]) |
| | | is nece | | | | (Signal | pitch/2 | -040 [μΠ]) |
| | | FFG = | | specify | • | | | |
| | 4 | - | | olation | is annli | ed ard | eoluti | on as high |
| | – | | - | | [µm]) i | | | Sh as high |
| | | decima | • | | / | s appli | cu as | |
| | 5 | | • | | | cremer | ntal tvn | e is used, |
| | | | | | etector | | | |
| | | | | 001, -T | | | | |
| | | 1,1000- | 0001-1 | 501, -1 | 50Z) | | | |

F

| NOTE |
|--|
| 6 With position detection circuit H (A860-0333-T201 |
| or A860-0333-T202) for linear motor, the |
| interpolation magnification can be changed using |
| setting pin SW3. |
| Setting A: The interpolation magnification is 512. |
| Setting B: The interpolation magnification is 2048. (The setting at the time of shipment is Setting B.) |
| (The setting at the time of shipment is Setting B.) |
| (Parameter setting when Setting B is used) |
| - HP2048=1 |
| - Resolution $[\mu m]$ = encoder signal pitch $[\mu m]/512$ |
| μ (μ) μ) μ |
| In the case of Setting B, the input frequency is 200 kHz. So, the maximum allowable speed dependent |
| on the detector is: |
| Maximum allowable speed |
| = Signal pitch [m] × 200000 [Hz] × 3600 [s] |
| If the maximum allowable speed dependent on the |
| detector needs to be increased, use Setting A. |
| (Parameter setting when Setting A is used) - HP2048=1 |
| - Resolution $[\mu m]$ = encoder signal pitch $[\mu m]/128$ |
| - Resolution [μ m] – encoder signal pitch [μ m]/120 |
| In the case of Setting A, the input frequency is 750 kHz, so that the maximum allowable speed |
| dependent on the detector is: Maximum allowable speed |
| = Signal pitch $[m] \times 750000 [Hz] \times 3600 [s]$ |
| Thus, the maximum allowable speed is greater |
| than that for Setting B. |
| |
| For details, refer to the specifications of position |
| detection circuit H. |
| |
| 7 When the position detection circuit C |
| (A860-0333-T301 or -T302) for linear motor is used, no function is available which can change an |
| interpolation magnification according to a set-up |
| pin. |
| The interpolation magnification is 2048, and the |
| input frequency is 200 kHz. |
| Linear motor position detection circuit C is |
| connected to the scale with an absolute address |
| origin. |

Parameter setting procedure (2)

For incremental type, For absolute type

Procedure (2) makes parameter settings that depend on the resolution of the linear encoder (hereafter simply called "the resolution"). Set the parameters according to Table 4.14.1 (d), (e).

When using an incremental type linear encoder, calculate as follows: **Resolution** $[\mu m] =$ encoder signal pitch $[\mu m] / 512$

The pole-to-pole span used in calculation varies, depending on the motor model.

- Small linear motors: 30 mm (LiS300A, LiS600A, LiS900A)
- Medium-size and large linear motors: 60 mm (models other than the above) (See Table 4.14.1(c).)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|-------------------------------------|--|--|----------|------------|------------|-----------|----------|------------|--|--|
| 1804 (FS15 <i>i</i>) | | | | | | | | PLC0 | | |
| 2000 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| PLC0(#0) | The n | The number of velocity pulses and the number of position pulses are: | | | | | | | | |
| | | Used wit | | • | | | | | | |
| | | Used afte | • | | - | | | | | |
| | | number | of veloc | ity pulse | s is lage | r than 32 | 2767, se | t the para | | |
| | to 1. | - | 2 | | | | | | | |
| | | | | | | eds 327 | 767, use | the follo | | |
| | positi | on pulse | convers | ion coeff | icient. | | | | | |
| 1876 (FS15 <i>i</i>) | | | Nu | mber of ve | locity pul | ses | | | | |
| 2023 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| | (Para | meter cal | culation | expressi | on) | | | | | |
| | Num | Number of velocity pulses = 3125 / 16 / (resolution [µm]) | | | | | | | | |
| | If the calculation result is greater than 32767 , set up PLC0 = 1, and set | | | | | | | | | |
| | the parameter (PULCO) with a value of 1/10. | | | | | | | | | |
| 1891 (FS15 <i>i</i>) | | | Nu | mber of po | sition pul | ses | | | | |
| 2024 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| <u> </u> | (Para | meter cal | culation | expressi | on) | | | | | |
| | | | | - | , | solution | [µm]) | | | |
| | Number of position pulses = 625 / (resolution [µm]) If the calculation result is greater than 32767, determine the parameter setting (PPLS), using the following position pulse conversion | | | | | | | | | |


4.SERVO FUNCTION DETAILS

| 2628 (FS15 <i>i</i>) | Position pulses conversion coefficient | | | | | | | | |
|-------------------------------------|--|------------------|-------------|----------------|--------------------------|--------------|----------------|-------------------|---------------|
| 2185 (FS30 <i>i</i> , 16 <i>i</i>) | <u>.</u> | | | | | | | | |
| | This p | paramete | er is used | d if the | calculate | d numb | er of po | sition pul | ses |
| | greate | r than 3 | 2767. | | | | _ | _ | |
| | (It car | n be spe | ecified in | the Ser | ies 90B0 | , 90B1, | 90B6, 9 | 0B5, 90I |) 0, c |
| | 90E0. |) | | | | | | | |
| | | | lculation | - | · · | | | | |
| | PLC0 | $=0 \rightarrow$ | | | | | | wing equ | |
| | | | | | | | | es) × (po | |
| | | | - | | | | | solution [µ | |
| | PLC0 | $=1 \rightarrow$ | | | | | | wing equ | |
| | | | | | | - | - | ses) \times (po | |
| | | | pulses | convers | ion coef | ficient) = | = 625/res | solution [µ | μm]. |
| | $(\rightarrow Se$ | e Suppl | lementary | y 3 of Sı | ubsection | 2.1.8.) | | | |
| | | | | | | | | | |
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1707 (FS15 <i>i</i>) | APTG | | | | | | | | |
| 2013 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| APTG(#7) | When | using a | n absolu | te type li | inear enc | oder, se | t this bit | to: | |
| | 1: I | gnores a | an α Puls | secoder s | soft disco | onnection | n. | | |
| tting AMR conversi | on coeffi | cients | | | | | | | |
| | Calcu | late the | number | of feedb | ack puls | es per p | ole-to-p | ole span o | of th |
| | linear | motor, | and find | AMR co | onversior | n coeffic | ients 1 a | nd 2 expr | resse |
| | • | | on shown | | | | | | |
| | | - | llses per j | | - | | | | |
| | = pole | e-to-pole | e span [m | $m] \times 10$ | 00/resolu | ition [µ1 | n] | mt 2) | |
| | = (AN | IR conv | version co | sefficien | $(t \ 1) \times 2^{(P)}$ | INIK CONVERS | aon coerricie. | nt 2) | |
| 1 | | | | | | | | 1 | |
| 1705 (FS15 <i>i</i>) | | | AMR | conversi | on coeffic | ient 1 | | | |
| 2112 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| | | | | | | | | | |
| 1761 (FS15 <i>i</i>) | | | AMR | R conversi | on coeffic | ient 2 | | | |
| 2138 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| | Suppl | ementar | y) | | | | | | |
| | I | f AMR | convers | sion coe | fficient | 1 = (pc) | ole-to-po | le span [| [mm |
| | r | esolutio | n [μm]) | is an in | teger and | l a mult | iple of 1 | 024, setti | ing c |
| | | | | | | | | n this cas | |
| | f | ollowin | g are ass | umed: | | | | | |
| | A | AMR co | nversion | coeffici | ent 1 | | | | |
| | = | = (pole-t | o-pole sp | pan [mm |]/resolut | ion [µm] |)) | | |
| | | | nversion | | | | | | |
| | The p | ole-to-p | ole span | depends | s on the 1 | notor m | odel as i | ndicated | in th |
| | table l | below. | | | | | | | |
| | | | Table 4. | 14.1 (c) | List of p | ole-to-po | ole spans | | |
| | | ssificatio | | | | | | | |

| Classification | Pole-to-pole span (D) | Motor model |
|---------------------------------|-----------------------|--|
| Small motors | 30mm | L <i>i</i> S300A, L <i>i</i> S600A, L <i>i</i> S900A |
| Medium-size and large motors | 60mm | Model other than the above |

B-65270EN/06

4.SERVO FUNCTION DETAILS

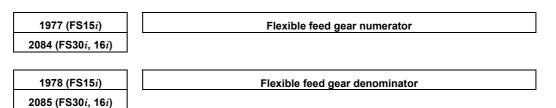

Use a unified detection unit for the flexible feed gear (FFG) parameters according to Tables 4.14.1 (d) and 4.14.1 (e). (Parameter calculation expression)

FFG = (resolution [µm]) / (detection unit [µm])

Table 4.14.1 (d) Parameter setting when an incremental type linear encoder is used

[Medium-size and large motors] (pole-to-pole span: 60mm)

| PLC0 | | Number of velocity pulses / Number of position pulses, | AMR conversion | FFG(No.2084/No.2085) | | |
|--------------|----------|---|---------------------------------------|----------------------|---------------------|--|
| Signal pitch | (2000#0) | Conversion coefficient (No.2023 / No.2024, 2185) | coefficient 1 or 2 (No.2112, 2138) | 1-µm detection | 0.1-μm detection | |
| 20 | 0 | 5000 / 16000, 0 | 3000, 9 | 5 / 128 | 50 / 128 | |
| 40 | 0 | 2500 / 8000, 0 | 1500, 9 | 5 / 64 | 50 / 64 | |
| 2 | 1 | 5000 / 8000, 2 | 30000, 9 | 1 / 256 | 10 / 256 | |
| 4 | 1 | 2500 / 8000, 0 | 15000, 9 | 1 / 128 | 10 / 128 | |
| 40.513167 | 0 | 2468 / 7899, 0 | 1481, 9 | 301 / 3804 | 3010 / 3804 | |

[Small motors] (pole-to-pole span: 30mm)

| PLC0 | | Number of velocity pulses / Number of position pulses, | AMR conversion | FFG(No.2084/No.2085) | | |
|--------------|----------|---|---------------------------------------|----------------------|---------------------|--|
| Signal pitch | (2000#0) | Conversion coefficient (No.2023 / No.2024, 2185) | coefficient 1 or 2 (No.2112, 2138) | 1-μm detection | 0.1-μm detection | |
| 20 | 0 | 5000 / 16000, 0 | 1500, 9 | 5 / 128 | 50 / 128 | |
| 40 | 0 | 2500 / 8000, 0 | 750, 9 | 5 / 64 | 50 / 64 | |
| 2 | 1 | 5000 / 8000, 2 | 15000, 9 | 1 / 256 | 10 / 256 | |
| 4 | 1 | 2500 / 8000, 0 | 7500, 9 | 1 / 128 | 10 / 128 | |
| 40.513167 | 0 | 2468 / 7899, 0 | 1481, 8 | 301 / 3804 | 3010 / 3804 | |

The parameter Nos. for the Series 15*i* are omitted. See the previous page.

| Table 4.14.1 (e) | Parameter setting when an absolute type linear encoder is used |
|--------------------------------|--|
| [Medium-size and large motors] | (pole-to-pole span: 60mm) |

*

*

| | PLC0 | Number of velocity pulses / | AMR conversion coefficient 1 or 2 (No.2112, 2138) | FFG(No.2084/No.2085) | |
|---|----------|---|---|----------------------|---------------------|
| Resolution | (2000#0) | Number of position pulses, Conversion coefficient (No.2023 / No.2024, 2185) | | 1-μm detection | 0.1-μm detection |
| 0.1 | 0 | 1953 / 6250, 0 | 9375, 6 | 1/10 | 1/1 |
| 0.05 | 0 | 3906 / 12500, 0 | 9375, 7 | 1/20 | 1/2 |
| Small motors] (pole-to-pole span: 30mm) | | | | | |
| | | Number of velocity pulses / | AMP conversion | FFG(No.208 | 4/No.2085) |

| | PLC0 | Number of velocity pulses / | AMR conversion coefficient 1 or 2 (No.2112, 2138) | FFG(No.2084/No.2085) | |
|------------|---------------------|---|---|----------------------|---------------------|
| Resolution | Resolution (2000#0) | Number of position pulses, Conversion coefficient (No.2023 / No.2024, 2185) | | 1-μm detection | 0.1-μm detection |
| 0.1 | 0 | 1953 / 6250, 0 | 9375, 5 | 1/10 | 1/1 |
| 0.05 | 0 | 3906 / 12500, 0 | 9375, 6 | 1/20 | 1/2 |

The parameter Nos. for the Series 15*i* are omitted. See the previous page.

(Cautions)

If the encoder signal pitch is larger than 200 μ m, various coefficients used in the servo software may overflow to raise an alarm on invalid parameters, because the setting for the number of velocity pulses becomes very small.

In this case, change the corresponding parameter by referencing Subsection 2.1.8, "Measures for Alarms on Illegal Servo Parameter Settings."

The setting of an AMR conversion coefficient is changed from that described in B-65270EN/04 or earlier. (A change is made starting with B-65270EN/05 to improve the precision of setting.)

The conventional setting method poses no practical problem, but the setting of the new values is recommended.

Parameter setting procedure (3)


When a linear motor is used, the linear encoder must be installed so that the Z phase of the linear encoder matches the origin of the activating phase. Otherwise, the specified motor characteristics cannot be obtained. (For details of installation positions, refer to "FANUC LINEAR MOTOR Lis series DESCRIPTIONS (B-65382EN)".)

Procedure (3) describes the method of adjusting the activating phase origin (AMR offset adjustment) when it is difficult to install a linear encoder at a specified position with a specified precision.

Setting the AMR offset

| For inc | cremental type, For absolute type |
|-------------------------------------|---|
| | • When the learning control function is used (Series 90B3 and |
| | 90B7), see "Learning Function Operator's Manual". |
| | • When the learning control function is not used (Series 9096, |
| | 90B0, 90B6, 90B5, 90D0, and 90E0), set the AMR offset as |
| | follows: |
| | |
| 1762 (FS15 <i>i</i>) | AMR offset |
| 2139 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | Specifies an activating phase (AMR offset) for phase Z. |
| [Unit of data] | Degrees |
| [Valid data range] | -45 to +45 ^(*) |
| | (*) Extended AMR offset setting range (-60 degrees to +60 degrees) can be specified by setting the parameter below. So, if the AMR offset value does not lie within the range -45 degrees to +45 degrees in adjustment processing, set the bit below. (Usually, set the bit below to 0.) (Series 9096 and Series 90B0/B(02) and earlier editions are not |

(Series 9096 and Series 90B0/B(02) and earlier editions are not supported.)

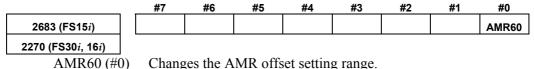

Changes the AMR offset setting range.

-45 degrees to +45 degrees (standard setting range) 0.

-60 degrees to +60 degrees (extended setting range) 1:

The procedure for AMR offset adjustment is described below. The procedure varies according to whether an incremental type linear encoder or absolute type linear enable is used. Before starting an adjustment, check the type of linear encoder used.

Incremental type

The procedure for AMR offset adjustment when an incremental type linear encoder is used is described below. When using an absolute type linear encoder, see the item of Absolute type described later.

Make a fine activating phase adjustment according to the procedure below.

Measuring the activating phase

Connect SERVO GUIDE to the CNC, and set channel data as (1)shown below.

Select the target axis for measurement, and set the data type to "ROTOR".

| Channel | × |
|---------------------------------------|---|
| СН1 СН2 СН3 СН4 СН5 СН6 | ٦ |
| Axis AI (1) Kind ROTOR Unit Heg | Extended address(E) 0 = Shift(S) 0 = |
| Conv. Coef. 360 (Physical Val.) | Rotor position [theta] of the servo motor |
| Conv. Base 256 (Raw data Val.) | |
| Origin Value 0 | |
| OK | Cancel |

- For a linear motor, a value from 0 to 360 degrees is read each time a motion is made over the distance of a pair of the N pole and S pole of the magnet (pole-to-pole span).
- (2) Run the linear motor using a JOG operation for example, and observe the behavior of the activating phase (AMR) before, at the moment, and after phase Z is captured. (See Figs. 4.14.1 (a) and (b).)

The activating phase changes to 0 (or 360) degrees at the moment phase Z is captured. Measure the value just before it changes, and let this value be A.




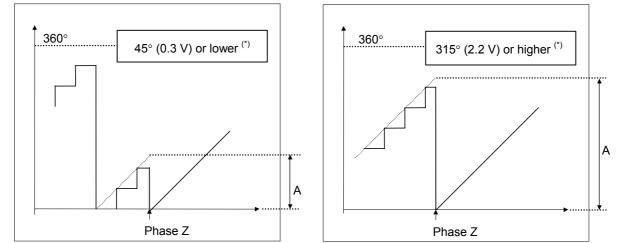



Fig. 4.14.1 (a) If the offset is set with a positive number Fig. 4.14.1 (b) If the offset is set with a negative number (before AMR offset adjustment) (before AMR offset adjustment)

- (*) The figures above show examples where AMR60 = 0. When AMR60 = 1, "45° (0.3 V) or lower" should read "60° (0.4 V) or lower", and "315° (2.2 V) or higher" should read "60° (2.1 V) or higher".
- (3) Set the AMR offset parameter with A (or A 360).
- * The parameter setting range is:
 -45 degrees to +45 degrees (when AMR60 = 0)
 -60 degrees to +60 degrees (when AMR60 = 1)
 When the value of A does not lie within the setting range, the installation position of the linear encoder needs to be readjusted. The voltage range of A allowing parameter setting, when measured by analog voltage, is as follows:
 0 V to 0.3 V and 2.2 V to 2.5 V (when AMR60 = 0)
 0 V to 0.4 V and 2.1 V to 2.5 V (when AMR60 = 1)
- (4) Switch the power off and on again. Now parameter setting is completed.
- (5) Observe the activating phase (AMR) again according to step (2) above, and check that the activating phase changes continuously in the phase Z rising portion.
- (6) Switch the power off and on again. This completes parameter setting.

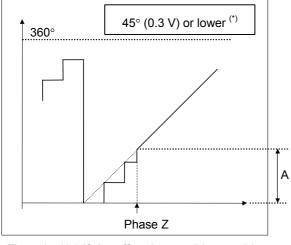

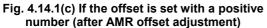

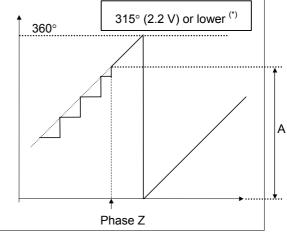

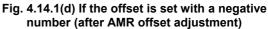

(*) The figures above show examples where AMR60 = 0. When AMR60 = 1, "45° (0.3 V) or lower" should read "60° (0.4 V) or lower", and "315° (2.2 V) or higher" should read "300° (2.1 V) or higher".

When using the servo check board

- (1) Connect the servo check board to the CNC.
- (2) Set the 7-segment LED on check board CH1 as follows: Set the axis number of parameter No. 1023 in the AXIS digit. Set 5 in the DATA digit.
- (3) For activating phase measurement, set the parameter below.

| 1726 (FS15 <i>i</i>) | Parameter for internal data measurement |
|-----------------------|---|
| 2115 (FS16 <i>i</i>) | |

Series 9096:

326 for an odd-numbered axis and 966 for an even-numbered axis Series 90B0, 90B1, 90B5, or 90B6:


326 for an odd-numbered axis and 2374 for an even-numbered axis Under this condition, the activating phase is output from CH1 on the check board.

To use a digital check board to measure data with a personal computer, set up "SD" (servo tuning software) as stated below. The displayed value is in degree units ("360 degrees" is displayed as "360").

| U | |
|-------------------|------------------------|
| DOS prompt > SD I | NIT [Enter] |
| 0 | (Origin of position) |
| F9 | (System setting) |
| 0 | (CH0) |
| 2 [Enter] | (TCMD) |
| 639.84375 [Enter] | (A) |
| F10 | (Return to main menu.) |

| | * See Sec. 4.19 for explanations about how to use the SD software. In addition, the analog voltage from the check board can be observed using an oscilloscope. In output conversion, 2.5 V corresponds to 360 degrees. |
|-----------------------|---|
| | (4) The procedure for measuring the activating phase is the same as when SERVO GUIDE is used. |
| | (5) After completing the adjustment, reset to 0 the parameter set in step (3). |
| Absolute type | The procedure for AMR offset adjustment when an absolute type linear encoder is used is described below. When using an incremental type linear encoder, see the item of Incremental type described earlier. Make a fine activating phase adjustment according to the procedure below. |
| | ▲ CAUTION In this adjustment, the linear motor is driven by current fed from the DC power supply. So, the CNC does not exercise position control. For safety, move the coil slider of the linear motor to near the stroke center and make an adjustment. (Activation by the DC power supply moves a medium-size or large linear motor for up to about 60 mm, and moves a small linear motor for up to about 30 mm.) |
| | (1) For activating phase adjustment, set the parameter below. For Series 9096, 90B0, 90B6, 90B5, or 90B1 |
| 1726 (FS15 <i>i</i>) | For internal data measurement |
| 2115 (16 <i>i</i>) | Series 9096: 320 for an odd-numbered axis, 960 for an even-numbered axis Series 90B0, 90B1, 90B5, or 90B6: 320 for an odd-numbered axis, 2368 for an even-numbered axis For Series 90D0 or 90E0 (If diagnosis No. 762 is available, the activating phase can be directly checked using that data.) |
| - | For internal data measurement |
| 2115 (FS30 <i>i</i>) | Set 0. |

B-65270EN/06

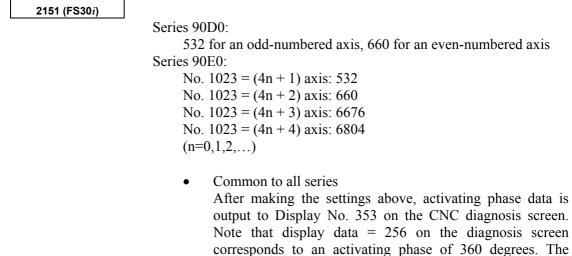


corresponds to an activating phase of 360 degrees. The following expression is used for output unit conversion to an activation phase [degrees]: Activating phase [degrees] =

(Value of DGN No. 353) \times 360/256

For internal data measurement

- (2) Turn off the power to the CNC and servo amplifier.
- (3) Detach the linear motor power line from the servo amplifier, then connect the power line to the DC power supply. Connect the + terminal of the DC power supply to phase U of the power line, and connect the - terminal of the DC power supply to phase V and phase W of the power line.

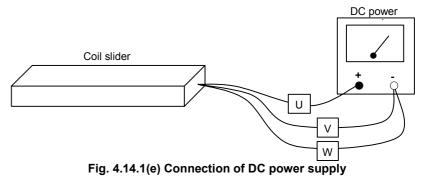

- (4) In the emergency stop state, turn on the power to the CNC and servo amplifier.
- (5) Display No. 353 on the CNC diagnosis screen, and turn on the power to the DC power supply. Next, increase the current gradually (DC activation). When the force of the linear motor produced by current supplied from the DC power supply exceeds static friction, the linear motor starts moving, and the linear motor automatically stops at a position where activation phase = 0.

A position where activating phase = 0 is present at intervals of 60 mm with medium-size and large linear motors, or at intervals of 30 mm with small linear motors.

WARNING If a large current flows abruptly, the motor produces a large force, resulting in a very dangerous situation. When making this adjustment, be sure to increase the current value gradually starting from current value = 0 [Ap].

- (6) When the linear motor is at rest, read the value of No. 353 on the CNC diagnosis screen. Turn off the power to the DC power supply immediately after reading the value of No. 353.
- * Make measurements of (5) and (6) several times by changing the DC activation start position within one pole (medium-size, large linear motor = 60 mm, small linear motor = 30 mm) to fine average activating phase data (value of DGN No. 353).
- (7) Based on activating phase data measured with up to step 6) above, set the AMR offset parameter as described below.
- * In the description below, the parenthesized values assume AMR60 = 1.

| When $0 \le$ Value of DGN No. $353 \le 32$ (42) |
|---|
| AMR offset setting |
| $= -1 \times (value of DGN No. 353) \times 360/256$ |
| When 224 (214) \leq Value of DGN No. 353 \leq 255 (255) |
| AMR offset setting |
| = 360 - (value of DGN No. 353) × 360/256 |
| When 32 (42) < Value of DGN No. 353 < 224 (214) |
| In this case, a soft phase alarm is issued when phase Z is |
| passed. Adjust the linear encoder installation position |
| according to "FANUC LINEAR MOTOR Lis series |
| DESCRIPTIONS (B-65382EN)". After adjustment, make |
| an AMR offset adjustment again from step 1). |
| |

- (8) Turn off then turn on the power to the CNC.
- (9) Perform steps (5) and (6) again, and check that the activating phase data at a stop position is about 0 or 255.
- (10) Turn off the power to the CNC and servo amplifier. Next, connect the power line of the linear motor to the servo amplifier. Then, turn on the power to the CNC and servo amplifier again.
- (11) Check that feed operation by jogging and so forth can be performed normally. If no problem is observed, return the parameter set in step (1) to 0. This completes setting.

B-65270EN/06


The activating phase can also be observed by connecting SERVO GUIDE to the CNC and selecting "Monitor" from the "Communication" menu of the graph window.

(Set "ROTOR" as the data type in channel setting.)

| Monitor | | × |
|---------------|-------|--------------------|
| CH1: Val = | ROTOR | X1 1 213.750000 |
| CHz. | None | |
| Val = | | |
| CH3: | None | |
| Val = | | |
| CH4: | None | |
| Val = | | |
| CH5: | None | |
| Val = | | |
| CH6: | None | |
| Val = | | |
| | | |

(Supplement)

Method for checking the activating phase value in the Series 15iThe diagnosis screen of the Series 15i has no data that corresponds to No. 353 on the diagnosis screen of the Series 16iand so on. So, display an arbitrary data screen by making the following parameter setting to check the activating phase value.

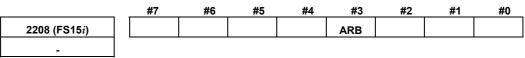

ARB (#3)

The arbitrary data screen is:


0: Not displayed

1: Displayed \leftarrow Use this setting.

Settings on the arbitrary data screen (see Fig. 4.14.1 (f).) Parameter 1 of data 1 is loaded with the value set in Procedure (1). Make sure that parameter 2 is 0.

The activating phase is displayed in an enclosed section in the figure.

| SERVO FREE DATA | | 2002-01 | -01 12:00:00 0 | 0 N | 0 |
|--------------------|---------------|--------------|-----------------|---------------------------|---------------|
| MEM *** STOP * | *** | | | S 0 | % |
| | | | | | |
| | – 1ST X –––– | - 2ND Y | - 3RD Z | 4TH A | |
| DATA1 PARAM. 1 | 0 | 0 | 0 | 0 | |
| PARAM. 2 | 8 | 0 | 0 | 0 | |
| BINARY | 000000000 | 000000000 | 00000000 | 00000000 | |
| $\left(\right)$ | 000000000 | 00000000 | | 00000000 | |
| DECIMAL | 0 | 0 | 0 | 0 | \mathcal{V} |
| HEX DEC. | 0000 | 0000 | 0000 | 0000 | - |
| | | | | | |
| DATA2 PARAM. 1 | 0 | 0 | 0 | 0 | |
| PARAM. 2 | 0 | 0 | 0 | 0 | |
| BINARY | 000000000 | 000000000 | 000000000 | 00000000 | |
| | 000000000 | 000000000 | | 00000000 | |
| DECIMAL | 0 | 0 | 0 | Ø | |
| HEX DEC. | 0000 | 0000 | 0000 | 0000 | |
| | | | | | |
| | | | | | |
| | | | | | |
| WAVE SERVED I AGNS | 0 HPC | c | | DISPLY CHAPTE MEMORY R | 1 |
| | a 4 4 4 4 (f) | Sorios 15/ a | rhitrony data a | | _ |

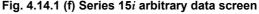

Parameter setting procedure (4)

Incremental type

Procedure (4) explains how to set up parameters for using a linear scale with a distance-coded reference marks in position detection circuit C (A860-0333-T301 or -T302).

- This function is optional.
- This function is supported only for the Series 30*i*/31*i*/32*i*-A, 15*i*-MB, 16*i*/18*i*/21*i*-B as of December 2005.
- For details of parameter setting, refer to the relevant CNC manual or specifications.

(For Series 30*i*/31*i*/32*i*-A)

Refer to the CNC connection manual (B-63943EN).

All software series and editions are applicable.

(For Series 15i-MB)

Refer to the CNC specifications (A-79233E). All software series and editions are applicable.

(For Series 16*i*/18*i*/21*i*-B)

Refer to the CNC specifications (A-78754EN).

Series and editions of applicable CNC software

B0H1/BDH1/DDH1-17 and subsequent editions (Series 16*i*/18*i*/21*i*-MB)

B1H1/BEH1/DEH1-17 and subsequent editions (Series 16*i*/18*i*/21*i*-TB)


BDH5-07 and subsequent editions (Series 18i-MB5)


Setting procedure (for the Series 15*i*-MB)

Refer to the CNC specifications (A-79233E).


Setting procedure (for the Series 30*i*/31*i*/32*i*-A, Series 16*i*/18*i*/21*i*-B)

(1) Enable the linear scale with a distance-coded reference marks.

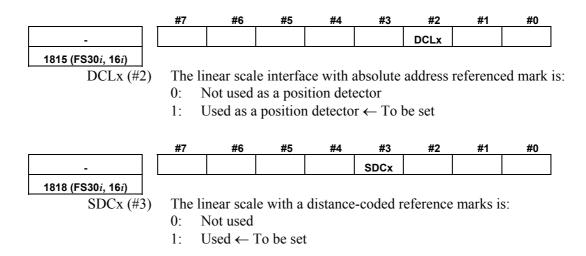

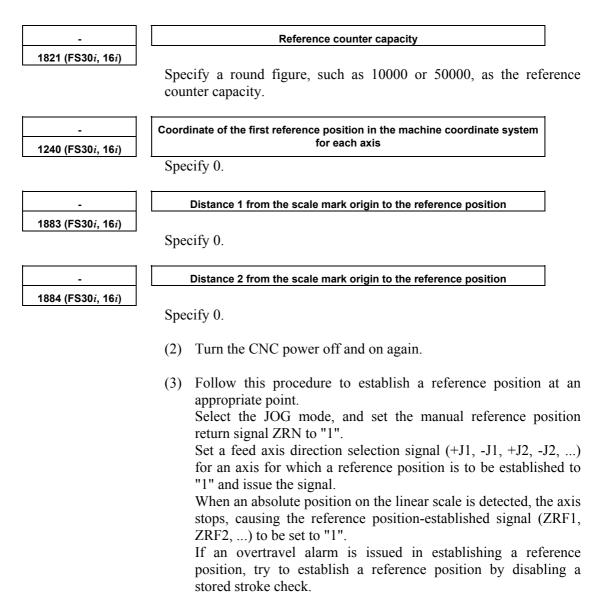


- (4) In the JOG or handle feed mode, place the machine accurately on the reference position.
- (5) Using the following steps, perform the automatic setting of parameter No. 1883.

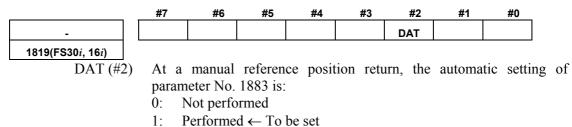

After setting this parameter to "1", perform a manual reference position return.

When the manual reference position return is completed, parameter No. 1883 is specified, and this parameter is automatically reset to "0".

- (6) If you want to disable a stored stroke check in establishing a reference position, re-set the necessary parameters to the original setting.
- (7) Specify parameter No. 1240 as required.

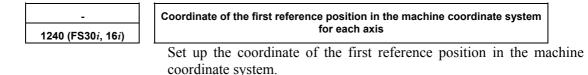

(8) This is the end of setting.

Parameter setting procedure (5)

Procedure (5) can be used to set parameters according to the cooling method used for linear motors.

Change the following parameters as listed in Table 4.14.1 (f). For self-cooling linear motors, the parameters need not be set here, because they are set up at initialization in procedure (1).

| 1877 (FS15 <i>i</i>) | OVC alarm parameter (POVC1) |
|-------------------------------------|--|
| 2062 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 1878 (FS15 <i>i</i>) | OVC alarm parameter (POVC2) |
| 2063 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 1893 (FS15 <i>i</i>) | OVC alarm parameter (POVCLMT) |
| 2065 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 1979 (FS15 <i>i</i>) | Current rating parameter (RTCURR) |
| 2086 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 1784 (FS15 <i>i</i>) | OVC magnification in stop state (OVCSTP) |
| 2161 (FS30 <i>i</i> , 16 <i>i</i>) | |

| | [200-V driv | ving] | | | | | |
|-----------------------|----------------|-----------|-------|-------|---------|--------|--------|
| Model | Cooling method | Rated (N) | POVC1 | POVC2 | POVCLMT | RTCURR | OVCSTP |
| L <i>i</i> S300A1/4 | No cooling | 50 | 32704 | 802 | 793 | 655 | 0 |
| E13300A1/4 | Water cooling | 100 | 32512 | 3199 | 3172 | 1310 | 0 |
| L <i>i</i> S600A1/4 | No cooling | 100 | 32704 | 802 | 793 | 655 | 0 |
| L13000A 1/4 | Water cooling | 200 | 32512 | 3199 | 3172 | 1310 | 0 |
| L <i>i</i> S900A1/4 | No cooling | 150 | 32705 | 785 | 1784 | 983 | 0 |
| L13900A1/4 | Water cooling | 300 | 32518 | 3129 | 7136 | 1966 | 0 |
| L <i>i</i> S1500B1/4 | No cooling | 300 | 32698 | 873 | 2590 | 1184 | 0 |
| L <i>IS</i> 1500B 1/4 | Water cooling | 600 | 32490 | 3481 | 10358 | 2368 | 0 |
| L <i>i</i> S3000B2/2 | No cooling | 600 | 32711 | 719 | 2131 | 1074 | 0 |
| L133000B2/2 | Water cooling | 1200 | 32539 | 2867 | 8523 | 2148 | 0 |
| L <i>i</i> S3000B2/4 | No cooling | 600 | 32698 | 873 | 2590 | 1184 | 0 |
| L133000B2/4 | Water cooling | 1200 | 32490 | 3481 | 10358 | 2368 | 0 |
| L <i>i</i> S4500B2/2 | No cooling | 900 | 32707 | 758 | 1199 | 805 | 0 |
| L/34300B2/2 | Water cooling | 1800 | 32526 | 3023 | 4794 | 1611 | 0 |
| L <i>i</i> S6000B2/2 | No cooling | 1200 | 32711 | 719 | 2131 | 1074 | 0 |
| L/30000B2/2 | Water cooling | 2400 | 32539 | 2867 | 8523 | 2148 | 0 |
| L <i>i</i> S6000B2/4 | No cooling | 1200 | 32698 | 873 | 2590 | 1184 | 0 |
| L/30000B2/4 | Water cooling | 2400 | 32528 | 3003 | 8932 | 2368 | 140 |
| 1/0750002/2 | No cooling | 1500 | 32707 | 765 | 832 | 671 | 0 |
| L <i>i</i> S7500B2/2 | Water cooling | 3000 | 32524 | 3053 | 3329 | 1342 | 0 |
| L <i>i</i> S7500B2/4 | No cooling | 1500 | 32687 | 1010 | 799 | 658 | 0 |
| LIST 500B2/4 | Water cooling | 3000 | 32446 | 4026 | 3197 | 1316 | 0 |
| 1 20000000/0 | No cooling | 1800 | 32707 | 758 | 1199 | 805 | 0 |
| L <i>i</i> S9000B2/2 | Water cooling | 3600 | 32526 | 3023 | 4794 | 1611 | 0 |
| L <i>i</i> S9000B2/4 | No cooling | 1800 | 32696 | 895 | 1151 | 789 | 0 |
| L/39000B2/4 | Water cooling | 3600 | 32482 | 3570 | 4604 | 1579 | 0 |
| L <i>i</i> S3300C1/2 | No cooling | 660 | 32708 | 749 | 1184 | 801 | 0 |
| L133300C1/2 | Water cooling | 1320 | 32529 | 2987 | 4738 | 1602 | 0 |
| LiS9000C2/2 | No cooling | 1800 | 32729 | 489 | 1112 | 776 | 0 |
| L139000C2/2 | Water cooling | 3600 | 32612 | 1953 | 4448 | 1552 | 0 |
| L <i>i</i> S11000C2/2 | No cooling | 2200 | 32723 | 560 | 1661 | 948 | 0 |
| LIST1000C2/2 | Water cooling | 4400 | 32589 | 2236 | 6644 | 1897 | 0 |
| L <i>i</i> S15000C2/2 | No cooling | 3000 | 32729 | 483 | 621 | 579 | C |
| | Water cooling | 7000 | 32558 | 2623 | 3378 | 1352 | 0 |
| L <i>i</i> S15000C2/3 | No cooling | 3000 | 32732 | 452 | 1340 | 852 | C |
| LIS 1000002/3 | Water cooling | 7000 | 32572 | 2455 | 7296 | 1988 | 140 |
| L <i>i</i> S10000C3/2 | No cooling | 2000 | 32722 | 580 | 1719 | 964 | C |
| | Water cooling | 4000 | 32583 | 2314 | 6875 | 1929 | C |
| L <i>i</i> S17000C3/3 | No cooling | 3400 | 32711 | 709 | 981 | 729 | C |
| LIST/000C3/3 | Water cooling | 6800 | 32542 | 2829 | 3925 | 1458 | C |

Table4.14.1 (f) Setting OVC and current rating parameters by cooling method

4.SERVO FUNCTION DETAILS B-65270EN/06

| | [400-V dri | ving] | | | | | - |
|-------------------------------|----------------|-----------|-------|-------|---------|--------|--------|
| Model | Cooling method | Rated (N) | POVC1 | POVC2 | POVCLMT | RTCURR | OVCSTP |
| L <i>i</i> S1500B1/4 | No cooling | 300 | 32698 | 873 | 2590 | 1184 | 0 |
| E/01000B1/4 | Water cooling | 600 | 32490 | 3481 | 10358 | 2368 | 0 |
| L <i>i</i> S3000B2/2 <i>i</i> | No cooling | 600 | 32711 | 719 | 2131 | 1074 | 0 |
| Elosooobzizi | Water cooling | 1200 | 32539 | 2867 | 8523 | 2148 | 0 |
| L <i>i</i> S4500B2/2HV | No cooling | 900 | 32714 | 681 | 1549 | 915 | 0 |
| E/040002/2011 | Water cooling | 1800 | 32551 | 2718 | 6194 | 1831 | 0 |
| L <i>i</i> S4500B2/2 | No cooling | 900 | 32707 | 758 | 1199 | 805 | 0 |
| E/04300B2/2 | Water cooling | 1800 | 32526 | 3023 | 4794 | 1611 | 0 |
| L <i>i</i> S6000B2/2HV | No cooling | 1200 | 32706 | 774 | 688 | 610 | 0 |
| E/0000002/211V | Water cooling | 2400 | 32521 | 3085 | 2753 | 1221 | 0 |
| L <i>i</i> S6000B2/2 | No cooling | 1200 | 32711 | 719 | 2131 | 1074 | 0 |
| L/30000B2/2 | Water cooling | 2400 | 32539 | 2867 | 8523 | 2148 | 0 |
| L <i>i</i> S7500B2/HV2 | No cooling | 1500 | 32714 | 680 | 1075 | 763 | 0 |
| E/37 300B2/11V2 | Water cooling | 3000 | 32551 | 2713 | 4301 | 1526 | 0 |
| L <i>i</i> S7500B2/2 | No cooling | 1500 | 32709 | 739 | 658 | 596 | 0 |
| LIST 300B2/2 | Water cooling | 3000 | 32532 | 2949 | 2631 | 1193 | 0 |
| L <i>i</i> S9000B2/2 | No cooling | 1800 | 32709 | 737 | 947 | 716 | 0 |
| E/03000B2/2 | Water cooling | 3600 | 32533 | 2940 | 3788 | 1432 | 140 |
| L <i>i</i> S3300C1/2 | No cooling | 660 | 32708 | 749 | 1184 | 801 | 0 |
| E/3330001/2 | Water cooling | 1320 | 32529 | 2987 | 4738 | 1602 | 0 |
| L <i>i</i> S9000C2/2 | No cooling | 1800 | 32728 | 494 | 879 | 689 | 0 |
| L/3900002/2 | Water cooling | 3600 | 32610 | 1972 | 3514 | 1379 | 0 |
| L <i>i</i> S11000C2/2HV | No cooling | 2200 | 32723 | 560 | 1661 | 948 | 0 |
| L/311000C2/211V | Water cooling | 4400 | 32589 | 2236 | 6644 | 1897 | 0 |
| L <i>i</i> S11000C2/2 | No cooling | 2200 | 32730 | 474 | 1312 | 843 | 0 |
| LIST1000C2/2 | Water cooling | 4400 | 32616 | 1894 | 5250 | 1686 | 140 |
| L <i>i</i> S15000C2/3HV | No cooling | 3000 | 32730 | 471 | 1396 | 869 | 0 |
| L/315000C2/511V | Water cooling | 7000 | 32563 | 2557 | 7601 | 2029 | 140 |
| L <i>i</i> S10000C3/2 | No cooling | 2000 | 32720 | 597 | 1358 | 857 | 0 |
| | Water cooling | 4000 | 32577 | 2384 | 5432 | 1715 | 140 |
| L <i>i</i> S17000C3/2 | No cooling | 3400 | 32711 | 709 | 981 | 729 | 0 |
| LIST/00003/2 | Water cooling | 6800 | 32542 | 2829 | 3925 | 1458 | 0 |

[100 V driving]

| Model | Cooling method | Rated (N) | POVC1 | POVC2 | POVCLMT | RTCURR |
|-----------------------------|----------------|-----------|-------|-------|---------|--------|
| | No cooling | 300 | 32698 | 873 | 2590 | 1184 |
| 1500A/4 | Air cooling | 360 | 32667 | 1257 | 3729 | 1421 |
| | Water cooling | 600 | 32490 | 3481 | 10358 | 2369 |
| | No cooling | 600 | 32698 | 873 | 2590 | 1184 |
| 3000B/2 | Air cooling | 720 | 32667 | 1257 | 3729 | 1421 |
| | Water cooling | 1200 | 32490 | 3481 | 10358 | 2369 |
| | No cooling | 600 | 32698 | 873 | 2590 | 1184 |
| 3000B/4 | Air cooling | 720 | 32667 | 1257 | 3729 | 1421 |
| | Water cooling | 1200 | 32490 | 3481 | 10358 | 2368 |
| | No cooling | 1200 | 32698 | 873 | 2590 | 1184 |
| 6000B/2 | Air cooling | 1440 | 32667 | 1257 | 3729 | 1421 |
| | Water cooling | 2400 | 32490 | 3481 | 10358 | 2369 |
| 6000D/4 | No cooling | 1200 | 32706 | 777 | 2304 | 1117 |
| 6000B/4 (160-A driving) | Air cooling | 1440 | 32679 | 1118 | 3317 | 1340 |
| (100 / anving) | Water cooling | 2400 | 32520 | 3098 | 9215 | 2234 |
| 00000/2 | No cooling | 1800 | 32729 | 491 | 1457 | 888 |
| 9000B/2 (160-A driving) | Air cooling | 2160 | 32711 | 707 | 2098 | 1065 |
| (100 / anving) | Water cooling | 3600 | 32611 | 1962 | 5827 | 1776 |
| 9000B/4 | No cooling | 1800 | 32737 | 388 | 1151 | 789 |
| (360-A driving) | Air cooling | 2160 | 32723 | 559 | 1657 | 947 |
| (ooo / anving) | Water cooling | 3600 | 32644 | 1551 | 4604 | 1579 |
| 450000/0 | No cooling | 3000 | 32751 | 209 | 621 | 579 |
| 15000C/2 (360-A driving) | Air cooling | 3600 | 32744 | 301 | 894 | 695 |
| | Water cooling | 7000 | 32677 | 1139 | 3378 | 1352 |
| | No cooling | 3000 | 32732 | 452 | 1340 | 852 |
| 15000C/3 | Air cooling | 3600 | 32716 | 651 | 1930 | 1022 |
| | Water cooling | 7000 | 32572 | 2455 | 7296 | 1988 |

[Conventional linear motors]

Parameter setting procedure (6)

Procedure (6) provides supplementary information when servo HRV2 is applied with a conventional linear motor. When initialization has been performed with a motor ID number for servo HRV2 control in procedure (1), parameter settings need not be changed.

When servo HRV2 is applied to increase the current loop gain of a linear motor, it is necessary to set the following parameter, because linear motors have a higher current gain compared with rotary motors. This parameter setting must be done whenever the <u>absolute value</u> of the current loop proportional gain (PK2) becomes higher than 16000-20000 (as a rule of thumb) after application of servo HRV2.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------|----|----|----|----|----|--------|----|----|
| 1750 (FS15 <i>i</i>) | | | | | | PK12S2 | | |
| | | | | | | | | |

2210 (FS30*i*, 16*i*) PK12S2 (#2)

Specifies whether to use the quadruple current loop gain function.

0: Not to use

<u>1: To use \leftarrow To be set</u>

When setting this function to ON, re-set the current gain parameters (PK1 and PK2) to one-fourth.

(Note: This function is not available with the Series 9096.)

| Model name | Туріса | l setting (| (HRV1) | | • | fter SER | |
|-----------------------------|--------|-------------|--------|--------|--------|----------|--------|
| | PK12S2 | PK1 | PK2 | | PK12S2 | PK1 | PK2 |
| 1500A/4 | 0 | 1890 | -7180 | | 0 | 1512 | -11488 |
| 3000B/2 | 0 | 4804 | -14453 | | 1 | 961 | -5782 |
| 3000B/4 | 0 | 1620 | -11180 | | 1 | 324 | -4472 |
| 6000B/2 | 0 | 4804 | -13138 | | 1 | 961 | -5253 |
| 6000B/4 (160-A driving) | 0 | 1751 | -6701 | N | 0 | 1401 | -10722 |
| 9000B/2 (160-A driving) | 0 | 6198 | -19692 | \Box | 1 | 1240 | -7877 |
| 9000B/4 (360-A driving) | 0 | 7416 | -17747 | | 1 | 1484 | -7099 |
| 15000C/2 (360-A driving) | 1 | 2130 | -8400 | | 1 | 1704 | -13440 |
| 15000C/3 | 0 | 2392 | -8448 | | 1 | 478 | -3379 |

Table 4.14.1 (g) Current gain parameter setting when SERVO HRV2 is applied

Before specifying these parameters, be sure to put the machine at an emergency stop.

(6) Illegal servo parameter setting alarms when linear motors are used

The following illegal servo parameter setting alarms are checked additionally when linear motors are used (they are not issued for rotary motors).


| Parameter error alarm detail No. | Description |
|----------------------------------|---|
| 10043 | No separate detector can be used for linear motors. Full-closed loop setting results in an alarm being issued. |
| 1123 | If no AMR conversion coefficient is set, an alarm is issued. Even when the linear encoder is not relocated after the motor is replaced, the AMR conversion coefficients must be re-set, because initialization accompanying motor replacement causes the AMR coefficients to be erased. |
| 1393 | The valid AMR offset data range is below : -45 (degrees) and +45 (degrees) : (AMR60=0) -60 (degrees) and +60 (degrees) : (AMR60=1) If a value out of this range is specified in the parameter, an invalid-parameter alarm is issued. |

▲ CAUTION When an AMR conversion coefficient is not set, an alarm is issued. If it is set, but incorrect, no alarm is issued. In this case, the linear motor fails to drive correctly immediately after it passes phase Z. It may move within one pole-to-pole span (60 mm or 30 mm) in the worst case.

(7) Notes on using high-speed HRV current control or the cutting /rapid velocity loop gain switching function

In general, a higher velocity loop gain (load inertia ratio) is set for a linear motor than for a rotary motor. So, if high-speed HRV current control and the cutting /rapid velocity loop gain switching function are used at the same time to achieve an even higher velocity loop gain, an overflow can occur in the internal value of the post-override velocity load proportional (PK2V: parameter No. 1856 for Series 15*i* or No. 2044 for Series 30*i*, 16*i*, and so on). (The parameter error detail number is 443 ^(*)). In this case, set the parameter indicated below. Whether an overflow occurs or not can be checked using Fig. 4.14.1(g).

Series 9096 and Series 90B0/C(03) and earlier editions do not support the occurrence of parameter errors in velocity gain override and the display of detail numbers.

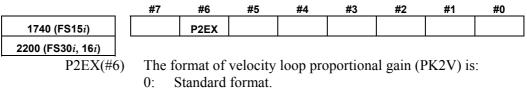

1: Converted. \leftarrow To be set

4.SERVO FUNCTION DETAILS


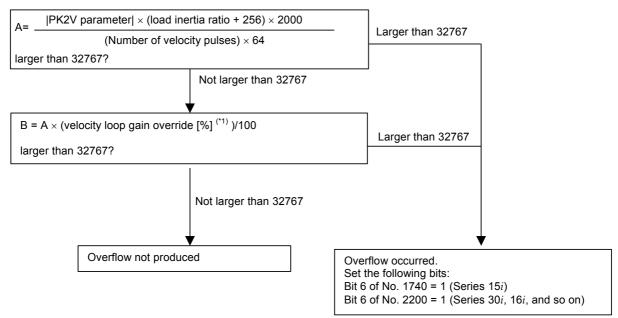


Fig. 4.14.1(g) PK2V overflow check

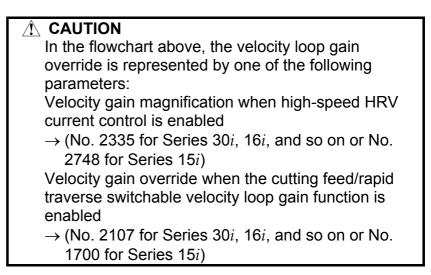

4.14.2 Detection of an Overheat Alarm by Servo Software when a Linear Motor and a Synchronous Built-in Servo Motor are Used


(1) Overview


When a linear motor and a synchronous built-in servo motor are used, the motor overheat signal cannot be posted to the CNC via a detector. Therefore, to detect a motor overheat, alarm processing for the thermostat signal had to be performed by a PMC ladder. (For details, refer to Section 2.5, "THERMOSTAT CONNECTION", in Part III, "HANDLING, DESIGN, AND ASSEMBLY", in "FANUC LINEAR MOTOR LiS series DESCRIPTIONS (B-65382EN).)


This function uses servo software to monitor the thermostat signal applied to DI and issues a servo alarm (motor overheat) when an overheat occurs. Use of this function eliminates the need to perform alarm processing by using the PMC ladder.

In addition, when an overheat alarm is issued, quick stop processing (quick stop function with velocity command 0) can be used. (For details, see Subsection 4.11.5, "Quick Stop Function at OVL (Motor Overheat) and OVC (Over Current) Alarm".)

Conventional overheat processing

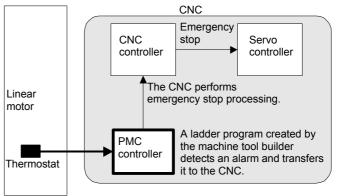

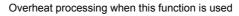

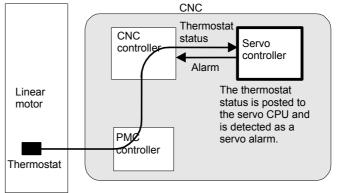

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/J(10) and subsequent editions
Series 90E0/J(10) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,Power Mate *i*)
Series 90B6/B(02) and subsequent editions
Series 90B1/C(03) and subsequent editions
(Series 0*i*-C, 20*i*-B)
Series 90B5/B(02) and subsequent editions

When this function is used, the following system software is required: B0H1/BDH1/DDH1-24 and subsequent editions (FS16i/18i-MB)
B1H1/BEH1/DEH1-24 and subsequent editions (FS16i/18i-TB)
BDH5-14 and subsequent editions (FS18i-MB5)
DDH1-24 and subsequent editions (FS21i-MB) (PMC-SB7 required)
DEH1-24 and subsequent editions (FS21i-TB) (PMC-SB7 required)
D4A1-07 and subsequent editions (FS0i-MB/TB)(PMC-SB7 required)
D6A1-07 and subsequent editions (FS0i-MB/TB)(PMC-SB7 required)
D4B1-01 and subsequent editions (FS0i-MC) (PMC-SB7 required)
D6B1-01 and subsequent editions (FS0i-TC) (PMC-SB7 required)

(*) This function is not supported by the Series 15*i*. The Power Mate *i* is planned to support this function in the future.

(3) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-----------------------------------|--------|---|--|--|---|---|---|---|----|
| 2713(FS15 <i>i</i>) | CKLNOH | | | | | | | | |
| 2300(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | | |
| CKLNOH(#7) | Overh | eat is: | | | | | | | |
| | | | ed via th | | | | | | |
| | 0: N | lot deter | mined v | ia the PN | AC. | | | | |
| | | | | | | | | | |
| | * | param param numbe In the PMC, i (motor functio For the | nction eters. If eter init r set. CNC th f this fu overhe n bit to FS15 Power | t is set talization at canrunction eat) is is 0. | automa on is pe bit is se ssued. t 7 of p | atically erforme interfa et to 1, If this c aramet | when s ed with ce G32 a serv occurs, ter No. | a motor 26 of the o alarm set the 2713 to | ID |

(4) Signals

Overheat status signals input via the PMC SVDI61 to SVDI68<G326>

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|------------------|--------|------------|------------|-----------|-----------|-----------|----------|------------|-------|
| G326 | SVDI68 | SVDI67 | SVDI66 | SVDI65 | SVDI64 | SVDI63 | SVDI62 | SVDI61 | |
| [Classification] | Input | signal | | | | | | | |
| [Function] | Therm | nostat sig | gnals are | input v | ia the Pl | MC. An | indeper | dent sig | nal |
| | provid | led for e | ach axis | , and th | e last di | git of ea | ch name | e indicate | es tł |
| | numbe | er of a co | ontrolled | axis. | | | | | |
| [Status] | 0: A | A signal f | for issuir | ng an ov | erheat al | arm or d | etecting | an overh | ieat |
| | n | ot conne | ected. | | | | | | |
| | 1· N | Jo overh | aat alarm | in includ | d | | | | |

1: No overheat alarm is issued.

(5) Connection and usage

<1> Parameter setting

Set the function bit of this function, CKLNOH, to 1.

In the standard parameters of the linear motor and synchronous built-in servo motor, CKLNOH is set to 1. So, unless a thermostat is connected, an motor overheat alarm is issued.

<2> Connecting the thermostat and DI signal

The signal of the thermostat mounted on the linear motor and synchronous built-in servo motor is connected to G326, which is a DI signal. The G326 status is automatically transferred to the servo software if the servo software supports this function. The servo software monitors the status, and when an overheat occurs, the servo software issues a servo alarm (motor overheat).


[Alarm detail indication on the servo adjustment screen]

| Alarm | Alarm 1 #7(OVL) | Alarm 2 #7(ALD) | Alarm 2 #4(EXP) |
|-------------------------------------|--------------------|--------------------|--------------------|
| Motor overheat alarm via Pulsecoder | 1 | 1 | 0 |
| Overheat alarm via PMC DI signal | 1 | 1 | 1 |

4.14.3 Smoothing Compensation for Linear Motor

(1) Overview


Smoothing compensation for linear motors improves the smoothness in feed of a linear motor by producing a sinusoidal compensation torque with a cycle of 1/2, 1/4, or 1/6 of the pole-to-pole span produced by servo software and by applying such a torque to the current command. Compensation torque can be generated for each motor by setting gain and phase for each component.

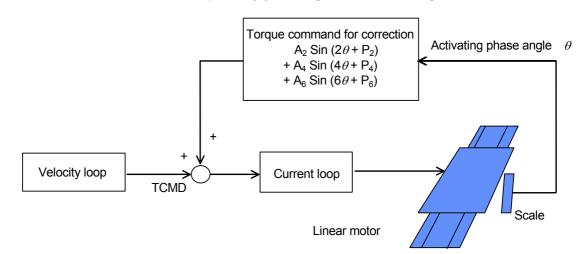

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 20*i*-B)
Series 90B5/A(01) and subsequent editions

(3) Setting parameters

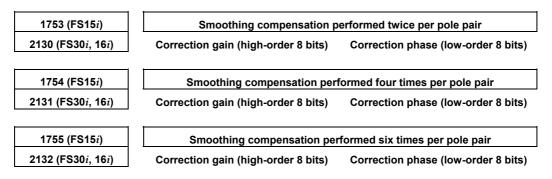

Setting the correction gain of the following parameters with a nonzero value can switch between the negative direction smoothing compensation and the positive direction smoothing compensation. In this case, the smoothing compensation parameter explained above applies only to feeding in the positive direction.

(Series 9096 and Series 90B0/M(13) and earlier editions are not supported.)

| 2782 (FS15 <i>i</i>) | Smoothing compensation performed twice per pole pair (negative direction) |
|-------------------------------------|--|
| 2369 (FS30 <i>i</i> , 16 <i>i</i>) | Correction gain (high-order 8 bits) Correction phase (low-order 8 bits) |
| 2783 (FS15 <i>i</i>) | Smoothing compensation performed four times per pole pair (negative direction) |
| 2370 (FS30 <i>i</i> , 16 <i>i</i>) | Correction gain (high-order 8 bits) Correction phase (low-order 8 bits) |
| | |
| 2784 (FS15 <i>i</i>) | Smoothing compensation performed six times per pole pair (negative direction) |
| 2371 (FS30 <i>i</i> , 16 <i>i</i>) | Correction gain (high-order 8 bits) Correction phase (low-order 8 bits) |

Since the compensation parameters differ from motor to motor (depending on the motor rather than the model), these parameters must be determined for each motor assembled.

In principle, variation in torque command that is generated when the motor is fed at a low speed depends on the position. The application of smoothing compensation cancels this position-dependent characteristic, allowing the motor to move smoothly.

The measuring instruments that can be used to determine these parameters include "SERVO GUIDE" (Ver. 2.00 or later) and "SD" (servo tuning software).


If using SERVO GUIDE (Ver. 2.00 or later)

By using SERVO GUIDE (Ver. 2.00 or later), these parameters can be determined easily. Follow the procedure below to measure the activating phase and torque command, which are required to determine the compensation parameters.

<1> Set channels as follows:

Channel 1: Activating phase

Select the target axis for measurement, and set "ROTOR" as the data type.

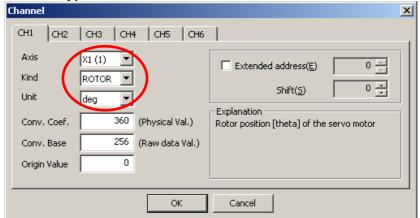

Channel 2: Torque command

Select the target axis for measurement, and set "TCMD" as the data type.

As the conversion coefficient, set the maximum current of the amplifier used for the target axis.

| Channel | | × |
|--------------|----------------------|---|
| CH1 CH2 | СНЗ СН4 СН5 СН6 | 1 |
| Axis Kind | | Extended address(E) 0 |
| Unit | | Shift(<u>5</u>) 0 📩 |
| Conv. Coef. | 100 (Physical Val.) | Explanation Torque command(TCMD) Physical value is need to set max, current |
| Conv. Base | 7282 (Raw data Val.) | (Ap) of amplifier. Default value is 100 in convention which convert measured data to |
| Origin Value | | percent by max, torque, |
| | ОК | Cancel |

<2> Create a program that performs back and forth motion at a feedrate of F1200 (mm/min).

If the distance of movement is shorter than the pole-to-pole span, it is impossible to automatically calculate smoothing compensation parameters. Therefore, it is recommended that the distance of movement be at least 200 mm for large linear motors or at least 100 mm for small linear motors. For the number of measurement points, provide an enough time to obtain data during one back and forth motion of the motor. (About 15000 to 20000 points in 1-ms sampling)

- <3> When making measurements, lower the velocity gain to such an extent that hunting does not occur.
- <4> From the "Tools" menu, select "Linear motor compensation calculation".

(The shortcut is [Ctrl] + [L].)


<5> In the displayed dialog box, press the [Add] button. Then waveform data is analyzed, and candidates of the compensation parameters are registered.

| | target waveforms : Add] button to calco d(<u>A)</u> | | Parameter cha | ange(P) Clear para Set parar | | Close |
|--------------------|--|-----|------------------------------------|------------------------------------|----------------------------|-------|
| Vormal | direction | Del | Calc(<u>N</u>) | -27478 | 7128 | 2988 |
| data | 2/span | | 4/span | 6/: | span | |
| ✓1 | (148:170) | | (27: 216) | (| 11: 173) | |
| ✔ 2 | (148:170) | | (27: 216) | (| 11: 173) | |
| ✓ 3 □ 4 □ 5 | (148: 170) | | (27: 216) | ſ | 10: 170) | |
| | | | | | | |
| Reverse | e direction | Del | Calc(R) | -30040 | 6116 | 2438 |
| Reverse data | e direction | Del | Calc(R) 4/span | | 6116 span | 2438 |
| | | Del | | | | 2438 |
| data ✓ 1 ✓ 2 | 2/span (138: 168) (138: 168) | Del | 4/span (23: 227) (24: 228) | | span 9: 135) 9: 134) | 2438 |
| data ✓ 1 | | Del | 4/span (23: 227) | | span 9: 135) | 2438 |

<6> The compensation parameters slightly vary depending on the measurement situation. So, repeat a data measurement and a press of the [Add] button several times in a similar manner while keeping the dialog box open. (Up to five candidates can be registered.)

If the displayed values include an extremely different value, uncheck the corresponding check box on the leftmost side of the list so that the value is not taken into account in the final compensation calculation.

- <7> Finally, press the [Calc] button for each of the forward and backward directions. Then, smoothing compensation parameters are displayed.
- <8> When the target axis for parameter transfer is selected in "Parameter change", and the [Set param.] button is pressed, the presented parameters are set in the CNC.
- <9> Measure TCMD again to confirm the effect of smoothing compensation.

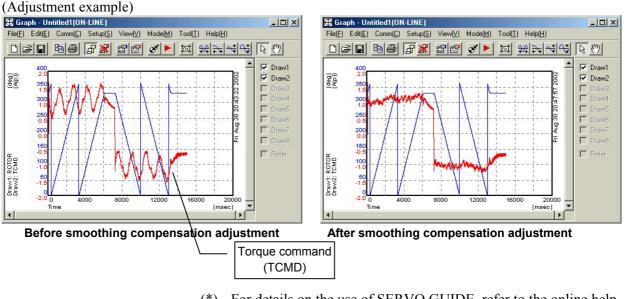

(*) For details on the use of SERVO GUIDE, refer to the online help of SERVO GUIDE.

If using SD (servo tuning software)

Follow the procedure described below to measure the activating phase angle and torque command necessary to determine the correction parameters.

The following procedure use terms "odd-numbered axis" and "even-numbered axis" in relation to axis numbers specified in parameter No. 1023 (common to the Series 15*i* and Series 16*i* and so on).

<1> Series 90B0: Does not require step <1>. Go to step <2>.

Series 9096: To measure an odd-numbered axis, set a dummy bit to 1 for the even-numbered axis paired with it.

If a linear motor is used in tandem control, however, do not set a dummy bit for the paired axis.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|----|----|----|----|----|----|----|------|
| - | | | | | | | | SERD |
| | | | | | | | | |

2009 (FS16*i*) SERD (#0)

Specifies whether to enable the dummy serial feedback function.


0: To disable


<u>1: To enable \leftarrow To be set</u>

* Do not forget to restore the previous setting after parameter setting is completed.


<2>-a When using A06B-6057-H620 (digital check board), set the DIP switches on the check board as follows:

To measure an odd-numbered axis:

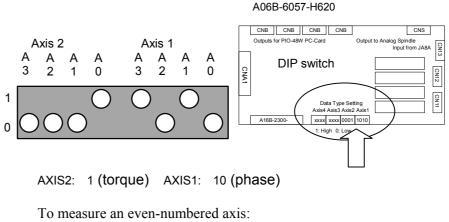

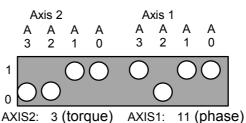

<2>-b When using A06B-6057-H630 (one-piece analog/digital type), set up the 7-segment LED digits on the check board as shown below:

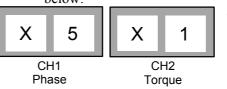

Letter X stands for an axis number specified in parameter No. 1023.

<3> To measure the activating phase angle, set the following parameter.

1726 (FS15i) Parameter for internal data measurement 2115 (FS16i)

Series 9096: 1328 (for both odd- and even-numbered axes) Series 90B0, 90B1, 90B6, 90B5:

704 for odd-numbered axis and 2752 for even-numbered axis

Steps <2> and <3> enable CH0 and CH1 of the SD software to be used to measure the motor activating phase angle (CH0) and torque command (CH1).

| DOS prompt > S | D INIT [Enter] |
|----------------|--|
| 0 | (Origin of position) |
| F9 | (System setting) |
| 0 | (CH0) |
| 2 [Enter] | (TCMD) |
| 1.0 [Enter] | (1.0A) |
| 1 | (CH1) |
| 2 [Enter] | (TCMD) |
| 40 [Enter] | (Maximum current for servo amplifier to be used) |
| F10 | (Return to main menu.) |
| | |
| (Ctrl)T | (XTYT mode selected) |
| F2 | (Data number) |
| 9000 [Enter] | (Number of data items to be measured) |

<4> Start the "SD" software, and make the following setting.

- * This description uses the L1S3000B2/2 as an example. It differs from other models only in the current rating of the servo amplifier. For small linear motors, set the number of data items to be measured to 4500.
- <5> When determining the correction parameters, set the velocity gain to a rather low value.
- <6> For medium-size and large motors, make a reciprocating motion for <u>200 mm or mor</u>e at F1200 (mm/min). For small linear motors, make a reciprocating motion for <u>100 mm</u> <u>or more</u> at F1200 (mm/min).
- <7> Pressing the F1 key (to start measurement) at regular speed displays the data shown below. (Check that the activating phase angle-based sine waveform changes from negative to positive at three points or more.)

Measurement direction varies with the setting of the direction-of-movement parameter.

[If a direction-specific smoothing compensation is not used]

When the setting is 111: Measurement is performed during forward movement. When the setting is -111: Measurement is performed during backward movement.

[If a direction-specific smoothing compensation is used]


(When determining a compensation value for the positive direction)

When the setting is 111: Measurement is performed during forward movement.

When the setting is -111: Measurement is performed during backward movement.

(When determining a compensation value for the negative direction) When the setting is 111: Measurement is performed during backward movement.

When the setting is -111: Measurement is performed during forward movement. Measurement in the wrong direction hinders correct calculation of the correction parameter.

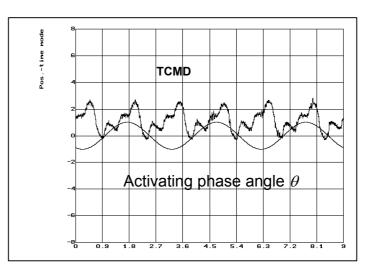

<8> Pressing [CTRL]+[L] causes the correction parameter values to be calculated as shown below. Enter the displayed parameter values. Usually, use the correction parameter values displayed on the top row.

The parameter values displayed on the middle and bottom rows are used for special parameter setting.

- Middle row: To be used when either quadruple smoothing compensation or quadruple TCMD output is selected.
- Bottom row: To be used when both quadruple smoothing compensation and quadruple TCMD output are selected.

| <pre><< Normal torque ripple compen FS15B / FS16C Parameter 2: #1753 / #2130 -> -25425 (4: #1754 / #2131 -> 22774 (6: #1755 / #2132 -> 20504 (</pre> | sation >> 156: 175) 88: 246) 80: 24) | |
|--|---|--|
| < <pre><< Compensation Value x 4 mode << TCMD Serial-Out x 4 mode 2: #1753 / #2130 -> 10159 (4: #1754 / #2131 -> 5878 (6: #1755 / #2132 -> 5144 (</pre> | | (FS15) / No.2203 B6=1 (FS16) or (FS15) / No.2203 B5=1 (FS16) ~~ |
| <pre><< Compensation Value x 4 mode << TCMD Serial-Out x 4 mode 2: #1753 / #2130 -> 2479 (4: #1754 / #2131 -> 1526 (6: #1755 / #2132 -> 1304 (</pre> | | (FS15) / No.2203 B6-1 (FS16) and (FS15) / No.2203 B5-1 (FS16) *** |
| | | |

Parameter settings are displayed in a form of, for example: -25425 (156: 175)

This format means that the correction gain (parameter high byte) and correction phase (parameter low byte) are, respectively, 156 and 175.

Because 156 = 9Ch and 175 = AFh,

parameter setting = 9CAFh = -25425.

When specifying the smoothing compensation (negative direction) parameters (Nos. 2782 to 2784 (Series 15i) or Nos. 2369 to 2371 (Series 16i and so on)), it is impossible to use the parameter values stated on the previous pages without modifying them. It is necessary to shift the phase by 128. Example)

Assuming that the correction gain and correction phase measured in the negative direction are, respectively, 10 and 100:

10 = 0Ah


100 + **128** = 228 = E4h

Therefore, the parameter value is: 0AE4h = 2788

If the sum of the phase data and 128 exceeds 255, perform the following calculation:
 Phase data = value that was read + 128 - 256


Thase data – value that was read + 128 - 250

The December 1999 version and later of the SD software can display correction parameters for the negative direction. When using these versions, use the parameter values displayed on the right section without modifying them.

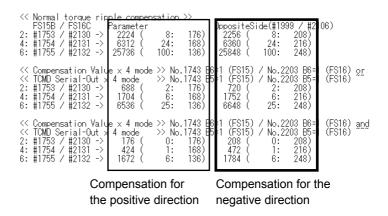


Example of measurement

(a) Measured waveform where parameter value calculation is possible

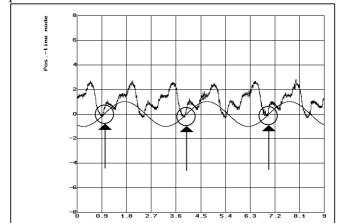


(b) Measured waveform where parameter value calculation is impossible (No. 1)

Two activating phase angle-based sine waves cannot be acquired because of insufficient measurement time.

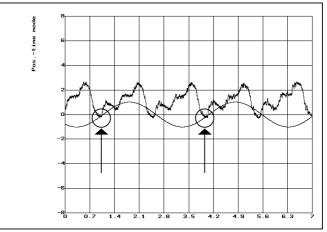

(c) Measured waveform where parameter value calculation is impossible (No. 2)

Two activating phase angle-based sine waves cannot be acquired because of an inappropriate measurement start position.

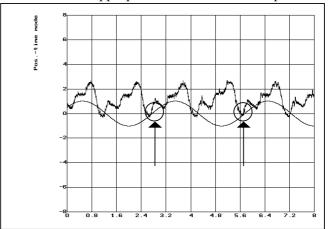

4.15 SYNCHRONOUS BUILT-IN SERVO MOTOR PARAMETER SETTING

4.15.1 Procedure for Setting the Initial Parameters of Synchronous Built-in Servo Motors

(1) Overview

The following describes the procedure for setting the digital servo parameters to enable the use of a FANUC synchronous built-in servo motor.

To drive a synchronous built-in servo motor, the optional pole detection function is required.

(2) Series and editions of applicable servo software

• Except $\alpha i CZ$ 768S

(Series 30*i*,31*i*,32*i*) Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,Power Mate *i*) Series 90B1/A(01) and subsequent editions

• $\alpha i CZ 768S$

(Series 30*i*,31*i*,32*i*) Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B, Power Mate *i*) Series 90B1/C(03) and subsequent editions

NOTE

Series 90B1 does not support RCN727 manufactured by HEIDENHAIN, as a detector for synchronous built-in servo motors.

(3) Warning

🕂 WARNING

- A synchronous built-in servo motor can make an unpredictable movement or vibration if the basic parameters for pole detection and so forth are not set correctly.
- 2 It is recommended to take the following actions until normal operation is confirmed:
 - Lower the excessive error level so that an alarm is issued immediately when an unpredictable movement is made.
 - Lower the torque limit value to disable abrupt acceleration.
 - Ensure that the emergency stop switch can be pressed immediately.

(4) Detector

A rotary encoder is used to detect the position and speed of a synchronous built-in servo motor.

Table 4.15.1(a) lists examples of usable rotary encoders.

| Table 4.15.1 (a) Examples of usable rotary encoders | | | | | |
|---|--|-------------------------------|--|--|--|
| Encoder | Number of pulses for parameter setting ^(*1) | Remarks | | | |
| α <i>i</i> CZ 512S | 500,000 p/rev | Manufactured by FANUC | | | |
| αi CZ 768S ^(*2) | 750,000 p/rev | Manufactured by FANUC | | | |
| α <i>i</i> CZ 1024S | 1,000,000 p/rev | Manufactured by FANUC | | | |
| RCN220 | 1,000,000 p/rev | Manufactured by HEIDENHAIN | | | |
| RCN223 | 8,000,000 p/rev | Manufactured by HEIDENHAIN | | | |
| RCN723 | 8,000,000 p/rev | Manufactured by HEIDENHAIN | | | |
| RCN727 ^(*3) | 8,000,000 p/rev | Manufactured by HEIDENHAIN | | | |

Table 4.15.1 (a) Examples of usable rotary encoders

(*1) Number of pulses for parameter setting, which differs from <u>an actual resolution.</u>

(*2) aiCZ 768S needs to use DECAMR for AMR setting. Please be careful of software edition.

(*3) Servo software Series 90B1 for Series 16*i* and so forth does not support RCN727 as a detector for synchronous built-in servo motors.

NOTE

- For details of rotary encoders usable with FANUC synchronous built-in servo motors, refer to "FANUC SYNCHRONOUS BUILT-IN SERVO MOTOR D*i*S series Descriptions (B-65332EN)".
- 2 For the detailed specifications of each rotary encoder, contact each rotary encoder manufacturer.


(5) Parameter settings

Set the parameters according to the procedure below.

Parameter setting procedure (1)


Procedure (1) can be used to initialize the parameters (such as current gain) necessary to drive a synchronous built-in servo motor. After initialization, <u>the parameters dependent on the type of rotary encoder need to be set.</u> Set the parameters according to procedure (2) described later.

Parameters related to initialization

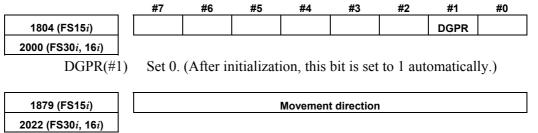

- +111: When the positive direction is specified, the rotor rotates in the positive direction.
- -111: When the positive direction is specified the rotor rotates in the reverse direction.

The positive direction (+ direction) of the DiS series motor is the counterclockwise rotation of the rotor as determined by viewing the motor from the power line side.

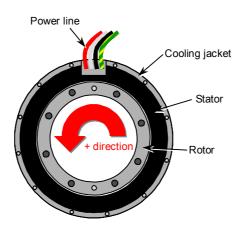

Motor ID number

1874 (FS15*i*) 2020 (FS30*i*, 16*i*) Motor ID number

Table 4.15.1 (b) and Table 4.15.1 (c) indicate the synchronous built-in servo motors for which the standard parameters are available as of December, 2005. When the standard parameters are not included in the servo software used, see the parameter list shown in this manual, and set the parameters.

| Table 4.15. | 1 (b) Synchrono | us built-in serve | o motor [| 200-V dri | ving] |
|-------------|-----------------|-------------------|-----------|-----------|-------|
| | Motor | | | | 90D0 |


| Motor model | Motor specification | Motor ID No. | 90B6 | 90B1 | 90D0 90E0 |
|---------------------|------------------------|--------------|------|------|--------------|
| D <i>i</i> S85/400 | 0483-B20x | 423 | _ | - | K(11) |
| D <i>i</i> S110/300 | 0484-B10x | 425 | - | - | K(11) |
| D <i>i</i> S260/600 | 0484-B31x | 429 | - | - | K(11) |
| D <i>i</i> S370/300 | 0484-B40x | 431 | - | - | K(11) |

| Table 4.15.1 | (c) S | nchronous built-i | n servo motor | [400-V driving] |
|--------------|-------|-------------------|---------------|-----------------|
|--------------|-------|-------------------|---------------|-----------------|

| Motor model | Motor specification | Motor ID No. | 90B6 | 90B1 | 90D0 90E0 |
|---------------------|------------------------|--------------|------|------|--------------|
| D <i>i</i> S85/400 | 0483-B20x | 424 | - | - | K(11) |
| D <i>i</i> S110/300 | 0484-B10x | 426 | - | - | K(11) |
| D <i>i</i> S260/600 | 0484-B31x | 430 | - | - | K(11) |
| D <i>i</i> S370/300 | 0484-B40x | 432 | - | - | K(11) |

The motor ID numbers are for SERVO HRV2. Loading is possible with the servo software of the series and edition listed above or subsequent editions.

After parameter initialization, check that the function bit for synchronous built-in servo motor control is set to 1 (synchronous built-in servo motor control is enabled).

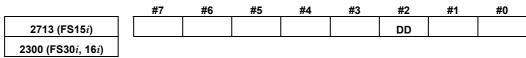

DD(#2)

Synchronous built-in servo motor control is:

- 1: Enabled
- 0: Disabled

Parameter setting procedure (2)

Procedure (2) can be used to set the parameters that need to be set according to the type of a rotary encoder used.

Setting of parameters related to feedback


| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|----------------|------------|------------|-------------|-------------|------------|-------------|---------------|
| 1804 (FS15 <i>i</i>) | | | | | | | | PLC0 |
| 2000 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| PLC0(#0) | The n | umber of | f velocity | y pulses | and the 1 | number | of position | on pulses are |
| | | Used wit | | • | | | | |
| | | Used afte | U | | 2 | | | |
| | | number | of veloc | ity pulse | s is lage | r than 32 | 2767, se | t the parame |
| | to 1. | | | | | | | |
| 1876 (FS15 <i>i</i>) | | | Number | of velocit | y pulses (| PULCO) | | |
| 2023 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | | | | | | | | |
| 1891 (FS15 <i>i</i>) | | | Numbe | r of positi | on pulses | (PPLS) | | |
| 2024 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | | | | | | | | i |
| 2628 (FS15 <i>i</i>) | | Posit | tion pulse | s convers | ion coeffic | cient (PSN | (IPYL) | |
| 2185 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | | | | d if the c | calculate | d numb | er of pos | sition pulses |
| | • | er than 32 | | | | | | |
| | When proces | - | arametei | is set | to 0, | PSMPY | ZL=1 is | assumed |
| | | | | | | | | |
| | (Parar | neter cal | culation | expressi | on) | | | |

 \rightarrow Set so that Number of position pulses = PPLS × PSMPYL. When PLC0=1

 \rightarrow Set so that Number of position pulses = $10 \times PPLS \times PSMPYL$

| Table 4.15.1 (d) Setting the number of velocity pulses and number of | | | | |
|--|--|--|--|--|
| nosition nulses | | | | |

| position pulses | | | | | |
|---------------------|---------------------|--------------------|-------------------|---------------------|--|
| Encoder | PLC0 (No.2000#0) | PULCO (No.2023) | PPLS (No.2024) | PSMPYL (No.2185) | |
| α <i>i</i> CZ 512S | 0 | 4096 | 6250 | 0 | |
| α <i>i</i> CZ 768S | 0 | 6144 | 9375 | 0 | |
| α <i>i</i> CZ 1024S | 0 | 8192 | 12500 | 0 | |
| RCN220 | 0 | 8192 | 12500 | 0 | |
| RCN223 | 1 | 6554 | 10000 | 0 | |
| RCN723 | 1 | 6554 | 10000 | 0 | |
| RCN727 | 1 | 6554 | 10000 | 0 | |

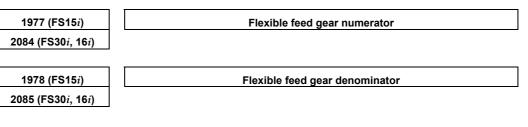

(Parameter calculation expression)

| FFG = | No. 2084 | | Number of pulses per motor revolution |
|----------|------------|---|--|
| | 110. 200 1 | = | (detection unit) |
| No. 2085 | | | Number of pulses per detector revolution |

For the number of pulses per detector revolution, see Table 4.15.1 (e).

| Number of pulses per detector revolution ^(*1) | Remarks | | |
|--|--|--|--|
| 500,000 p/rev | FFG, maximum value is 36/5. | | |
| 750,000 p/rev | FFG, maximum value is 360/75. | | |
| 1,000,000 p/rev | FFG, maximum value is 36/10. | | |
| 1,000,000 p/rev | FFG, maximum value is 1/1. | | |
| 8,000,000 p/rev | FFG, maximum value is 1/1. | | |
| 8,000,000 p/rev | FFG, maximum value is 1/1. | | |
| 8,000,000 p/rev | FFG, maximum value is 8/1. | | |
| | detector revolution (*1) 500,000 p/rev 750,000 p/rev 1,000,000 p/rev 1,000,000 p/rev 8,000,000 p/rev 8,000,000 p/rev | | |

Table 4.15.1 (e) Number of pulses for flexible feed gear setting Number of pulses per

(*1) Number of pulses for parameter setting, which differs from <u>an actual resolution.</u>

| 1896 (FS15 <i>i</i>) | Reference counter capacity | | | | | | | |
|--|--|----|----|----|----|----|--------|--------|
| 1821 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | Set the number of pulses per motor revolution (detection unit) of same number divided by an integer. With αiCZ 768S, however, set the number of pulses per one-thin one motor revolution (detection unit) or the same number divide an integer. | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| | | | | | | | | |
| 2688 (FS15 <i>i</i>) | | | | | | | RCNCLR | OUUPL3 |
| 2688 (FS15 <i>i</i>) 2275 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | 000PL3 |

- To be used. (To use the RCN223, RCN723, or RCN727, set the bit to 1.)
- 0: Not to be used.

RCNCLR (#1) The number of revolution is:

- 1: To be cleared. (To use the RCN220, RCN223, RCN723, or RCN727, set the bit to 1.)
- 0: Not to be cleared.

This function bit is to be set in combination with the number of data mask digits, described below.

4.SERVO FUNCTION DETAILS

| 2807 (FS15 <i>i</i>) | Number of data mask digits (DMASK) |
|-------------------------------------|---|
| 2394 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Settings] | 8. (To use the RCN223, RCN723, or RCN727) |

5. (To use the RCN220)

This parameter need not be set for an αiCZ sensor. (When using an αiCZ sensor, set this parameter to 0.) Set this parameter together with RCNCLR above.

Setting of an AMR conversion coefficient

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|----|------|------|------|------|------|------|------|
| 1806 (FS15 <i>i</i>) | 0 | AMR6 | AMR5 | AMR4 | AMR3 | AMR2 | AMR1 | AMR0 |
| 2001 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |

Set the value that matches the type of a rotary encoder used, according to Table 4.15.1 (f).

| Table 4.15.1 (f) Setting AMR | | | | | | | |
|------------------------------|--|--|--|--|--|--|--|
| Encoder | Remarks | | | | | | |
| α <i>i</i> CZ 512S | Set the number of motor poles in binary. | | | | | | |
| α <i>i</i> CZ 768S | Set 0. | | | | | | |
| α <i>i</i> CZ 1024S | Set the number of motor poles/2 in binary. | | | | | | |
| RCN220 | Set the number of motor poles/2 in binary. | | | | | | |
| RCN223 | Set the number of motor poles in binary. | | | | | | |
| RCN723 | Set the number of motor poles in binary. | | | | | | |
| RCN727 | Set the number of motor poles in binary. | | | | | | |


| | 1 | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|---|----|----|----|----|----|----|----|--------|
| 2608 (FS15 <i>i</i>) | | | | | | | | | DECAMR |
| 2220 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |

Set the value that matches the type of a rotary encoder used, according to Table 4.15.1 (g).

| Encoder | DECAMR | Remarks |
|---------------------|--------|--|
| α <i>i</i> CZ 512S | Set 0. | |
| αiCZ 768S | Set 1. | Meaning of AMR conversion coefficient 1 and 2 changes. |
| α <i>i</i> CZ 1024S | Set 0. | |
| RCN220 | Set 0. | |
| RCN223 | Set 0. | |
| RCN723 | Set 0. | |
| RCN727 | Set 0. | |

B-65270EN/06

4.SERVO FUNCTION DETAILS

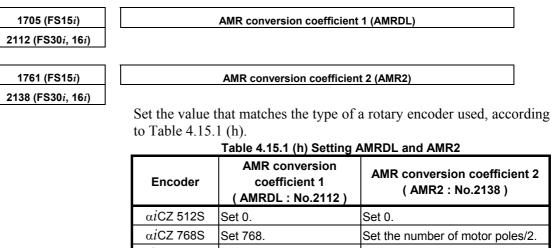

α*i*CZ 1024S Set 0. Set 0. **RCN220** Set 0. Set 0. Set 0. Set -4. **RCN223 RCN723** Set 0. Set -4.

Summary of parameter setting according to the type of rotary encoder

Set 0.

RCN727

Tables 4.15.1 (i), (j), (k), (l), and (m) provide summarized examples of parameter setting according to the type of rotary encoder. Set parameters according to the types of a rotary encoder and synchronous built-in servo motor used.

Set -4.

For the number of poles of each motor model, see Table 4.15.1 (n).

| Table 4.15.1 | (i) | For α <i>i</i> CZ 512S |
|--------------|-----|------------------------|
|--------------|-----|------------------------|

| | Parameter | number | Paramete | er setting |
|----------------|----------------------------|---------------|--------------------------------|---------------------------------|
| Symbol name | FS30 <i>i</i> ,16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg |
| AMRDL | 2112 | 1705 | 0 | 0 |
| AMR2 | 2138 | 1761 | 0 | 0 |
| PLC0 | 2000#0 | 1804#0 | 0 | 0 |
| AMR | 2001 | 1806 | Number of poles (binary) | Number of poles (binary) |
| PULCO | 2023 | 1876 | 4096 | 4096 |
| PPLS | 2024 | 1891 | 6250 | 6250 |
| REFCOUNT | 1821 | 1896 | 360000 | 3600000 |
| FFG | 2084 | 1977 | 36 | 36 |
| FFG | 2085 | 1978 | 50 | 5 |
| PSMPYL | 2185 | 2628 | 0 | 0 |
| DECAMR | 2220#0 | 2608#0 | 0 | 0 |

4.SERVO FUNCTION DETAILS

| Symbol | Parameter | number | Parameter setting | | | | | |
|----------|----------------------------|---------------|----------------------------------|----------------------------------|--|--|--|--|
| name | FS30 <i>i</i> ,16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg | | | | |
| AMRDL | 2112 | 1705 | 768 | 768 | | | | |
| AMR2 | 2138 | 1761 | Number of poles/2 (binary) | Number of poles/2 (binary) | | | | |
| PLC0 | 2000#0 | 1804#0 | 0 | 0 | | | | |
| AMR | 2001 | 1806 | 0 | 0 | | | | |
| PULCO | 2023 | 1876 | 6144 | 6144 | | | | |
| PPLS | 2024 | 1891 | 9375 | 9375 | | | | |
| REFCOUNT | 1821 | 1896 | 120000 | 1200000 | | | | |
| FFG | 2084 | 1977 | 36 | 360 | | | | |
| FFG | 2085 | 1978 | 75 | 75 | | | | |
| PSMPYL | 2185 | 2628 | 0 | 0 | | | | |
| DECAMR | 2220#0 | 2608#0 | 1 | 1 | | | | |

Table 4.15.1 (j) For α*i*CZ 768S

Table 4.15.1 (k) For α*i*CZ 1024S

| Symbol | Parameter | number | Paramete | er setting |
|----------|----------------------------|---------------|-----------------------------|------------------------------|
| name | FS30 <i>i</i> ,16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg |
| AMRDL | 2112 | 1705 | 0 | 0 |
| AMR2 | 2138 | 1761 | 0 | 0 |
| PLC0 | 2000#0 | 1804#0 | 0 | 0 |
| AMR | 2001 | 1806 | Number of | Number of |
| AIVIR | 2001 | 1000 | poles/2 (binary) | poles/2 (binary) |
| PULCO | 2023 | 1876 | 8192 | 8192 |
| PPLS | 2024 | 1891 | 12500 | 12500 |
| REFCOUNT | 1821 | 1896 | 360000 | 3600000 |
| FFG | 2084 | 1977 | 36 | 36 |
| FFG | 2085 | 1978 | 100 | 10 |
| PSMPYL | 2185 | 2628 | 0 | 0 |
| DECAMR | 2220#0 | 2608#0 | 0 | 0 |

| | Table | 4.15.1 (I) | For RCN220 | |
|----------------|----------------------------|---------------|-----------------------------|------------------------------|
| Symbol | Parameter | number | Paramete | er setting |
| Symbol name | FS30 <i>i</i> ,16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg |
| AMRDL | 2112 | 1705 | 0 | 0 |
| AMR2 | 2138 | 1761 | 0 | 0 |
| PLC0 | 2000#0 | 1804#0 | 0 | 0 |
| AMR | 2001 | 1806 | Number of poles/2 (binary) | Number of poles/2 (binary) |
| PULCO | 2023 | 1876 | 8192 | 8192 |
| PPLS | 2024 | 1891 | 12500 | 12500 |
| REFCOUNT | 1821 | 1896 | 360000 | 3600000 |
| FFG | 2084 | 1977 | 36 | 36 |
| FFG | 2085 | 1978 | 100 | 10 |
| PSMPYL | 2185 | 2628 | 0 | 0 |
| DECAMR | 2220#0 | 2608#0 | 0 | 0 |
| 800PLS | 2275#0 | 2688#0 | 0 | 0 |
| RCNCLR | 2275#1 | 2688#1 | 1 | 1 |
| DMASK | 2394 | 2807 | 5 | 5 |

Table 4.15.1 (I) For RCN220

Table 4.15.1 (m) For RCN223, RCN723, or RCN727

| Symbol | Parameter | number | Parameter setting | | | | | | |
|----------|----------------------------|---------------|-----------------------------|------------------------------|--|--|--|--|--|
| name | FS30 <i>i</i> ,16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg | | | | | |
| AMRDL | 2112 | 1705 | 0 | 0 | | | | | |
| AMR2 | 2138 | 1761 | -4 | -4 | | | | | |
| PLC0 | 2000#0 | 1804#0 | 1 | 1 | | | | | |
| AMR | 2001 | 1806 | Number of poles/2 (binary) | Number of poles/2 (binary) | | | | | |
| PULCO | 2023 | 1876 | 6554 | 6554 | | | | | |
| PPLS | 2024 | 1891 | 10000 | 10000 | | | | | |
| REFCOUNT | 1821 | 1896 | 360000 | 3600000 | | | | | |
| FFG | 2084 | 1977 | 9 | 9 | | | | | |
| FFG | 2085 | 1978 | 200 | 20 | | | | | |
| PSMPYL | 2185 | 2628 | 0 | 0 | | | | | |
| DECAMR | 2220#0 | 2608#0 | 0 | 0 | | | | | |
| 800PLS#0 | 2275#0 | 2688#0 | 1 | 1 | | | | | |
| 800PLS#1 | 2275#1 | 2688#1 | 1 | 1 | | | | | |
| DMASK | 2394 | 2807 | 8 | 8 | | | | | |

NOTE

Servo software Series 90B1 for Series 16*i* and so forth does not support RCN727 as a detector for synchronous built-in servo motors.

| Motor model | Number of poles | Number of pole pairs (number of poles/2) |
|---------------------|-----------------|---|
| D <i>i</i> S85/400 | 32 | 16 |
| D <i>i</i> S110/300 | 40 | 20 |
| D <i>i</i> S260/600 | 40 | 20 |
| D <i>i</i> S370/300 | 40 | 20 |

Table 4.15.1 (n) Number of poles and number of pole pairs of each motor model

Parameter setting procedure (3)

To drive a synchronous built-in servo motor, the pole detection function (option) is required. Procedure (3) describes the pole detection function.

(1) Overview

The pole position detection function detects the pole position of a motor to be driven when the relationship between the pole position of the motor and the phase of the detector is unknown.

- 1 This function may be unable to detect the correct pole position, depending on the detection condition, resulting in an unpredictable motor movement. To avoid this dangerous situation, the following conditions must be satisfied until completion of detection:
 - <1>The torque limit parameter (FS30*i*, 16*i*: No. 2060, FS15*i*: No. 1872) must be set so that 150% of the current needed for ordinary operation is not exceeded.

<2>The setting of excessive error at stop time must be 100 µm or 0.1 deg or less. Moreover, the setting of excessive error at move time must be 120% of the logical positional deviation or less.

<3>While pole position detection is in progress and a subsequent move operation is specified, the protection doors must be closed.

If these conditions are not satisfied and pole position detection operation is not terminated normally, the motor can make an unpredictable movement with the maximum torque until the NC detects an excessive error alarm.

For safety, create the following sequence with the PMC by using the pole detection state signal:

- <1>When the protection doors are open, pole detection is not started.
- <2>If a protection door is opened during pole detection (F158=1), a reset is made.
- <3>When pole detection is uncompleted (F159=0), no command is issued to relevant axes.
- <4>When pole detection is uncompleted (F159=0), the brake for the vertical axis is not released. (For brake operation, monitor not only the SA signal but also the pole detection completion signal.)

In general, this function cannot be applied to the following motors and conditions: <1>Linear motor

<2>DD motor that has a stroke limit such as a tilt axis

<3>Axis for which the axis separation function (detach) is used

<4>When the joint rigidity between the motor and detector is low

However, when this function needs to be used for an unavoidable reason, pay full attention to safety and use this function with only the following:

<1>Linear motor using an absolute value detector

<2>DD motor that has a stroke limit using an absolute value detector

2 For the following conditions, use a specified servo series/edition. Otherwise, the pole position cannot be detected correctly.

<1>When a detector that has an absolute address referenced mark is used.

<2>When an αi CZ or α A1000S sensor is used.

<3>When this function is applied to an axis such as a vertical axis that is completely locked.

(Specified series/edition)

- Series 90B1/02 and subsequent editions (FS15*i*, 16*i* and so on)

- Series 90D0, 90E0/10 and subsequent editions (FS30*i* and so on)

- 1 When two axes are placed under tandem control or simple synchronous control and each of the two axes has a speed detector (Pulsecoder or linear scale for a linear motor), ensure that an axis not detected is placed in the servo-off state and pole detection is performed for each of the main axis and sub-axis.
- 2 When using the motor feedback sharing function (FS16*i*, 30*i*: No. 2018#7, FS15*i*: No. 1960#7) under tandem control, start pole detection simultaneously for the two axes to avoid incorrect detection.
- 3 When a resonance elimination filter is used with a machine that has less friction, an excessive error alarm may be issued during detection, or a pole position may not be detected correctly. Turn off all resonance elimination filters or set bit 3 of No. 2283 to 1 (with FS16*i* and 18*i* only).

NOTE

This function is optional function.

(2) Details

Pole detection sequence

- Enable the parameter (FS30*i*, 16*i*: No. 2213#7, FS15*i*: No. 2601#7) for a target axis. Pole position detection is performed only for an enabled axis. For an axis not enabled, the pole position detection request signal (G135) is ignored.
- Set the servo-on state. Here, ensure that the brake for a vertical axis must not be released until the detection completion signal (F159) is set to 1.
- Do not perform a pole position detection operation in the servo-off state. Moreover, do not set the servo-off state during pole position detection operation.
- When the pole position detection request signal (G135) is set to 1, pole position detection is started, and the pole position detection in-progress signal (F158) is set to 1.
- Once a pole position detection operation is started, the detection operation is continued even when the pole position detection request signal is set to 0.
- Motor operation during pole position detection is not under control of the CNC. During this period, the CNC performs a follow-up operation.

- Upon completion of pole position detection after several seconds, the pole position detection in-progress signal (F158) is set to 0, and the pole position detection completion signal (F159) is set to 1.
- If pole position detection is terminated abnormally for a mechanical cause or motor characteristics, the servo alarm "POLE DETECTION ERROR" is issued.
- The servo alarm "POLE DETECTION ERROR" cannot be released with a reset. Turn off the power then turn on the power again.
- When a reset is made during pole position detection, the pole position detection is stopped. To restart pole position detection, set the pole position detection request signal to 0 then set the same signal to 1 again.
- Once a pole position detection operation is completed, no additional pole position detection operation can be performed until the power is turned off.
- When using an absolute detector, set the parameter (FS30*i*, 16*i*: No. 2229#0, FS15*i*: No. 2617#0) to 1. In this case, when pole position detection is completed, the result of detection is stored in the parameter (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762). So, pole position detection need not be performed each time the power is turned on.
- In the MDI, MEM, or EDIT mode, the result of detection is reflected on the screen immediately. In the REF or JOG mode, the result of detection is reflected on the screen when the reset key is pressed or the mode is switched to the MDI mode.
- Before restarting pole detection, clear the parameter (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762) to 0.
- When pole position detection is completed and the motor one-rotation signal is detected, the result of detection is stored in the parameter (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762) in the MDI mode by setting the parameter (FS30*i*, 16*i*: No. 2229#0, FS15*i*: No. 2617#0) to 1 also in the case where an incremental detector is used. Thus, a torque constant change due to pole position detection variation can be avoided.

NOTE

- 1 When an absolute detector is used and the parameter (FS30*i*, 16*i*: No. 2229#0, FS15*i*: No. 2617#0) is set to 1, the pole position detection completion signal (F159) is set to 1 immediately after power-on if the parameter (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762) is not set to 0.
- 2 Create logic for confirming the pole position detection completion signal (F159) before specifying a move command immediately after power-on.
- 3 If an alarm such as a count error alarm is issued for a detector fault, the pole position detection completion signal (F159) is returned to 0. In this case, perform another pole position detection operation.

Detection mode and method of application

The three detection modes indicated below are available with servo Series 90B1/Edition 02 or later, or Series 90D0 and 90E0/Edition 10 or later. With other servo series/editions, only the minute operation mode in 1) below can be used.

Minute operation mode 1)

| Operation: | A pole position is detected with the motor making |
|--------------|---|
| | a minute operation. |
| Application: | When the friction is less so that the motor can |
| | move in a minute range |
| Setting: | No.2229#4=1, No.2182 \geq 0 (FS30 <i>i</i> ,16 <i>i</i>) |
| | No.2617#4=1, No.2625 \geq 0 (FS15 <i>i</i>) |

Usually, it is recommended to use this mode.

- 2) Automatic selection mode The minute operation mode is initially used for Operation: detection. If the motor is locked or the friction is larger, the detection mode is automatically switched to the stop mode. Application: A pole position can be detected, regardless of the machine state. Setting: No.2229#4=0, No.2182 \geq 0 (FS30*i*,16*i*) No.2617#4=0, No.2625 \geq 0 (FS15*i*) Stop mode 3) Operation: A pole position is detected with the motor placed in the stop state.
 - Application: Axis such as a vertical axis where the motor is locked Setting:

No.2229#4=0, No.2182=-1 (FS30i,16i)

No.2617#4=0, No.2625=-1 (FS15i)

NOTE

As the guideline for stop mode application, the following conditions apply:


- 1) The motor saliency (=Ld-Lq) is 1 mH or more.
- 2) Magnetic saturation occurs at a current larger than the rated motor current by a factor of 2 or less.

(The torque constant is reduced by 5% or more.) If these conditions are not satisfied, the precision may be degraded or detection may be disabled. Note that some models of FANUC DiS Series do not satisfy these conditions, thus disabling the stop method from being used. When using the stop mode, make a sufficient operation check beforehand.

When the automatic selection mode is used, the mode is switched from the minute operation mode to the stop mode automatically, depending on the axis state. So, before using the automatic selection mode, check that normal operation can be performed in the stop mode.

(3) Parameter

When this parameter has been modified, the power to the NC must be turned off before operation is continued.

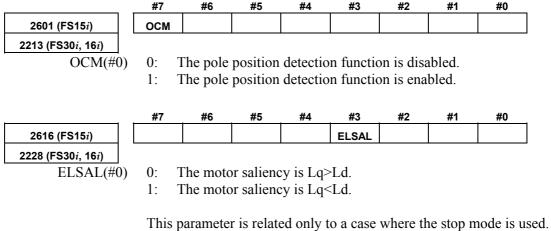

When a synchronous motor (IPM) of magnet-embedded type is used, the motor saliency is Lq>Ld (reverse saliency). In rare cases, however, a synchronous motor of magnet surface attachment type (SPM) may indicate the saliency Lq<Ld. In this case, the detection phase is shifted 90 degrees relative to the reverse saliency. With many motors, however, saliency information acquisition is presently difficult. So, if the results of repeated detections always indicate a shift of 90 degrees, set this bit.

NOTE

This function can be used with Series 90B1/Edition 02 or later (FS15*i*, 16*i*, etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30*i*, etc.).

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|----|----|----|-------|-------|----|----|-------|--|
| 2617 (FS15 <i>i</i>) | | | | FORME | WATRA | | | ABSEN | |
| 2229 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |

ABSEN(#0)

AMR offset (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762) is not used.
 AMR offset (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762) is used.

If an absolute detector is used, the result of detection is saved to the AMR offset of the parameter (FS30*i*, 16*i*: No. 2139, FS15*i*: No. 1762). In the case of a second or subsequent power-on operation, pole position detection need not be executed.

If an incremental detector is used, the result of detection is saved to the AMR offset when the one-rotation signal is detected. In this case, pole position detection needs to be performed each time the power is turned on. After the one-rotation signal is detected, however, the value saved to the AMR offset is used, so that an influence due to pole detection variation can be eliminated. WATRA(#3) 0: After pole detection, an abnormal movement is monitored.1: After pole detection, no abnormal movement is monitored.

If a detection error occurs, protection against an abnormal operation is provided. Operation is monitored until a command after detection is issued. If an abnormal operation is detected, detection error alarm 454 is issued.

NOTE

This function can be used with Series 90B1/Edition 02 or later (FS15*i*, 16*i*, etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30*i*, etc.).

FORME(#4)

0: Automatic selection mode (minute operation mode + stop mode)
 1: Minute operation mode

Usually, set this parameter to 1 (minute operation mode).

NOTE

This function can be used with Series 90B1/Edition 02 or later (FS15*i*, 16*i*, etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30*i*, etc.).

1762 (FS15i) AMR offset (AMROFS) 2139 (FS30*i*, 16*i*) [Unit of data] Degrees [Valid data range] 0 to 360 [Standard setting] 0 If ABSEN=1, the result of operation is stored in this parameter when the MDI mode is set upon completion of detection. After pole determination, never rewrite the value of this parameter manually. If this parameter is rewritten for adjustment, the power must be turned off before operation is continued. 2625 (FS15i) Current A for pole detection (DTCCRT_A) 2182 (FS30i, 16i) [Unit of data] 7282 is the maximum amplifier current value. [Valid data range] -1 to 7282 [Standard setting] 0 Set a current value for pole position detection. If this parameter is set to 0, pole position detection is performed according to the value of the rated current parameter (FS30i, 16i: No. 2086, FS15i: No. 1979). If the static friction of the machine is large, and the pole detection error alarm is issued during detection, increase current A for pole detection.

The maximum value of this parameter is limited by the torque limit parameter (FS30*i*, 16*i*: No. 2060, FS15*i*: No. 1872).

| | NOTE When -1 is set, the stop mode is used for detection. The setting of -1 can be used with Series 90B1/Edition 02 or later (FS15 <i>i</i> , 16 <i>i</i> , etc.) and Series 90D0 and 90E0/Edition 10 or later (FS30 <i>i</i> , etc.). |
|-------------------------------------|---|
| 2641 (FS15 <i>i</i>) | Current B for pole detection (DTCCRT_B) |
| 2198 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Unit of data] | % unit |
| [Valid data range] | 0 to 370 |
| [Standard setting] | 0 |
| | This parameter is related only to a case where the stop mode is used. Set a current value for pole direction detection. When this parameter is set to 0, 100% is set internally. |
| | NOTE This function can be used with Series 90B1/Edition 02 or later (FS15 <i>i</i> , 16 <i>i</i> , etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30 <i>i</i> , etc.). |
| 2642 (FS15 <i>i</i>) | Current C for pole detection (DTCCRT_C) |
| 2199 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Unit of data] | 7282 is the maximum amplifier current value. |
| [Valid data range] | 0 to 7282 |
| [Standard setting] | 0 |
| , | This parameter is related only to a case where the stop mode is used. Set a current value for pole direction detection. When this parameter is set to 0, 100% is set internally. When this parameter is set to 0, pole position detection is performed using a current value two times greater than the value of the rated current parameter (FS30 <i>i</i> , 16 <i>i</i> : No. 2086, FS15 <i>i</i> : No. 1979). |
| | NOTE This function can be used with Series 90B1/Edition 02 or later (FS15 <i>i</i> , 16 <i>i</i> , etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30 <i>i</i> , etc.). |

| 2681 (FS15 <i>i</i>) | Allowable travel distance magnification/stop speed decision value |
|-------------------------------------|--|
| 2268 (FS30 <i>i</i> , 16 <i>i</i>) | (MFMPMD) |
| [Unit of data] | % unit |
| [Valid data range] | -1000 to 1000 |
| [Standard setting] | 0 (100% internally) |
| | During pole position detection, the motion of the rotor is limited to within an allowable travel distance of 5 degrees. If the value of this parameter is positive, set an allowable travel distance by specifying a percentage relative to the default value 5 degrees. If the pole detection error alarm is issued during pole position detection, and no improvement is made by changing the current value for pole detection, set a value greater than 100% in this parameter. For example, to set an allowable travel distance of 10 degrees, set 200%. |
| | If the value of this parameter is negative, the stop speed decision criterion to be used when a low-resolution detector is used can be changed. If pole detection is not started, change the value of this parameter to a greater negative value. For example, set a value from -200 to -500 for adjustment. |
| | NOTE A negative value can be used with Series 90B1/Edition 02 or later (FS15 <i>i</i> , 16 <i>i</i> , etc.), or Series 90D0 and 90E0/Edition 10 or later (FS30 <i>i</i> , etc.). |

(4) Signals

Pole position detection request signal RPREQ1 to RPREQ8

| [Classification] | Input signal |
|------------------|--|
| [Function] | Requests pole position detection. This signal is available for each |
| | controlled axis, and the suffix at the end of each signal name indicates |
| | a controlled axis number. |
| [Operation] | Pole position detection is started by setting this signal to 1. Once a |
| | pole position detection operation is started, the operation is continued |
| | even when this signal is set to 0. |

Pole position detection in-progress signal RPDET1 to RPDET8

| [Classification] | Output signal |
|--------------------|---|
| [Function] | Posts that pole position detection is being performed. This signal is |
| | available for each controlled axis, and the suffix at the end of each |
| | signal name indicates a controlled axis number. |
| [Output condition] | This signal is set to 1 in the following case: |
| | - When pole position detection is being performed |
| | This signal is set to 0 in one of the following cases: |
| | - When pole position detection is completed |
| | - When pole position detection is terminated abnormally |
| | - When pole position detection is stopped by a reset |

| Pole position detection comple RPFIN1 to RPFIN8 | tion signal |
|--|---|
| [Classification] | Output signal |
| [Function] | Posts that pole position detection is completed. This signal is available for each controlled axis, and the suffix at the end of each signal name indicates each controlled axis number. |
| [Output condition] | This signal is set to 1 in the following case: When pole position detection is completed after pole position detection is started by setting the pole position detection request signal to 1 |
| RPREQ | |
| RPDET — | |
| RPFIN | |
| | NOTE 1 If an absolute detector is used, this signal remains set to 1 even when the power is turned off then back on after completion of pole position detection performed by setting the parameter (FS30<i>i</i>, 16<i>i</i>: No. 2229#0, FS15<i>i</i>: No. 2617) to 1. When the power is turned off then back on after setting the parameter (FS30<i>i</i>, 16<i>i</i>: No. 2139, FS15<i>i</i>: No. 1762) to 0, this signal is set to 0. 2 If an incremental detector is used, the pole position detection completion signal is not set to 0 unless the power is turned off. |

Signal address

For Series 30i, 16i, and Power Mate i

F159

RPFIN8

RPFIN7

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|----------|--------|--------|--------|--------|--------|--------|--------|--------|
| G135 | RPREQ8 | RPREQ7 | RPREQ6 | RPREQ5 | RPREQ4 | RPREQ3 | RPREQ2 | RPREQ1 |
| <u> </u> | | | | | | | | |
| | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| | #/ | #0 | #5 | #4 | #ა | #2 | #1 | #0 |
| F158 | RPDET8 | RPDET7 | RPDET6 | RPDET5 | RPDET4 | RPDET3 | RPDET2 | RPDET1 |
| | - | | | | | | | |

RPFIN5

RPFIN4

RPFIN3

RPFIN2

RPFIN1

RPFIN6

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------|----|----|----|----|----|----|----|---------|
| G067 | | | | | | | | RPREQ1 |
| G071 | | | | | | | | RPREQ2 |
| G075 | | | | | | | | RPREQ3 |
| G079 | | | | | | | | RPREQ4 |
| G083 | | | | | | | | RPREQ5 |
| G087 | | | | | | | | RPREQ6 |
| G091 | | | | | | | | RPREQ7 |
| G095 | | | | | | | | RPREQ8 |
| G099 | | | | | | | | RPREQ9 |
| G103 | | | | | | | | RPREQ10 |
| G107 | | | | | | | | RPREQ11 |
| G111 | | | | | | | | RPREQ12 |
| G115 | | | | | | | | RPREQ13 |
| G119 | | | | | | | | RPREQ14 |
| G123 | | | | | | | | RPREQ15 |
| G127 | | | | | | | | RPREQ16 |
| G243 | | | | | | | | RPREQ17 |
| G247 | | | | | | | | RPREQ18 |
| G251 | | | | | | | | RPREQ19 |
| G255 | | | | | | | | RPREQ20 |
| G259 | | | | | | | | RPREQ21 |
| G263 | | | | | | | | RPREQ22 |
| G267 | | | | | | | | RPREQ23 |
| G271 | | | | | | | | RPREQ24 |

4.SERVO FUNCTION DETAILS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------|----|----|----|----|----|----|---------|---------|
| F067 | | | | | | | RPFIN1 | RPDET1 |
| F071 | | | | | | | RPFIN2 | RPDET2 |
| F075 | | | | | | | RPFIN3 | RPDET3 |
| F079 | | | | | | | RPFIN4 | RPDET4 |
| F083 | | | | | | | RPFIN5 | RPDET5 |
| F087 | | | | | | | RPFIN6 | RPDET6 |
| F091 | | | | | | | RPFIN7 | RPDET7 |
| F095 | | | | | | | RPFIN8 | RPDET8 |
| F099 | | | | | | | RPFIN9 | RPDET9 |
| F103 | | | | | | | RPFIN10 | RPDET10 |
| F107 | | | | | | | RPFIN11 | RPDET11 |
| F111 | | | | | | | RPFIN12 | RPDET12 |
| F115 | | | | | | | RPFIN13 | RPDET13 |
| F119 | | | | | | | RPFIN14 | RPDET14 |
| F123 | | | | | | | RPFIN15 | RPDET15 |
| F127 | | | | | | | RPFIN16 | RPDET16 |
| F291 | | | | | | | RPFIN17 | RPDET17 |
| F295 | | | | | | | RPFIN18 | RPDET18 |
| F299 | | | | | | | RPFIN19 | RPDET19 |
| F303 | | | | | | | RPFIN20 | RPDET20 |
| F307 | | | | | | | RPFIN21 | RPDET21 |
| F311 | | | | | | | RPFIN22 | RPDET22 |
| F315 | | | | | | | RPFIN23 | RPDET23 |
| F319 | | | | | | | RPFIN24 | RPDET24 |

(5) Action for trouble

| Symptom | State | Detection request (G135) | During detection (F158) | Detection comple- tion (F159) | Cause | Action |
|------------------------------------|---|--------------------------------|-------------------------------|--|---|--|
| [Before dete | ction completion] | | | | | |
| | In the minute operation mode, the motor moves slightly. | OFF | OFF | OFF | The pole detection request signal is turned off. | Turn on the pole detection request signal. |
| Detection is not started. | In the stop mode, a varying activating | ON | OFF | OFF | The pole detection function is disabled. | Check bit 7 of No. 2213 or the option. |
| | sound, which is to be heard, cannot be confirmed. | ON | OFF | OFF | Servo-off | Set the servo-on state. |
| | | | | | Aŋ α <i>i</i> CZ sensor is used. Aŋ αA1000S is used. The detector | Use Series 90B1/Edition 02 or later, or Series 90D0 or 90E0/Edition 10 or later. Set the stop speed |
| | The motor appears to be moving slightly. However, detection is | ON | ON | OFF | resolution is low: 100 million/rev or lower | decision value (No. 2268) to a value from -200 to -500. |
| Detection is not | not completed and no alarm is issued. | | | | Velocity feedback noise | Take action for noise protection. |
| completed. | | | | | The friction is very small, so that activation causes a vibration to disable stop decision initiation. | Decrease detection current A (No. 2182) to find an optimal value. |
| | During detection, an abnormally large motion is made and detection is not completed. | | | | Detector with high resolution | Increase the stop speed decision value (No. 2268). |
| Excessive error at stop time | ccessive During detection, the for at stop excessive error alarm at | | ON | OFF | The friction is small. | Increase the setting of excessive error at stop time or set detection current A (No. 2182) to the rated current or lower. |
| | | | | | Influence of resonance elimination filters | Turn off all resonance elimination filters or set bit 3 of No. 2283 to 1. |
| Detection | | | | | The friction is large. | Set detection current A (No. 2182) to the rated current or higher. |
| error alarm (SV454) | The pole detection error alarm is issued. | ON | ON | OFF | The current gain is small. | Set a proper current gain. |
| | | | | | The motor saliency is small. | Set detection current B (No. 2198) to 100% or more. |

| Symptom | State | Detection request (G135) | During detection (F158) | Detection comple- tion (F159) | Cause | Action |
|--|---|--------------------------------|-------------------------------|--|---|---|
| [After detect | ion completion] | | ł | | | |
| | | | | | The phase order of the power line does not match the direction of the detector. | Change the phase order of the power line. |
| Vibration | | ON | ON | ON | Detector setting error | Set a correct detector resolution. |
| | | | | | The number of poles is not set correctly. | Set the correct number of motor poles. |
| | | | | | The velocity gain is high. | Adjust the velocity gain to a proper value. |
| | | | | | The phase order of the power line does not match the direction of the detector. | Change the phase order of the power line. |
| | An unpredictable movement is made, or no movement is made in response to an issued command, so that an excessive error alarm is issued. | ON | ON | ON | The number of poles is not set correctly. | Set the correct number of motor poles. |
| Excessive error at stop time | | | | | The motor saliency is small. | Set detection current B (No. 2198) to 100% or more. |
| or excessive error at move time | | | | | The motor is not magnetically saturated. | Set detection current C (No. 2199) to a value larger than the rated current by a factor of 2 or more. |
| | | | | | No reverse saliency | Set bit 3 of No. 2228 to 1. |
| | | | | | + circuit C with a referenced mark | Use Series 90B1/Edition 02 or later, or Series 90D0 or 90E0/Edition 10 or later. |
| | After detection | | | | Bit 0 of No. 2229 = 0 | Set bit 0 of No. 2229 to 1. |
| The AMR offset does | After detection completion, the result of detection is not written | ON | ON | ON | The mode is not the MDI mode. | The display is updated in the MDI mode. |
| not change. | to the AMR offset. | | | | Incremental detector | The motor needs to make one or more revolutions. |
| Detection error alarm (SV454) | After detection completion, the pole detection error alarm is issued. | ON | ON | ON | The VCMD mode is used for operation. | Set bit 3 of No. 2229 to 1. |

4.SERVO FUNCTION DETAILS

| Symptom | State | Detection request (G135) | During detection (F158) | Detection comple- tion (F159) | Cause | Action |
|---------------------|--|--------------------------------|-------------------------------|--|------------------------------|--|
| [After restar | t] | | | | | |
| No motion | The AMR offset is not 0, but no movement is made in response to an | - | - | - | Incremental detector | Pole detection needs to be performed each time a start-up operation is performed. |
| | issued command. | | | | Detector alarm | Pole detection needs to be performed again. |
| Detection | The value of the AMR offset varies in each | | | | The friction is large. | Set detection current A (No. 2182) to the rated current or higher. |
| result variation | detection operation. | - | - | - | The motor saliency is small. | Set detection current B (No. 2198) to 100% or more. |

(6) Usable software

Usable CNC software

| FS30 <i>i</i> -MB/TB | Usable starting with the first edition |
|------------------------------|--|
| FS31 <i>i</i> -MB/TB | Usable starting with the first edition |
| FS32 <i>i</i> -MB/TB | Usable starting with the first edition |
| FS16 <i>i</i> -MB/TB | Usable starting with the first edition |
| FS18 <i>i</i> -MB/TB | Usable starting with the first edition |
| FS21 <i>i</i> -MB/TB | Usable starting with the first edition |
| FS15 <i>i</i> -MB | F0A1-10 or later |
| FS15 <i>i</i> -TB | F6A1-10 or later |
| Power Mate <i>i</i> -MODEL D | 88E0-21 or later |
| Power Mate <i>i</i> -MODEL H | 88F1-12, 88F2-02 or later |

NOTE

Please refer to 4.15.1(2) about usable servo software

Parameter setting procedure (4)

Procedure (4) can be used to set parameters according to the cooling method used for synchronous built-in servo motors.

In the case of no cooling, the parameters are set by initialization according to procedure (1), so that the parameters need not be modified.

In the case of liquid cooling only, modify the parameters according to Table 4.15.1 (x) and Table 4.15.1 (y).

| 1877 (FS15 <i>i</i>) | OVC alarm parameter (POVC1) |
|-------------------------------------|--|
| 2062 (FS30 <i>i</i> , 16 <i>i</i>) | |
| · | |
| 1878 (FS15 <i>i</i>) | OVC alarm parameter (POVC2) |
| 2063 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | |
| 1893 (FS15 <i>i</i>) | OVC alarm parameter (POVCLMT) |
| 2065 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 1979 (FS15 <i>i</i>) | Current rating parameter (RTCURR) |
| | |
| 2086 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 1784 (FS15 <i>i</i>) | OVC magnification in stop state (OVCSTP) |
| | ovo magnineation in stop state (ovosir) |
| 2161 (FS30 <i>i</i> , 16 <i>i</i>) | |

Table 4.15.1 (x) Setting OVC and current rating parameters by cooling method [200-V driving]

| Model | Cooling method | Rated [Nm] | POVC1 (N2062) | POVC2 (N2063) | POVCLMT (N2065) | RTCURR (N2086) | OVCSTP (N2161) |
|---------------------|----------------|---------------|------------------|------------------|--------------------|-------------------|-------------------|
| D <i>i</i> S85/400 | No cooling | 17 | 32683 | 1069 | 3172 | 1310 | 0 |
| D1383/400 | Liquid cooling | 35 | 32427 | 4258 | 12689 | 2621 | 0 |
| D <i>i</i> S110/300 | No cooling | 25 | 32682 | 1069 | 3173 | 1310 | 0 |
| D/3110/300 | Liquid cooling | 45 | 32427 | 4260 | 12694 | 2621 | 0 |
| DiS260/600 | No cooling | 55 | 32722 | 578 | 1714 | 963 | 0 |
| DI3200/000 | Liquid cooling | 105 | 32583 | 2307 | 6857 | 1926 | 119 |
| D <i>i</i> S370/300 | No cooling | 75 | 32705 | 782 | 2322 | 1121 | 0 |
| DI3370/300 | Liquid cooling | 150 | 32518 | 3121 | 9287 | 2242 | 0 |

Table 4.15.1 (y) Setting OVC and current rating parameters by cooling method [400-V driving]


| Model | Cooling method | Rated [Nm] | POVC1 (N2062) | POVC2 (N2063) | POVCLMT (N2065) | RTCURR (N2086) | OVCSTP (N2161) |
|---------------------|----------------|---------------|------------------|------------------|--------------------|-------------------|-------------------|
| DiS85/400 | No cooling | 17 | 32683 | 1069 | 3172 | 1310 | 0 |
| D1383/400 | Liquid cooling | 35 | 32427 | 4258 | 12689 | 2621 | 0 |
| D <i>i</i> S110/300 | No cooling | 25 | 32682 | 1069 | 3173 | 1310 | 0 |
| DIST10/300 | Liquid cooling | 45 | 32427 | 4260 | 12694 | 2621 | 0 |
| DiS260/600 | No cooling | 55 | 32731 | 457 | 1354 | 856 | 0 |
| Di3200/000 | Liquid cooling | 105 | 32622 | 1824 | 5418 | 1712 | 0 |
| DiS370/300 | No cooling | 75 | 32705 | 782 | 2322 | 1121 | 0 |
| D13370/300 | Liquid cooling | 150 | 32518 | 3121 | 9287 | 2242 | 0 |

For this subsection, see Subsection 4.14.2, "Detection of an Overheat Alarm by Servo Software when a Linear Motor and a Synchronous Built-in Servo Motor are Used".

4.15.3 Smoothing Compensation for Synchronous Built-in Servo Motor

(1) Overview

Smoothing compensation for synchronous built-in servo motor is a function used to improve the feed smoothness of a synchronous built-in servo motor by applying, to the current command, a sine wave compensation torque 1.5 times and 3 times per pole pair. By setting a compensation gain and phase with parameters for each component, a compensation torque matching each motor can be obtained. A value to be set in a parameter for compensation is automatically calculated using SERVO GUIDE.

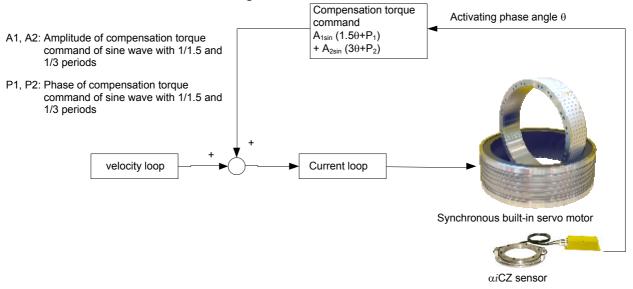

NOTE

- 1 This function can be used only when an encoder with a minimum resolution of 2²³ pulses/rev or 8,000,000 pulses/rev or less (for example, RCN223 manufactured by HEIDENHAIN) is used.
- 2 This function can only be used for synchronous built-in servo motor with encoder whose minimum resolution is lower than or equal to 2²³pulse/rev (EX. HEIDENHAIN RCN223). This function can only be used for synchronous built-in servo motor with encoder whose minimum resolution is lower than or equal to 2²³pulse/rev (EX. HEIDENHAIN RCN223). Though HEIDENHAIN RCN727 has 16 times higher resolution than that of RCN223, servo software treats it as same as RCN223 in the data point of view. (Of course, even if the servo software treats the data as above, you can use 2²⁷pulse/rev as the minimum resolution.) Therefore, HEIDENHAIN RCN727 is possible for using this function.

(2) Series and editions of applicable servo software

(Series 30*i*, 31*i*, 32*i*,)
Series 90D0/L(12) and subsequent editions
Series 90E0/L(12) and subsequent editions
(Series 15*i*, 16*i*, 18*i*, 21*i*, Power Mate *i*)
Series 90B1/E(05) and subsequent editions

(3) Setting parameters

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--|---|--|--|---|---|--|--|
| 2713 (FS15 <i>i</i>) | | | | | | DD | | |
| 2300 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DD(#2) | Synch | ronous | built-in s | servo mo | tor is: | | | |
| | - | Disabled | | | | | | |
| | 1: I | Enabled. | (Smoo | thing co | ompensa | tion for | synch | ronous b |
| | S | servo mo | otor is als | so enable | ed.) | | | |
| 2790 (FS15 <i>i</i>) | | Smoothin | g comper | sation pe | rformed 1. | 5 times pe | er pole pa | air |
| 2377 (FS30 <i>i</i> , 16 <i>i</i>) | Correcti | on gain (ł | nigh-order | 8 bits) | Correc | tion phas | e (low-or | der 8 bits) |
| 2793 (FS15 <i>i</i>) | S | moothing | compens | ation per | ormed thr | ee times p | oer pole p | air |
| 2380 (FS30 <i>i</i> , 16 <i>i</i>) | Correction gain (high-order 8 bits) Correction phase (low-order 8 bits) Setting the correction gain of the following parameters with a nonzer value can switch between the negative direction smoothin compensation and the positive direction smoothing compensation. this case, the smoothing compensation parameter explained abo applies only to feeding in the positive direction. | | | | | | | |
| 2360 (F3501, 161) | Settin value compo this c | g the co can ensation ase, the | rrection switch and the smooth | gain of t between positive ning cor | he follow the n direction npensation | ving par legative on smoo on parai | ameters directi thing co neter ex | with a not on smoo |
| 2791 (FS15 <i>i</i>) | Settin value compo this c applie | g the co can ensation ease, the es only to | rrection switch and the smooth o feeding | gain of t between positive ning cor g in the p | he follow the me direction pensation positive d | wing par negative on smoo on paran lirection | ameters directi thing co neter e | with a not on smoo |
| | Settin value compo this c applie Smoothi | g the co can ensation ease, the es only to ng compe | rrection switch and the smooth o feeding | gain of t between positive ning cor g in the p | he follow the n e direction pensation ositive d | wing par negative on smoo on paran lirection | ameters directi thing co neter en (negative | with a notion smoother smoother smoother smoother with a smoother |
| 2791 (FS15 <i>i</i>) | Settin value compo this c applie Smoothi Correcti | g the co can ensation ase, the es only to ng compe on gain (h | rrection switch and the smooth o feeding nsation pe | gain of t between positive ning cor g in the p rformed 1. | he follow the n e direction pensation ositive d | wing par negative on smoo on paran lirection r pole pair | ameters directi thing co neter e: (negative e (low-or | with a notion smoother smoother smoother smoother with a notion of the second s |

An optimal value varies from one motor to another (not from one motor model to another). So, compensation parameters need to be determined for each assembled motor. A torque command variation generated when the motor is fed at low speed is dependent on the position. The application of smoothing compensation cancels this position-dependent characteristic, allowing the motor to move smoothly.

The measuring instruments that can be used to determine these parameters include "SERVO GUIDE" (Ver. 3.20 or later).

By using SERVO GUIDE (Ver. 3.20 or later), these parameters can be determined easily. Follow the procedure below to measure the activating phase and torque command, which are required to determine the compensation parameters.

Measurement procedure

<1> Set channels as follows:

Channel 1: Counter for smoothing compensation for synchronous built-in servo motor

Select the target axis for measurement, and set "ROTDD" as the data type.

| Channel | × |
|---|--|
| Charmer CH1 CH2 CH3 CH4 CH5 CH6 Axis Kind Unit Conv. Coef. 1 (Physical Val.) Conv. Base 1 (Raw data Val.) Origin Value 0 | Extended address(E) 0 = Shift(S) 0 = Shift(S) 0 = Smooth compensation counter for Synchronous built-in servo motor |
| ОК | |

Channel 2: Torque command

Select the target axis for measurement, and set "TCMD" as the data type.

As the conversion coefficient, set the maximum current of the amplifier used for the target axis.

| Channel | <u>×</u> |
|---|---|
| Channel CH1 CH2 CH3 CH4 CH5 CH6 Axis Kind Unit A(p) Conv. Coef. 100 (Physical Val.) | Explanation Torque command(TCMD) |
| Conv. Base 7282 (Raw data Val.) Origin Value 0 | Torque command(TCMD) Physical value is need to set max. current (Ap) of amplifier. Default value is 100 in convention which convert measured data to percent by max. torque. |
| OK | キャンセル |

<2> With this setting, make bidirectional movements by about ± 90 deg at about F (14400/number of poles) deg/min for data measurement. At the time of data measurement, ensure that all smoothing compensation values are set to 0. Smoothing compensation for linear motors may be used. Check this point as well.

Parameters for synchronous built-in servo motor:

No.2377, No.2378, No.2380, No.2381

Parameters for linear motor:

No.2130, No.2131, No.2132, No.2369, No.2370, No.2371

When making measurements, lower the velocity gain to such an extent that hunting does not occur.

<3> From the "Tools" menu, select "Linear motor compensation calculation".

(The shortcut is [Ctrl] + [L].)


<4> Pressing the [ADD] button on the displayed dialog box analyzes waveform data and registers compensation parameter candidates. The "2/span" item and "4/span" item correspond to smoothing compensation performed 1.5 times per pole and smoothing compensation performed 3 times per pole, respectively. "6/span" is not used for smoothing compensation for synchronous built-in servo motor.

| LinearMotor Smoothness Compensation | |
|---|---|
| Display target waveforms and then press [Add] button to calculate X (1) Add(<u>A</u>) | r change(₽) ▼ Clear param. Close Set param. |
| Normal direction Del Calc(<u>N</u>) | 16494 14578 1299 |
| data 2/span 4)span | 6/span |
| ✓ 1 (64: 110) (56: 242 |) (5: 19) |
| | |
| Reverse direction Del Calc(R) | 15730 14581 1025 |
| data 2/span 4/span | 6/span |
| ✓ 1 (61: 114) (56: 245 |) (4:1) |
| 2 3 4 5 | |
| 4-power compensation | |

<5> The compensation parameters slightly vary depending on the measurement situation. So, repeat a data measurement and a press of the [Add] button several times in a similar manner while keeping the dialog box open. (Up to five candidates can be registered.)

If the displayed values include an extremely different value, uncheck the corresponding check box on the leftmost side of the list so that the value is not taken into account in the final compensation calculation.

- <6> Finally, press the [Calc] button for each of the forward and backward directions. Then, smoothing compensation parameters are displayed.
- <7> By pressing the [Set param] button, the smoothing compensation parameters are set in the CNC.

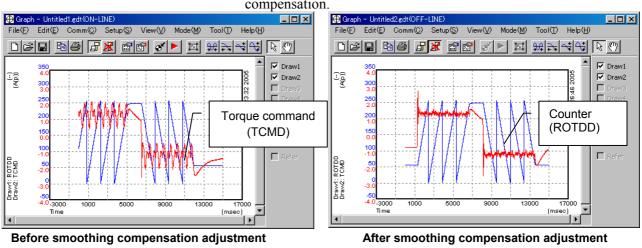

<8> Measure TCMD again to confirm the effect of smoothing compensation.

(*) For details on the use of SERVO GUIDE, refer to the online help of SERVO GUIDE.

4.16 TORQUE CONTROL FUNCTION

(1) Overview

In PMC axis control, the torque control function can be used. The servo motor produces a torque as specified by the NC. Note that the user can switch between position control and torque control.

(2) Control types

Two types of torque control are supported: type 1 and type 2. The two types are explained below.

(i) Torque control type 1

The motor produces a torque according to a torque command specified by the PMC. A servo alarm is issued if the speed of the motor exceeds the excessive speed alarm level specified by the PMC.

A block diagram of torque control type 1 is shown below.

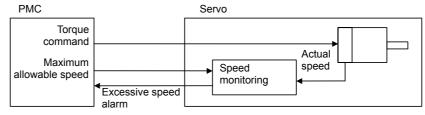


Fig. 4.15 (a) Torque control type 1

(ii) Torque control type 2

The motor produces a torque according to a torque command specified by the PMC.

When the motor is loaded, it produces a torque according to a torque command. When it is not loaded, it rotates at a constant (allowable) speed.

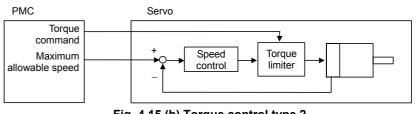


Fig. 4.15 (b) Torque control type 2


* Basically, torque control type 2 performs speed control to cause the limiter to operate on a command from the speed controller according to a torque command specified by the PMC. This causes the motor to produce a torque that matches the torque command when it is loaded and to rotate at a constant (allowable) speed when it is not loaded.


(3) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 9096/A(01) and subsequent editions
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B)
Series 90B5/A(01) and subsequent editions

(4) Setting parameters

This manual describes servo-related parameters only.

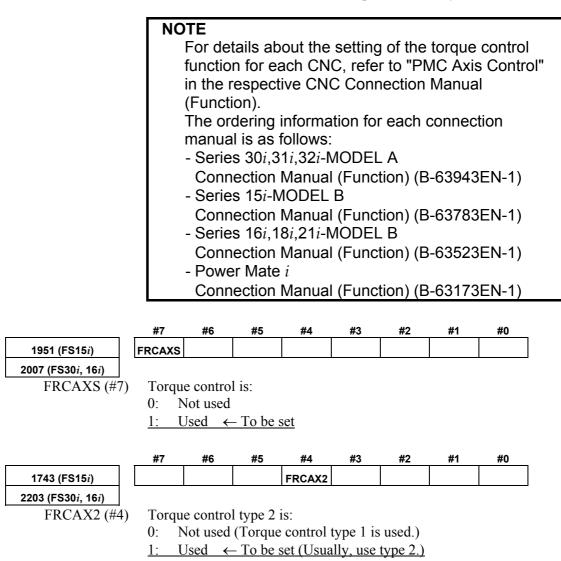

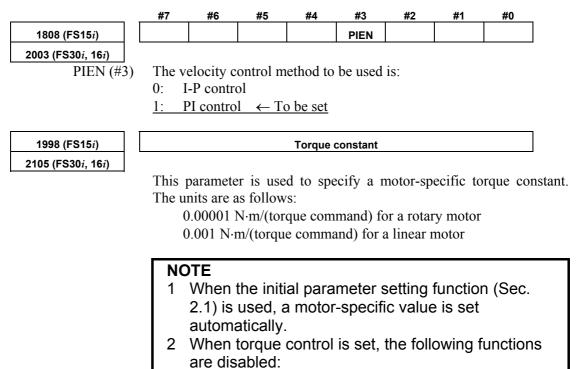


- Velocity loop high cycle management function
- Acceleration feedback function

4.17 TANDEM DISTURBANCE ELIMINATION CONTROL (POSITION TANDEM) Optional function

(1) Overview

This function suppresses vibration caused by interference between the main axis and sub-axis in position tandem (simple synchronous or synchronous) control.

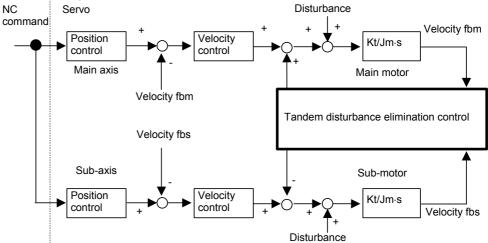


(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)
Series 90D0/A(01) and subsequent editions
Series 90D3/A(01) and subsequent editions
Series 90E0/A(01) and subsequent editions
(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*)
Series 90B0/A(01) and subsequent editions
Series 90B1/A(01) and subsequent editions
Series 90B3/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B6/A(01) and subsequent editions
Series 90B7/A(01) and subsequent editions
Series 90B7/A(01) and subsequent editions
Series 90B7/A(01) and subsequent editions

(3) Cautions

- This function is optional. (To enable the position tandem function, the option of axis synchronous control (FS30*i*), simple synchronous control (FS16*i*), or synchronous control (FS15*i*) is additionally needed.)
- This function can be used only for two-axis (simple) synchronous control. This function cannot be used for more than two axes.
- In servo axis arrangement, the main axis must be an odd-numbered axis, and the sub-axis must be a subsequent even-numbered axis.
- This function cannot be used with a mechanism that allows the mechanical coupling of two axes to be released.
- Servo HRV4 control exercises one-axis control with one CPU, so that this function cannot be used together with servo HRV4 control.

(4) Setting parameters

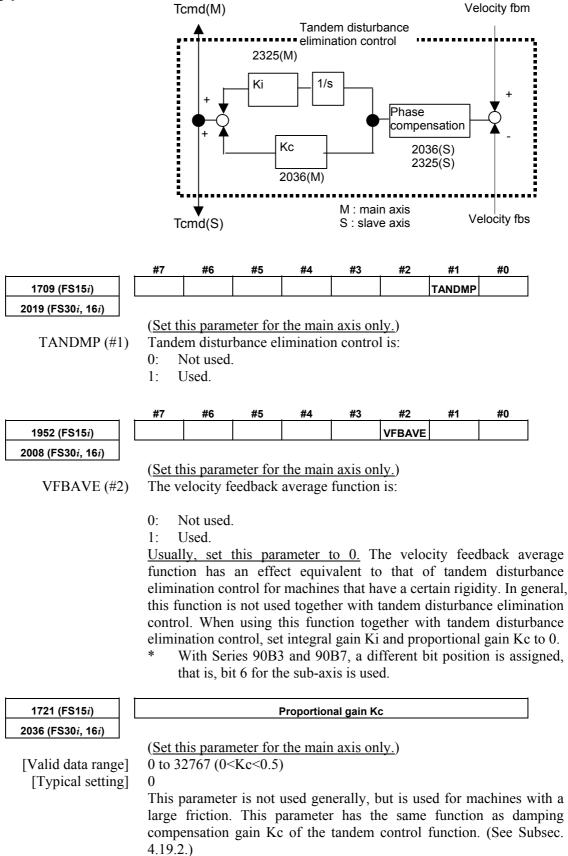


4.SERVO FUNCTION DETAILS

| [] [| |
|-------------------------------------|--|
| 1721 (FS15 <i>i</i>) | Phase compensation coefficient α |
| 2036 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | (Set this parameter for the sub-axis only.) |
| [Valid data range] | 51 to 512 (0.1< α <1) |
| [Typical setting] | 0 (512 internally) |
| | This parameter has the same function as damping compensation of the |
| | tandem control function. When 512 is specified, the advance amount is 0 degree. (See Subsec. 4.19.2.) |
| | is 0 degree. (See Subsec. 4.19.2.) |
| 2738 (FS15 <i>i</i>) | Integral gain Ki |
| 2325 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | (Set this parameter for the main axis only.) |
| [Valid data range] | 0 to 4000 |
| | This parameter compensates for a machine spring element. Set a large |
| | value when the rigidity is high. Set a small value for a motor with a |
| | greater torque constant. |
| 2738 (FS15 <i>i</i>) | Phase compensation coefficient 2T/t |
| 2325 (FS30 <i>i</i> , 16 <i>i</i>) | |
| 2020 (10001, 101) | (Set this parameter for the sub-axis only.) |
| [Valid data range] | 0 to 32767 |
| [Typical setting] | 0 (40 internally) |
| | This parameter is used with coefficient α to compensate the |
| | compensation delay. When the resonance frequency is 100 Hz or more, |
| | set $\alpha = 100$ and $2T/t = 6$. |
| 1 t | 1 |
| 2746 (FS15 <i>i</i>) | Incomplete integral time constant |
| 2333 (FS30 <i>i</i> , 16 <i>i</i>) | |
| | (Set this parameter for the main axis only.) |
| [Valid data range] | 0 to 32767 |
| [Typical setting] | 0 (30877 internally) |
| | As integral gain Ki increases, vibration in the low frequency area (10 |
| | Hz or less) may occur. In such a case, set the incomplete integral time constant to decrease the time constant. Set a parameter value listed |
| | below. |
| | |
| | Table 4.16.1 Setting in the incomplete integral time constant parameter |
| | (when HRV1, HRV2, HRV3 is used) |

| (| | | | | | | | |
|---------------------|-------------------|--|--|--|--|--|--|--|
| Time constant (sec) | Parameter setting | | | | | | | |
| 0.1 | 30887 | | | | | | | |
| 0.05 | 29307 | | | | | | | |
| 0.02 | 25810 | | | | | | | |

(5) Adjustment method

- Check the torque commands for the main axis and sub-axis and velocity feedback vibration by using a check board. (See Item (6).)
- If the vibration phase is shifted by 180 degrees, the cause of resonance is assumed to be inter-axis interference.
- Enable tandem disturbance elimination control, and adjust integral gain Ki.
- Increase the value of integral gain Ki gradually from 0, and observe vibration. Ki has an optimal value. When the value of Ki is increased excessively, vibration becomes stronger.
- When the velocity loop gain is changed, the frequency of vibration changes. So, adjust Ki to minimize vibration.
- If the frequency of vibration exceeds 100 Hz, the effect of tandem disturbance elimination control decreases. In such a case, set phase compensation coefficients α and 2T/t or increase the current loop gain with the current 1/2 PI control function.

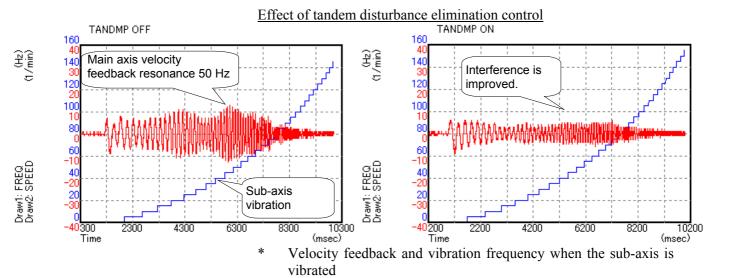

(6) Method of checking the frequency of vibration

In this adjustment, use the disturbance input function for the sub-axis, measure the velocity feedback for the main axis, check for interference between the axes, and check and adjust the effect of tandem disturbance elimination control.

The following explains how to use the disturbance input function and how to make settings for data measurement.

(a) Setting parameters related to disturbance input

Parameters related to the disturbance input function are set for the sub-axis.

(About the disturbance input function)

The disturbance input function applies vibration to an axis by inputting a sine wave disturbance to the torque command. In the adjustment of tandem disturbance elimination control, this function is used for the sub-axis to observe the interference status between the axes when vibration is applied to the sub-axis.

For the sub-axis, set parameters related to the disturbance input function.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|-------|---|--|---|---|--|--|---------------------------------|
| 2683 (FS15 <i>i</i>) | DSTIN | DSTTAN | DSTWAV | | | | | |
| 2270 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DSTIN(#7) | Distu | rbance in | put | | | | | |
| | 0: | Stop | | | | | | |
| | 1: | Start (Dis | sturbance | e input st | arts on tl | ne rising | edge fr | om 0 to |
| DSTTAN(#6) | Set 0 | | | | | | | |
| DSTWAV(#5) | Set 0 | | | | | | | |
| | | | | | | | | |
| 2739 (FS15 <i>i</i>) | | | Di | sturbance | e input gai | n | | |
| 2326 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| 50 1 1 7 | | | | | | | | |
| [Setting value] | 500 | | | | | | | |
| [Setting value] | | Set the a | mplitude | of the a | applied v | ibration | (torque |). (Valu |
| [Setting value] | (*) | Set the a is equiva | | | | | | |
| [Setting value] | (*) | | lent to th | e maxim | um curre | ent of the | e amplif | ier.) |
| [Setting value] | (*) | is equiva | lent to th about 50 | e maxim 0 to app | um curre ly vibrat | ent of the | e amplif e machi | ier.) ne so tha |
| [Setting value] | (*) | is equiva First, set | lent to th about 50 generated | e maxim 0 to app 1. If it is | lum curre ly vibrat difficult | ent of the ion to th to obser | e amplif e machi | ier.) ne so tha |
| [Setting value] | (*) | is equiva First, set sound is | lent to th about 50 generated | e maxim 0 to app 1. If it is | lum curre ly vibrat difficult | ent of the ion to th to obser | e amplif e machi | ier.) ne so tha |
| [Setting value] 2740 (FS15 <i>i</i>) | (*) | is equiva First, set sound is increase | lent to th about 50 generated | e maxim 0 to app 1. If it is neter val | lum curre ly vibrat difficult ue gradu | ent of the ion to th to obser ally. | e amplif e machi tve the v | ier.) ne so tha |
| 2740 (FS15 <i>i</i>) | (*) | is equiva First, set sound is increase | lent to th about 50 generated the paran | e maxim 0 to app 1. If it is neter val | lum curre ly vibrat difficult ue gradu | ent of the ion to th to obser ally. | e amplif e machi tve the v | ier.) ne so tha |
| 2740 (FS15 <i>i</i>) 2327 (FS30 <i>i</i> , 16 <i>i</i>) | (*) | is equiva First, set sound is increase | lent to th about 50 generated the paran | e maxim 0 to app 1. If it is neter val | lum curre ly vibrat difficult ue gradu | ent of the ion to th to obser ally. | e amplif e machi tve the v | ier.) ne so tha |
| | (*) | is equiva First, set sound is increase | lent to th about 50 generated the paran | e maxim 0 to app d. If it is neter val put functi | um curre ly vibrat difficult ue gradu on: Start f | ent of the ion to th to obser ally. requency | e amplif e machi cve the v (Hz) | ier.) ne so tha /ibration |

| 2741 (FS15 <i>i</i>) | Disturbance input end frequency | |
|-------------------------------------|---|-------|
| 2328 (FS30 <i>i</i> , 16 <i>i</i>) | | |
| [Setting value] | 0 | |
| | (*) If 0 is set, the default (200 Hz) is assumed to be the vibrat frequency. | ion e |
| 2742 (FS15 <i>i</i>) | Number of disturbance input measurement points | 7 |
| 2329 (FS30 <i>i</i> , 16 <i>i</i>) | | _ |
| [Setting value] | 0 | |
| | (*) If 0 is set, the default (3) is assumed as the number of distuinput measurement points. | ırban |
| | [Cautions] | |
| | Disable the functions that operate only in the stop state, the variable proportional gain function in the stop state a overshoot compensation function. | |
| | 2 When characteristics at the time of cutting are me cutting/rapid switching functions should be treated careful | |
| | 3 Decrease the position gain to about 1000. | 5 |

(b) Channel setting with SERVO GUIDE

With SERVO GUIDE, make settings for data acquisition. Two types of data including disturbance frequency data (the main axis) and velocity feedback data (the sub-axis) are acquired at the same time.

From the graph window menu of SERVO GUIDE, select [Setting] then [Channel].

Channel 1: Disturbance frequency

• Specify the sub-axis as the axis, and set the data type to "FREQ". (The other items are automatically set when FREQ is selected.)

| Channel | × |
|--|---|
| СН1 СН2 СН3 СН4 СН5 СН6 | 1 |
| Axis Kind Unit Conv. Coef. (Physical Val.) Conv. Base (Raw data Val.) Origin Value 0 | Extended address(E) 0 = Shift(S) 0 = Explanation Vibration Frequency |
| ОК | Cancel |


Channel 2: Main axis velocity feedback

- Specify the main axis as the axis, and set the data type to "SPEED".
- Set the conversion coefficient to 1, and set the conversion base data to 1.

• Check the check box of the extended address, and set an address as listed in the table below. (The setting varies depending on the value set in parameter No. 1023.) Set the shift amount to 0.

| No.1023 | Odd | Even |
|--|------|------|
| Series 90D0 | 596 | 724 |
| Series 90B0, Series 90B1, Series 90B5, Series 90B6 | 340 | 468 |
| Series 90B3, Series 90B7 | 2048 | 2176 |

| No.1023 (n:0,1,2,) | 4n+1 | 4n+2 | 4n+3 | 4n+4 |
|--------------------|------|------|------|------|
| Series 90E0 | 596 | 724 | 6740 | 6868 |

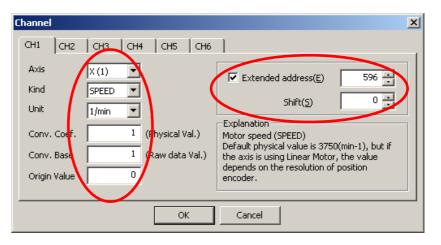

(c) Setting for sampling

Set the sampling cycle to $250 \ \mu s$.

| GraphSetting | | | | | | | | × |
|-----------------|-----------|-----------|--------------|--------------------------|------------------|-------|----------------------------|---|
| Detail |] | | | | | | | |
| Measure setting | Operation | n and Dis | play Scale | (Y-Time) Scale(XY) S | icale(Circle) | | | |
| Data Points | 300 | T 🗧 | rigger Path, | /Seq.No. | 1 🔺 | | N compatible nc.(SV-SP) | |
| Sampling Cycle | 250used | | iampling Cyc | :le(Spindle) 1m | sec 💌 | | ito Origin | |
| Comment 1 | | | | | | |)-scaling | |
| Comment 2 | | | | | | | Once | |
| Time and Date | | | | | | 04 | Always | |
| Property | | | | | <u>D</u> ata Shi | ft]] | [ime Shift | |
| Axis | Kind | Unit | Coef | Meaning | Origin | Shift | Address | |
| СН1 🗹 Х (2) | FREQ | Hz | 1.000 | Vibration Frequency | 0.000000 | 0 | Normal | |
| СН2 ⊻Х(1) | SPEED | 1/min | 1.000 | Motor speed (SPEED) | 0.000000 | 0 | 596 | |
| снз | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| СН6 | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | ОК | Cancel | | | | |

(d) Usage

When the rising edge of the disturbance input bit (**DSTIN**) is detected, application of vibration is started. Vibration is automatically stopped after a sine sweep is performed from the start frequency to the end frequency. The operation is stopped by a reset or an emergency stop. After the emergency stop is released, disturbance input is resumed starting with the start frequency by setting the function bit off then on again.


[Example of setting]

No.2326 = $500 \rightarrow \text{Gain} = 500$

No.2327 = 0 \rightarrow Start frequency = 10Hz

- No.2328 = 0 \rightarrow End frequency = 200Hz
- No.2329 = 0 \rightarrow Number of measurement points = 3

By using SERVO GUIDE, obtain data, and display the frequency (ch1) and velocity feedback (ch2) in the XY-YT mode.

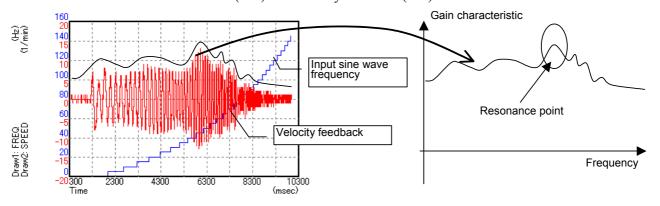

As shown in the above waveform, the envelope of the velocity feedback indicates the gain characteristic at each frequency, and a swell portion in the waveform shows a resonance point.

Adjust the tandem disturbance elimination control parameters so that the degree of the gain swell at the resonance point is reduced.

(7) Notes on Series 90B3 and 90B7

Series 90B3 and 90B7 are used for applications that require learning control. It is assumed that the mechanical coupling between two rotation axes, C1 and C2, is released. So, only when the two axes are mechanically coupled with each other, tandem disturbance elimination control functions. Whether the two axes are mechanically coupled with each other can be checked using the input of the external signal G139 (coupling flag). For details of the external signal interface, refer to the description of "Tandem leaning control" in "Learning Function Operator's Manual (A-63639E-034)".


(1) Overview

With synchronized axes having a long stroke, a machine twist may occur due to the absolute precision of the scale and thermal expansion of the machine. In such a case, the master motor and slave motor of the synchronized axes pull each other, and if a large current flows for the pull, an overheat problem or OVC alarm is raised.

The fundamental cause of this is a measurement position error. Pitch error compensation can compensate for the scale error but cannot compensate for thermal expansion due to change in temperature.

The synchronous axes automatic compensation function is useful for such cases. The function monitors a torque error between the master and slave and corrects the position on the slave side slowly to reduce the torque error.

(Structure of the synchronous axes automatic compensation function)

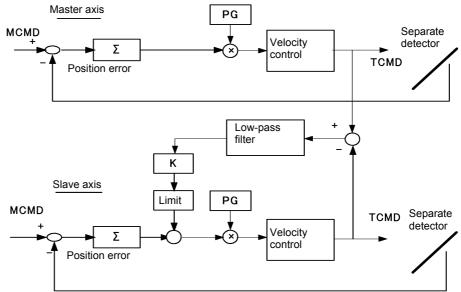

(2) Series and editions of applicable servo software

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

NOTE

Servo HRV4 control exercises one-axis control with one CPU, so that this function cannot be used together with servo HRV4 control.

(3) Setting parameters

The following parameters are all set for the slave axis (the axis • for which an even number is set in parameter No. 1023) only.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|-----------------------|---------------------------------------|---|------------|-------------------|------------|-----------------|--------------------|---------------|--|--|
| 2688 (FS15 <i>i</i>) | | | | | ASYN | | | | | |
| 2275 (FS16 <i>i</i>) | | | | | | | | | | |
| ASYN (#3) | • | | axes auto | omatic co | ompensa | tion fund | ction is: | | | |
| | | Disabled | | | | | | | | |
| | 1: I | Enabled. | | | | | | | | |
| 2816 (FS15 <i>i</i>) | | Synchror | nous axes | automatic | compens | ation coe | fficient (K |) | | |
| 2403 (FS16 <i>i</i>) | | | | | | | | | | |
| [Unit of data] | | | t / TCMI | $O unit \times A$ | 4096 | | | | | |
| [Valid data range] | | 7 to 327 | | | | | | | | |
| | | | | | | | • | nerated in | | |
| | | | | | | | | position en | | |
| | | | he follov | | | etermine | e the c | oefficient | | |
| | | - | | | | MD) ~ 4 | 096 | < | | |
| | | | | | | | | ng screen, | | |
| | | | | | | | | ge to the ra | | |
| | | | So, use | | . | | . | • | | |
| | | | | - | | | | × 4096 | | |
| | - | | | | | | | ····· < | | |
| | | ted currer teries 15 <i>i</i> | - | paramete | r No. 2 | 086 (Se | ries 16 <i>i</i>) | or No. 1 | | |
| | ` | | error/{cu | rrent val | ue (A)/A | $\max \times 7$ | /282} × 4 | 1096 | | |
| | | | | | , , | | | | | |
| | | | num curr | | | | | | | |
| | | | | | | | | pull is be | | |
| | | | | | | | | error betw | | |
| | - | | | | | | | n position en | | |
| | | between the master axis and slave axis at the time of emergency sto Normally, the position error of the master axis at the time | | | | | | | | |
| | | Normally, the position error of the master axis at the time of emergency stop is 0, so you need to check the position error of the | | | | | | | | |
| | | axis only | · | 20 900 1 | | incen th | - Positi | | | |
| | Exam | | · ر | | | | | | | |
| | | Suppose that the position error of the slave at the time of | | | | | | | | |
| | | - | | | | | | the release | | |
| | | | | | | | | g), and 143 | | |
| | | | | | | | | he Series 1 | | |
| | e e e e e e e e e e e e e e e e e e e | Settings | = 200 / { | 1437 × | 60/100 × | < 7282/6 | 554 } × · | 4096 = 855 | | |
| 2817 (FS15 <i>i</i>) | Syncl | hronous a | axes autor | natic com | pensation: | Maximur | n compen | sation | | |
| 2404 (FS16 <i>i</i>) | | | | | | | | | | |
| [Unit of data] | Detec | tion unit | t | | | | | | | |
| [Valid data range] | 0 to 5 | 000 | | | | | | | | |

[Valid data range]

0 to 5000

Set the maximum compensation amount in synchronous axes automatic compensation.

2818 (FS15*i*)

2405 (FS16*i*) [Valid data range]

[Typical setting]

Synchronous axes automatic compensation: Filter coefficient

32700 to 32767

0 (equivalent to a time constant of 1 second)

Set the time constant for reflecting the twist in position compensation. As a larger coefficient is set, compensation to release the twist is performed more slowly.

Table 4.18.1 Setting in the filter coefficient parameter

| Time constant (s) | Setting in the parameter |
|-------------------|--------------------------|
| 1 | 0 |
| 5 | 32761 |
| 10 | 32765 |

NOTE

- 1 This function reduces the difference in torque between the master and slave axes by adding compensation pulses to the slave axis. In the steady state, position error equivalent to the compensation amount is accumulated in the slave axis.
- 2 This function cannot be used together with the dual position feedback function.
- 3 Set parameters on the even-numbered axis side.
- 4 Be sure to assign the master and slave, which are the synchronized axes, to the odd- and even-numbered axes on the same DSP.

With the following servo software, a dead-band width can be set: (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B1/A(01) and subsequent editions

Set the following parameter for the odd-numbered axis side (the master axis) only:


| 2817 (FS15 <i>i</i>) | Synchronous axes automatic compensation: Dead-band width |
|-----------------------|--|
| 2404 (FS16 <i>i</i>) | |
| [Unit of data] | Percentage (%) with respect to rated current |
| [Valid data range] | 0 to 800 |
| | If the difference in torque command between the master axis and slave axis is within the dead-band width, the synchronous axes automatic compensation value becomes 0. |

(4) Application example

The figure below shows how synchronous axes automatic compensation works effectively.

When the master axis and slave axis, which are synchronized axes connected mechanically, indicate different positions as position B, the master axis and slave axis pull each other, and their TCMD waveforms increase in the opposite directions.

Use of this function allows the position of the slave axis to move slowly to such a position that is balanced with the master axis position, so the problem that the axes pull each other does not occur.

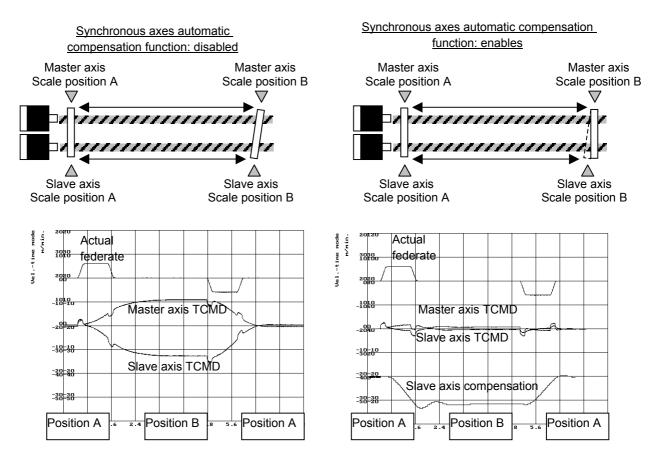

(1) Overview

If a single motor is not capable of producing sufficient torque to drive a large table, for example, tandem control allows two motors to produce movement along one axis.

A motor of the same specification is used for both the main motor and sub-motor.

Only the main motor is responsible for positioning. The sub-motor only produces a torque. In this way, double the torque can be obtained (load sharing mode).

By applying a preload torque to produce tension between the main motor and sub-motor, the backlash between gears can be reduced (anti-backlash mode).

Tandem control is used to run linked linear motors and motors with a winding tandem ($\alpha i S300/2000$, $\alpha i S500/2000$, $\alpha i S1000/2000$ HV).

(2) Applicable servo software series and editions

(Series 30*i*,31*i*,32*i*)

Series 90D0/A(01) and subsequent editions Series 90E0/A(01) and subsequent editions

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,Power Mate *i*)

Series 9096/A(01) and subsequent editions

Series 90B0/A(01) and subsequent editions

Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions

(Series 0*i*-C)

Series 90B5/A(01) and subsequent editions

NOTE

Servo HRV4 control exercises one-axis control with one CPU, so that this function cannot be used together with servo HRV4 control.


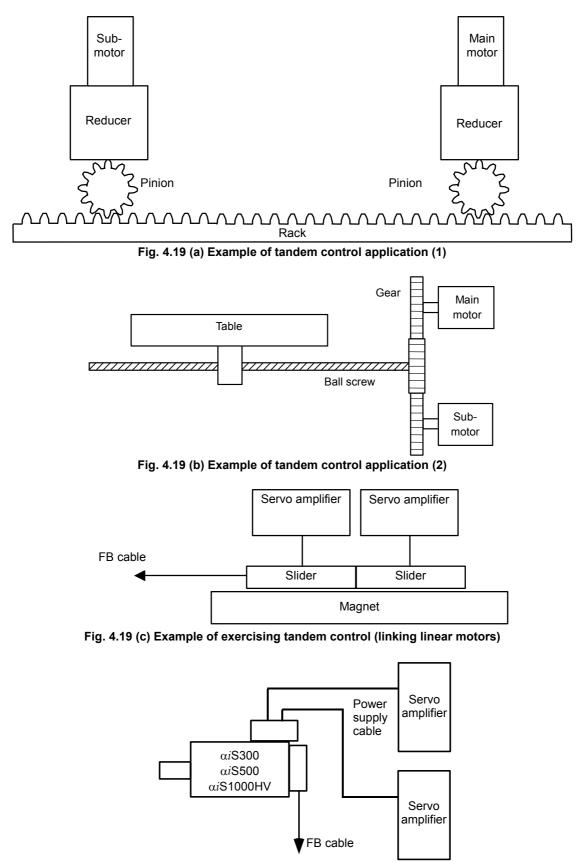


Fig. 4.19 (d) Example of exercising tandem control (winding tandem)

(3) Start-up procedure

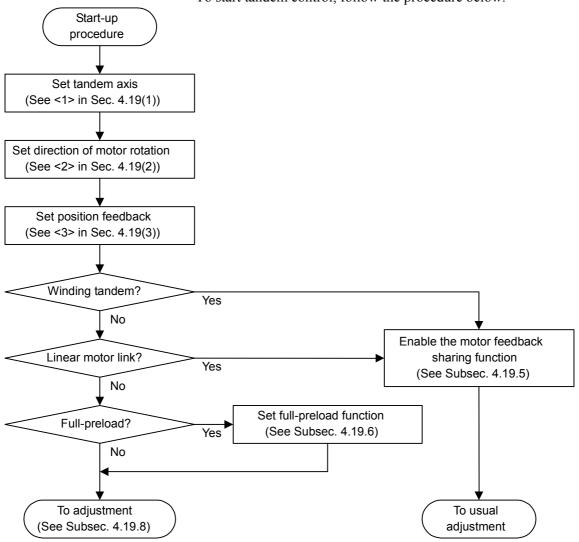

To start tandem control, follow the procedure below.

Fig. 4.19 (e) Start-up procedure flowchart

<1> Tandem axis setting

Tandem control is an <u>optional function</u>. Refer to the Parameter Manual of CNC for details.

| | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|---------------------|-----------------|------|--------------------------|----------|------------|-------------|---------------------|-----------|----------|--------|
| 1817 (FS1 | 5 <i>i</i>) | | TANDEM | | | | | | | |
| 1817 (FS30 <i>i</i> | , 16 <i>i</i>) | | | | | | | | | |
| TAND | EM (#6) | 1: 1 | Enables t | andem | control. | (Set this | s parame | eter for | the main | - and |
| | | S | sub-axes.) |) | | | | | | |
| | | | | | | | | | | |
| - | | | Number o | f CNC co | ntrolled a | kes (for Se | eries 16 <i>i</i> a | nd so on) | | |
| 1010 (FS1 | 6 <i>i</i>) | | | | | | | | | |
| | | | ith the PN er of tand | | | | | • | | ng the |

number of tandem sub-axes from the number of controlled axes. If an invalid-parameter alarm is occurred, check whether the value set in this parameter is correct.

| 1021 (FS15 <i>i</i>) | | | | Parallel-a | xis name (for S | Series 15 <i>i</i> only) |
|---|--------------------|--------------|---------------------------------------|--|-----------------------------------|--|
| | - | | Specify 77 | and 83 for t | he main axis | and sub-axis, respectively. |
| 1023 (FS15 <i>i</i>) | | | | Se | ervo axis arrang | gement |
| 1023 (FS30 <i>i</i> , 16 <i>i</i>) This pa Set an for the | | | | number for -axis. | a main axis | arrangement. s, and the subsequent even numbe ple, set 4 for the sub-axis. |
| | | | axis exa | • | d axis) (by etting). | xis after a CNC-controlled referencing the following |
| | | | (1) For So Numb | eries 30 <i>i</i> , 16 per of contro per of CNC- | i, and so on $illed axes = 6$ | (★ indicates a tandem axis.) xes (No. 1010) = 3 (for Series 16 |
| | Axis number | Axis name | Servo axis arrangement No. 1023 | Tandem No. 1817#6 | Position display No. 3115#0 | Remark |
| * | 1 | Х | 1 | 1 | 0 | CNC axis (main axis) |
| * | 2 | Y | 3 | 1 | 0 | CNC axis (main axis) |
| | 3 Z 5 0 0 CNC axis | | | | CNC axis | |
| * | 4 | Α | 2 | 1 | 1 | Tandem control sub-axis (sub-X-axis |
| * | 5 | В | 4 | 1 | 1 | Tandem control sub-axis (sub-Y-axis |
| 6 C 6 0 0 PMC axis | | | | | | |
| - | | | (2) For S | eries 15 <i>i</i> (★ | indicates a t | andem axis.) |
| | Axis | Axis | Servo axis arrangement | Tandem | Parallel axis | Remark |

| | Axis number | Axis name | Servo axis arrangement No. 1023 | Tandem No. 1817#6 | Parallel axis No. 1021 | Remark |
|---------|----------------|----------------|---------------------------------------|----------------------|------------------------------|--------------------------------------|
| \star | 1 | X _M | 1 | 1 | 77 | CNC axis (main axis) |
| \star | 2 | Υ _M | 3 | 1 | 77 | CNC axis (main axis) |
| | 3 | Z | 5 | 0 | 0 | CNC axis |
| | 4 | А | 6 | 0 | 0 | CNC axis |
| | 5 | В | 7 | 0 | 0 | CNC axis |
| * | 6 | Xs | 2 | 1 | 83 | Tandem control sub-axis (sub-X-axis) |
| * | 7 | Υs | 4 | 1 | 83 | Tandem control sub-axis (sub-Y-axis) |

| 1879 (FS15 <i>i</i>) | Direction of motor rotation (DI | RCT) | | | | |
|-------------------------------------|---|-----------------------------------|----------------------|--|--|--|
| 2022 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | |
| | Main axis: With a forward direction spec | · . | | | | |
| | main axis motor rotates count | | | | | |
| | the motor shaft side, while | -111 specifies | the opposite | | | |
| | direction. Sub-axis: To cause the sub-axis motor to | rotata in the co | ma direction | | | |
| | Sub-axis: To cause the sub-axis motor to as for the main axis, specify | | | | | |
| | sub-axis and the main axis b | | | | | |
| | structure. To cause the sub-axis motor to reverse, speci | | | | | |
| | value whose sign is opposi | | | | | |
| | direction. For winding tande | m, be sure to | specify the | | | |
| | values with the same sign. | | | | | |
| <3> Position feedback set | ina | | | | | |
| So I Usition recuback set | - | in axis and su | h-axis (See | | | |
| | Specify position feedback for both main axis and sub-axis. (See Subsec. 4.19.8 for a concrete example.) | | | | | |
| | * Assume position feedback shown in | Fig. 4.19.8 (a) | not only for | | | |
| | the main axis but also for the sub-axi | | 5 | | | |
| | | Series 30 <i>i</i> ,16 <i>i</i> , | Series 15i | | | |
| | | and so on | | | | |
| | Semi-closed or full-closed loop setting | No. 1815#1 | No. 1815#1 | | | |
| | | | No. 1807#3 | | | |
| | • CMR setting | No. 1820 | No. 1820 | | | |
| | • Setting the reference counter capacity | No. 1821 | No. 1896 | | | |
| | • Setting the high-resolution Pulsecoder | No. 2000#0 | No. 1804#0 | | | |
| | • Setting the number of velocity detection | * | NI 1076 | | | |
| | | No. 2023 | No. 1876 | | | |
| | • Setting the number of position detection | No. 2024 | No. 1891 | | | |
| | • Elevible feed geer (numerator) setting | No. 2024 No. 2084 | No. 1891 No. 1977 | | | |
| | Flexible feed gear (numerator) settingFlexible feed gear (denominator) setting | | No. 1977 No. 1978 | | | |
| | • Plexible feed gear (denominator) setting | 110. 2005 | 110. 1978 | | | |
|) Descriptions of servo particular | rameters for adjustment | | | | | |
| ., | The load inertia ratio to be specified for | r aves subjecte | d to tandom | | | |

The load inertia ratio to be specified for axes subjected to tandem control differs from that for ordinary axes.

| 1875 (FS15 <i>i</i>) | Load inertia ratio (LDINT) |
|-------------------------------------|---|
| 2021 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Standard setting] | (Load inertia/motor inertia) \times 256 |
| (NOTE) | In typical tandem control, the total load inertia of the machine is borne |
| | by two motors. So, calculate the load inertia for the above formula as |
| | follows: |
| | (Load inertia) = (Total load inertia of machine)/2 |
| | When the full preload function is used, the motor on the driving side |
| | is required to bear the total load inertia of the machine and the motor |
| | inertia of the other motor. So, calculate the load inertia for the above |
| | formula as follows: |
| | (Load inertia) = (Total load inertia of machine) + (Motor inertia) |

Example of setting The example shown in Fig. 4.19 (a) is used. Assume that the inertia of each section applied to the motor shaft as follows:

- Inertias of the reducers of the main- and sub-axes: J1m, J1s
- Inertias of the pinions of the main- and sub-axes: J_{2m}, J_{2s}
- Inertia of the rack: J₃

(Total load inertia of the machine) = $J_{1m} + J_{2m} + J_3 + J_{1s} + J_{2s}$ When the total load inertia of the machine is double that of the motor inertia, for example, set the following:

When typical tandem control is used:

(Load inertia ratio) = $(2/2) \times 256 = 256$ When the full preload function is used:

(Load inertia ratio) = $(2 + 1) \times 256 = 768$

The result obtained from the above formula may cause oscillation due to the mechanical structure. In such a case, set a smaller value.

• Notes on stable tandem control operation

To ensure stable tandem control operation, the machine must be capable of performing back-feed.

Back-feed is the moving of the sub-motor from the main motor, or vice versa, through the connected transmission feature. Then the back-feed capability is disabled, unstable operation results. In this case, machine adjustment becomes necessary.

The user can check whether the back-feed capability is enabled. To make this check in the case of the example shown in Figs. 4.19 (a) and (b), turn the main motor with the power line for the sub-motor disconnected, and check that the main motor can be turned with one-third or less of the rated torque of the motor (See (2) in Subsec. 4.19.8).

4.19.1 Preload Function

By applying an offset to the torque controlled by position (velocity) feedback, torques of opposite directions can be applied to the main-(main motor) and sub-axes (sub-motor) to maintain tension at all times. This function can reduce the backlash between the main- and sub-axes, caused by the tandem connection of two motors through gears. However, this function does not reduce the backlash between the ball screw and table, which are a feature of the machine system. For example, set preload +Pre for the main axis and preload -Pre for the sub-axis. Then, torques are produced as shown below. If a torque is required during acc./dec., a torque of the same direction

is produced with the two motors. (Load sharing mode) If no torque is required, for example, during stop state, preload torques produce tension between the two axes. (Anti-backlash mode)

For an application which requires only anti-backlash mode, use the full preload function, described in Subsec. 4.19.6.


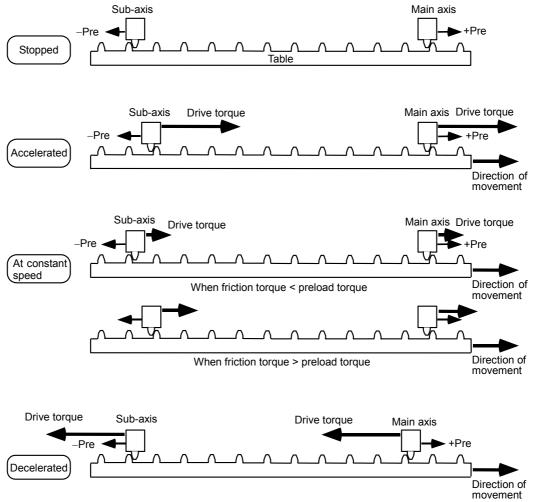


Fig. 4.19.1 (a) Changes of torque during movement

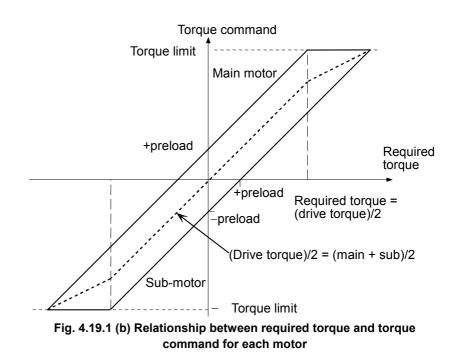

| 1980 (FS15 <i>i</i>) | Preload value (PRLOAD) |
|-------------------------------------|------------------------|
| 2087 (FS30 <i>i</i> , 16 <i>i</i>) | |

Set this parameter for the main- and sub-axes.

Set a value that is as small as possible but greater than the static friction torque. A set preload torque is applied to each motor at all times. So, set a value that does not exceed the rated static torque of each motor. As a guideline, specify a value equal to one-third of the rated static torque. As shown in Fig. 4.19.11 (a) in Subsec. 4.19.11, a preload torque is added in any case. So, set the preload torque directions as follows:

- When the rotation directions of the main axis and sub-axis are the same: Different signs
- When the rotation directions of the main axis and sub-axis are different: Same sign

Example of setting For the $\alpha i F4/4000$ (Servo amplifier $\alpha i SV 40$)

When a preload torque of 1 N·m is to be applied, the torque constant is 0.52 N·m/Arms according to the specifications of the servo motor. So, the peak value is 0.368 N·m/Ap. The torque is converted to a current value as follows:

1/0.368 = 2.72 Ap.

The amplifier limit is 40 Ap, so that the value to be set is:

 $2.72/40 \times 7282 = 495$

So, set 495 for the main axis, and -495 for the sub-axis (when the directions of rotation of the two motors are the same).


When movement of the table is stopped, check whether the system is in tension. If not, increase this value gradually.

When two motors are not connected, always set a preload value of 0.

The sub-axis motor may rotate at extremely high speed, which is very dangerous.

4.19.2 Damping Compensation Function

To enable more stable tandem control, a torque offset can be applied to the sub-axis, or to both the main- and sub-axes to eliminate a difference in speed, if any, between the main- and sub-axes. This function is particularly useful for controlling the vibration (with a frequency of several Hz to 30 or 40 Hz) that may occur in a machine

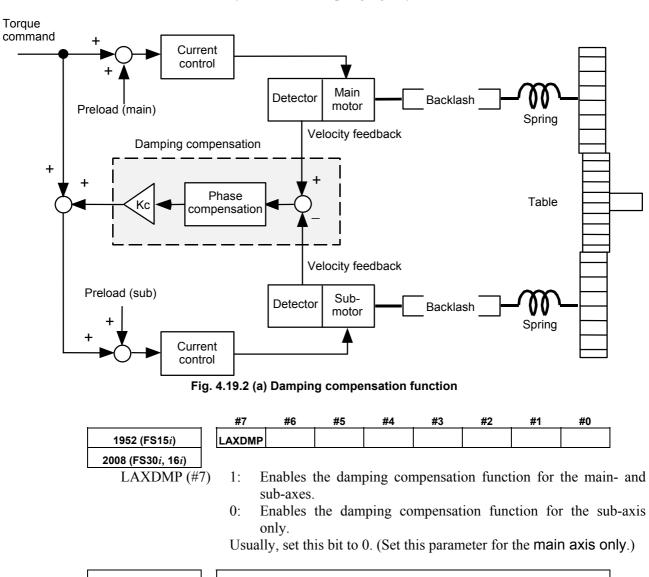

system with low spring rigidity.

| 1721 (FS15 <i>i</i>) | Damping compensation gain Kc (ABPGL) | | |
|-------------------------------------|---|--|--|
| 2036 (FS30 <i>i</i> , 16 <i>i</i>) | | | |
| | Set this parameter for the main axis only. | | |
| [Valid data range] | 0 to 32767 | | |
| [Setting method] | $Kc \times 32768 \ (0 \le Kc < 0.5)$ | | |
| | A function bit is not supported for the damping compensation | | |
| | function; the damping compensation function is enabled at all times | | |
| | When 0 is set in this parameter, the damping compensation function is ineffective | | |

4.SERVO FUNCTION DETAILS

| ı | | | | | |
|---|---|--|--|--|--|
| 1721 (FS15 <i>i</i>) Damping compensation phase coefficient α (ABPHL) | | | | | |
| 2036 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] [Setting method] | Set this parameter for the sub-axis only. 51 to 512 $\alpha \times 512 \ (0.1 \le \alpha \le 1.0)$ When 0 is set in this parameter, this setting is internally handled as 512 ($\alpha = 1$), When $\alpha = 1$, phase compensation is not performed. Instead, the set value is output to Kc as is. | | | | |
| (Example of adjustment) | The speeds of the motors are checked using the check board (when the motors rotate in the same direction). This function may be useful when the oscillation frequencies (several Hz to 30 or 40 Hz) are the same, and the phases are opposite as shown below. | | | | |
| | NOTE 1 When the directions of rotation of the main motor and sub-motor are different, the phase relationship is reversed. 2 When the phase difference is not 180°, the phase coefficient α must be adjusted. Start with 512, then decrease the value gradually. | | | | |
| Motor sp | beed (main) | | | | |
| Motor sp | peed (sub) | | | | |
| 0 | 0.5 1 sec | | | | |
| | Fig. 4.19.2 (b) Motor speed vibration | | | | |

Fig. 4.19.2 (b) Motor speed vibration

- Adjustment procedure for damping compensation

1

Enable the velocity feedback average function. [No. 1952#2 (Series 15*i*), No. 2008#2 (Series 30*i*, 16*i*, and so on) = 1]

2 Set an adequate preload value.

[No. 1980 (Series 15*i*), No. 2087 (Series 30*i*, 16*i*, and so on)] Set a value slightly larger than the load applied during movement.

3 If dual-position feedback function is used, set a time constant of 200 [No. 1973 (Series 15*i*), No. 2080 (Series 30*i*, 16*i*, and so on)].

Adjust the setting of the parameter to ensure stable axis movement.

4 Set 0 or 512 as phase coefficient α.
[Sub-axis No.1721 (Series 15*i*), No. 2036 (Series 30*i*, 16*i*, and so on)]
If 512 is set the value may have to be reduced when the

If 512 is set, the value may have to be reduced when the vibration phase difference between the motors is other than 180° . (See Fig. 4.19.2 (b).)

5 Set a damping gain of 3277.
[Main axis No. 1721 (Series 15*i*), No. 2036 (Series 30*i*, 16*i*, and so on)]
To reduce the vibration this value must be increased on

To reduce the vibration, this value must be increased or decreased.


Be careful not to increase this value excessively. Otherwise, high-frequency vibration will occur.

When adjusting this parameter, apply the maximum axis load.

6 Repeat steps 2 through 5 until smooth movement is achieved.

4.19.3 Velocity Feedback Average Function

As can be seen from the tandem control block diagram shown in Fig. 4.19.10(a) in Subsec. 4.19.10, velocity control is not applied to the sub-axis motor. For this reason, the sub-axis may vibrate and become unstable due to a backlash such as, for example, in the gears, in a machine with a large backlash. In such a case, the machine can be made stable by applying velocity control to the sub-axis as well. This function is referred to as the velocity feedback average function.

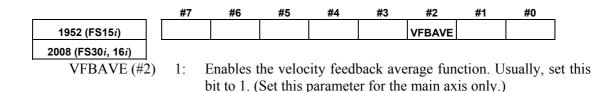


4.19.4 Servo Alarm 2-axis Simultaneous Monitor Function

If an alarm occurs in either of two axis motors used to operate a machine in concert as in synchronization control or tandem control, it is necessary to stop the other axis immediately so as to prevent the machine from being twisted.

This function monitors two axes (controlled by the same DSP) simultaneously for servo alarm conditions. If an alarm condition is detected in either of the two axes, the function can promptly turn off activation (MCC) for the other axis.

This function is not confined to tandem axes. It can be used also axes (controlled by the same DSP) under synchronization control.

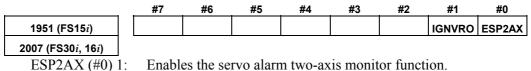


Enables the servo alarm two-axis monitor function. (Set this parameter for the main axis only.) IGNVRO(#1) 1: An alarm condition is released 2 seconds after the servo alarm 2-axis simultaneous monitor function holds the alarm condition. (Set this parameter for the main axis only.) (Series 9096, and Series 90B0/B(02) and earlier editions are not supported.)

Some systems have a configuration in which the ESP line of the PSM is cut off with an interlocked machine door, independently of the emergency stop button, for safety purposes. In these systems, the amplifier is turned off with an emergency stop not in effect, and therefore, a "V ready-off alarm" is occurred. This alarm is evaded by using the "VRDY OFF alarm invalidation signal."

Conventionally, however, it was impossible to use "PSM cut-off based on the VRDY OFF alarm invalidation signal" along with the "servo alarm 2-axis simultaneous monitor function." This is because the "servo alarm 2-axis simultaneous monitor function" holds an alarm condition in the servo software and will not activate a motor even after the ESP line is connected.

To evade this problem, a function has been added which clears information about an alarm condition from the servo software 2 seconds after the alarm condition is detected. This way, it is possible to use the "servo alarm 2-axis simultaneous monitor function" along with "PSM cut-off based on the VRDY OFF alarm invalidation signal."

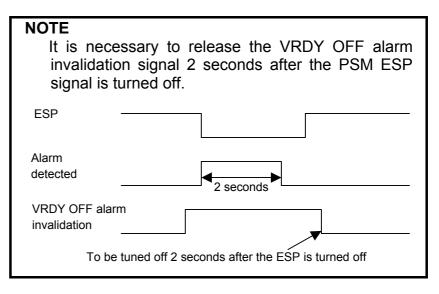

4.19.5 Motor Feedback Sharing Function


To achieve improved thrust, two linear motors may be connected in series.

When linear motors are connected in series, one position feedback signal, which is originally available for the main axis, is to be shared by the sub-axis as well. In this case, the motor feedback sharing function can be used.

This function can also be used when a motor ($\alpha lS300/2000$,


 α *i*S500/2000, α *i*S1000/2000HV) with the wire tandem specification is used.

NOTE When using this function in a full-closed loop system, the main axis shares its separate detector feedback loop with the sub-axis.

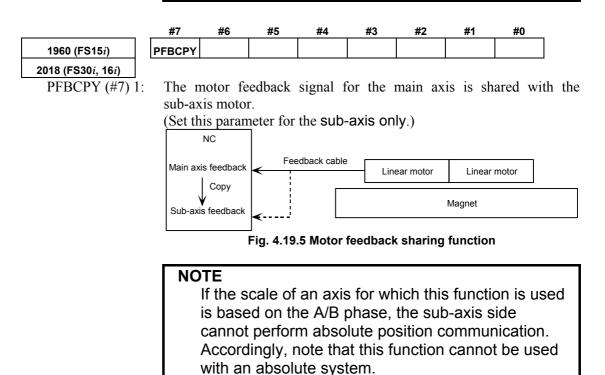

4.19.6 Full-closed Feedback Sharing Function

If a feedback cable cannot be divided into two as in the case of a serial cable, this function enables one separate position feedback to be shared by the main axis and sub-axis by means of software.

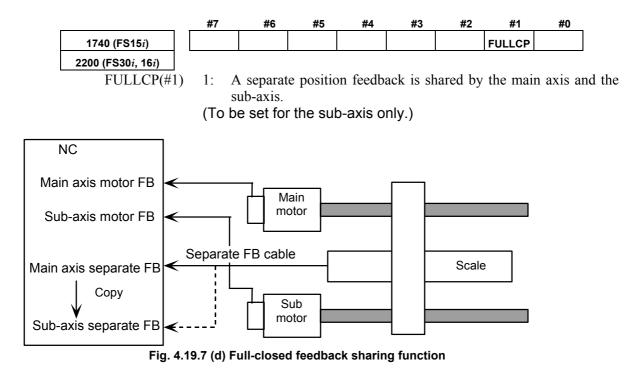

NOTE

If the scale of an axis for which this function is used is based on the A/B phase, the sub-axis side cannot perform absolute position communication. Accordingly, note that this function cannot be used with an absolute system.

4.19.7 Adjustment

(1) Examples of parameter setting

This section gives examples of parameter setting.

<1> Full-closed loop system using a 1-µm increment system, 8080P/motor revolution for scale feedback, a scale detection unit

of 0.5 μ m/P, and an αi A1000 Pulsecoder (conventional tandem)

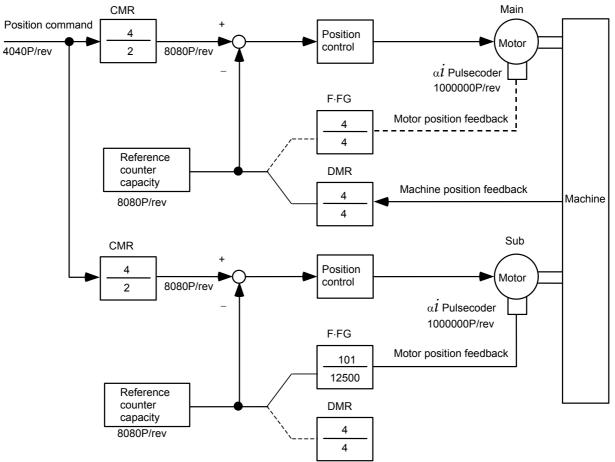


Fig. 4.19.8 (a) Example of position feedback setting

| | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Series 15 <i>i</i> | Main | Sub |
|---|--|--------------------|------|-------|
| Tandem axis | No. 1817#6 | No. 1817#1 | 1 | 1 |
| Full-closed loop | No. 1815#1 | No. 1815#1 | 1 | 0 |
| | | No. 1807#3 | 1 | 0 |
| • CMR | No. 1820 | No. 1820 | 4 | 4 |
| Reference counter capacity | No. 1821 | No. 1896 | 8080 | 8080 |
| High-resolution Pulsecoder | No. 2000#0 | No. 1804#0 | 0 | 0 |
| Number of velocity detection pulses | No. 2023 | No. 1876 | 8192 | 8192 |
| Number of position detection pulses | No. 2024 | No. 1891 | 8080 | 12500 |
| Flexible feed gear | No. 2084 | No. 1977 | 0 | 101 |
| Flexible feed gear | No. 2085 | No. 1978 | 0 | 12500 |

<2> Semi-closed loop system using a 1/1000deg increment system, rotary axis with a gear reduction ratio of 1/984, and an αi A1000 Pulsecoder (conventional tandem)

| | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Series 15 <i>i</i> | Main | Sub |
|--|---|--------------------|-------|-------|
| Tandem axis | No. 1817#6 | No. 1817#1 | 1 | 1 |
| Semi-closed loop | No. 1815#1 | No. 1815#1 | 0 | 0 |
| | | No. 1807#3 | 0 | 0 |
| CMR | No. 1820 | No. 1820 | 2 | 2 |
| Reference counter capacity | No. 1821 | No. 1896 | 15000 | 15000 |
| High-resolution Pulsecoder | No. 2000#0 | No. 1804#0 | 0 | 0 |
| Number of velocity detection pulses | No. 2023 | No. 1876 | 8192 | 8192 |
| Number of position detection pulses | No. 2024 | No. 1891 | 12500 | 12500 |
| Flexible feed gear | No. 2084 | No. 1977 | 3 | 3 |
| Flexible feed gear | No. 2085 | No. 1978 | 8200 | 8200 |
| (NOTE | $\frac{360000/984}{1000000} = \frac{36}{98400}$ | $=\frac{3}{8200}$ | | |

<3> Assuming a semi-closed loop system with an increment system

of 0.1 μ m, 10 mm stroke per motor revolution, and $\alpha \dot{i}$ S300 motor (winding tandem):

| | Series 30 <i>i</i> , 16 <i>i</i> , and so on | Series 15 <i>i</i> | Main | Sub |
|---|--|--------------------|--------|--------|
| Tandem axis | No. 1817#6 | No. 1817#1 | 1 | 1 |
| • CMR | No. 1820 | No. 1820 | 2 | 2 |
| Reference counter capacity | No. 1821 | No. 1896 | 100000 | 100000 |
| High-resolution Pulsecoder | No. 2000#0 | No. 1804#0 | 1 | 1 |
| Motor feedback sharing function | No. 2018#7 | No. 1960#7 | 0 | 1 |
| Number of velocity detection pulses | No. 2023 | No. 1876 | 819 | 819 |
| Number of position detection pulses | No. 2024 | No. 1891 | 1250 | 1250 |
| Flexible feed gear | No. 2084 | No. 1977 | 10 | 10 |
| Flexible feed gear | No. 2085 | No. 1978 | 100 | 100 |

(2) Back-feed confirmation method

"Back-feed" means the feasibility that the axis can be driven not only from motor side but also from machine table side.

(a) Check whether back-feed is possible when the machine is connected and the power line is removed.If back-feed is impossible, unstable control will result, and

machine adjustment such as a gear box adjustment will be necessary.

<1> Making a check manually

First, turn the shaft of the main motor manually to check that the sub-motor turns. Next, turn the shaft of the sub-motor manually to check that the main motor turns. If these checks are successful, back-feed is possible.

- <2> Making a check using NC commands After checking (b) and (c) below, remove the sub-motor power line. Then, enter a plus (+) command or minus (-) command to rotate the main motor. Check that the main motor can be turned with one-third or less of its rated static torque. When this check is successful, back-feed is possible.
- (b) With the machine connected, activate the motors. At this time, release the emergency stop state after reducing the torque limit by a factor of about 10. Check the motor current on the servo adjustment screen. If the current increases gradually, the directions of rotation of the main-and sub-motors may not be set correctly.
- (c) Check the operation by entering a plus (+) command and minus
 (-) command.
 If the error periods due to friction lead, increase the terror limit.

If the error persists due to friction load, increase the torque limit.

(d) If the operation is normal, return the torque limit to its original value, and then set a preload value.

(3) Adjustment items

If vibration occurs:

- Check the position feedback setting (<3> in Sec. 4.19(3)).
- With SERVO GUIDE, check VCMD, TCMD, and SPEED. (When using the check board, check Vcmd (CH1), Tcmd (CH2 and CH4), and speed (CH5 and CH6).
- (a) A higher gear reduction ratio tends to produce more backlash, such that unstable operation will result from the sub-axis running between backlashes.
 - \rightarrow Enable the velocity feedback average function.

(No. 1952#2 = 1) Series 15*i* (No. 2008#2 = 1) Series 30*i*, 16*i*, and so on

(b) The main axis and sub-axis vibrate at the same frequency (several Hz to 30 or 40 Hz) as a result of the spring rigidity being low.

(The twist rigidity is proportional to the second power of the gear reduction ratio, so that the frequency is probably a lower resonant frequency.)

- → Enable damping compensation. (See the adjustment procedure described in Subsec. 4.19.2.) (No. 1952#2 = 1) Series 15i (No. 2008#2 = 1) Series 30i, 16i, and so on
- (c) The operation of a full-closed-loop system is unstable.
 - → Check the position feedback setting (<3> in Sec. 4.19(3).) If the parameters are set correctly, place the system in semi-closed loop mode, then adjust the system to achieve stable operation.
 There extern the system to full closed loop mode. If the

Then, return the system to full-closed loop mode. If the operation is still unstable, apply a function such as the dual position feedback function.

- (d) In the stop state, no tension is established between the main axis and sub-axis.
 - \rightarrow Set a preload value of 0, and check the torque in the stop state.

Then, set a preload value greater than the stop-state torque.

(No. 1980) Series 15*i*

(No. 2087) Series 30*i*, 16*i*, and so on

- (e) Position-dependent vibration occurs.
 - → Change the feedrate to determine whether the vibration frequency is constant or proportional to the feedrate. If the vibration frequency is proportional to the feedrate, position-dependent vibration is occurring. Check position-related items such as the number of gear teeth.

4.19.8 Cautions for Controlling One Axis with Two Motors

(1) Tandem control and synchronous control (position tandem control) selection criteria

Two control methods are supported to enable the control of one axis using two motors: tandem control and synchronous control. The (simple) synchronous control method controls the position of the master axis and slave axis by using the same command. Position control is exercised separately on each of the master axis and slave axis. Control exercised when the master axis and slave axis are allocated on the same DSP is particularly referred to as **position tandem control**.

The tandem control method exercises position control over the main axis only; this method exercises torque control over the sub-axis only.

(For clarity, the terms master and slave are used for synchronous control, while main and sub are used for tandem control.)

When building a machine system, select a suitable control method, paying careful attention to the differences between the control methods. Tandem control is used in the following cases and when back-feed is enabled:

- Two motors are used because sufficient torque cannot be produced by one motor alone.
- Two small motors have an advantage over one large motor in terms of inertia.

In other cases, position tandem control (synchronous control) is usually used.

Position tandem control is also used when two motors are used to improve the precision degraded by a machine position difference.

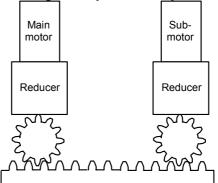
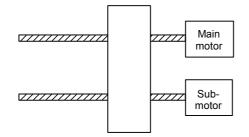


Fig. 4.19.9 (a) Example of tandem control (machine system supporting back-feed)



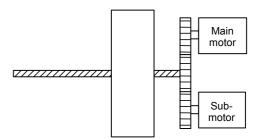


Fig. 4.19.9 (b) Example of synchronous control (to suppress the effect of a position difference)

Fig. 4.19.9 (c) Example of tandem control (when a torque two times greater is required)

(2) Velocity loop integrator copy function

If the velocity loop integrator gets unbalanced between the master and slave during synchronous or velocity command tandem control, the axes may get twisted, leading to an OVC alarm.

This problem can be solved using a function that copies the velocity loop integrator from the master axis to the slave axis, thereby preventing integrator imbalance between the master and slave.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------|----|----|----|----|----|----|-------|----|
| 2686 (FS15 <i>i</i>) | | | | | | | WSVCP | |

| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | |
|-------------------------------------|--|
| | |

WSVCP(#1) 1:


The loop integrator of the master axis is copied to the slave axis. (Specify only the slave axis.)

(Series 9096, and Series 90B0/M(13) and earlier editions are not supported.)

- 1 This function is applicable only to two axes controlled on the same DSP.
- 2 No compatibility problem occurs between this function and the system software.
- 3 This function bit is usable when simple synchronous control or velocity command tandem control is in use.
- 4 This function cannot be used together with the preload function.
- 5 It is impossible to specify functions related to the velocity loop integrator (such as the incomplete integral or low-speed integral function) separately for the master axis and slave axis.
- 6 This function cannot be used together with servo HRV4 control.

4.19.9 Block Diagrams

(1) Tandem control

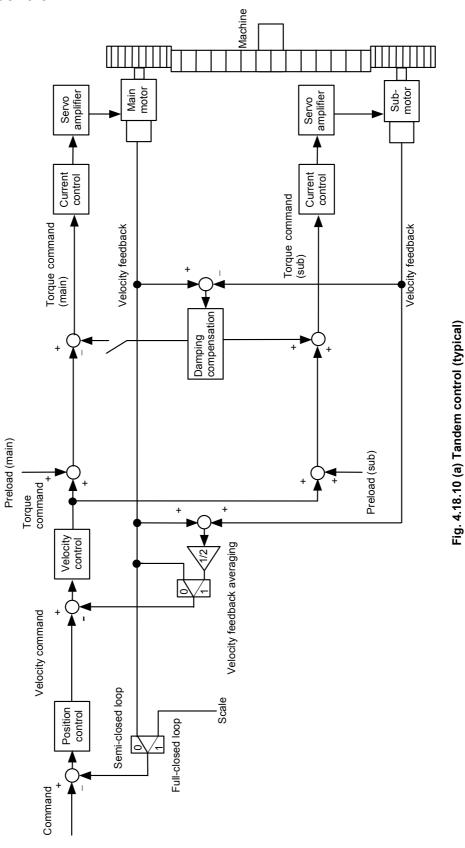


4.20 SERVO TUNING TOOL SERVO GUIDE

4.20.1 SERVO GUIDE

(1) Overview

The servo tuning tool SERVO GUIDE has the following features.

- PC-based integrated tuning tool for servo spindles
- Can be connected easily with a PCMCIA-LAN card from the front of the CNC
- GUI-based ease of use
- Automatic tuning with the tuning navigator (Ver. 2.00 or later)

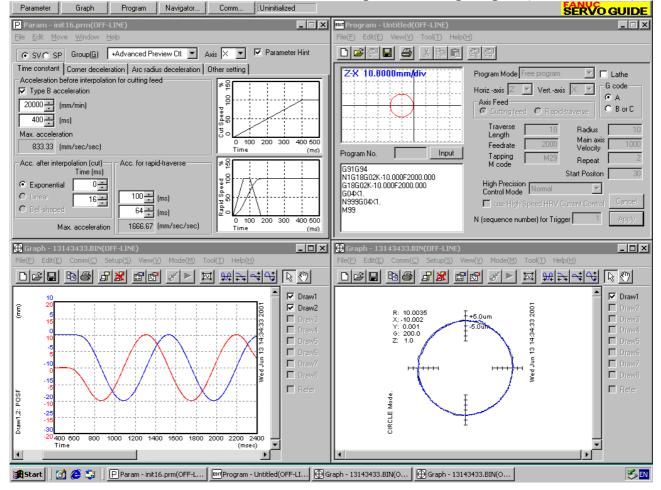

[Software ordering information] A08B-9010-J900 (supplied on a CD-ROM)

[Upgrade ordering information] A08B-9010-J901 (supplied on a CD-ROM) To install software from an upgrade CD, SERVO GUIDE or *i* TUNE of an older edition must have been installed on the personal computer used.

(2) Operating environment

The following table lists operating environments for the servo tuning tool SERVO GUIDE. The operating environment must be configured with the listed hardware and software.

| | Series 30 <i>i</i> , 31 <i>i</i> , 32 <i>i</i> -MODEL A or later | |
|---------------------------|--|-----------|
| | Series 16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> , 20 <i>i</i> -MODEL B or later | |
| CNC | Power Mate <i>i</i> -MODEL D, H | |
| | Series 0 <i>i</i> -MODEL B, 0 <i>i</i> Mate-MODEL B | |
| | Series 0 <i>i</i> -MODEL C, 0 <i>i</i> Mate-MODEL C | (Note 1) |
| | PC/AT compatible | |
| | Ethernet port (for Ethernet connection) | |
| Personal computer | FANUC HSSB board (for HSSB connection) | |
| | or | |
| | CNC display unit with PC functions (PANEL i) | |
| CPU | Pentium 200MHz or better processor | |
| | Microsoft Windows 98/Me | (Note 2) |
| | Microsoft Windows NT4.0/2000/XP | (Note 3) |
| OS | Recommended Microsoft Windows NT4.0/2000/XP | (Note 4) |
| | Viewing online help requires Internet Explorer 4.01 o | r later. |
| | | (Note 5) |
| Memory | 64MB or more (Recommended 128MB or more) | |
| Hard disk | 25 MB or more | (Note 6) |
| | (50 MB during installation) | |
| Diaplay resolution | SVGA (800 \times 600) or higher | |
| Display resolution | (XGA (1024 \times 768) or higher is recommended.) | (Note 7) |
| Printer | Printer added in printer setting on Windows | |
| PCMCIA LAN card | | (Nista 0) |
| (for Ethernet connection) | Card specified by FANUC (A02B-0281-K710) | (Note 8) |
| Othere | Cross Ethernet cable and coupler (required for Ether | net |
| Others | connection) | (Note 9) |
| | | <i>,</i> |

* Microsoft, Windows are registered trademarks of Microsoft Corporation.

- * This manual contains the program names or device names of other companies, some of which are registered trademarks of respective owners.
- Note 1 The following software series and editions support SERVO GUIDE.

| [System software] | |
|-------------------|--|
| Q | |

| L J | L | |
|-----|-----------------------|----------------------------------|
| | Series 30 <i>i</i> -A | G001/23 and subsequent editions, |
| | | G011/23 and subsequent editions, |
| | | G021/23 and subsequent editions, |
| | | G00A/01 and subsequent editions, |
| | | G01A/01 and subsequent editions, |
| | | G02A/01 and subsequent editions, |
| | | G002/01 and subsequent editions, |
| | | G012/01 and subsequent editions, |
| | | G022/01 and subsequent editions |
| | | (SERVO GUIDE Ver. 3.00 or later) |
| | Series 31 <i>i</i> -A | G101/01 and subsequent editions, |
| | | G111/01 and subsequent editions |
| | | (SERVO GUIDE Ver. 3.00 or later) |
| | | |

| Series 31 <i>i</i> -A5 | G121/01 and subsequent editions, G131/01 and subsequent editions (SERVO GUIDE Ver. 3.00 or later) |
|---------------------------|---|
| Series 32 <i>i</i> -A | G201/01 and subsequent editions (SERVO GUIDE Ver. 3.00 or later) |
| Series 16 <i>i</i> -MB | B0H1/05 and subsequent editions |
| Series 16 <i>i</i> -TB | B1H1/06 and subsequent editions (*) |
| Series 18 <i>i</i> -MB | BDH1/05 and subsequent editions |
| Series 18 <i>i</i> -MB5 | BDH5/01 and subsequent editions |
| Series 18 <i>i</i> -TB | BEH1/06 and subsequent editions ^(*) |
| Series 21 <i>i</i> -MB | DDH1/05 and subsequent editions |
| Series 21 <i>i</i> -TB | DEH1/06 and subsequent editions ^(*) |
| Series 20 <i>i</i> -FB | D0H1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 3.00 or later) |
| Series 20 <i>i</i> -TB | D1H1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 3.00 or later) |
| Power Mate <i>i</i> -D | 88E0/18 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Power Mate <i>i</i> -H | 88F2/01 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Series 0 <i>i</i> -MB | D4A1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Series 0 <i>i</i> -TB | D6A1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Series 0i Mate-MB | D501/01 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Series 0 <i>i</i> Mate-TB | D701/01 and subsequent editions |
| | (SERVO GUIDE Ver. 2.00 or later) |
| Series 0 <i>i</i> -MC | D4B1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 3.00 or later) |
| Series 0 <i>i</i> -TC | D6B1/01 and subsequent editions |
| | (SERVO GUIDE Ver. 3.00 or later) |
| Series 0 <i>i</i> Mate-MC | D511/01 and subsequent editions |
| | |
| a | (SERVO GUIDE Ver. 3.00 or later) |
| Series 0 <i>i</i> Mate-TC | |

- (*) Measuring rigid tapping synchronization errors on the T Series CNC requires the following system software series and editions.
 Series 16*i*-TB B1H1/15 and subsequent editions Series 18*i*-TB BEH1/15 and subsequent editions Series 21*i*-TB DEH1/15 and subsequent editions
- [Relationship between the Ethernet and open CNC] For Series 30*i*, 31*i*, 32*i* 656E/06 and subsequent editions 656F/07 and subsequent editions For Series 30*i*, 31*i*, 32*i* (when a 15" display is used) Software for 15" display control A02B-0207-J595#60VB 1.3 and subsequent editions

For Series 310is, 310is, 320is WindowsCE.NET customized OS A02B-0207-J594 1.2 and subsequent editions WindowsCE.NET FOCAS2/HSSB library A02B-0207-J808 1.2 and subsequent editions WindowsCE.NET standard application/library A02B-0207-J809 1.2 and subsequent editions For Series 16*i*, 18*i*, 21*i*, 0*i* 656A/03 and subsequent editions (For a system with a sub-CPU, 656A/04 or later) Using Series 0i requires 656A/05 or later. (Edition 656A/07 does not support the use of the PCMCIA LAN card.) For Power Mate *i* 6567/01 and subsequent editions [Servo software] For Series 30*i*,31*i*,32*i* 90D0/03(C) and subsequent editions, 90E0/03(C) and subsequent editions For Series 16i,18i,21i,20i,0i,Power Mate i 90B0/06(F) and subsequent editions (Note that using the tuning navigator requires 90B0/20(T) and subsequent editions.) 90B6/01(A) and subsequent editions, 90B5/01(A) and subsequent editions, 90B1/01(A) and subsequent editions For Series 21*i*, 0*i*, Power Mate *i* 9096/01(A) and subsequent editions (They do not support the tuning navigator.) [Spindle software] For Series 30*i*,31*i*,32*i* 9D70/02 and subsequent editions (For αl series spindle) For Series 16i,18i,21i,0i,Power Mate i 9D50/02 and subsequent editions (For αl series spindle) For Series 16i,18i,21i,0i,Power Mate i 9D20/11 and subsequent editions (For α series spindle) (For some α series spindles, restrictions are placed on data acquisition.) SERVO GUIDE may operate on combinations other than stated above. For αi series models, however, SERVO GUIDE can run only on the combinations stated above.


In SERVO GUIDE version 3.00 and later versions, the parameter window and program window also support the multipath CNC.

- Note 2 It has yet to be verified whether SERVO GUIDE operates on Windows 95.
- Note 3 To use this software on Windows NT 4.0, install Service Pack 3 or later. Service Pack is available from Microsoft.
- Note 4 On Windows 98/Me, opening multiple parameter and graph windows at a time may result in insufficient resources. We recommend Windows NT/2000/XP be used.
- Note 5 Online help cannot be displayed unless Internet Explorer 4.01 or later is available.
- Note 6 In addition to the program area, a storage area is necessary to hold measured data.
- Note 7 SERVO GUIDE can operate also on SVGA. If multiple windows are open on SVGA, however, they overlap on one another, impairing legibility.
- Note 8 If you are using a Windows CE-based "is Series" CNC (160is, 180is, 210is), you do not need this card, because no LAN card can be used to connect between the PC and CNC. (Use a built-in Ethernet port for connection.)

With the is Series of the Series 30i (the 300is, 310is, and 320is), connection using a LAN card is also possible.


To use this software on Power Mate *i*, an Ethernet board must be installed on the NC. In this case, the PCMCIA-LAN card is not required. Get ready the following:

- Fast Ethernet board (A02B-0259-J293)
- Fast Ethernet option (A02B-0259-J862)
- Ethernet software (A02B-0259-J555#6567)
- Extended basic 1 function option (A02B-0259-J878)
- Extended driver/library (A02B-0259-J847)
- Note 9 A FANUC-supplied LAN card is provided with a straight cable with an RJ45 male connector attached. The following figure shows how the cable is used to connect directly between the PC and CNC.

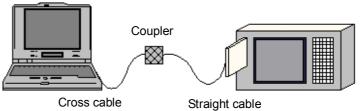

(The cross cable and coupler are available from general PC stores.)


The following figure shows how a hub is used to connect between the PC and CNC. No coupler is needed. However, you need to prepare a straight cable.

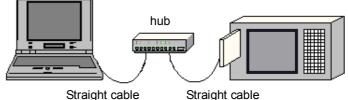

Straight cable

If you are using an HSSB, you may probably use an optical cable to connect between the CNC and PC as shown below. Using SERVO GUIDE does not require any additional connection.

* Even if you are using a CNC display unit with PC functions, such as the 160*i*, no additional connection is needed.

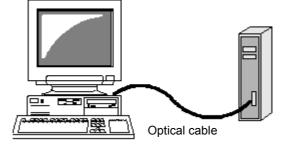

(3) Software specification overview

The servo tuning tool SERVO GUIDE has four windows ("parameter window," "graph window," "program window," and "tuning navigator"). The software specification overview of each window follows.


(a) Parameter window

- Collects parameters from the NC, categorizes them by function, and displays them.
- Supports servo and spindle parameters.
- Supports the automatic acc./dec. function for high speed and high precision.
- Lets you modify NC parameters on the PC.
 - * The multipath system is supported by Version 3.00 and later versions.

| (Details of suppor | |
|---------------------------|---|
| System setting | Extracting and displaying information related to servo sections from CNC options. |
| Servo axis setting | Whether there is a separate detector, rotary/linear motor, CMR, flexible feed gear, etc. |
| Acceleration/deceleration | Time constants for acc./dec. before interpolation and acc./dec. after interpolation, speed difference related to automatic deceleration at corner, arc radius-based feedrate clamp setting, and acceleration-based deceleration setting (ordinary control, advanced preview control, AI advanced preview control, AI contour control, AI nano-contour control, high-precision contour control, AI nano high-precision contour control, AI contour control I/II) |
| Current control | HRV, HRV2, HRV3, or HRV4 control |
| Velocity control | Velocity loop gain setting, setting related to filters for measures for vibration in machine sections, vibration control, and dual position feedback |
| Position control | Setting of position gain |
| Contour error suppression | Setting related to feed-forward, backlash acceleration, and fine acc./dec. (for Series 16 <i>i</i> and so on) |

(Details of supported functions)

| Overshoot improvement | Setting for overshoot correction |
|---------------------------|---|
| | Setting of FAD + advanced preview feed-forward and |
| High-speed positioning | position gain line graph |
| Stop | Setting related to brake control and quick stop at |
| Stop | emergency stop |
| Unexpected disturbance | Estimated disturbance value tuning and alarm detection |
| torque detection | level |
| Linear motor | Setting of AMR conversion coefficient and smoothing compensation |
| Spindle system setting | Extracting and displaying information related to spindles |
| Spindle system setting | from CNC options. |
| Spindle system | Motor edge sensor setting, spindle edge sensor setting, |
| configuration | and gear ratio setting (main and sub) |
| Spindle ordinary velocity | Velocity loop gain setting and filter setting for |
| control | anti-vibration (main and sub) or resonance elimination filter |
| | Command setting, velocity control setting (main and |
| Rigid tapping | sub), position control setting, and fine acc./dec. (for |
| | Series 16 <i>i</i> and so on) |
| | Command setting, velocity control setting, position |
| Cs contour control | control setting, fine acc./dec. (for Series 16 <i>i</i> and so on), |
| | and resonance elimination filter |
| | Velocity control setting, position control setting, |
| Orientation | acceleration setting (high-speed orientation), and |
| | resonance elimination filter |
| Spindle synchronous | Velocity control setting, position control setting, and |
| control | resonance elimination filter |

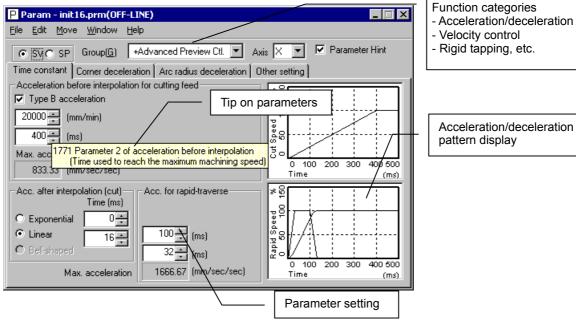

Parameter window (example)

(b) Graph window

- Data measurement and display
 - Horizontal axis time mode
 Ordinary mode, first-order differential mode, second-order differential mode (YT mode)
 Feed smoothness measurement mode (DXDY mode)
 Tangential velocity display mode (XTVT mode)
 Synchronization error measurement mode (Synchro mode)
 - XY mode (also XYR mode for polar coordinate conversion)
 - Arc path error expansion mode (Circle mode)
 - Arbitrary figure path error expansion mode (Contour mode)
 - Frequency spectrum analysis mode (Fourier mode)
 - Velocity loop frequency characteristic measurement mode (Bode mode)


Data can be measured on both servo and spindle sections (even if mixed)

* For non- αi series spindles, restrictions are placed on measured data.

Simultaneous measurement is possible on up to six channels.

The fastest sampling period coincides with the current control period. (For servo axes only)

Displayed data can be printed. Bit maps can also be acquired via the clip board.

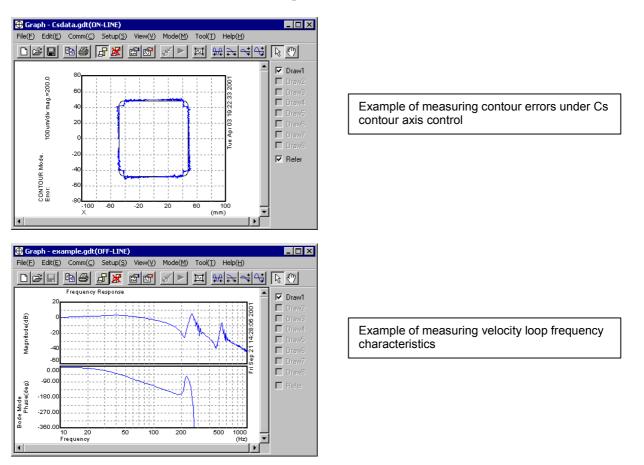


Graph window (example)

• Linear motor smoothing compensation parameter determination function


(Can be used with SERVO GUIDE Ver. 2.00 or later)

This function allows easy determination of the parameters for the "smoothing compensation function", which is a function for improving the smoothness of linear motor feed.

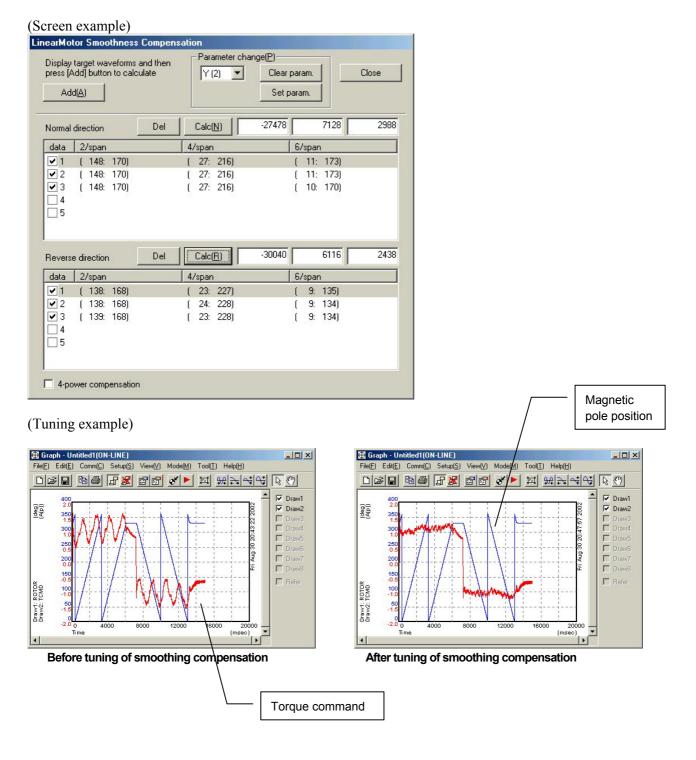

(c) Program window

- Test program creation assistance
 - One-axis linear acc./dec.
 - Arc
 - Rectangle
 - Rectangle with rounded corners
 - Rigid tapping
 - Cs contour
- Test program path display
- Sending test programs to NC memory and executing them (The operator must press the start button.)
- Selecting and executing a program from NC memory (The operator must press the start button.)
- Printing a created program
- * The multipath system is supported by Version 3.00 and later versions.

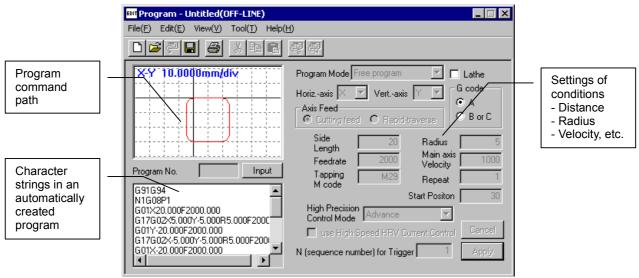

Program window (example)

(d) Tuning navigator

 Conditions for use SERVO GUIDE Ver. 2.00 or later Servo software Series 90B0/20 and subsequent editions, Series 90B6, Series 90B5, Series 90B1, Series 90D0, Series 90E0


NOTE


Series 9096 is not supported.

- Automatic tuning of velocity loop gain and filters
- High-speed and high-precision function setup support

[Automatic tuning of velocity loop gain and filters]


Measures the frequency characteristics of a velocity loop while making the tool move along an axis to automatically determine the values of the velocity loop gain and resonance elimination filter parameters. Submitted parameter values can be fine-tuned to verify their effects.

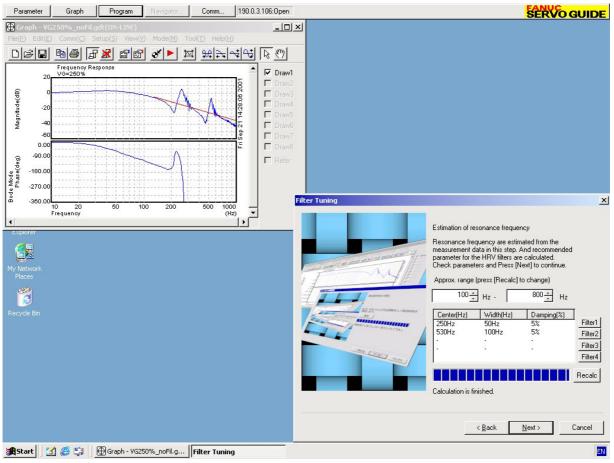

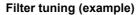

[High-speed and high-precision function setup support]

In a program for a square with corner rounding, the support adjusts the parameters for high-speed and high-precision functions while confirming overshoots. High-speed and high-precision functions have multiple tuning parameters. FANUC-recommended parameter sets (sets that give priority to speed and those that give priority to precision) are provided, and values between them can be selected easily with a single operation on the slider.

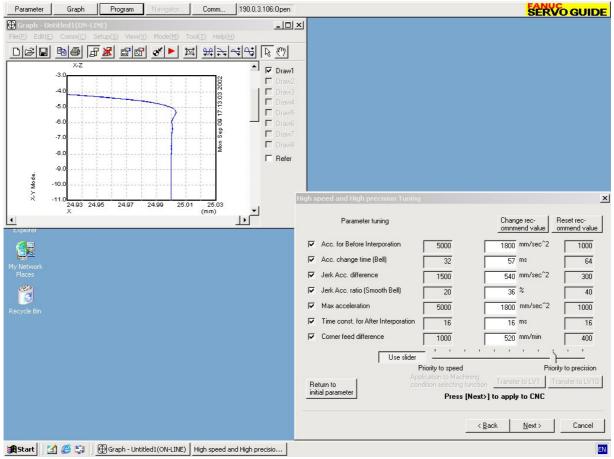

High-speed and high-precision function tuning (example)

(4) Tuning procedure overview

- <1> Specify parameters from the parameter window.
- <2> In the program window, create, send, and execute test programs.
- <3> In the graph window, measure data.
- <4> Repeat steps <1> to <3> to make optimum tunings while watching the graphed data.

For details of usage, refer to "FANUC SERVO GUIDE Operator's Manual (B-65404EN)" or the online manual after software installation.

5 DETAILS OF PARAMETERS

5.1 DETAILS OF THE SERVO PARAMETERS FOR Series 30*i*, 31*i*, 32*i*, 15*i*, 16*i*, 18*i*, 21*i*, 0*i*, 20*i*, Power Mate *i* (SERIES 90D0, 90E0, 90B0, 90B1, 90B6, 90B5, AND 9096)

The descriptions of parameters follow.

For parameters for which a specification method is not described, do not change the parameters from the values set up automatically during servo parameter initialization.

The parameter in the top left cell applies to Series 15*i*; the one in the bottom left cell, to Series 30*i*, 31*i*, 32*i*, 16*i*, 18*i*, 20*i*, 21*i*, 0*i*, 20*i*, Power Mate *i*.

| | | | | *: | Do no | t chang | e. | | |
|-------------------------------------|--------|------------|------------|-----------|-----------|-----------|----------|----------|-----|
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | 7 |
| 1815 (FS15 <i>i</i>) | | | APCX | | | | ΟΡΤΧ | | |
| 1815 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| OPTX (#1) | | arate det | ector is: | | | | | | |
| | | Jsed. | | | | | | | |
| [Deference item] | | Not used. | | | | | | | |
| [Reference item] | Subse | 2.1 | | | | | | | |
| APCX (#5) | An ab | solute de | etector is | : | | | | | |
| () | | Not used. | | | | | | | |
| | | Jsed. | | | | | | | |
| [Reference item] | Subse | ction 2.1 | 3 | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1817 (FS15 <i>i</i>) | | TANDEM | | | | | | | |
| 1817 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | - |
| TANDEM (#6) | Tande | em contro | ol (option | nal funct | tion) is: | | | | |
| | | Disabled. | | | | | | | |
| | | Enabled. | | | | | | | |
| [D - f | | | arameter | for both | main ax | is and si | ub-axis. | | |
| [Reference item] | Sectio | on 4.19 | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1804 (FS15 <i>i</i>) | | | | PGEX | PRMC | | DGPR | PLC0 | 1 |
| 2000 (FS30 <i>i</i> , 16 <i>i</i>) | | • | | | | | | · | |
| PLC0 (#0) | Specit | fies whe | ther to a | multiply | the nur | nber of | velocity | y and po | osi |
| | | s by ten i | | | | | | - | |
| | | Not to m | | | | | | | |
| | | Fo multip | | n. | | | | | |
| [Reference item] | Subse | ction 2.1 | .3 | | | | | | |
| DGPR (#1) | When | power | is swit | ched of | n. the r | notor-sr | ecific s | standard | Se |
| (/ 1) | | neter is: | | | , | Stor of | | | ~ • |
| | | Specified | l. | | | | | | |
| | | Not speci | | | | | | | |
| [Reference item] | Subse | ction 2.1 | .3 | | | | | | |
| | | | | | | | | | |

PRMC (#3) Do not change. (\star)

PGEX (#4)

The position gain range is:0: Not expanded.1: Expanded by 8 times.Subsection 2.1.5

[Reference item]

| AMR5 | AMR4 | AMR3 | AMR2 | AMR1 | AMR0 |
|------|------|-----------|----------------|---------------------------|----------------------------------|
| | AMR5 | AMR5 AMR4 | AMR5 AMR4 AMR3 | AMR5 AMR4 AMR3 AMR2 | AMR5 AMR4 AMR3 AMR2 AMR1 |

2001 (FS30*i*, **16***i*) AMR0 to AMR7 (#0 to #7)

Specify the AMR value according to the Pulsecoder model for the motor.

| | | | AMF | 2 | | - | |
|---|---|---|-----|---|---|--------|--|
| 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| 0 | 0 | 0 | 1 | 0 | 0 | \cap | 16-pole servo motors αi S2000/2000HV, αi S3000/2000HV |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | Other than 16-pole servo motor (8-pole servo motors) |

[Related parameters]

2608#5 (15*i*), 2220#5 (16*i* etc.)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|-------------------------------------|---|--------------------|-------------------|-----------|----------|-----------|------------|----------|--|--|
| 1807 (FS15 <i>i</i>) | | | | | PFSE | | | | | |
| 2002 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| PFSE (#3) | A sepa | arate det | ector is: | | | | | | | |
| | 0: Not used. 1: Used. Specify this parameter only in the Series 15<i>i</i>. In the Series 30<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, and Power Mate <i>i</i>, setting the series 30<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 0<i>i</i>, 31<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 16<i>i</i>, 18<i>i</i>, 21<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 32<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31<i>i</i>, 31 | | | | | | | | | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| | | - | neter No | . 1815 (| OPT) to | 1 autor | natically | specifie | | |
| | param | | | | | | | | | |
| [Reference item] | Subse | ction 2.1 | 3 | | | | | | | |
| | | | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
| 1808 (FS15 <i>i</i>) | VOFS | OVSC | BLEN | NPSP | PIEN | OBEN | TGAL | | | |
| 2003 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| TGAL (#1) | The so | oftware of | disconne | ction ala | rm detec | tion leve | el is: | | | |
| | 0: S | Standard | setting. | | | | | | | |
| | 1: I | Lower se | nsitivity | specifie | d elsewh | ere. | | | | |
| [Related parameters] | 1892 (| (15 <i>i</i>), 20 | 64 (16 <i>i</i> e | etc.) | | | | | | |
| | | | | | | | | | | |
| OBEN (#2) | The velocity control observer function is: | | | | | | | | | |
| | | Not used | - | | | | | | | |
| | | Jsed. | | | | | | | | |
| [Reference item] | | ction 4.5 | | | | | | | | |
| [Related parameters] | | . , | | etc.), 1 | 862 (15) |), 2050 | (16i etc) | .), 1863 | | |
| | 2051 (| (16i etc.) |) | | | | | | | |

TIA0 (#0),

| PIEN (#3) | The vel | ocity co | ntrol n | nethod to | be used | l is: | | | |
|--|------------------|-------------------------------|----------------|-------------------|-------------------|----------------------|------------|-----------|-------|
| | 0: I-F |) | | | | | | | |
| | 1: PI | | | | | | | | |
| NDCD $(\#4)$ | The N r | | | on funct | ion io. | | | | |
| NPSP (#4) | The N p 0: No | ot used. | opressi | on funct | .10n 1S: | | | | |
| | | sed. | | | | | | | |
| [Reference item] | Subsect | | 4 | | | | | | |
| | 1992 (1 | | | etc.) | | | | | |
| | | | | | | | | | |
| BLEN (#5) | The bac | | celera | tion fund | ction is: | | | | |
| | | ot used. | | | | | | | |
| [D . f | | sed. | (1 | 107 | | | | | |
| [Reference item] [Related parameters] | 1860 (1 | $\frac{1}{5}$ $\frac{1}{204}$ | | | | | | | |
| [Related parameters] | 1800 (1 | 51), 204 | 0 (10) | cic.) | | | | | |
| OVSC (#6) | The ove | ershoot o | comper | nsation f | unction | is: | | | |
| | | ot used. | - F | | | | | | |
| | 1: Us | sed. | | | | | | | |
| [Reference item] | Section | | | | | | | | |
| [Related parameters] | 1857 (1 | 5 <i>i</i>), 204 | 5 (16 <i>i</i> | etc.) | | | | | |
| | | | | ,· · | | | | | |
| VOFS (#7) | The VC 0: No | off off | set fun | ction is: | | | | | |
| | | sed. | | | | | | | |
| [Related parameters] | | | 7 (16i | etc.) | | | | | |
| | | ,,, | ` | / | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1809 (FS15 <i>i</i>) | | | | | TRW1 | TRW0 | TIB0 | TIA0 | |
| 2004 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| , TIB0 (#1), TRW0 (#2), T | · · | / | | | | _ | | | |
| | | | | | | ng to the | HRV co | ntrol me | thod. |
| | TRW1 | TRW | 0 | TIB0 | TIA0 | | | | |
| | 0 | 0 | | 1 | 01 | For HRV1 For HRV2 | | | otrol |
| [Related parameters] | - | - | 3 (16j | - | 1 | 101111112 | , 111(0, 1 | 11114 001 | |
| [reclated parameters] | 1707 (1 | 51), 201 | 5 (10) | ete.) | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1883 (FS15 <i>i</i>) | SFCM | BRKC | | | | | FEED | | |
| 2005 (FS30 <i>i</i> , 16 <i>i</i>) | · | <u>.</u> | | | | | | | - |
| FEED (#1) | The fee | d-forwa | rd func | tion is: | | | | | |
| | | ot used. | | | | | | | |
| | | sed. | | <i>.</i> . | | | | | |
| [Reference item] | Subsect | tions 4.6 | .1 to 4 | | $0 \in (1 \in i)$ | 2002 (1/ | · · · · | | |

[Related parameters] 1961 (15*i*), 2068 (16*i* etc.), 1985 (15*i*), 2092 (16*i* etc.)

BRKC (#6) The brake control function is: 0: Not used. 1: Used. [Reference item] Section 4.10. [Related parameters] 1976 (15*i*), 2083 (16*i* etc.)

5.DETAILS OF PARAMETERS

| SFCM (#7) | The static friction compensation function is: 0: Not used. |
|--|---|
| [Reference item] [Related parameters] | 1: Used. Subsection 4.6.8 1808 (15 <i>i</i>), 2003 (16 <i>i</i> etc.), 1965 (15 <i>i</i>), 2072 (16 <i>i</i> etc.), 1966 (15 <i>i</i>), 2073 (16 <i>i</i> etc.) |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|-------|----------------------|------------|----------------------------|---------|------------|-----------|----------------|
| 1884 (FS15 <i>i</i>) | | | | ACCF | | PKVE | | FCBL |
| 2006 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| FCBL (#0) | | 0 | | | cklash | compensa | tion is: | |
| | 0: . | Applied t | to the po | sition. | | | | |
| | 1: 1 | Not appli | ied to the | e position | | | | |
| [Reference item] | Subse | ections 4. | 6.6 and | 4.6.7 | | | | |
| PKVE (#2) | | l-depend Not used | | ent loop g | ain var | iable func | ction is: | |
| | | Used | | | | | | |
| | | o not cha | ange) | | | | | |
| [Related parameters] | · · | | • | etc.) | | | | |
| ACCF (#4) | 1 | | | of velocity k for the l | | | o be use | ed as follows: |

1: Velocity feedback for the latest 1 ms.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|---------|-----------|------------|-------------------|-----------|-----------|------------|----------------|
| 1951 (FS15 <i>i</i>) | FRCAXS | FAD | | | | | IGNVRO | ESP2AX |
| 2007 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| ESP2AX (#0) | The se | rvo alar | m 2-axis | s simulta | neous m | onitor fu | inction is | : |
| | 0: N | lot used | • | | | | | |
| | | sed. | | | | | | |
| [Reference item] | Subsec | ction 4.1 | 19.4 | | | | | |
| | A 1 | | 1 | | | | | |
| IGNVRO (#1) | | | dition is: | | tor the s | orvo olor | m ? ava | s simultaneous |
| | ••• | | | | ondition | | 111 Z-axe | s siniunaneou: |
| | | | | | | | n 2-axes | simultaneous |
| | | | | | ondition | | | |
| [Reference item] | Subsec | ction 4.1 | 19.4 | | | | | |
| | | | | | | | | |
| FAD (#6) | | | dec. func | tion is: | | | | |
| | •• • | lot used | • | | | | | |
| [D - f - m - m - m - i + - m -] | | sed. |)) | | | | | |
| [Reference item] | | 215i 21 | | ata) | | | | |
| [Related parameters] | 1702 (| 131), 21 | 09 (16i e | elc.) | | | | |
| FRCAXS (#7) | Torque | e contro | l functio | n is [.] | | | | |
| | - | lot used | | | | | | |
| | | sed. | | | | | | |
| [Reference item] | Section | n 4.16 | | | | | | |
| | | | | | | | | |

| 1 | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|----------|--------------------------|---|--|-----------------------------------|---------------------------------|----------------------|------------------------------------|
| 1952 (FS15 <i>i</i>) | LAXDM | PFBSWC | VCMDTM | SPPCHG | SPPRLD | VFBAVE | TNDM | |
| 2008 (FS30 <i>i</i> , 16 <i>i</i>) TNDM (#1) | No. | | et to 1. (| • | | | | s) of paran at 0.) Thi |
| VFBAVE (#2) | | Enables t bit to 1. S | | • | | • | · · | sually, set |
| [Reference item] | | on 4.17 a | | | | | ~ · · · · · j ·) | |
| SPPRLD (#3) | | Enables t axis only | | reload fi | unction. (| (Set this | paramet | er for the |
| [Reference item] | | ection 4.1 | | | | | | |
| SPPCHG (#4) | 0: 1: | only the Outputs | only the negative only the positive axis only | positive polarity negative polarity | polarity to the su polarity | to the r b-axis. to the r | nain axi main axi | s, and ou s, and ou paramete |
| VCMDTM (#5) | 1: | Enables v (Set this) | velocity | | | | | |
| PFBSWC (#6) | | Switches command | | | | | | ion of a to v.) |
| [Reference item] | | ection 4.1 | | - I | | | | 5-7 |
| LAXDMP (#7) | 1: | | damping Usually | g compe | nsation | with bo | th the r | ly. nain axis ameter for |
| [Reference item] | Subs | ection 4.1 | 9.2 | | | | | |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------|--------------------|-------------------|-------------|-------------------|----------|----------------|-----|
| 1953 (FS15 <i>i</i>) | BLST | BLCU | | ANALOG | | ADBL | | DMY |
| 2009 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DMY (#0) | The se | erial feed | lback du | mmy fun | ction is: | | | |
| | | Not used. | | 2 | | | | |
| | 1: U | Jsed. | | | | | | |
| [Reference item] | Subse | ction 4.9 | 9.1 | | | | | |
| ADBL (#2) | The n | ew backl | ash acco | eleration f | function | is: | | |
| | 0: 1 | Not used. | | | | | | |
| | 1: U | Jsed. | | | | | | |
| [Related parameters] | 1860 | (15 <i>i</i>), 20 | 48 (16 <i>i</i>) | etc.), 1980 | D (15 <i>i</i>), | 2087 (16 | <i>i</i> etc.) | |

| ANALOG(#4) | Analog servo interface function is:0: Not used1: Used |
|--|--|
| BLCU(#6) | The function that validates the backlash acceleration function only at cutting is:0: Invalidated.1: Validated. |
| [Reference item] | Subsections 4.6.6 and 4.6.7 |
| BLST (#7) | The backlash acceleration stop function is:0: Not used.1: Used. |
| [Reference item] [Related parameters] | Subsection 4.6.6 1975 (15 <i>i</i>), 2082 (16 <i>i</i> etc.) |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | | | |
|-------------------------------------|---|---|-----------|----------|-----------|--------------|---------|-----------------|--|--|--|--|
| 1954 (FS15 <i>i</i>) | POLE | | HBBL | HBPE | BLTE | LINEAR | | | | | | |
| 2010 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | | |
| LINEAR (#2) | | | | | | | | ally when the | | | | |
| | | | | | | | ed. Che | ck that this bi | | | | |
| [Deference item] | | is set before the linear motor is driven. | | | | | | | | | | |
| [Reference item] | Subsec. 4.14.1. | | | | | | | | | | | |
| BLTE (#3) | The function to multiply the backlash acceleration amount by 10 is: | | | | | | | | | | | |
| () | | nvalidat | | 5 | | | | 5 | | | | |
| | | /alidated | | | | | | | | | | |
| [Reference item] | Subse | Subsections 4.6.6 and 4.6.7 | | | | | | | | | | |
| $\mathbf{IIDDE}(\#4)$ | When | the du | al marit | ion food | book for | notion i | a waad | a nitah arma | | | | |
| HBPE (#4) | | | is added | | | | s usea, | a pitch error | | | | |
| | - | | ed loop. | | | | | | | | | |
| | | | sed loop | | uiu sotti | -11 <u>9</u> | | | | | | |
| [Reference item] | | ction 4.5 | 1 | | | | | | | | | |
| | | | | | | - · | | | | | | |
| HBBL (#5) | | | | | | | | l, a backlasł | | | | |
| | | | | | | ror coun | ter of: | | | | | |
| | | Full-clos | sed loop | | dard set | ung | | | | | | |
| [Reference item] | | ction 4.5 | | | | | | | | | | |
| [] | 24050 | ••••• | ••• | | | | | | | | | |
| POLE (#7) | The p | unch/las | er switch | ing func | tion is: | | | | | | | |
| | | lot used | | | | | | | | | | |
| | 1: U | Jsed. | | | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | | | |
| 1955 (FS15 <i>i</i>) | TMPABS | | RCCL | | | | FFAL | EGB | | | | |
| 2011 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | | |
| EGB (#0) | The E | GB func | tion is: | | | | | | | | | |
| ×) | | lot used | | | | | | | | | | |

1: Used.

| FFAL (#1) [Reference item] [Related parameters] RCCL (#5) [Related parameters] TMPABS (#7) | 1: En Subsect 1961 (1. The actu 0: No 1: Us 1995 (1. (★ Do 1 Tempor | abled ir ion 4.6. 5 <i>i</i>), 206 ual curro t used. ed. 5 <i>i</i>), 210 not char ary abso | n all mo 1 88 (16 <i>i</i> e ent torq 22 (16 <i>i</i> e nge) | des. etc.) ue limit | variable | | | | | | |
|---|---|---|---|---------------------------|----------|-----------------------|-----------|----------------|--|--|--|
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | | |
| 1956 (FS15 <i>i</i>) | STNG | | VCM2 | VCM1 | - | | MSFE | | | | |
| 2012 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | | |
| MSFE (#1) | 0: No | chine sp ot used. ed. | beed fee | dback fu | nction i | S: | | | | | |
| [Reference item] | Subsect | ion 4.5. | 8 | | | | | | | | |
| [Related parameters] | 1981 (1 | | | etc.) | | | | | | | |
| VCM1 (#4) | The VC switched | | vavefor | m signa | l conve | rsion or | n the cl | heck board is | | | |
| VCM2 (#5) | Switche followir For rota | ng list: | | wavefor | m conv | ersion v | alue aco | cording to the | | | |
| | VCM2 | VCM1 | 1 | Number o | fveloci | vcomm | androvol | ution/5 V | | | |
| | 0 | 0 | 1 | | | 9155 min | | | | | |
| | 0 | 1 | 1 | | 0. | 14 min ⁻¹ | | | | | |
| | 1 | 0 | | | | 234 min ⁻¹ | | | | | |
| | 1 | 1 | | | 3 | 3750 min⁻́ | 1 | | | | |
| | For line | ar moto | or (P in t | the table | below r | epresents | s a scale | signal pitch.) | | | |
| | VCM2 | VCM2 VCM1 Number of velocity commandrevolution/5 V | | | | | | | | | |
| | 0 | | | | | | | | | | |
| | 0 | | | | | | | | | | |
| | | 1 0 0.96 × P m/min 1 1 15.36 × P m/min | | | | | | | | | |
| [Reference item] | Item (5) | - | endix I | | 15. | | | | | | |
| STNG (#7) | In veloc 0: De | | | node, a s | oftware | disconne | ection al | arm is: | | | |

1: Ignored.

5.DETAILS OF PARAMETERS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---|-----------------------|--|-------------------------------------|------------|---------------------|------------|------------------|---------------|
| 1707 (FS15 <i>i</i>) | APTG | | | | | | | HR3 |
| 2013 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| HR3 (#0) | HRV3 | current | control i | is: | | | | |
| | | Not used. | | | | | | |
| | | Jsed. | . 1 | | | | | |
| [Reference item] | Subse | ction 4.2 | .1 | | | | | |
| APTG (#7) | The α | Pulseco | der softv | vare disc | onnectio | on monit | or is: | |
| ~ / | 0: N | Not ignor | ed. | | | | | |
| | | gnored. | | | | | | |
| [Reference item] | Sectio | n 3.2 | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1708 (FS15 <i>i</i>) | #1 | #0 | #0 | <i>n</i> - | #0 | #2 | <i>#</i> 1 | HR4 |
| 2014 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | 11114 |
| HR4 (#0) | HRV4 | current | control i | is: | | | | |
| | | Not used. | | | | | | |
| | 1: U | Jsed. | | | | | | |
| [Reference item] | Subse | ction 4.2 | .2 | | | | | |
| | <i>ща</i> | | . | | | | | |
| 1957 (FS15 <i>i</i>) | #7 BZNG | #6 BLAT | #5 TDOU | #4 | #3 | #2 | #1 SSG1 | #0 PGTW |
| 2015 (FS30 <i>i</i> , 16 <i>i</i>) | DZING | BLAI | 1000 | | | | 3301 | PGIW |
| PGTW (#0) [Reference item] [Related parameters] | 0: N 1: U Subse | Not used. Jsed. ction 4.8 | | - | nction is: | : | | |
| SSG1 (#1) | 0: N | ow-speed lot used. Jsed. | l integral | function | 1 is: | | | |
| [Reference item] | | ction 4.8 | .2 | | | | | |
| [Related parameters] | 1714 (| (15 <i>i</i>), 202 | 29 (16 <i>i</i> e | etc.), 171 | 5 (15 <i>i</i>), 2 | 2030 (16 | 5 <i>i</i> etc.) | |
| TDOU (#5) | 0: Т | CMD is | | - | | s follows | | |
| [Reference item] | | | $\frac{1}{6.7}$ and $\frac{2}{6.7}$ | • | utput. | | | |
| BLAT (#6) | 0: N | vo-stage lot used. Jsed. | backlasł | n acceler | ation fur | nction is: | | |
| [Reference item] [Related parameters] | Subse | ction 4.6 | 5.7 48 (16 <i>i</i> e | etc.), 172 | 4 (15 <i>i</i>), 1 | 2039 (16 | bi etc.) | |
| BZNG (#7) | Pulsec 0: N | a separ coder is: Not ignor gnored. | | ctor is u | sed, the | battery | alarm f | or the built- |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|--|--------|--------------------|-------------------|------------|----------------------|-----------|-------------------------|---------------|
| 1958 (FS15 <i>i</i>) | | | | | PK2VDN | | | ABNT |
| 2016 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| ABNT (#0) | | | | bance to | que dete | ction fu | nction (| option) is: |
| | | lot used | | | | | | |
| | | Jsed. | | | | | | |
| [Reference item] | | $\frac{1}{15}$ | | | | | | |
| [Related parameters] | 1997 (| 151), 21 | 04 (16 <i>i</i> e | etc.) | | | | |
| PK2VDN (#3) | The va | ariable r | roportio | nal gain | function | in the st | on state | is. |
| 1 K2 V D1 (115) | | Not used | - | nai gani | runetion | in the st | op state | 15. |
| | | Jsed. | • | | | | | |
| [Reference item] | | ction 4.4 | 4.3 | | | | | |
| [Related parameters] | 1730 (| (15 <i>i</i>), 21 | 19 (16 <i>i</i> e | etc.) | | | | |
| | | | | | | | | |
| · · · · · · · · · · · · · · · · · · · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1959 (FS15 <i>i</i>) | PK2V25 | | RISCFF | HTNG | | | | DBST |
| 2017 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DBST (#0) | - | | | at emerg | ency stop | o is: | | |
| | | lot used | | | | | | |
| [Dafaranaa itam] | | Jsed. ction 4.1 | 111 | | | | | |
| [Reference item] [Related parameters] | | | | etc) 197 | '6 (15 <i>i</i>), 2 | 2083 (1) | Si etc.) | |
| [Related parameters] | 1005 (| 151), 20 | 105 (107 (| | 0(15i), 2 | 2005 (10 | <i>fi</i> ctc. <i>j</i> | |
| HTNG (#4) | In vel | ocitv co | ommand | mode, t | he hardv | vare dis | connect | ion alarm o |
| | | te detec | | | | | | |
| | | Detected | | | | | | |
| | 1: Ig | gnored. | | | | | | |
| | | | | | | | | |
| RISCFF (#5) | | | | ised, the | feed-fo | rward r | esponse | characteris |
| | | emain as | | ad that | ad fame | and room | onco oh | reatoristics |
| | | mprovec | | ed, the fo | eed-totwa | ard resp | onse cha | aracteristics |
| [Reference item] | | ction 4.6 | | | | | | |
| | 54050 | | 5.5 | | | | | |
| PK2V25 (#7) | Veloci | ity loop | high cyc | le mana | gement fi | unction | is: | |
| | | Jot used | 0 2 | | | | | |
| | | Jsed. | | | | | | |
| [Reference item] | Subsec | ction 4.4 | 4.1 | | | | | |
| | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |

| - | - | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------|--------------------------------|----------|-----------|-----------|-----------|----------|------------|--------|-------|
| 196 | 60 (FS15 <i>i</i>) | PFBCPY | | | | | OVR8 | MOVOBS | RVRSE |
| 2018 | (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| | RVRSE (#0 |) The si | gnal dire | ection fo | r the sep | arate de | tector is: | | |
| | | 0: N | Jot reven | sed. | | | | | |
| | | 1. D | avaraad | | | | | | |

1: Reversed. Series 90B0 supports the serial type and incremental parallel type.

| MOVOBS (#1) | 0: N 1: U | lot used. Jsed | | or observ | er in the | stop stat | te is: | | |
|------------------|--------------|-------------------|-----------|-----------|------------|-----------|------------|------------|---------|
| [Reference item] | Subsec | ction 4.5 | .4 | | | | | | |
| OVR8 (#2) | | 096. | celeratio | on amour | nt overrie | le forma | t is on th | e basis of | • •• |
| [Reference item] | Subsec | ction 4.6 | 5.7 | | | | | | |
| PFBCPY (#7) | | | | ack sign | | | | shared by | / the |
| [Reference item] | Subsec | ction 4.1 | 9.5 | - | | | - / | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |

| | πι | | πυ | | π υ | π4 | <u>πι</u> | πυ |
|-------------------------------------|-----------------|-------------------------|----------|----------|------------|------------|------------------|-----------|
| 1709 (FS15 <i>i</i>) | DPFB | | | | | | TANDMP | |
| 2019 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| TANDMP (#1) | The ta | indem di | sturbanc | e elimin | ation con | ntrol fun | ction (op | tion) is: |
| | 0: 1 | Not used | | | | | | |
| | 1: U | Jsed. | | | | | | |
| [Reference item] | Sectio | on 4.17 | | | | | | |
| | | | | | | | | |
| DPFB(#7) | The d | ual posit | ion feed | back fun | ction (or | otion) is: | | |
| | | Not used | | | | / | | |
| | 1: U | Jsed. | | | | | | |
| [Reference item] | Subse | ction 4.5 | 57 | | | | | |
| [Related parameters] | ~ ~ ~ ~ ~ ~ ~ ~ | | • • | etc) 1 | 972 (15) | 0 2079 | (16 <i>i</i> etc |) 1973 |
| [related parameters] | | (16i), 20 (16i etc.) | | |) / 2 (13) | , 2017 | (10/ 000 | .,, 1775 |
| | 2000 | |) | | | | | |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | _ |
|--|------------------|-----------------------|---|-----------|-----------|-----------|----------|------------|--------|
| 1740 (FS15 <i>i</i>) | | P2EX | RISCMC | | ABG0 | IQOB | | OVSP | |
| 2200 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| OVSP (#0) | A feed | lback m | ismatch a | larm is: | | | | | |
| | 0: I | Detected | • | | | | | | |
| | 1: Not detected. | | | | | | | | |
| IQOB (#2) | | | es the once torque | | | ge satui | ration o | n unexj | pected |
| [Reference item] | | ction 4. | • | | | | | | |
| ABG0(#3) [Reference item] [Related parameters] | i Subse | s set sep ction 4. | a unexpector parately for 12.2 04 (16 <i>i</i> e | or cuttin | g and rap | oid trave | rse. | ed, a thro | eshold |
| RISCMC (#5) [Reference item] | 0: 7 1: 7 | The resp | processo onse to a onse to a 6.3 | position | ning com | | | | re. |

| P2EX (#6) [Reference item] | The velocity loop proportional gain (PK2V) format is: 0: Standard format. (See Item (5) of Subsec. 4.14.1.) 1: Converted format. Supplement 4 of Subsection 2.1.5 | | | | | | | | | |
|---|--|-----------------------------------|-----------------|-----------|------------|-----------|------------------|-------------------------|----|--|
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
| 1741 (FS15 <i>i</i>) | | CPEE | | | | | RNLV | CROFS | | |
| 2201 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | | |
| CROFS (#0) [Reference item] | The function for obtaining current offsets upon an emergency stop is: 0: Not used. 1: Used. Section 4.13 | | | | | | | | | |
| RNLV (#1) | Section 4.13 Specifies the detection level for the feedback mismatch alarm as follows: 0: 600 min ⁻¹ 1: 1000 min ⁻¹ | | | | | | | | | |
| CPEE (#6) | 0: | actual cur Not used Used | rent disp | lay peak | hold fur | nction is | | | | |
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
| 1742 (FS15 <i>i</i>) | | | | DUAL | OVS1 | PIAL | VGCCR | FADCH | | |
| 2202 (FS30 <i>i</i> , 16 <i>i</i>) FADCH (#0) | 0: | cutting/ra Not used. Used. | |) switchi | ng funct | ion is: | | | | |
| [Reference item] [Related parameters] | Secti 1702 | on 4.3 an | 09 (16 <i>i</i> | | |), 2143 | (16 <i>i</i> etc | .), 1951 (15 <i>i</i>) | ١, | |
| VGCCR (#1) | 0: | cutting/raj Not used. Used. | | city loop | gain swi | itching | function | is: | | |
| [Reference item] [Related parameters] | Secti | on 4.3 and $(15i)$, 210 | | | 5 | | | | | |
| PIAL (#2) | When rapid traverse is selected by the cutting/rapid velocity loop gain switching function, the 1/2 PI control function is: 0: Automatically disabled. 1: Always enabled. | | | | | | | | | |
| [Reference item] | Subs | ection 4.5 | .5 | | | | | | | |
| OVS1 (#3) | | Overshoo of a move | | | is valid o | only on | ce after t | he terminatior | n | |
| [Reference item] | | on 4.7 | | uiu. | | | | | | |

5.DETAILS OF PARAMETERS

| DUAL (#4) | Zerov | width is | determin | ied: | | | | | |
|---|---|---|---|--|---|---|--|------------------|--------|
| | | Only by By settin | setting = | · 0. | | | | | |
| [Reference item] [Related parameters] | Subse | ction 4. | • | etc.) | | | | | |
| | | | × × | , | | | | | |
| 1743 (FS15 <i>i</i>) | #7 | #6 | #5 TCMD4X | #4 FRCAX2 | #3 | #2 CRPI | #1 | #0 | |
| 2203 (FS30 <i>i</i> , 16 <i>i</i>) | | | | TROPAL | | orar | | | |
| CRPI (#2) | The c | urrent lo | oop 1/2 P | I control | function | n is: | | | |
| | | Not used | l. | | | | | | |
| [Reference item] | | Used. ection 4 | 5 5 | | | | | | |
| | Subsc | Ction 4. | 5.5 | | | | | | |
| FRCAX2 (#4) | | | ol type 2 | is: | | | | | |
| | | Not exer | | | | | | | |
| [Reference item] | | Exercise on 4.16 | d. | | | | | | |
| | Section | JII 4 .10 | | | | | | | |
| TCMD4X (#5) | | | ard outpu | | e of the | FCMD s | ignal is: | | |
| | | | (default) |). | | | | | |
| [Reference item] | 1: I Apper | Multiplie ndix I | ed by 4. | | | | | | |
| | rppe | | | | | | | | |
| | | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1744 (FS15 <i>i</i>) | #7 DBS2 | #6 | #5 PGTWN2 | | #3 | #2 | #1 HSTP10 | #0 | |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | DBS2 | | PGTWN2 | | | | HSTP10 | | |
| | DBS2 | valid sp | | | | | HSTP10 | | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | DBS2 The y | valid sp on is: | PGTWN2 | rement s | ystem f | or the l | HSTP10 | ed positi | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | DBS2 The y functi 0: (| valid sp on is:).01mm | PGTWN2 | rement s motor), (| ystem f 0.01mm | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) | DBS2 The y functi 0: (1: (| valid sp on is:).01mm ⁻¹ | PGTWN2 beed incr | rement s motor), (notor), 0. | ystem f 0.01mm | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] | The y functi 0: (1: (Subse | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 | PGTWN2 beed incr (rotary n (rotary n .8.1 and | rement s motor), (notor), 0. 4.8.2 | ystem f 0.01mm 1mm/m | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) | DBS2 The y functi 0: (1: (Subse Positi | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain | PGTWN2 eeed incr (rotary n (rotary n .8.1 and switching | rement s motor), (notor), 0. 4.8.2 | ystem f 0.01mm 1mm/m | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] | DBS2 The y functi 0: (1: (Subse Positi 0: 1 | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 | PGTWN2 eeed incr (rotary n (rotary n .8.1 and switching | rement s motor), (notor), 0. 4.8.2 | ystem f 0.01mm 1mm/m | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] | DBS2 The v functi 0: (1: (Subse Positi 0: 1 1: U Subse | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain Not used Used. | PGTWN2 beed incr (rotary n .8.1 and switching l. 8.1 | rement s motor), (notor), 0. 4.8.2 g type 2 | ystem f 0.01mm 1mm/m | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) | DBS2 The v functi 0: (1: (Subse Positi 0: 1 1: U Subse | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain Not used Used. | PGTWN2 beed incr (rotary n (rotary n .8.1 and switching l. | rement s motor), (notor), 0. 4.8.2 g type 2 | ystem f 0.01mm 1mm/m | or the l | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] | DBS2The v function0:1:0:1:0:1: | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain Not used Used. ection 4.1 (15 <i>i</i>), 20 | PGTWN2 peed incr (rotary n .8.1 and s switching l. 8.1 28 (16 <i>i</i> c | rement s motor), (notor), 0. 4.8.2 g type 2 i etc.) | ystem f 0.01mm 1mm/m is: | or the l /min (lin in (linear | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] | DBS2 The y functi 0: 0 1: 0 Subse Positi 0: 1 1: 0 Subse 1713 Quick | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain Not used Used. ection 4.1 (15 <i>i</i>), 20 | PGTWN2 Deed incr (rotary n (rotary n .8.1 and switching l. 8.1 028 (16 <i>i</i> e pe 2 at er | rement s motor), (notor), 0. 4.8.2 g type 2 i etc.) | ystem f 0.01mm 1mm/m is: | or the l /min (lin in (linear | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) | DBS2The v functi0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:1:0:1:0:1:0:1:0: | valid sp on is:).01mm ⁻¹).1mm ⁻¹ ections 4 on gain Not used Used. (15 <i>i</i>), 20 a stop ty Not used Used. | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 28 (16 <i>i</i> e pe 2 at er l. | rement s motor), (notor), 0. 4.8.2 g type 2 i etc.) | ystem f 0.01mm 1mm/m is: | or the l /min (lin in (linear | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] | DBS2The v functi0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:1:0:1:0:1:0:1:0: | valid sp on is: 0.01 mm^{-1} 0.1 mm^{-1} cetions 4 on gain Not used Used. ection 4.1 (15 <i>i</i>), 20 a stop typ Not used | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 28 (16 <i>i</i> e pe 2 at er l. | rement s motor), (notor), 0. 4.8.2 g type 2 i etc.) | ystem f 0.01mm 1mm/m is: | or the l /min (lin in (linear | HSTP10 nigh-spee ear moto | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) | DBS2The v functi0:0:1:0: <t< td=""><th>valid sp on is:).01mm⁻¹).1mm⁻¹ ections 4 on gain Not used Used. (15<i>i</i>), 20 a stop ty Not used Used. ection 4.</br></th><td>PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 028 (16<i>i</i> e pe 2 at er l. 11.2</td><td>rement s motor), () notor), 0. 4.8.2 g type 2 f etc.) mergency</td><td>ystem f 0.01mm 1mm/m is: / stop is:</td><td>or the l /min (lin in (linear</td><td>HSTP10 nigh-spec ear moto r motor).</td><td>ed positi r).</td><td>ioning</td></t<> | valid sp on is:).01mm ⁻¹ | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 028 (16 <i>i</i> e pe 2 at er l. 11.2 | rement s motor), () notor), 0. 4.8.2 g type 2 f etc.) mergency | ystem f 0.01mm 1mm/m is: / stop is: | or the l /min (lin in (linear | HSTP10 nigh-spec ear moto r motor). | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) [Reference item] | DBS2The v functi0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:0:1:0: | valid sp on is:).01mm ⁻¹).1mm ⁻¹ on gain Not used Used. (15 <i>i</i>), 20 a stop ty Not used Used. | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 28 (16 <i>i</i> e pe 2 at er l. | rement s motor), () notor), (). 4.8.2 g type 2 etc.) mergency | ystem f 0.01mm 1mm/m is: 7 stop is: 7 stop is: | or the l /min (lin in (linear | HSTP10 nigh-spec ear moto r motor). | ed positi r). | ioning |
| 2204 (FS30i, 16i) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) [Reference item] [Reference item] | DBS2The v functi0:0:1:0: <t< td=""><th>valid sp on is:).01mm⁻¹).1mm⁻¹ ections 4 on gain Not used Used. (15<i>i</i>), 20 a stop ty Not used Used. ection 4.</br></th><td>PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 028 (16<i>i</i> e pe 2 at er l. 11.2</td><td>rement s motor), () notor), 0. 4.8.2 g type 2 f etc.) mergency</td><td>ystem f 0.01mm 1mm/m is: / stop is:</td><td>or the l /min (lin in (linear</td><td>HSTP10 nigh-spec ear moto r motor).</td><td>ed positi r).</td><td>ioning</td></t<> | valid sp on is:).01mm ⁻¹ | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 028 (16 <i>i</i> e pe 2 at er l. 11.2 | rement s motor), () notor), 0. 4.8.2 g type 2 f etc.) mergency | ystem f 0.01mm 1mm/m is: / stop is: | or the l /min (lin in (linear | HSTP10 nigh-spec ear moto r motor). | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) [Reference item] | DBS2 The v function 0: 0 1: 0 Subset Position 0: 1 1: 0 | valid sp on is: 0.01 mm^{-1} 0.1 mm^{-1} ections 4 on gain Not used Used. (15 <i>i</i>), 20 a stop ty Not used Used. ection 4. (15i), 20 (15 | PGTWN2 eeed incr (rotary n .8.1 and switching l. 8.1 028 (16 <i>i</i> e pe 2 at er l. 11.2 | ement s motor), 0 notor), 0. 4.8.2 g type 2 etc.) mergency #4 HDIS | ystem f 0.01mm 1mm/m is: / stop is: / stop is: / #3 HD20 | or the l /min (lin in (linear //////////////////////////////////// | HSTP10 nigh-spec ear moto r motor). | ed positi r). | ioning |
| 2204 (FS30 <i>i</i> , 16 <i>i</i>) HSTP10 (#1) [Reference item] PGTWN2 (#5) [Reference item] [Related parameters] DBS2 (#7) [Reference item] 1745 (FS15 <i>i</i>) 2205 (FS30 <i>i</i> , 16 <i>i</i>) | DBS2 The y functi 0: 0 1: 0 Positi 0: 0: 1 1: 0 Quick 0: 0: 1 Subse #7 | valid sp on is: 0.01 mm^{-1} 0.1 mm^{-1} ections 4 on gain Not used Used. (15 <i>i</i>), 20 a stop ty Not used Used. ection 4. (15i), 20 (15 | PGTWN2 eeed incr -1 (rotary n (rotary n .8.1 and - switching 1. 28 (16i c pe 2 at er 1. 11.2 #5 eparate d | ement s motor), 0 notor), 0. 4.8.2 g type 2 etc.) mergency #4 HDIS | ystem f 0.01mm 1mm/m is: / stop is: / stop is: / #3 HD20 | or the l /min (lin in (linear //////////////////////////////////// | HSTP10 nigh-spec ear moto r motor). | ed positi r). | ioning |

| HD2O (#3) | detect | or is: | • | | | | | on of se | parate |
|-------------------------------------|--------|----------------------|----------|--------------------|-----------|--------------------|-----------|-----------|--------|
| | | | | es under | | | | | |
| [Reference item] | | Applied ection 4.1 | | inder syn | chronou | s contro | Ι. | | |
| HDIS (#4) | The | quick st | op func | ction for | hardwa | are disc | onnectio | on of se | parate |
| | detect | | | | | | | | |
| | | Disabled Enabled. | | | | | | | |
| [Reference item] | | ction 4.1 | 1.4 | | | | | | |
| [] | | | | | | | | | |
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1746 (FS15 <i>i</i>) | HSSR | | | HBSF | | | | | |
| 2206 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| HBSF (#4) | | | - | nsation a | amount | and pite | ch error | compen | sation |
| | | nt are ad | | or the ful | ll_closed | and sem | ni-closed | sides | |
| | | | • | | | | | eter (No. | 2010 |
| | | | • | - | | | - | parameter | |
| | | | | | | | | 10 (Serie | |
| | | · · | • | er No. 19 | 954 (Seri | es 15 <i>i</i>) a | are ignoi | ed. | |
| [Reference item] | Subse | ction 4.5 | 5.7 | | | | | | |
| USSD (#7) | Uiah | anood da | to outpu | t to the | hook ho | ard ic. | | | |
| HSSR (#7) | | Not perfe | | it to the c | meek boa | ard is. | | | |
| | | Performe | | | | | | | |
| [Reference item] | Apper | | | | | | | | |
| | | | | | | | | | |
| · · · · · · · · · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 1747 (FS15 <i>i</i>) | | | | | PK2D50 | | | NEGSHC | |
| 2207 (FS30 <i>i</i> , 16 <i>i</i>) | 0 | | · · · · | . | | | | | |
| NEGSHC (#0) | | | · · | ftware) is | 5: | | | | |
| | | Not igno gnored. | | | | | | | |
| [Reference item] | Sectio | | | | | | | | |
| [Related parameters] | | | 2209#4 | (16 <i>i</i> etc.) |) | | | | |
| | | ()) | | | | | | | |
| | Â | CAUT | ION | | | | | | |
| | | If the e | emerge | ncy sto | p state | is relea | ased w | ithout | |
| | | conne | cting th | e powe | r line ir | n a test | such a | as a test | : |
| | | | | start-up, | | | | | |
| | | | • | | | | • | sued. Ir | |
| | | | | | | | | mporari | |
| | | - | - | - | | | | er, be su | |
| | | to retu | rn the b | oit para | meter t | o U bef | ore sta | ntina un | in I |
| | | 11 | | peration | | | | • • | |

test.

| PK2D50 (#3) [Reference item] [Related parameters] | Specifies a variable proportional gain function in the stop state as follows: 0: 75% down. 1: 50% down. Subsection 4.4.3 1730 (15 <i>i</i>), 2119 (16 <i>i</i> etc.) | | | | | | | | | |
|--|---|--|--|--|--|--|--|--|--|--|
| r | #7 #6 #5 #4 #3 #2 #1 #0 | | | | | | | | | |
| 1749 (FS15 <i>i</i>) | PGAT HCNGL FADPGC FADL | | | | | | | | | |
| 2209 (FS30 <i>i</i> , 16 <i>i</i>) FADL (#2) | 6: FAD bell-shaped type1: FAD linear type | | | | | | | | | |
| [Reference item] [Related parameters] | Subsection 4.8.3 1702 (15 <i>i</i>), 2109 (16 <i>i</i> etc.) | | | | | | | | | |
| FADPGC (#3) | O: Synchronization is not established in the FAD setting rigid tapping mode. 1: Synchronization is established in the FAD setting rigid tapping | | | | | | | | | |
| [Reference item] | mode. Subsection 4.8.3 | | | | | | | | | |
| HCNGL (#4) | The overcurrent alarm avoidance function based on amplifier hardware is disabled. The overcurrent alarm avoidance function based on amplifier hardware is enabled. | | | | | | | | | |
| | NOTE 1 If an abnormal level of current that causes the overcurrent alarm to be issued is detected momentarily, processing is performed to suppress the level of current without issuing the alarm. 2 Even if this function is used, the overcurrent alarm is issued: When a complete short circuit occurs, or When the processing above for suppressing the level of current is continuously performed. | | | | | | | | | |
| PGAT (#6) | 0: Automatic format change for position gain is enabled.1: Automatic format change for position gain is disabled. (available in Series 90B0/01 (A) and later editions) | | | | | | | | | |
| r | #7 #6 #5 #4 #3 #2 #1 #0 | | | | | | | | | |
| 1750 (FS15 <i>i</i>) | ESPTM1 ESPTM0 PK12S2 | | | | | | | | | |
| 2210 (FS30 <i>i</i> , 16 <i>i</i>) PK12S2 (#2) | The current gain internally 4 times function is: 0: Not used. | | | | | | | | | |

- 0: Not used. 1: Used.
- [Reference item] Subsection 4.14.1

| A0(#5), ESPTM1(#6) | Set th | e timer b | unt mto | the <i>ui</i> a | mplifier | to uelay | emergen | icy sto |
|--|---|---|---|------------------------------|---------------------------------|---|-------------------------------|---------|
| | ES | PTM1 | ESPT | ТМО | | Delay | / time | |
| | | 0 | 0 | | 0ms (defa | ault) | | |
| | | 0 | 1 | | 00ms | | | |
| | | 1 | 0 | | 00ms | | | |
| [D - f] | Q ti . | 1 | 1 | 4 | 00ms | | | |
| [Reference item] | Sectio | on 4.11 | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 1751 (FS15 <i>i</i>) | | | | | | | РНСР | |
| 2211 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| PHCP (#1) [Related parameters] | 0: N 1: U | Not used. Used. | | | uring dec 57 (15 <i>i</i>), | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 2600 (FS15 <i>i</i>) | OVQK | #0 | # U | | #3 | #2 | #1 | #0 |
| 2212 (FS30 <i>i</i> , 16 <i>i</i>) | | | | 1 | | | | |
| OVQK (#7) | When | a quick | stop fun | ction at | the OVC | and OV | /L alarm | is: |
| | | Not used. | | | | | | |
| | 1: U | Jsed. | | | | | | |
| [Reference item] | Subse | ction 4.1 | 1.5 | | | | | |
| LJ | | | | | | | | |
| | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 2601 (FS15 <i>i</i>) | #7 OCM | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| 2601 (FS15 <i>i</i>) 2214 (FS30 <i>i</i> , 16 <i>i</i>) | 1 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| | OCM Pole p 0: I 1: H | | letection | | #3 n (optior | | #1 | #0 |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) | OCM Pole p 0: I 1: F Subse | oosition d Disabled. Enabled. | letection | functio | n (optior | al) is: | #1 | #0 |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] | OCM Pole p 0: I 1: H | Dosition C Disabled. Enabled. Action 4.1 | letection | functio | | | | |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] 2602 (FS15 <i>i</i>) | OCM Pole p 0: I 1: F Subse | Dosition C Disabled. Enabled. Action 4.1 | letection | functio | n (optior | al) is: | | |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] | OCM Pole p 0: I 1: H Subse #7 The cl 0: N 1: U | Dosition C Disabled. Enabled. Action 4.1 | letection 5.1 #5 pid feed- | #4 FFCHG | n (optior | al) is: #2 | #1 | |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] 2602 (FS15 <i>i</i>) 2214 (FS30 <i>i</i> , 16 <i>i</i>) FFCHG (#4) | OCM Pole p 0: I 1: H Subse #7 The cl 0: N 1: U | Dosition of Disabled. Enabled. Action 4.1 #6 utting/raj Not used. Jsed. | letection 5.1 #5 pid feed- | #4 FFCHG | n (optior #3 | al) is: #2 | #1 | |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] 2602 (FS15 <i>i</i>) 2214 (FS30 <i>i</i> , 16 <i>i</i>) FFCHG (#4) | OCM Pole p 0: I 1: H Subse #7 The cl 0: M 1: U Subse | bosition c Disabled. Enabled. ection 4.1 #6 utting/rap Not used. Jsed. cction 4.6 | letection 5.1 #5 pid feed- | #4 FFCHG | n (option #3 | al) is: #2 | #1 ion is: | #0 |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] 2602 (FS15 <i>i</i>) 2214 (FS30 <i>i</i> , 16 <i>i</i>) FFCHG (#4) [Reference item] | OCM Pole p 0: I 1: H Subse #7 The ct 0: N 1: U Subse #7 | bosition c Disabled. Enabled. ection 4.1 #6 utting/rap Not used. Jsed. cction 4.6 | letection 5.1 #5 pid feed- | #4 FFCHG | n (option #3 | #al) is: #2 | #1 ion is: #1 | #0 |
| 2214 (FS30 <i>i</i> , 16 <i>i</i>) OCM (#7) [Reference item] 2602 (FS15 <i>i</i>) 2214 (FS30 <i>i</i> , 16 <i>i</i>) FFCHG (#4) [Reference item] 2603 (FS15 <i>i</i>) | OCM Pole p 0: I 1: H Subse #7 The cl 0: M 1: U Subse #7 ABT2 A fur cance 0: I 1: H | bosition c Disabled. Enabled. Enabled. tection 4.1 #6 utting/rap Not used. Used. tection 4.6 #6 | letection 5.1 #5 oid feed- 6.4 #5 `setting rque offs | #4 FFCHG forward #4 | n (option #3 switchin #3 | mal) is: #2 mg funct #2 p integ | #1 ion is: #1 TCPCLR | #0 |

5.DETAILS OF PARAMETERS B-65270EN/06

| ABT2 (#7) [Reference item] | is: 0: I 1: H | ng/rapid Disabled Enabled. Action 4.7 | | ted distu | rbance t | orque de | tection f | unction ty | ype 2 |
|--|--|--|---|--|----------------------|------------------------------|---------------------------|------------|-------|
|] | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2608 (FS15 <i>i</i>) | | | P16 | | | | | DECAMR | |
| 2220 (FS30 <i>i</i> , 16 <i>i</i>) | | 1.: | 1-44 | • | | | | | |
| DECAMR (#0) | | Not used | detector | 18: | | | | | |
| | | Jsed. | • | | | | | | |
| [Reference item] | | ction 4. | 15.1 | | | | | | |
| [Related parameters] | 1705 | (15 <i>i</i>), 21 | 12 (16 <i>i</i> e | etc.), 176 | 61 (15 <i>i</i>), | 2138 (10 | bi etc.) | | |
| | 1.6 | | | | | | | | |
| P16 (#5) | | le servo Not used | motor is | • | | | | | |
| | | Jsed. | | | | | | | |
| [Reference item] | | ction 2. | 1.7 | | | | | | |
| [Related parameters] | 1806 | (15 <i>i</i>), 20 | 01 (16 <i>i</i> e | etc.) | | | | | |
| | | | | | | | | | |
| j1 | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2611 (FS15 <i>i</i>) | BLCUT2 | | | | | | | DISOBS | |
| 2223 (FS30 <i>i</i> , 16 <i>i</i>) DISOBS (#0) | 0: 1 | Not used | ce elimir | ation filt | ter funct | ion is: | | | |
| [Reference item] | | Used. ection 4.: | 5.3 | | | | | | |
| | Subse | ction 4. | | ion func | tion is: | | | | |
| [Reference item] BLCUT2 (#7) | Subse The b | ection 4.: acklash | accelerat | | | rapid tra | verse | | |
| | Subse The b 0: I | acklash Enabled | | cutting for | eed and | rapid tra | verse | | |
| | Subse The b 0: H 1: H | acklash Enabled | accelerat for both only for | cutting for | eed and | rapid tra | verse | | |
| BLCUT2 (#7) | Subse The b 0: I 1: I Subse | acklash Enabled Enabled Enabled | accelerat for both only for 5.6 | cutting for cutting for | eed and eed | - | | | |
| BLCUT2 (#7) [Reference item] | Subse The b 0: H 1: H | acklash Enabled Enabled | accelerat for both only for | cutting for | eed and | #2 | #1 | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) | Subse The b 0: I 1: I Subse | acklash Enabled Enabled Enabled | accelerat for both only for 5.6 | cutting for cutting for | eed and eed | - | | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) | Subse The b 0: I 1: I Subse #7 | acklash Enabled Enabled ection 4.0 #6 | accelerat for both only for 5.6 #5 | cutting fo cutting fo #4 | eed and eed #3 | #2 TSA05 | #1 TCMD05 | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) | Subse The b 0: I 1: I Subse #7 The c | acklash Enabled Enabled ection 4.0 #6 heck boa | accelerat for both only for 5.6 #5 ard outpu | cutting fo cutting fo #4 It voltage | eed and eed #3 | #2 TSA05 | #1 TCMD05 | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) | Subse The b 0: I 1: I Subse #7 The cl 0: Z | acklash Enabled Enabled ection 4.0 #6 heck boa | accelerat for both only for 5.6 #5 | cutting fo cutting fo #4 It voltage | eed and eed #3 | #2 TSA05 | #1 TCMD05 | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) | Subse The b 0: I 1: I Subse #7 The cl 0: Z | Action 4.3 acklash Enabled Enabled Action 4.0 #6 heck boa As usual Halved. | accelerat for both only for 5.6 #5 ard outpu | cutting fo cutting fo #4 It voltage | eed and eed #3 | #2 TSA05 | #1 TCMD05 | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) TCMD05 (#1) [Reference item] | Subse The b 0: I 1: I Subse #7 The c 0: A 1: I Appen | As usual Halved. As usual | accelerat for both only for 5.6 #5 ard outpu (default) | eutting fo cutting fo #4 | #3 | #2 TSA05 [CMD s | #1 TCMD05 ignal is: | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) TCMD05 (#1) | Subse The b 0: H 1: H Subse #7 The cl 0: A 1: H Appen The cl | Action 4.3 acklash Enabled Enabled Action 4.0 #6 heck boa As usual Halved. ndix I heck boa | accelerat for both only for 5.6 #5 ard outpu (default) | t voltage | #3 | #2 TSA05 [CMD s | #1 TCMD05 ignal is: | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) TCMD05 (#1) [Reference item] | Subse The b 0: I 1: I Subse #7 The cl 0: A 1: I Appen The cl 0: A | As usual heck boa | accelerat for both only for 5.6 #5 ard outpu (default) ard outpu (default) | t voltage | #3 | #2 TSA05 [CMD s | #1 TCMD05 ignal is: | #0 | |
| BLCUT2 (#7) [Reference item] 2613 (FS15 <i>i</i>) 2225 (FS30 <i>i</i> , 16 <i>i</i>) TCMD05 (#1) [Reference item] | Subse The b 0: I 1: I Subse #7 The cl 0: A 1: I Appen The cl 0: A | Action 4.3 acklash Enabled Enabled Action 4.0 #6 heck boa Halved. ndix I heck boa As usual Halved (| accelerat for both only for 5.6 #5 ard outpu (default) | t voltage | #3 | #2 TSA05 [CMD s | #1 TCMD05 ignal is: | #0 | |

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|--|---|-----------|-------------------|--------------------|------------------|---------|-------------|------|
| 2616 (FS15 <i>i</i>) | | | | | ELSAL | | | | |
| 2228 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| ELSAL (#3) | In pol | e detecti | on, the n | notor sal | iency is: | | | | |
| | | Lq>Ld | | | | | | | |
| | | Lq <ld< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td></ld<> | | | | | | | |
| [Reference item] | Subse | ction 4.1 | 5.1 | | | | | | |
| | | | | | | | | | |
| 0047 (5045) | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2617 (FS15 <i>i</i>) | | | | FORME | WATRA | | | ABSEN | |
| 2229 (FS30 <i>i</i> , 16 <i>i</i>) | T., | . 1.44 | (1 / | | | | | | |
| ABSEN (#0) | - | e detecti | | AMK OII: | set is: | | | | |
| | | Not used. Used. | | | | | | | |
| [Reference item] | | ction 4.1 | 5.1 | | | | | | |
| [Related parameters] | | (15i), 21 | | etc) | | | | | |
| [Related parameters] | 1702 | (150), 21 | 57 (10/ 0 | | | | | | |
| WATRA (#3) | After | pole dete | ection, a | n abnorn | nal operat | tion is: | | | |
| | | Monitore | | | 1 | | | | |
| | 1: N | Not moni | itored. | | | | | | |
| [Reference item] | Subse | ction 4.1 | 5.1 | | | | | | |
| | | | | | | | | | |
| | NC | DTE | | | | | | | |
| | | This fu | nction | can be | used w | ith Ser | ries 90 | B1/Editio | 'n |
| | | 02 or la | ater (FS | 615 <i>i</i> , 16 | 5 <i>i</i> , etc.) | or Ser | ies 90 | D0 and | |
| | | 90E0/E | Edition | 10 or la | ter (FS | 30 <i>i</i> , et | c.). | | |
| | | | | | | | | | |
| FORME (#4) | | | | | etection is | | | | |
| | | | | | e (minute | operati | on mode | e + stop mo | ode) |
| | | Minute of | • | mode | | | | | |
| [Reference item] | Subse | ction 4.1 | 5.1 | | | | | | |
| | — ——————————————————————————————————— | | | | | | | | |
| | | DTE | | | | | | | |
| | | | | | | | | B1/Editio | 'n |
| | | | • | | 5 <i>i</i> , etc.) | | | D0 and | |
| | | 90E0/E | Edition | 10 or la | ter (FS | 30 <i>i</i> , et | c.). | | |
| | | | | | | | | | |
| [] ī | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2683 (FS15 <i>i</i>) | DSTIN | DSTTAN | DSTWAV | | ACREF | | | AMR60 | |
| 2270 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| AMR60 (#0) | | | | | MR offs | et is fro | m: | | |
| | | 45 degre | | U | | | | | |
| [D - f | | 60 degre | to $+6$ | 0 degree | s. | | | | |
| [Reference item] | Secuc | on 4.14 | | | | | | | |
| ACREF (#3) | The a | ctive res | onance e | liminatio | on filter i | ç. | | | |
| $\pi = \pi = \pi = \pi = \pi$ | | Not used. | | mail | | | | | |
| | | | • | | | | | | |
| | 1. 1 | Jsed | | | | | | | |
| [Reference item] | | Used. ection 4.5 | 5.2 | | | | | | |
| [Reference item] | | ction 4.5 | 5.2 | | | | | | |

| DSTWAV(#5) [Reference item] | 0: 1: | input wav Sine wav Square w endix H | e. (Usua | | - | | - | | | |
|--|--|---|---|---|--|--|--------------------------------|--------------------------------|-------------------|--|
| DSTTAN(#6) | Distu 0: | Disturbance is: 0: Input for one axis only. | | | | | | | | |
| [Reference item] | App | side of sy endix H | nchrono | ous axes (| or tande | m axes). | | | | |
| DSTIN(#7) | 0: | disturband Not used | | function | is: | | | | | |
| [Reference item] | | Used. endix H | | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
| 2684 (FS15 <i>i</i>) | | | | | | RETR2 | | |] | |
| 2271 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | 1 | |
| RETR2 (#2) | Whe | n an unex | mected of | disturban | ce torau | ie is dete | ected. th | e simulta | neous | |
| | | axis retrac | | | | | , | | | |
| | 0: | Not used | - | | | | | | | |
| | | | | | | | | | | |
| | 1. | Used. | | | | | | | | |
| | 1. | Used. | | | | | | | | |
| | | Used. #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
| 2686 (FS15 <i>i</i>) | #7 | #6 | | #4 POA1NG | #3 | #2 | #1 | - |] | |
| 2686 (FS15 <i>i</i>) | #7 | | | | #3 | #2 | #1 | #0 WSVCP |] | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | #7 DBTLIN | #6 / EGBFFG | EGBEX | POA1NG | | | | WSVCP |] ator of | |
| | #7 DBTLIN Whe | #6 I EGBFFG n the sim | EGBEX | POA1NG | | | | WSVCP |] ator of | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | #7 DBTLIN Whe the n | #6 I EGBFFG n the sim naster axis | EGBEX | POA1NG | control | is used, | | WSVCP |] ator of | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | #7 DBTLIN Whe the n 0: | #6 I EGBFFG n the sim naster axis Can not b | EGBEX ple sync s : pe copiec | POA1NG chronous d to the s | control lave axis | is used, | | WSVCP |] ntor of | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | #7 DBTLIN Whe the n 0: 1: | #6 I EGBFFG n the sim naster axis Can not b Can be co | EGBEX ple sync s : be copiec opied to | POA1NG chronous d to the s the slave | control lave axis | is used, | | WSVCP |] ator of | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) | #7 DBTLIN Whe the n 0: 1: (Spe | #6 I EGBFFG n the sim naster axis Can not b | EGBEX ple sync s : be copiec opied to the slave | POA1NG chronous d to the s the slave | control lave axis | is used, | | WSVCP |] ator of | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: | #6 I EGBFFG n the sim naster axis Can not b Can be co cify only | EGBEX ple sync s : be copied opied to the slave .9.9 tion of the is: ed. | POA1NG chronous d to the s the slave e axis.) | control lave axis axis. | is used, s. | the loo | wsvср p integra | | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) | #7 DBTLIM Whe the n 0: 1: (Spe Subs In th ratio 0: 1: | #6 n the sim naster axis Can not b Can be co cify only section 4.1 te calculat (LDINT) Consider Not cons | EGBEX ple sync s : be copied opied to the slave .9.9 tion of the is: ed. idered. | POA1NG chronous d to the s the slave e axis.) he observ | control lave axis axis. | is used, s. ficient (F | the loo POA1), 1 | wsvср p integra | | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The | #6 n the sim naster axis Can not b Can be co cify only section 4.1 e calculat (LDINT) Consider Not const | EGBEX ple synd s : be copied opied to the slave .9.9 tion of the is: ed. idered. matic ph | POA1NG chronous d to the s the slave e axis.) he observ | control lave axis axis. ver coeff | is used, s. ficient (F | the loo POA1), 1 | wsvср p integra | inertia | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The | #6 n the sim naster axis Can not b Can be co cify only section 4.1 te calculat (LDINT) Consider Not cons | EGBEX ple synd s : be copied to the slave .9.9 tion of th is: ed. idered. matic ph ormal m | POA1NG chronous d to the s the slave e axis.) he observ nase mate | control lave axis axis. ver coeff | is used, s. ficient (F | the loo POA1), 1 | wsvср p integra | inertia | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The 0: | #6 n the sim naster axis Can not b Can be co cify only section 4.1 e calculat (LDINT) Consider Not cons EGB auto In the no | EGBEX ple synd s : be copied opied to the slave .9.9 tion of the is: ed. idered. matic phormal mod detect extended | POA1NG chronous d to the s the slave e axis.) he observ nase mato node (de cor). | control lave axis e axis. ver coeff ching fun celeratio | is used, s. ficient (F nction is: on not p | the loo POA1), 1 erforme | msvcp p integra the load | inertia en the | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) EGBEX (#5) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The 0: 1: | #6 n the sim naster axis Can not b Can be co cify only section 4.1 e calculat (LDINT) Consider Not cons: EGB auto In the ne master ar In the e | EGBEX ple synd s : be copied opied to the slave .9.9 tion of the is: ed. idered. matic phormal mod detect extended | POA1NG chronous d to the s the slave e axis.) he observ nase mato node (de cor). | control lave axis e axis. ver coeff ching fun celeratio | is used, s. ficient (F nction is: on not p | the loo POA1), 1 erforme | msvcp p integra the load | inertia en the | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The 0: 1: FFG | #6 n the simmaster axis Can not b Can be considered in the calculate (LDINT) Considered Not considered EGB autoo In the new master are In the emaster are is: | EGBEX ple synd s : be copied to the slave .9.9 tion of the is: ed. idered. matic pla ormal m ad detect extended ad detect | POA1NG chronous d to the s the slave e axis.) he observ nase mato node (de cor). mode cor). | control lave axis axis. ver coeff ching fun celeratio (deceler | is used, s. ficient (F nction is: on not p | the loo POA1), 1 erforme | msvcp p integra the load | inertia en the | |
| 2273 (FS30 <i>i</i> , 16 <i>i</i>) WSVCP (#0) [Reference item] POA1NG (#4) EGBEX (#5) | #7 DBTLIN Whe the n 0: 1: (Spe Subs In th ratio 0: 1: The 0: 1: FFG | #6 n the sim naster axis Can not b Can be co cify only section 4.1 e calculat (LDINT) Consider Not cons: EGB auto In the ne master ar In the e | EGBEX ple synd s : be copied opied to the slave .9.9 tion of the is: ed. idered. matic phormal m d detect extended ad detect idered in | POA1NG chronous d to the s the slave e axis.) he observ nase mato node (de cor). mode cor). | control lave axis axis. ver coeff ching fun celeratio (deceler B ratio. | is used, s. ficient (F nction is: on not p | the loo POA1), 1 erforme | msvcp p integra the load | inertia en the | |

5.DETAILS OF PARAMETERS

| HP2048 (#0) | During brake control, the torque limit setting function is:0: Disabled.1: Enabled. | | | | | | | | |
|-------------------------------------|--|--------------------|-----------------|--------------------------|------------|-----------|-----------|-------------------|--|
| [Related parameters] | | (15 <i>i</i>), 23 | | etc.) | | | | | |
| · | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2687 (FS15 <i>i</i>) | | | | | | | | HP2048 | |
| 2274 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| HP2048 (#0) | | | | tion circu | uit (posit | ion dete | ction cir | cuit H or C) is: | |
| | | Not used | • | | | | | | |
| [Reference item] | | Used. | 1 4 and § | Section 4 | 14 | | | | |
| | Subse | 2.1 | 1.4 anu s | Section 4 | .14 | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2688 (FS15 <i>i</i>) | | | | ASYN | | | RCNCLF | R 800PLS | |
| 2275 (FS30 <i>i</i> , 16 <i>i</i>) | | | | 1 | | | | | |
| 800PLS (#0) | When | the RC | N723 or | RCN223 | is used, | the refe | rence co | ounter setting is | |
| | made | in refere | ence to: | | | | | - | |
| | | 1/8 turns | | | | | | | |
| | | l turn of | | ctor. | | | | | |
| [Reference item] | Subse | ection 2.1 | 1.4 | | | | | | |
| RCNCLR (#1) | The s | peed dat | a is: | | | | | | |
| | - | Not clear | | | | | | | |
| | 1: (| Cleared. | (To use | the RCN | 223 or F | RCN723, | set it to |) 1.) | |
| [Reference item] | | ection 2.1 | | | | | | | |
| [Related parameters] | 2807 | (15i), 23 | 94 (16 <i>i</i> | etc.) | | | | | |
| ASYN (#3) | Synck | ronous | avec aut | omatic co | mnonco | tion fund | tion is. | | |
| ASIN $(\pi 3)$ | | Disabled | | | mpensa | | | | |
| | | Enabled. | • | | | | | | |
| [Reference item] | Sectio | on 4.18 | | | | | | | |
| | | | | | | | | | |
| ·i r | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2696 (FS15 <i>i</i>) | BLSTP2 | | | | | | | NOG54 | |
| 2283 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | / - | | • | |
| NOG54(#0) | 0 | 1 | | | | ` | | ontrol) is: | |
| | | | • | both G5.4 | - | | | | |
| | |)TE | | is specifi | eu. (03.4 | +Q1 IS II | | lored.) | |
| | | | Inction | can be | | uhon sa | | 2//2 | |
| | | | | d with t | | | - | - | |
| | | | | <i>i</i> /32 <i>i</i> (S | | | | | |
| | | | | cannot | | | | | |
| | | | l is use | | | | | 111.04 | |
| [Reference item] | Sectio | | | <u>u.</u> | | | | | |
| | | | | | | | | | |
| BLSTP2 (#7) | | | | ling back | lash acc | eleration | n after a | stop is: | |
| | | Not used | | | | | | | |
| | 1: 1 | Used. | | | | | | | |
| | | - | 419 - | | | | | | |

5.DETAILS OF PARAMETERS

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-------------------------------------|--|---------------------|----------|------------|-----------|---------|------|----------|--|
| 2713 (FS15 <i>i</i>) | CKLNOH | | | | | DO | | HRVEN | |
| 2300 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | | |
| HRVEN(#0) | The ex | tended | HRV fur | nction is: | | | | | |
| | 0: N | ot used | | | | | | | |
| | 1: U | sed. | | | | | | | |
| | NO | | s functi | on whe | n using | g servo | HRV4 | control. | |
| [Reference item] | Section | n 4.2 | | | | | | | |
| DD (#2) [Reference item] | 1: Synchronous built-in servo motor control is exercised. This bit is automatically set when the synchronous built-in servo motor parameters are initialized. However, before driving a synchronous built-in servo motor, check that this bit is set to 1. Subsection 4.15.1 | | | | | | | | |
| CKLNOH (#7) [Reference item] | 0: N 1: P | ot perfo erforme | ed. | verheat v | ia the PM | MC is: | | | |

☆: Parameters set up automatically at initialization

\star : Parameters that can be kept at the automatically set values

| Parame | ter number | 4 | | | | | |
|---|--------------|--|---|--|--|--|--|
| Series 15 <i>i</i> Series 30 <i>i</i> , 16 <i>i</i> , | | Details | | | | | |
| and so on | | | | | | | |
| 1896 | 1821 | Reference counter capacity | →2.1.3 | | | | |
| 1825 | 1825 | Position loop gain (position gain) | →3.1 | | | | |
| 1851 | 1851 | Backlash compensation value | →4.6.6, 4.6.7 | | | | |
| 1874 2020 | 0000 | Motor ID No. | → 2.1.2, 4.14.1 | | | | |
| | 2020 | Motor ID number that can be specified | Initial setting | | | | |
| 1875 | 2021 | Load inertia ratio (LDINT) Load inertia Kotor inertia Increase velocity loop gain parameters PK1V and PK2V by | Adjust for individual machines separately. | | | | |
| 4070 | 0000 | (1 + LDINT/256) times | | | | | |
| 1879 | 2022 | Rotation direction of the motor | → 2.1.2, 4.14.1 | | | | |
| 1876 | 2023 | Number of velocity pulse | Initial setting | | | | |
| 1891 | 2024 | Number of position pulse | - | | | | |
| 1713 | 2028 | Velocity enabling position gain switching | \rightarrow 4.8.1 | | | | |
| 1714 | 2029 | Acceleration-time velocity enabling integral function for low | → 4.8.2 | | | | |
| 1715 | 2030 | speed Deceleration-time velocity enabling integral function for low speed | → 4.8.2 | | | | |
| 1718 | 2033 | Number of position feedback pulses | 4.5.0 | | | | |
| 1719 | 2034 | Vibration damping control gain | → 4.5.6 | | | | |
| 1721 | 2036 | Tandem control/damping compensation gain (main axis) Tandem control/damping compensation phase coefficient (sub-axis) | → 4.19.2, 4.17 | | | | |
| 1724 | 2039 | 2-stage backlash acceleration function : stage 2 acceleration amount | → 4.6.7 | | | | |
| 1852 | 2040 | Current loop gain (PK1) | ★ Motor-specific | | | | |
| 1853 | 2041 | Current loop gain (PK2) | ★ Motor-specific | | | | |
| 1854 | 2042 | Current loop gain (PK3) | ★ Motor-specific | | | | |
| 1855 | 2043 | Velocity loop integral gain (PK1V) | ☆ Motor-specific Adjust for individual | | | | |
| 1856 | 2044 | Velocity loop proportional gain (PK2V) | machines separately | | | | |
| 1857 | 2045 | Velocity loop incomplete integral gain (PK3V) | $\begin{array}{c} & \\ & \\ \hline \\ & \\ \hline \\ & \\ \hline \\ & \\ \hline \\ & \\ \hline \\ & \\ \\ & \\ \\ & \\ \\ & \\ \\ \\ & \\ \\ \\ \\$ | | | | |
| 1858 | 2046 | Velocity loop gain (PK4V) | ★ Motor-specific | | | | |
| 1859 | 2047 | Observer parameter (POA1) This parameter is adjusted when the unexpected disturbance torque detection and two-stage backlash functions are used. NOTE: If the velocity gain (load inertia ratio) is changed, this parameter must be re-adjusted. | ★ Motor-specific \rightarrow 4.6.7, 4.12 | | | | |
| 1860 | 2048 | Backlash acceleration amount | ☆ → 4.6.6, 4.6.7 | | | | |
| 1861 | 2049 | Maximum dual position feedback amplitude | ☆ → 4.5.7 | | | | |
| 1862 1863 | 2050 2051 | Observer gain (POK1) Observer gain (POK2) When only the unexpected disturbance torque detection function is used, these parameters must be changed. | ☆ Motor-specific → 4.12 | | | | |
| 1864 | 2052 | Not used | * | | | | |
| 1865 | 2052 | Current dead-band compensation (PPMAX) | ★ Motor-specific | | | | |
| 1000 | 2000 | | A motor specific | | | | |

$\bigstar: \quad \text{Parameters set up automatically at initialization}$

| Parame | ter number | | |
|--------------------|------------------------------------|--|--|
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , | Details | |
| | and so on | | |
| 1866 | 2054 | Current dead-band compensation (PDDP) | ★ Motor-specific |
| 1000 | 2001 | The standard setting for αi motors is 1894. | |
| 1867 | 2055 | Current dead-band compensation (PHYST) | |
| 1868 | 2056 | Variable current loop gain during deceleration (EMFCMP) | |
| 1869 | 2057 | Phase D current at high-speed (PVPA) | ★ Motor-specific |
| 1870 | 2058 | Phase D current limit (PALPH) | |
| 1871 | 2059 | Back electromotive force compensation (EMFBAS) | |
| 1872 | 2060 | Torque limit The standard setting represents the maximum current of the amplifier. | ★ Motor-specific |
| 1873 | 2061 | Back electromotive force compensation (EMFCMP) | |
| 1877 | 2062 | Overload protection coefficient (POVC1) | ★ Motor-specific |
| 1878 | 2063 | Overload protection coefficient (POVC2) | |
| 1892 | 2064 | Software disconnection alarm level | ★ Motor-specific → 3.2 |
| 1893 | 2065 | Soft thermal coefficient (POVCLMT) | ★ Motor-specific |
| 1894 | 2066 | Acceleration feedback gain | $\Rightarrow 4.4.2$ |
| 1895 | 2067 | Torque command filter | ☆ → 4.5.1 |
| 1961 | 2068 | Feed-forward coefficient | $\Rightarrow 4.6.1$ to 4.6.5 |
| 1962 | 2069 | Velocity feed-forward coefficient | $\Rightarrow 4.6.1$ to 4.6.5 |
| 1963 | 2000 | Backlash acceleration timing | $\Rightarrow 4.6.6$ |
| 1905 | 2070 | Time during which backlash acceleration is effective, | |
| 1964 | 2071 | Static friction compensation count | ☆ → 4.6.6, 4.6.8 |
| 1965 | 2072 | Static friction compensation amount | ☆ → 4.6.8 |
| 1966 | 2073 | Stop state judgment parameter | $\Rightarrow 4.6.8$ |
| 1967 | 2074 | Current loop gain variable with velocity | ★ Motor-specific |
| 1968 | 2075 | Not in use at present. | ☆ |
| 1969 | 2076 | Not in use at present. | ☆ |
| 1970 | 2077 | Overshoot compensation counter | $\Rightarrow 4.7$ |
| 1971 | 2078 | Dual position feedback Conversion coefficient (numerator) | |
| 1971 | 2078 | Conversion coefficient (denominator) | ☆ → 4.5.7 |
| 1972 | 2079 | Constant of first-order lag | |
| 1973 | 2080 | Zero zone | |
| 1974 | 2081 | Backlash acceleration stop amount | ☆ → 4.6.6, 4.6.7 |
| 1975 | 2082 | Brake control timer (msec) | $\begin{array}{c} x \rightarrow 4.0.0, 4.0.7 \\ x \rightarrow 4.10 \end{array}$ |
| | | | |
| 1977 1978 | 2084 2085 | Flexible feed gear (numerator) | \rightarrow 2.1.2, 4.14.1 |
| | | Flexible feed gear (denominator) | Initial setting ★ Motor-specific |
| 1979 | 2086 | Rated current parameter | ★ Motor-specific $\Rightarrow 4.6.7, 4.12$ |
| 1980 | 2087 | Torque offset Tandem control/Preload value | $\begin{array}{c} x \rightarrow 4.0.7, 4.12 \\ x \rightarrow 4.19.1 \end{array}$ |
| 1001 | 2000 | | $\Rightarrow 4.19.1$ $\Rightarrow \rightarrow 4.5.8$ |
| 1981 | 2088 | Machine speed feedback gain | ж → 4.0.0 |
| 1982 | 2089 | 2-stage backlash acceleration function : stage-2 end magnification | ☆ → 4.6.7 |
| 1984 | 2091 | Nonlinear control parameter | ☆ |
| 1985 | 2092 | Advanced preview feed-forward coefficient | ☆ → 4.6.2 |
| 1987 | 2094 | Backlash acceleration amount in the negative direction | ☆ →4.6.6, 4.6.7 |
| 1988 | 2095 | Feed-forward timing adjustment coefficient | ☆ →4.6.5 |

☆: Parameters set up automatically at initialization

| Parame | ter number | | |
|--------------------|------------------------------------|---|--|
| a | Series 30 <i>i</i> , 16 <i>i</i> , | Details | |
| Series 15 <i>i</i> | and so on | | |
| 1990 | 2097 | Static friction compensation stop parameter | ☆ → 4.6.8 |
| 1991 | 2098 | Current phase lead compensation coefficient | ★ Motor-specific |
| 1992 | 2099 | N pulses suppression function | $\star \rightarrow 4.4.4$ |
| 1994 | 2101 | Overshoot compensation valid level | ☆ → 4.7 |
| 1995 | 2102 | Final clamp value for the actual-current limit | ★ Motor-specific |
| 1996 | 2103 | Track back amount applied when an unexpected disturbance torque is detected | ☆ → 4.12 |
| 1997 | 2104 | Unexpected disturbance torque detection alarm level (cutting when switching is used) | ☆ → 4.12 |
| 1998 | 2105 | Torque constant | ☆ → 4.16 |
| 1700 | 2107 | Velocity loop gain override | $\Rightarrow 4.3$ |
| 1702 | 2109 | Fine acc./dec. time constant (rapid traverse when switching is used) | $\doteqdot \rightarrow$ 4.3 and 4.8.3 |
| 1703 | 2110 | Magnetic saturation compensation | ★ Motor-specific |
| 1704 | 2111 | Torque limit at deceleration | ★ Motor-specific |
| 1705 | 2112 | Linear motor AMR conversion coefficient 1 | ☆ → 4.14 |
| 1706 | 2113 | Resonance elimination filter 1: attenuation center frequency | $\Rightarrow 4.5.2$ |
| 1725 | 2114 | Backlash acceleration function : acceleration amount override 2-stage backlash acceleration function : stage 2 acceleration amount override | \rightarrow 4.6.6 \rightarrow 4.6.7 |
| 1726 | 2115 | For internal data output: Usually to be kept at 0. | |
| 1727 | 2116 | Unexpected disturbance torque detection : dynamic friction cancel | → 4.12 |
| 1729 | 2118 | Dual position feedback Semi-closed/full-closed error overestimation level | → 4.5.7 |
| 1730 | 2119 | Variable proportional gain function in the stop state : Stop level | → 4.4.3, 4.5.4 |
| 1732 1733 | 2121 2122 | Not used | |
| 1737 | 2126 | Tandem control/position feedback switching time constant | → 4.19.7 |
| 1735 | 2127 | Non-interference control coefficient (NINTCT) | ★ Motor-specific |
| 1736 | 2128 | Coefficient for magnetic flux weaken compensation (MFWKCE) | ★ Motor-specific |
| 1752 | 2129 | Coefficient for magnetic flux weaken compensation (MFWKBL) | ★ Motor-specific |
| 1753 | 2130 | Smoothing compensation performed twice per pole pair | |
| 1754 | 2131 | Smoothing compensation performed four times per pole pair | ☆ → 4.14.3 |
| 1755 | 2132 | Smoothing compensation performed six times per pole pair | |
| 1756 | 2133 | Coefficient for phase lag compensation during deceleration (PHDLY1) | ★ Motor-specific |
| 1757 | 2134 | Coefficient for phase lag compensation during deceleration (PHDLY2) | ★ Motor-specific |
| 1760 | 2137 | 2-stage backlash acceleration function : stage 1 acceleration amount override | → 4.6.7 |
| 1761 | 2138 | Linear motor AMR conversion coefficient 2 | → 4.14 |
| 1762 | 2139 | Linear motor AMR offset | -7 4.14 |
| 1765 | 2142 | Unexpected disturbance torque detection alarm level in rapid traverse | → 4.12.2 |
| 1766 | 2143 | Fine acc./dec. time constant 2 (in cutting) | → 4.3, 4.8.3 |
| 1767 | 2144 | Position feed-forward coefficient for cutting | → 4.3, 4.6.4, 4.8.3 |
| 1768 | 2145 | Velocity feed-forward coefficient for cutting | → 4.3, 4.6.4, 4.8.3 |

 \bigstar : Parameters set up automatically at initialization

| Parame | ter number | | |
|--------------------|------------------------------------|---|--|
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , | Details | |
| Series 151 | and so on | | |
| 1769 | 2146 | Two-stage backlash acceleration end timer | → 4.6.7 |
| 4774 | 04.40 | Deceleration decision level (HRV control) | Usually adjustment is |
| 1771 | 2148 | Usually to be kept at 0. | not needed. |
| 1774 | 2151 | For internal data output: Usually, be sure to set 0. | |
| 1775 | 2152 | For internal data output: Usually, be sure to set 0. | |
| 1776 | 2153 | For internal data output: Usually, be sure to set 0. | |
| 1777 | 2154 | Static friction compensation function : decision level for movement restart after stop. | → 4.6.8 |
| 1779 | 2156 | Torque command filter (at rapid traverse) | → 4.3, 4.5.1 |
| 1784 | 2161 | OVC magnification at a stop (OVCSTP) | ★ Motor-specific |
| 1785 | 2162 | Soft thermal coefficient 2 (POVC21) | ★ Motor-specific |
| 1786 | 2163 | Soft thermal coefficient 2 (POVC22) | ★ Motor-specific |
| 1787 | 2164 | Soft thermal coefficient 2 (POVCLMT2) | ★ Motor-specific |
| 1788 | 2165 | Maximum amplifier current | ★ Motor-specific |
| 1790 | 2167 | 2-stage backlash acceleration function : stage 2 acceleration amount offset | → 4.6.7 |
| 2620 | 2177 | Resonance elimination filter 1: attenuation bandwidth | → 4.5.2 |
| 2622 | 2179 | Reference counter size (denominator) | $\rightarrow 2.1.3$ |
| 2625 | 2182 | Current A for pole detection (DTCCRT_A) | → 4.15.1 |
| 2628 | 2185 | Position pulses conversion coefficient | \rightarrow 2.1, 2.1.8, 4.14.1, Initial setting |
| 2641 | 2198 | Current B for pole detection (DTCCRT_B) | → 4.15.1 |
| 2642 | 2199 | Current C for pole detection (DTCCRT_C) | → 4.15.1 |
| 2681 | 2268 | Allowable travel distance magnification/stop speed decision value (MFMPMD) | → 4.15.1 |
| 2731 | 2318 | Disturbance elimination filter : gain | → 4.5.3 |
| 2732 | 2319 | Disturbance elimination filter : inertia ratio | → 4.5.3 |
| 2733 | 2320 | Disturbance elimination filter : inverse function gain | → 4.5.3 |
| 2734 | 2321 | Disturbance elimination filter : time constant | → 4.5.3 |
| 2735 | 2322 | Disturbance elimination filter : acceleration feedback limit | → 4.5.3 |
| 2736 | 2323 | Variable current PI rate | → 4.5.5 |
| 2737 | 2324 | Variable proportional gain function in the stop state : arbitrary magnification at a stop (for cutting only) | → 4.4.3 |
| 2738 | 2325 | Tandem disturbance elimination control function/integral gain (main axis) Tandem disturbance elimination control function/phase coefficient (sub-axis) | → 4.17 |
| 2739 | 2326 | Disturbance input : gain | \rightarrow Appendix H |
| 2740 | 2327 | Disturbance input : start frequency | \rightarrow Appendix H |
| 2741 | 2328 | Disturbance input : end frequency | \rightarrow Appendix H |
| 2742 | 2329 | Number of disturbance input measurement points | \rightarrow Appendix H |
| 2746 | 2333 | Tandem disturbance elimination control function /incomplete integral time constant (main axis) | → 4.17 |
| 2747 | 2334 | Current loop gain magnification (enabled only during high-speed HRV current control) | → 4.2 |
| 2748 | 2335 | Velocity loop gain magnification (enabled only during high-speed HRV current control) | → 4.2 |

☆: Parameters set up automatically at initialization

| Parame | ter number | | | | | | | | |
|--------------------|------------------------------------|---|------------------|--|--|--|--|--|--|
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , | Details | | | | | | | |
| | and so on | | . 4 6 6 | | | | | | |
| 2751 | 2338 | Backlash acceleration function : acceleration amount limit value 2-stage backlash acceleration function : stage-2 acceleration amount limit value | →4.6.6 →4.6.7 | | | | | | |
| 2752 | 2339 | 2-stage backlash acceleration function : stage-2 acceleration amount (negative direction) | →4.6.7 | | | | | | |
| 2753 | 2340 | Backlash acceleration function : acceleration amount override (negative direction) Backlash acceleration function : Acceleration amount override | →4.6.6 →4.6.7 | | | | | | |
| 2754 | 2341 | (negative direction) 2-stage backlash acceleration function : stage-2 acceleration amount limit value (negative direction) | →4.6.6 | | | | | | |
| | | 2-stage backlash acceleration function : stage-2 acceleration amount limit value (negative direction) | →4.6.7 | | | | | | |
| 2758 | 2345 | Disturbance estimation function : dynamic friction compensation value in the stop state | → 4.12.1 | | | | | | |
| 2759 | 2346 | Disturbance estimation function : dynamic friction compensation limit value | → 4.12.1 | | | | | | |
| 2765 | 2352 | Active resonance elimination filter : detection level | →4.5.2 | | | | | | |
| 2772 | 2359 | Resonance elimination filter 1 : damping | →4.5.2 | | | | | | |
| 2773 | 2360 | Resonance elimination filter 2 : attenuation center frequency | →4.5.2 | | | | | | |
| 2774 | 2361 | Resonance elimination filter 2 : attenuation bandwidth | →4.5.2 | | | | | | |
| 2775 | 2362 | Resonance elimination filter 2 : damping | →4.5.2 | | | | | | |
| 2776 | 2363 | Resonance elimination filter 3 : attenuation center frequency | →4.5.2 | | | | | | |
| 2777 | 2364 | Resonance elimination filter 3 : attenuation bandwidth | →4.5.2 | | | | | | |
| 2778 | 2365 | Resonance elimination filter 3 : damping | →4.5.2 | | | | | | |
| 2779 | 2366 | Resonance elimination filter 4 : attenuation center frequency | →4.5.2 | | | | | | |
| 2780 | 2367 | Resonance elimination filter 4 : attenuation bandwidth | →4.5.2 | | | | | | |
| 2781 | 2368 | Resonance elimination filter 4 : damping | →4.5.2 | | | | | | |
| 2782 2783 | 2369 2370 | Smoothing compensation performed twice per pole pair (negative direction) Smoothing compensation performed four times per pole pair (negative direction) | →4.14.3 | | | | | | |
| 2784 | 2371 | Smoothing compensation performed six times per pole pair (negative direction) | | | | | | | |
| 2785 | 2372 | Serial EGB exponent setting | | | | | | | |
| 2786 | 2373 | Lifting function against gravity at emergency stop : Distance to lift | →4.11.3 | | | | | | |
| 2787 | 2374 | Lifting function against gravity at emergency stop : Lifting time | →4.11.3 | | | | | | |
| 2788 | 2375 | Torque limit magnification during brake control | → 4.10 | | | | | | |
| 2790 2791 | 2377 2378 | Smoothing compensation performed 1.5 times per pole pair Smoothing compensation performed 1.5 times per pole pair (negative direction) | →4.15.3 | | | | | | |
| 2793 2794 | 2380 2381 | Smoothing compensation performed three times per pole pair Smoothing compensation performed three times per pole pair (negative direction) | →4.15.3 | | | | | | |
| 2795 | 2382 | Torsion preview control: maximum compensation value (LSTCM) | →4.6.9 | | | | | | |

\bigstar : Parameters set up automatically at initialization

| Parame | ter number | | | |
|--------------------|------------------------------------|--|--------|--|
| Series 15 <i>i</i> | Series 30 <i>i</i> , 16 <i>i</i> , | Details | | |
| Series 15t | and so on | | | |
| 2796 | 2383 | Torsion preview control: acceleration 1 (LSTAC1) | | |
| 2797 | 2384 | Torsion preview control: acceleration 2 (LSTAC2) | →4.6.9 | |
| 2798 | 2385 | Torsion preview control: acceleration 3 (LSTAC3) | | |
| 2799 | 2386 | Torsion preview control: acceleration torsion compensation | | |
| 2800 | 2387 | value K1 (LSTK1) | | |
| 2801 | 2388 | Torsion preview control: acceleration torsion compensation value K2 (LSTK2) | →4.6.9 | |
| | | Torsion preview control: acceleration torsion compensation value K3 (LSTK3) | | |
| 2802 | 2389 | Torsion preview control: torsion delay compensation value KD | | |
| 2803 | 2390 | KD (LSTKD) | →4.6.9 | |
| | | Torsion preview control: torsion delay compensation value KDN (LSTKDN) | 74.0.3 | |
| 2804 | 2391 | Torsion preview control: acceleration torsion compensation value K1N (LSTK1N) | | |
| 2805 | 2392 | Torsion preview control: acceleration torsion compensation value K2N (LSTK2N) | →4.6.9 | |
| 2806 | 2393 | Torsion preview control: acceleration torsion compensation value K3N (LSTK3N) | | |
| 2807 | 2394 | Number of data mask digits | →2.1.4 | |
| 2808 | 2395 | Feed-forward timing adjustment function (for use when FAD is enabled) | →4.6.5 | |
| 2815 | 2402 | Torsion preview control: torsion torque compensation coefficient (LSTKT) | →4.6.9 | |
| 2816 | 2403 | Synchronous axes automatic compensation function : coefficient (K) | →4.18 | |
| 2817 | 2404 | Synchronous axes automatic compensation function : maximum compensation (sub axis) Synchronous axes automatic compensation function : dead-band width (main axis) | →4.18 | |
| 2818 | 2405 | Synchronous axes automatic compensation function : filter coefficient | →4.18 | |



6.1 PARAMETERS FOR HRV1 CONTROL

December, 2005

Series 9096 Series 90B0 Series 90B1 Series 90B5 and 90B6

| | Motor mode Motor speci Motor ID No | fication | L1500B1 /4 <i>i</i> s 444-B210 90 | L3000B2 /2 <i>i</i> s 445-B110 91 | L6000B2 /2 <i>i</i> s 447-B110 92 | L9000B2 /2 <i>i</i> s 449-B110 93 | L15000C2 /2 <i>i</i> s 456-B110 94 | αiS300 2000 0292 115 | L3000B2 /4 <i>i</i> s 445-B210 120 | L6000B2 /4 <i>i</i> s 447-B210 121 | <u>L9000B2</u> / <u>4is</u> 449-B210 122 | L15000C2 /3 <i>i</i> s 456-B210 123 | L300A1 /4is 441-B200 124 |
|---|---|--|--|--|--|--|--|--|--|--|--|--|--|
| Symbol | FS15 <i>i</i> 1808 1809 1883 1884 | FS16 <i>i</i> ,etc 2003 2004 2005 2006 | 00001000 00000110 0000000 0000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 01000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 |
| | 1951 1952 1953 1954 1955 | 2007 2008 2009 2010 2011 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000000 00100000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000100 000000 |
| | 1956 1707 1708 1750 1751 2713 | 2012 2013 2014 2210 2211 2300 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 |
| PK1 PK2 PK3 PK1V | 2713 2714 1852 1853 1854 1855 | 2300 2301 2040 2041 2042 2043 | 1000000 0000000 1890 -7180 -2647 19 | 1000000 0000000 4804 -14453 -2660 16 | 10000000 00000000 4804 -13138 -2660 | 1000000 0000000 5036 -16000 -2660 14 | 1000000 0000000 1420 -5600 -2663 10 | 00000000 00000000 1357 -4212 -2710 114 | 10000000 00000000 -11180 -2660 | 1000000 0000000 2626 -10051 -2660 10 | 1000000 0000000 4944 -11831 -2660 16 | 1000000 0000000 2392 -8448 -2657 10 | 1000000 0000000 526 -2141 -2618 |
| PK2V PK3V PK4V POA1 BLCMP | 1855 1856 1857 1858 1859 1860 | 2043 2044 2045 2046 2047 2048 | -260 0 -8235 -4371 0 | -214 0 -8235 -5321 | 16 -214 0 -8235 -5321 0 | -14 -195 0 -8235 -5849 0 | -131 0 -8235 -8681 0 | -1023 0 -8235 3709 0 | 16 -214 0 -8235 -5321 0 | -135 0 -8235 -8463 0 | -211 0 -8235 -5399 0 | -128 0 -8235 -8861 0 | 16 -217 0 -8235 -8755 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH | 1866 1867 1868 1869 1870 | 2054 2055 2056 2057 2058 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 | 3787 319 0 -3850 -800 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 | 1894 319 0 0 0 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 | 1871 1872 1873 1877 1878 | 2059 2060 2061 2062 2063 | 0 7282 120 32670 1222 | 0 7282 120 32670 1222 | 0 7282 120 32670 1222 | 0 7282 120 32685 1041 | 0 7282 120 32712 703 | 0 7282 120 32352 5196 | 0 7282 120 32698 873 | 0 4855 120 32740 345 | 0 7282 120 32698 873 | 0 7282 120 32732 452 | 0 5826 120 32747 268 |
| TGALMLV POVCLMT PK2VAUX FILTER FALPH VFFLT | Г 1893 | 2064 2065 2066 2067 2068 2069 | 4 3626 0 0 0 0 | 4 3626 0 0 0 0 | 4 3626 0 0 0 | 4 3087 0 0 0 0 | 4 2086 0 0 0 0 | 4 15494 0 0 0 0 | 4 2590 0 0 0 | 4 1024 0 0 0 | 2590 0 0 0 | 4 1340 0 0 0 | 4 793 0 0 0 0 |
| ERBLM PBLCT SFCCML PSPTL AALPH | 1963 1964 1965 1966 1967 | 2070 2071 2072 2073 2074 | 0 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 12288 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| OSCTPL PDPCH PDPCL DPFEX DPFZW | 1970 1971 1972 1973 1974 | 2077 2078 2079 2080 2081 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB | 1975 1976 1979 1980 1981 | 2082 2083 2086 2087 2088 | 0 0 1402 0 0 | 0 0 1402 0 0 | 0 0 1402 0 0 | 0 0 1293 0 0 | 0 0 1063 0 0 | 0 0 2385 0 0 | 0 0 1184 0 0 | 0 0 744 0 0 | 0 0 1184 0 0 | 0 0 852 0 0 | 0 0 655 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 | 1982 1983 1984 1985 1986 1987 | 2089 2090 2091 2092 2093 2094 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL ONEPSL | 1987 1988 1989 1990 1991 1992 | 2094 2095 2096 2097 2098 2099 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 | 0 0 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF ABTSH | 1993 1994 1995 1996 1997 | 2100 2101 2102 2103 2104 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 15000 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 0 |
| TRQCST LP24PA VLGOVR RESERV BELLTC | 1998 1999 1700 1701 1702 | 2105 2106 2107 2108 2109 | 227 0 0 0 | 455 0 0 0 | 911 0 0 0 | 1481 0 0 0 | 3104 0 0 0 | 10931 0 0 0 | 455 0 0 0 | 1450 0 0 0 | 1367 0 0 0 | 3168 0 0 0 | 52 0 0 0 0 |
| MGSTCM DETQLM AMRDML NFILT NINTCT MFWKCE | 1703 1704 1705 1706 1735 1736 | 2110 2111 2112 2113 2127 2128 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 16 1606 0 0 5500 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 0 | 0 0 0 0 0 0 | 0 0 0 0 0 |
| MFWKBL LP2GP LP4GP LP6GP PHDLY1 | 1752 1753 1754 1755 1756 | 2129 2130 2131 2132 2133 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 791 0 0 1556 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| PHDLY2 DGCSMM TRQCUP OVCSTP POVC21 POVC22 | 1783 1784 1785 | 2134 2159 2160 2161 2162 2163 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 20494 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| POVC22 POVCLM1 MAXCRT | 1786 T 1787 1788 | 2163 2164 2165 | 0 0 45 | 0 0 45 | 0 0 85 | 0 0 135 | 0 0 245 | 0 0 365 | 0 0 85 | 0 0 245 | 0 0 245 | 0 0 365 | 0 0 25 |

| Symbol | Motor model Motor specificatic Motor ID No. FS15 <i>i</i> FS1 | on 6i,etc | L600A1 /4 <i>i</i> s 442-B200 125 | L900A1 /4 <i>i</i> s 443-B200 126 | L6000B2 /4is (160A) 127 | L9000B2 /2 <i>i</i> s (160A) 128 | L9000B2 /4 <i>i</i> s (360A) 129 | L15000C2 /2is (360A) 130 |
|--|---|--|---|---|--|--|---|---|
| Symbol | 1808 1809 1809 1883 1884 1951 1952 1953 1954 1956 1707 1708 1750 1751 1751 2713 | 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 2014 2210 2211 2210 2211 2210 2211 2210 2210 | 00001000 0000000 00000000 00000000 000000 | 00001000 0000000 00000000 0000000 000000 | 00001000 0000000 00000000 0000000 000000 | 00001000 0000000 00000000 0000000 000000 | 00001000 0000000 00000000 0000000 000000 | 00001000 00000110 0000000 0000000 000000 |
| PK1 PK2 PK3 PK1V PK2V PK3V PK4V | 1852 1853 1854 1855 1856 1857 | 2040 2041 2042 2043 2044 2045 2046 | 00000000 717 -3333 -2618 9 -122 0 -8235 | 0000000 390 -2009 -2618 13 -179 0 -8235 | 1751 -6701 -2660 15 -202 0 -8235 | 00000000 6198 -19692 -2660 12 -158 0 -8235 | 00000000 7416 -17747 -2660 10 -141 0 -8235 | 0000000 2130 -8400 -2663 7 -87 0 -8235 |
| POA1 BLCMP DPFMX POK1 POK2 RESERV PPMAX | 1859 1860 1861 1862 1863 1864 | 2047 2048 2049 2050 2051 2052 2053 | -9339 0 956 510 0 21 | -6367 0 956 510 0 21 | -5642 0 956 510 0 21 | -7199 0 956 510 0 21 | -8099 0 956 510 0 21 | -13022 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH PPBAS | 1866 1867 1868 1869 1870 | 2054 2055 2056 2057 2058 2059 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 |
| TQLIM EMFLMT POVC1 POVC2 TGALMLV POVCLMT PK2VALIX | 1872 1873 1877 1878 1892 1893 | 2060 2061 2062 2063 2064 2065 2066 | 6554 120 32747 268 4 793 | 7282 120 32720 602 4 1784 | 7282 120 32706 777 4 2304 | 5917 120 32713 687 4 2038 | 4855 120 32737 388 4 1151 | 4855 120 32743 313 4 927 |
| PK2VAUX FILTER FALPH VFFLT ERBLM PBLCT SFCCML PSPTL AALPH OSCTPL PDPCH DPFCL DPFEX DPFEX DPFEX | 1895 1961 1962 1963 1964 1965 1966 1967 1970 1971 1972 1973 1974 | 2067 2068 2069 2070 2071 2072 2073 2074 2077 2078 2079 2080 2080 | | | | | | 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB BLBSL ACSPL ACSPL ADFF1 VMPK3V BLCMP2 AHDRTL RADUSL SMCNT | 1976 1979 1980 1981 1982 1983 1984 1985 1985 1986 1987 1988 1989 1990 | 2082 2083 2086 2087 2088 2089 2090 2091 2092 2093 2094 2095 2095 2096 2097 | 0 655 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 983 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 11117 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 1050 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 789 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 708 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 |
| DEPVPL ONEPSL INPA1 INPA2 DBLIM ABVOF ABTSH TRQCST LP24PA | 1992 1993 1994 1995 1996 1997 1998 1999 | 2098 2099 2100 2101 2102 2103 2104 2105 2106 | 0 400 0 0 0 0 104 0 | 0 400 0 0 0 0 104 0 | 0 400 0 0 0 966 0 | 0 400 0 0 0 0 1823 0 | 0 400 0 0 0 2051 0 | 0 400 0 0 0 4656 0 |
| VLGOVR RESERV BELLTC MGSTCM DETOLM AMRDML NFILT NINTCT MFWKCE LP2GP LP4GP LP4GP LP4GP LP4GP LP4GP LP4GP LP4GP DDLY1 PHDLY2 DGCSMM TRQCUP OVCSTP | 1700 1701 1702 1703 1704 1705 1706 1735 1752 1753 1754 1755 1756 1756 1757 1782 1783 | 2107 2108 2109 2110 2111 2112 2112 2112 2128 2129 2130 2131 2132 2133 2134 2159 2161 | | | | | | |
| POVC21 POVC22 POVCLMT2 MAXCRT | 1785 1786 1787 | 2162 2163 2164 2165 | 0 0 0 45 | 0 0 0 45 | 0 0 0 165 | 0 0 165 | 0 0 365 | 0 0 365 |

| Sumbol | Moto FS15 <i>i</i> | Motor model or specification Motor ID No. | β <i>i</i> S2 4000HV 0062 151 | α <i>i</i> F1 5000 0202 152 | β <i>i</i> S2 4000 0061 153 | β <i>i</i> S2/4000 SVSP40A 0061 154 | α <i>i</i> F2 5000 0205 155 | β <i>i</i> S4 4000 0063 156 | β <i>i</i> S4/4000 SVSP40A 0063 157 | βiS8 3000 0075 158 | βiS8/3000 SVSP40A 0075 159 | α <i>i</i> S2 5000 0212 162 | αiS2 5000HV 0213 163 |
|---|--|--|--|--|--|--|--|--|---|--|--|--|--|
| Svmbol | 1808 1809 1883 1884 1951 | FS16 <i>i</i> .etc 2003 2004 2005 2006 2007 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 0000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 |
| | 1952 | 2008 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1953 | 2009 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1954 | 2010 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1955 | 2011 | 00100000 | 00000000 | 00100000 | 00100000 | 00100000 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00100000 |
| | 1956 | 2012 | 000000 | 0000 | 000000 | 000000 | 000000 | 0000000 | 0000 | 0000 | 0000 | 0000 | 000000 |
| | 1707 | 2013 | 00000100 | 0000000 | 00000100 | 00010000 | 00000000 | 0000000 | 00001110 | 0000000 | 00001110 | 00000000 | 00000000 |
| | 1708 | 2014 | 00000100 | 0000000 | 00000100 | 00010000 | 00000000 | 0000000 | 00001110 | 0000000 | 00001110 | 00000000 | 00000000 |
| | 1750 | 2210 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 | 0000000 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 |
| | 1751 | 2211 | 00000010 | 0000010 | 00000010 | 00000010 | 00000010 | 00001110 | 00001110 | 00001110 | 00001110 | 00000010 | 00000010 |
| | 2713 | 2300 | 000000 | 0000000 | 000000 | 000000 | 000000 | 0000000 | 000000 | 0000000 | 000000 | 000000 | 000000 |
| PK1 PK2 PK3 PK1V | 2714 1852 1853 1854 1855 | 2301 2040 2041 2042 2043 | 00000000 225 -1100 -2467 78 | 00000000 672 -2294 -2514 66 | 00000000 280 -1080 -1112 78 | 00000000 560 -2160 -1112 39 | 00000000 680 -2247 -2568 76 | 00000000 288 -960 -1144 112 | 00000000 576 -1920 -1144 56 | 00000000 450 -1840 -1234 164 | 00000000 900 -3680 -1234 82 | 0000000 600 -1900 -2504 39 | 00000000 420 -1369 -2504 39 |
| PK2V | 1856 | 2044 | -700 | -594 | -698 | -349 | -680 | -1008 | -504 | -1476 | -738 | -350 | -351 |
| PK3V | 1857 | 2045 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PK4V | 1858 | 2046 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 |
| POA1 | 1859 | 2047 | -1085 | 6384 | -1089 | -2178 | 5578 | -753 | -1506 | 5143 | -1029 | 10853 | -1081 |
| BLCMP | 1860 | 2048 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DPFMX | 1861 | 2049 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| POK1 | 1862 | 2050 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 |
| POK2 | 1863 | 2051 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 |
| RESERV | 1864 | 2052 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PPMAX | 1865 | 2053 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 |
| PDDP | 1866 | 2054 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 |
| PHYST | 1867 | 2055 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 |
| EMFCMP | 1868 | 2056 | 0 | -30 | 0 | 0 | -30 | -20 | 0 | -30 | 0 | -30 | 0 |
| PVPA | 1869 | 2057 | -10250 | 0 | -10250 | -10245 | -10256 | -7700 | -7690 | -5144 | -5133 | -10250 | -10254 |
| PALPH PPBAS TQLIM EMFLMT POVC1 | 1870 1871 1872 1873 1877 | 2058 2059 2060 2061 2062 | -1000 0 6554 0 32538 | 0 7282 0 32613 | -1000 0 6554 0 32531 | -500 0 3277 0 32531 | -3300 0 7282 0 32497 | -2240 0 7282 0 32289 | -1120 0 3641 0 32289 | -2700 0 7282 0 32289 | -1350 0 3641 0 32289 | -2000 0 7282 0 32528 | -2300 0 7282 0 32532 |
| POVC2 | 1878 | 2063 | 2879 | 1933 | 2963 | 2963 | 3390 | 5988 | 5988 | 5994 | 5994 | 3005 | 2953 |
| TGALMLV | 1892 | 2064 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| POVCLMT | 1893 | 2065 | 8560 | 5739 | 8811 | 2203 | 10085 | 17873 | 4468 | 17889 | 4472 | 8936 | 8782 |
| PK2VAUX | 1894 | 2066 | -10 | 0 | -10 | -5 | 0 | -10 | -5 | -10 | -5 | 0 | 0 |
| FILTER FALPH VFFLT ERBLM PBLCT | 1895 1961 1962 1963 1964 | 2067 2068 2069 2070 2071 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL PDPCH | 1965 1966 1967 1970 1971 | 2072 2073 2074 2077 2078 | 0 0 20480 0 0 | 0 0 0 0 | 0 0 20480 0 0 | 0 0 0 0 | 0 0 4096 0 0 | 0 0 20480 0 | 0 0 0 0 | 0 0 16384 0 0 | 0 0 0 0 | 0 0 8192 0 0 | 0 0 16384 0 0 |
| PDPCL DPFEX DPFZW BLENDL MOFCTL | 1972 1973 1974 1975 1976 | 2079 2080 2081 2082 2083 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| RTCURR | 1979 | 2086 | 1507 | 1234 | 1529 | 764 | 1636 | 2178 | 1089 | 2780 | 1390 | 1540 | 1526 |
| TDPLD | 1980 | 2087 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| MCNFB | 1981 | 2088 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BLBSL | 1982 | 2089 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 | 1983 1984 1985 1986 1987 | 2090 2091 2092 2093 2094 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL ONEPSL | 1988 1989 1990 1991 1992 | 2095 2096 2097 2098 2099 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 | 0 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF ABTSH | 1993 1994 1995 1996 1997 | 2100 2101 2102 2103 2104 | 0 0 10000 0 | 0 0 0 0 0 | 0 0 15000 0 | 0 0 7500 0 | 0 0 12000 0 | 0 0 0 0 0 | 0 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 7500 0 |
| TRQCST | 1998 | 2105 | 119 | 72 | 119 | 238 | 109 | 146 | 292 | 226 | 452 | 117 | 117 |
| LP24PA | 1999 | 2106 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| VLGOVR | 1700 | 2107 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| RESERV | 1701 | 2108 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BELLTC | 1702 | 2109 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| MGSTCM | 1703 | 2110 | 1050 | 32 | 1050 | 564 | 32 | 782 | 284 | 1805 | 794 | 40 | 40 |
| DETQLM | 1704 | 2111 | 11600 | 7710 | 11600 | 11600 | 6460 | 7790 | 7790 | 7930 | 7930 | 7745 | 7700 |
| AMRDML | 1705 | 2112 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| NFILT | 1706 | 2113 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| NINTCT | 1735 | 2127 | 2345 | 1188 | 1172 | 1172 | 1276 | 796 | 796 | 1442 | 1442 | 1137 | 1137 |
| MFWKCE | 1736 | 2128 | 1000 | 570 | 3000 | 6000 | 855 | 1000 | 2000 | 3500 | 7000 | 1000 | 1250 |
| MFWKBL | 1752 | 2129 | 2574 | 3211 | 2574 | 2574 | 3211 | 3130 | 3130 | 1552 | 1552 | 3851 | 3847 |
| LP2GP | 1753 | 2130 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP4GP | 1754 | 2131 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP6GP | 1755 | 2132 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PHDLY1 | 1756 | 2133 | 7188 | 2571 | 7188 | 7188 | 2565 | 7691 | 7691 | 3852 | 3852 | 2565 | 7688 |
| PHDLY2 | 1757 | 2134 | 8990 | 12850 | 8990 | 8990 | 12850 | 8976 | 8976 | 8990 | 8990 | 12825 | 12850 |
| DGCSMM | 1782 | 2159 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| TRQCUP | 1783 | 2160 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OVČSTP POVC21 POVC22 POVCLMT MAXCRT | 1784 1785 1785 1786 1787 1788 | 2161 2162 2163 2164 2165 | 0 32766 19 3617 10 | 0 32767 13 2425 25 | 0 32766 20 3723 25 | 0 32766 20 931 45 | 0 32766 23 4261 25 | 0 32765 42 7551 25 | 0 32765 42 1888 45 | 0 32762 74 12305 25 | 0 32762 74 3076 45 | 0 32766 20 3776 25 | 0 32766 20 3711 10 |

| Symbol | Moto FS15 <i>i</i> | Motor model or specification Motor ID No. FS16 <i>i</i> ,etc | βiS4 4000HV 0064 164 | α <i>i</i> S4 5000 0215 165 | αiS4 5000HV 0216 166 | β <i>i</i> S8 3000HV 0076 167 | β <i>i</i> S12 2000 0077 169 | β <i>i</i> S12 3000HV 0079 170 | αC4 3000 <i>i</i> 0221 171 | β <i>i</i> S12 3000 0078 172 | αiF4 4000 0223 173 | β <i>i</i> S22 2000 0085 174 | α <i>i</i> F4 4000HV 0225 175 |
|---|--|---|--|--|--|--|--|--|--|--|--|--|--|
| | 1808 1809 1883 1884 1951 | 2003 2004 2005 2006 2007 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 |
| | 1952 1953 1954 1955 1956 | 2008 2009 2010 2011 2012 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 000000 | 00000000 00000000 00000000 00100000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 000000 |
| | 1707 1708 1750 1751 | 2013 2014 2210 2211 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00001110 | 00000000 00000000 00000000 00001110 | 00000000 00000000 00000000 00001110 | 00000000 00000000 00000000 00001000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000010 | 00000000 00000000 00000000 00001110 | 00000000 00000000 00000000 00000010 |
| PK1 PK2 | 2713 2714 1852 1853 | 2300 2301 2040 2041 | 00000000 00000000 309 -1092 | 00000000 00000000 400 -1154 | 00000000 00000000 280 -988 | 00000000 00000000 580 -2070 | 00000000 00000000 320 -1958 | 00000000 00000000 361 -1521 | 00000000 00000000 926 -4063 | 00000000 00000000 400 -1550 | 00000000 00000000 659 -2463 | 00000000 00000000 750 -3280 | 00000000 00000000 525 -2056 |
| PK3 PK1V PK2V PK3V | 1854 1855 1856 1857 | 2042 2043 2044 2045 | -2496 112 -1010 0 | -2553 64 -574 0 | -2533 64 -574 0 | -2600 166 -1482 0 | -1246 230 -2054 0 | -2604 170 -1524 0 | -2619 115 -1034 0 | -1243 170 -1530 0 | -2623 106 -953 0 | -1296 242 -2172 0 | -2619 113 -1009 0 |
| PK4V POA1 BLCMP DPFMX | 1858 1859 1860 1861 | 2046 2047 2048 2049 | -8235 -751 0 0 | -8235 6614 0 0 | -8235 -661 0 0 | -8235 5118 0 0 | -8235 3695 0 0 | -8235 4978 0 0 | -8235 3670 0 | -8235 4960 0 0 | -8235 3980 0 | -8235 3496 0 0 | -8235 3762 0 0 |
| POK1 POK2 RESERV PPMAX | 1862 1863 1864 1865 | 2050 2051 2052 2053 | 956 510 0 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 |
| PDDP PHYST EMFCMP | 1866 1867 1868 | 2054 2055 2056 | 21 1894 319 0 | 1894 319 –5140 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 -30 | 1894 319 -20 | 1894 319 0 | 21 1894 319 0 |
| PVPA PALPH PPBAS TQLIM | 1869 1870 1871 1872 | 2057 2058 2059 2060 | -7700 -3000 0 7282 | -10262 -3500 0 7282 | -8978 -4000 0 7282 | -5144 -3500 0 7282 | -3884 -4400 0 7282 | -5140 -3200 0 7282 | -5915 -1500 0 7282 | -5140 -2700 0 7282 | -11789 -180 0 8010 | -3616 -2800 0 7282 | 0 0 7282 |
| EMFLMT POVC1 POVC2 TGALMLV | 1873 1877 1878 1892 | 2061 2062 2063 2064 | 0 32299 5865 4 | 0 32289 5994 | 0 32289 5994 | 0 32301 5842 | 0 32284 6045 | 0 32435 4164 | 0 32406 4529 | 0 32205 7041 | 0 32446 4029 | 0 32106 8275 | 0 32433 4184 4 |
| POVCLMT PK2VAUX FILTER | F 1893 1894 1895 | 2065 2066 2067 | 17504 -10 0 | 17889 0 0 | 17889 0 0 | 17435 -10 0 | 18045 -10 0 | 12399 -10 0 | 13493 0 0 | 21044 -10 0 | 11998 0 0 | 24770 -10 0 | 12461 0 0 |
| FALPH VFFLT ERBLM PBLCT | 1961 1962 1963 1964 | 2068 2069 2070 2071 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1965 1966 1967 1970 | 2072 2073 2074 2077 | 0 0 8192 0 | 0 0 0 0 | 0 0 12288 0 | 0 0 12288 0 | 0 0 8192 0 | 0 0 20480 0 | 0 0 12288 0 | 0 0 16384 0 | 0 0 8192 0 | 0 0 12288 0 | 0 0 12288 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD | 1975 1976 1979 1980 | 2082 2083 2086 2087 | 0 0 2155 0 | 0 0 2824 0 | 0 0 2824 0 | 0 0 2793 0 | 0 0 3126 0 | 0 0 2356 0 | 0 0 1892 0 | 0 0 2363 0 | 0 0 1784 0 | 0 0 2618 0 | 0 0 1888 0 |
| MCNFB BLBSL ROBSTL ACCSPL | 1981 1982 1983 1984 | 2088 2089 2090 2091 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| ADFF1 VMPK3V BLCMP2 AHDRTL | 1985 1986 1987 1988 | 2092 2093 2094 2095 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 |
| RADUSL SMCNT DEPVPL ONEPSL | 1989 1990 1991 1992 | 2096 2097 2098 2099 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 0 400 | 0 0 400 | 0 0 0 400 |
| INPA1 INPA2 DBLIM | 1993 1994 1995 | 2100 2101 2102 | 0 0 0 | 0 0 0 | 0 0 8500 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 15000 | 0 0 0 | 0 0 15000 |
| ABVOF ABTSH TRQCST LP24PA | 1996 1997 1998 1999 | 2103 2104 2105 2106 | 0 0 146 0 | 0 0 127 0 | 0 0 127 0 | 0 0 225 0 | 0 0 315 0 | 0 420 0 | 0 0 190 0 | 0 0 418 0 | 0 0 201 0 | 0 0 692 0 | 0 0 190 0 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 1701 1702 1703 | 2107 2108 2109 2110 | 0 0 0 777 | 0 0 24 | 0 0 32 | 0 0 1805 | 0 0 1 | 0 0 1814 | 0 0 1289 | 0 0 1814 | 0 0 32 | 0 0 0 0 | 0 0 1032 |
| DETQLM AMRDML NFILT NINTCT | 1704 1705 1706 1735 | 2111 2112 2113 2127 | 7790 0 1592 | 10310 0 646 | 10290 0 500 | 7930 0 2885 | 3940 0 1350 | 7930 0 2388 | 3900 0 2544 | 7930 0 1194 | 5130 0 1443 | 2866 0 0 2459 | 12388 0 0 2573 |
| MFWKCE MFWKBL LP2GP LP4GP | 1736 1752 1753 1754 | 2128 2129 2130 2131 | 1000 3339 0 | 2500 3847 0 | 3000 5122 0 | 1500 1552 0 | 4000 280 0 | 3000 2056 0 | 5000 1812 0 | 3000 2056 0 | 2000 3338 0 | 4500 562 0 | 4000 3348 0 0 |
| LP6GP PHDLY1 PHDLY2 DGCSMM | 1755 1756 1757 1782 | 2132 2133 2134 2159 | 0 7686 8976 0 | 0 2563 12820 0 | 0 7692 12850 0 | 0 3848 8990 0 | 0 1832 8980 0 | 0 5133 8978 0 | 0 3855 8995 0 | 0 5133 8978 0 | 0 6670 8980 0 | 0 3089 8982 0 | 0 6670 8980 0 |
| TRQCUP OVCSTP POVC21 POVC22 POVCLMT MAXCRT | 1783 1784 1785 1786 1787 1788 | 2160 2161 2162 2163 2164 2165 | 0 0 32765 41 7395 10 | 0 0 32762 77 12702 25 | 0 0 32762 77 12702 10 | 0 0 32762 75 12424 10 | 0 0 32760 99 15559 25 | 0 0 32764 50 8836 25 | 0 0 32766 31 5701 25 | 0 0 32764 51 8891 45 | 0 0 32766 27 5069 45 | 0 0 32763 64 10913 45 | 0 0 32766 31 5676 25 |

| Symbol | | Motor model or specification Motor ID No. FS16 <i>i</i> ,etc | αC8 2000 <i>i</i> 0226 176 | α <i>i</i> F8 3000 0227 177 | β <i>i</i> S22 2000HV 0086 178 | α <i>i</i> F8 3000HV 0229 179 | β <i>i</i> S0.5 6000 0115 181 | β <i>i</i> S1 6000 0116 182 | β <i>i</i> S8/3000 FS0 <i>i</i> 0075–Bxx6 183 | αiS8 4000 0235 185 | α <i>i</i> S8 4000HV 0236 186 | αiS12 4000 0238 188 | α <i>i</i> S12 4000HV 0239 189 |
|--|--|---|--|--|--|--|--|--|--|--|--|--|--|
| Cymbol | 1808 1809 1883 1884 1951 | 2003 2004 2005 2006 2007 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 |
| | 1952 1953 1954 1955 1956 | 2008 2009 2010 2011 2012 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 0000000 00000 |
| | 1707 1708 1750 1751 2713 | 2013 2014 2210 2211 2300 | 00000000 00000000 0000000 00001010 000000 | 00000000 00000000 00000000 00001010 000000 | 00000000 00000000 0000000 00001110 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00001110 000000 | 00000000 00000000 0000000 00001010 000000 | 00000000 00000000 00000000 00001010 000000 | 00000000 00000000 0000000 00001010 000000 | 0000000 0000000 0000000 00001010 0000000 |
| PK1 PK2 PK3 PK1V | 2714 1852 1853 1854 1855 | 2301 2040 2041 2042 2043 | 00000000 1096 -4638 -2651 150 | 00000000 712 -3187 -2651 113 | 00000000 1025 -4010 -2665 244 | 00000000 886 -3174 -2645 113 | 00000000 141 -511 -2415 7 | 00000000 398 -1137 -2388 6 | 00000000 450 -1840 -1234 164 | 00000000 544 -2352 -2616 33 | 00000000 694 -2700 -2636 34 | 00000000 657 -2522 -2639 52 | 0000000 783 -3006 -2666 52 |
| PK2V PK3V PK4V POA1 BLCMP | 1856 1857 1858 1859 1860 | 2044 2045 2046 2047 2048 | -1342 0 -8235 2827 0 | -1009 0 -8235 3760 0 | -2182 0 -8235 3478 0 | -1008 0 -8235 3764 0 | -59 0 -8235 -6462 0 | -53 0 -8235 -7176 0 | -1476 0 -8235 5143 0 | -294 0 -8235 -1289 0 | -306 0 -8235 -1240 0 | -466 0 -8235 -815 0 | -470 0 -8235 -808 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH | 1866 1867 1868 1869 1870 | 2054 2055 2056 2057 2058 | 1894 319 0 -3854 -1236 | 1894 319 0 -6418 -3000 | 1894 319 0 -3616 -2800 | 1894 319 0 -6159 -1261 | 1894 319 -12850 0 0 | 1894 319 -12850 -11530 -1000 | 1894 319 -30 -5144 -2700 | 1894 319 0 -7691 -2000 | 1894 319 0 -7690 -2000 | 1894 319 0 -5904 -2400 | 1894 319 -20 -5904 -3000 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 | 1871 1872 1873 1877 1878 | 2059 2060 2061 2062 2063 | 0 7282 0 32289 5994 | 0 8010 0 32383 4807 | 0 7282 0 32433 4185 | 0 8010 0 32433 4184 | 0 6918 0 32674 1178 | 0 7282 0 32695 915 | 0 7282 0 32381 4835 | 0 7282 0 32609 1993 | 0 7282 0 32596 2153 | 0 7282 0 32534 2923 | 0 7282 0 32530 2976 |
| TGALMLV POVCLMT PK2VAUX FILTER FALPH | 1894 1895 1961 | 2064 2065 2066 2067 2068 | 4 17889 0 0 0 | 4 14327 0 0 | 4 12462 -10 0 0 | 4 12461 0 0 | 4 3497 0 0 | 4 2714 0 0 | 4 14410 -10 0 0 | 4 5920 0 0 | 4 6396 0 0 | 4 8692 0 0 | 4 8848 0 0 0 |
| VFFLT ERBLM PBLCT SFCCML PSPTL AALPH | 1962 1963 1964 1965 1966 | 2069 2070 2071 2072 2073 | | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 0 | |
| OSCTPL PDPCH PDPCL DPFEX DPFZW | 1967 1970 1971 1972 1973 1974 | 2074 2077 2078 2079 2080 2081 | 8192 0 0 0 0 0 | 12288 0 0 0 0 0 | 12288 0 0 0 0 0 | 16384 0 0 0 0 0 | 20480 0 0 0 0 0 | 20480 0 0 0 0 0 | 16384 0 0 0 0 0 | 8192 0 0 0 0 0 | 8192 0 0 0 0 0 | 4096 0 0 0 0 0 | 8192 0 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB | 1974 1975 1976 1979 1980 1981 | 2081 2082 2083 2086 2087 2088 | 0 0 2593 0 0 | 0 0 1950 0 0 | 0 0 2611 0 0 | 0 0 1948 0 0 | 0 0 1376 0 0 | 0 0 1212 0 0 | 0 0 2780 0 0 | 0 0 1253 0 0 | 0 0 1302 0 0 | 0 0 1518 0 0 | 0 0 1532 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 VMPK3V | 1982 1983 1984 1985 1986 | 2089 2090 2091 2092 2093 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| BLCMP2 AHDRTL RADUSL SMCNT DEPVPL | 1987 1988 1989 1990 | 2094 2095 2096 2097 2098 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| ONEPSL INPA1 INPA2 DBLIM ABVOF | 1991 1992 1993 1994 1995 1996 | 2099 2100 2101 2102 2103 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 15000 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 | 400 0 0 0 0 |
| ABTSH TRQCST LP24PA VLGOVR RESERV | 1997 1998 1999 1700 1701 | 2104 2105 2106 2107 2108 | 0 277 0 0 | 0 369 0 0 | 0 689 0 0 | 0 369 0 0 | 0 42 0 0 | 0 89 0 0 | 0 226 0 0 | 0 562 0 0 | 0 541 0 0 | 0 696 0 0 | 0 690 0 0 |
| BELLTC MGSTCM DETQLM AMRDML NFILT NINTCT | 1702 1703 1704 1705 1706 1735 | 2109 2110 2111 2112 2113 2127 | 0 1552 3880 0 0 2380 | 0 786 5180 0 0 2103 | 0 2866 0 0 5149 | 0 782 0 0 0 4191 | 0 30 10290 0 0 1009 | 0 30 10290 0 0 1763 | 0 1805 7930 0 0 1442 | 0 519 7780 0 0 2106 | 0 519 7268 0 0 5103 | 0 521 5170 0 0 1592 | 0 521 6159 0 0 4904 |
| MFWKCE MFWKBL LP2GP LP4GP LP6GP | 1736 1752 1753 1754 1755 | 2128 2129 2130 2131 2132 | 4500 1550 0 0 | 1500 1815 0 0 | 2500 562 0 0 | 6000 1810 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 3500 1552 0 0 | 4000 2580 0 0 | 4500 2580 0 0 | 3000 2570 0 0 | 4904 2000 2575 0 0 |
| PHDLY1 PHDLY2 DGCSMM TRQCUP OVCSTP POVC21 | 1756 1757 1782 1783 1784 | 2133 2134 2159 2160 2161 | 3860 8990 0 0 0 | 5140 8985 0 0 0 | 3089 8982 0 0 0 | 0 0 0 0 0 | 7690 12820 0 0 0 | 11560 12880 0 0 0 | 3852 8990 0 0 0 | 5652 8990 0 0 | 5150 8990 0 0 0 | 5135 9000 0 0 0 | 6174 8990 0 0 0 |
| POVC21 POVC22 POVCLMT MAXCRT | 1785 1786 | 2162 2163 2164 2165 | 32763 63 10709 25 | 32765 33 6053 45 | 32763 64 10854 25 | 32765 33 6042 25 | 32767 16 3015 25 | 32767 12 2340 25 | 32764 51 8896 25 | 32767 13 2501 85 | 32767 14 2702 45 | 32766 19 3672 85 | 32766 20 3738 45 |

| Symbol | Motor FS15 <i>i</i> | Motor model specification Motor ID No. FS16 <i>i</i> ,etc | αC12 2000 <i>i</i> 0241 191 | αiF12 3000 0243 193 | βiS8/3000 FS0i_40A 0075-Bxx6 194 | αiF12 3000HV 0245 195 | αC22 2000 <i>i</i> 0246 196 | αiF22 3000 0247 197 | β <i>i</i> S12/2000 FS0 <i>i</i> 0077-Bxx6 198 | α <i>i</i> F22 3000HV 0249 199 | αC30 1500 <i>i</i> 0251 201 | β <i>i</i> S22/1500 FS0 <i>i</i> 0084–Bxx6 202 | αiF30 3000 0253 203 |
|---|--|--|--|--|--|--|--|--|---|--|--|---|--|
| Gymbol | 1808 1809 1883 1884 1951 1952 1953 1954 1955 1956 | 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 | 00001000 00000110 0000000 0000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 0000000 0000000 000000 | 00001000 00000110 0000000 0000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 0000000 0000000 000000 | 00001000 0000010 0000000 0000000 0000000 | 00001000 0000010 0000000 0000000 0000000 |
| | 1707 1708 1750 1751 2713 2714 | 2013 2014 2210 2211 2300 2301 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00000000 0000 | 00001110 00001110 00000000 00001110 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00001010 000000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 00001110 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00001010 000000 | 0000000 0000000 0000000 00001110 0000000 | 0000000 0000000 0000000 00001010 0000000 |
| PK1 PK2 PK3 PK1V PK2V | 1852 1853 1854 1855 1856 | 2040 2041 2042 2043 2044 | 3809 -8197 -2679 280 -2504 | 1072 -3835 -2630 192 -1721 | 900 -3680 -1234 82 -738 | 1044 -3677 -2679 193 -1727 | 1755 -6536 -2694 271 -2426 | 1458 -5416 -2690 198 -1775 | 320 -1958 -1246 230 -2054 | 1532 -5641 -2692 197 -1765 | 2644 -10345 -2695 166 -1486 | 1048 -4337 -2659 280 -2507 | 597 -2334 -2694 230 -2057 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 1516 0 | 0 -8235 2204 0 | 0 -8235 -1029 0 | 0 -8235 2197 0 | 0 -8235 1565 0 | 0 -8235 2137 0 | 0 -8235 3695 0 | 0 -8235 2150 0 | 0 -8235 2553 0 | 0 -8235 3027 0 | 0 -8235 1845 0 |
| DPFMX POK1 POK2 RESERV | 1861 1862 1863 1864 | 2049 2050 2051 2052 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 |
| PPMAX PDDP PHYST EMFCMP | 1865 1866 1867 1868 | 2053 2054 2055 2056 | 21 1894 319 0 | 21 1894 319 -5140 | 21 1894 319 0 | 21 1894 319 -20 | 21 1894 319 0 | 21 1894 319 -2590 | 21 1894 319 0 | 21 1894 319 0 | 21 1894 319 0 | 21 1894 319 0 | 21 1894 319 0 |
| PVPA PALPH PPBAS TQLIM | 1869 1870 1871 1872 | 2057 2058 2059 2060 | -1804 -2500 0 7282 | -8199 -747 0 7282 | -5133 -1350 0 3641 | -8214 -2350 0 7282 | -2597 -1942 0 8010 | -5136 -2800 0 7282 | -3884 -4400 0 7282 | -4392 -2824 0 7282 | -1545 -1300 0 7282 | -2110 -4691 0 7282 | -5170 -1000 0 7282 |
| EMFLMT POVC1 POVC2 | 1873 1877 1878 | 2061 2062 2063 | 0 32289 5994 | 0 32520 3101 | 0 32671 1214 | 0 32548 2755 | 0 32114 8171 | 0 32520 3101 | 0 32323 5566 | 0 32548 2755 | 0 32520 3101 | 0 32319 5617 | 0 32511 3215 |
| TGALMLV POVCLMT PK2VAUX FILTER | 1892 1893 1894 1895 | 2064 2065 2066 2067 | 4 17889 0 0 | 4 9224 0 0 | 3603 -5 0 | 4 8192 0 0 | 4 24454 0 0 | 9224 0 0 | 4 16603 -10 0 | 4 8192 0 0 | 4 9224 0 0 | 4 16756 -10 0 | 4 9565 0 0 |
| FALPH VFFLT ERBLM PBLCT | 1961 1962 1963 1964 | 2068 2069 2070 2071 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1965 1966 1967 1970 | 2072 2073 2074 2077 | 0 0 8192 0 | 0 0 8192 0 | 0 0 0 0 | 0 0 12288 0 | 0 0 8192 0 | 0 0 8192 0 | 0 0 8192 0 | 0 0 8192 0 | 0 0 8192 0 | 0 0 8192 0 | 0 0 8192 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD | 1975 1976 1979 1980 | 2082 2083 2086 2087 | 0 3020 0 | 0 2085 0 | 0 0 1390 0 | 0 2092 0 | 0 0 2911 0 | 0 0 2131 0 | 0 0 3126 0 | 0 0 2118 0 | 0 0 1655 0 | 0 0 3012 0 | 0 0 2306 0 |
| MCNFB BLBSL ROBSTL ACCSPL | 1981 1982 1983 1984 | 2088 2089 2090 2091 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 |
| ADFF1 VMPK3V BLCMP2 AHDRTL | 1985 1986 1987 1988 | 2092 2093 2094 2095 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 |
| RADUSL SMCNT DEPVPL ONEPSL | 1989 1990 1991 1992 | 2096 2097 2098 2099 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF | 1993 1994 1995 1996 | 2100 2101 2102 2103 | 0 0 15000 0 | 0 0 15000 0 | 0 0 0 0 | 0 0 15000 0 | 0 0 0 | 0 0 15000 0 | 000000000000000000000000000000000000000 | 0 0 15000 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 |
| ABTSH TRQCST LP24PA VLGOVR | 1997 1998 1999 1700 | 2104 2105 2106 2107 | 0 350 0 | 0 517 0 | 0 452 0 0 | 0 516 0 | 0 680 0 0 | 0 929 0 0 | 0 315 0 | 0 934 0 0 | 0 1630 0 0 | 0 597 0 0 | 0 1170 0 |
| RESERV BELLTC MGSTCM DETQLM | 1701 1702 1703 1704 | 2108 2109 2110 2111 | 0 0 2168 | 0 0 32 0 | 0 0 794 7930 | 0 0 774 0 | 0 0 1548 2600 | 0 0 1291 0 | 0 0 1 3940 | 0 0 787 0 | 0 2059 2148 | 0 0 1025 2248 | 0 0 1032 7735 |
| AMRDML NFILT NINTCT MFWKCE | 1705 1706 1735 1736 | 2112 2113 2127 2128 | 0 0 4150 12000 | 0 0 2388 2000 | 0 0 1442 7000 | 0 0 4787 4000 | 0 0 3695 4000 | 0 0 3272 4500 | 0 0 1350 4000 | 0 0 6547 6000 | 0 0 6680 14000 | 0 0 3290 5500 | 0 0 1688 2500 |
| MFWKBL LP2GP LP4GP LP6GP | 1752 1753 1754 1755 | 2129 2130 2131 2132 | 1044 0 0 | 2568 0 0 | 1552 0 0 0 | 2320 0 0 | 1046 0 0 0 | 1301 0 0 | 280 0 0 | 1808 0 0 | 539 0 0 0 | 1032 0 0 | 2829 0 0 0 |
| PHDLY1 PHDLY2 DGCSMM TRQCUP | 1756 1757 1782 1783 | 2133 2134 2159 2160 | 5150 8990 0 0 | 0 0 0 | 3852 8990 0 0 | 0 0 0 | 2070 9000 0 | 0 0 0 0 | 1832 8980 0 0 | 0 0 0 | 1054 9000 0 0 | 2580 8990 0 | 5140 8995 0 0 |
| OVCSTP POVC21 POVC22 POVCLMT MAXCRT | 1784 1785 1786 1787 1788 | 2161 2162 2163 2164 2165 | 0 32761 91 14518 25 | 0 32765 38 6924 85 | 0 32767 12 2224 45 | 0 32765 39 6969 45 | 0 32761 83 13493 45 | 0 32765 40 7229 85 | 0 32763 60 10250 25 | 0 32765 40 7142 45 | 0 32766 23 4361 85 | 0 32763 60 10345 25 | 140 32764 48 8466 165 |

| Symbol | | Motor model r specification Motor ID No. FS16 <i>i</i> ,etc | 1 30 <i>i</i> 40A | β <i>i</i> S2/4000 FS0 <i>i</i> 0061–Bxx6 206 | αiF40 3000 0257 207 | α <i>i</i> F40 3000Fan 0257 208 | βiS2/4000 FS0i_40A 0061-Bxx6 210 | β <i>i</i> S4/4000 FS0 <i>i</i> 0063–Bxx6 211 | β <i>i</i> S4/4000 FS0 <i>i</i> _40A 0063-Bxx6 212 | αiS22 4000 0265 215 | αiS22 4000HV 0266 216 | αiS30 4000 0268 218 | αiS30 4000HV 0269 219 |
|--|--------------------------------------|--|--|--|--|--|--|--|---|--|--|--|--|
| | 1808 1809 1883 1884 1951 | 2003 2004 2005 2006 2007 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 | 00001000 00000110 00000000 00000000 000000 |
| | 1952 1953 1954 1955 1956 | 2008 2009 2010 2011 2012 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0010000 0000000 | 00000000 00000000 00000000 00100000 000000 | 00000000 00000000 00000000 00100000 000000 | 0000000 0000000 0000000 0010000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 |
| | 1707 1708 1750 1751 2713 | 2013 2014 2210 2211 2300 | 00000000 00000000 00000000 00001110 000000 | 00000100 00000100 00000000 00000010 000000 | 00000000 00000000 0000000 00000010 000000 | 00000000 00000000 00000000 00000010 000000 | 00010000 00010000 00000000 00000010 000000 | 00000000 00000000 00000000 00001110 000000 | 00001110 00001110 0000000 00001110 000000 | 00000000 00000000 00000000 00001010 000000 | 00000000 00000000 00000000 00001010 000000 | 00000000 00000000 00000000 00001010 000000 | 0000000 0000000 0000000 00001010 0000000 |
| PK1 PK2 PK3 | 2714 1852 1853 1854 | 2301 2040 2041 2042 | 00000000 4342 -11170 -1329 | 00000000 280 -1080 -1112 | 00000000 1289 -5048 -2696 | 00000000 1289 -5048 -2696 | 00000000 560 -2160 -1112 | 00000000 288 -960 -1144 | 00000000 576 -1920 -1144 | 00000000 714 -2904 -2674 | 00000000 709 -2806 -1345 | 00000000 689 -2675 -2683 | 00000000 816 -3277 -2696 |
| PK1V PK2V PK3V PK4V POA1 | 1855 1856 1857 1858 1859 | 2043 2044 2045 2046 2047 | 140 -1254 0 -8235 6054 | 78 -698 0 -8235 -1089 | 191 -1712 0 -8235 2216 | 191 -1712 0 -8235 2216 | | 112 -1008 0 -8235 -753 | 56 -504 0 -8235 -1506 | 69 -616 0 -8235 6163 | 76 -685 0 -8235 5538 | 82 -733 0 -8235 5175 | 82 -738 0 -8235 5143 |
| BLCMP DPFMX POK1 POK2 | 1860 1861 1862 1863 | 2048 2049 2050 2051 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 |
| RESERV PPMAX PDDP PHYST EMFCMP | 1864 1865 1866 1867 1868 | 2052 2053 2054 2055 2056 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 -20 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 0 |
| PVPA PALPH PPBAS TQLIM EMFLMT | 1869 1870 1871 1872 1873 | 2057 2058 2059 2060 2061 | -2079 -2342 0 3641 0 | -10250 -1000 0 6554 0 | -2570 -2000 7282 | -2570 -2000 0 7282 0 | -500 0 | -7700 -2240 0 7282 0 | -7690 -1120 0 3641 | -7689 -2000 0 7282 0 | -7684 -1000 7282 0 | -6415 -3000 0 7282 0 | -6415 -3000 7282 0 |
| POVC1 POVC2 TGALMLV POVCLMT | 1877 1878 1892 1893 | 2062 2063 2064 2065 | 32655 1411 4 4189 | 32652 1455 4 4317 | 32511 3215 4 9565 | 32431 4212 4 12545 | 32739 364 4 1079 | 32532 2945 4 8758 | 32709 738 4 2189 | 32511 3215 4 9565 | 32501 3332 4 9912 | 32511 3215 4 9565 | 32501 3332 4 9912 |
| PK2VAUX FILTER FALPH VFFLT ERBLM | 1894 1895 1961 1962 1963 | 2066 2067 2068 2069 2070 | -10 0 0 0 0 | -10 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 | -10 0 0 0 0 | -5 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| PBLCT SFCCML PSPTL AALPH OSCTPL | 1964 1965 1966 1967 1970 | 2071 2072 2073 2074 2077 | 0 0 0 0 0 | 0 0 20480 | 0 0 8192 0 | 0 0 8192 0 | | 0 0 20480 0 | 0 0 0 0 | 0 0 4096 0 | 0 0 8192 0 | 0 0 4096 0 | 0 0 4096 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB | 1975 1976 1979 1980 1981 | 2082 2083 2086 2087 2088 | 0 0 1506 0 0 | 0 0 1529 0 0 | 0 0 1957 0 0 | 0 0 2593 0 0 | 0 764 0 | 0 0 2178 0 0 | 0 0 1089 0 0 | 0 0 1627 0 0 | 0 0 1810 0 0 | 0 0 1836 0 0 | 0 0 1847 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 VMPK3V | 1982 1983 1984 1985 1986 | 2089 2090 2091 2092 2093 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| BLCMP2 AHDRTL RADUSL SMCNT | 1987 1988 1989 1990 | 2094 2095 2096 2097 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| DEPVPL ONEPSL INPA1 INPA2 DBLIM | 1991 1992 1993 1994 1995 | 2098 2099 2100 2101 2102 | 0 400 0 0 0 | 0 400 0 15000 | 0 400 0 15000 | 0 400 0 15000 | 400 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 |
| ABVOF ABTSH TRQCST LP24PA VLGOVR | 1996 1997 1998 1999 1700 | 2103 2104 2105 2106 2107 | 0 0 1194 0 0 | 0 0 119 0 | 0 0 1839 0 0 | 0 1839 0 | 0 0 238 0 | 0 0 146 0 0 | 0 0 292 0 0 | 0 0 1216 0 0 | 0 0 1093 0 0 | 0 0 1470 0 0 | 0 0 1460 0 0 |
| RESERV BELLTC MGSTCM DETQLM AMRDML | 1701 1702 1703 1704 1705 | 2108 2109 2110 2111 2112 | 0 0 514 2248 | 0 0 1050 11600 | 0 0 1291 5140 | 0 0 1291 5140 | 0 0 564 11600 | 0 0 782 7790 | 0 0 284 7790 | 0 0 519 6224 | 0 0 513 6194 | 0 0 775 6450 | 0 0 775 6430 |
| NFILT NINTCT MFWKCE MFWKBL | 1706 1735 1736 1752 | 2113 2127 2128 2129 | 0 0 3290 11000 1032 | 0 0 1172 3000 2574 | 0 0 3041 2000 1553 | 0 0 3041 2000 1553 | 0 1172 6000 2574 | 0 0 796 1000 3130 | 0 0 796 2000 3130 | 0 0 2041 2500 2580 | 0 0 4264 2000 3092 | 0 0 1871 4000 2574 | 0 0 5117 3000 2574 |
| LP2GP LP4GP LP6GP PHDLY1 PHDLY2 | 1753 1754 1755 1756 1757 | 2130 2131 2132 2133 2134 | 0 0 2580 4382 | 0 0 7188 8990 | 0 0 3087 8990 | 0 0 3087 8990 | | 0 0 7691 8976 | 0 0 7691 8976 | 0 0 5150 8990 | 0 0 5150 8990 | 0 0 5150 8990 | 0 0 5150 8990 |
| DGCSMM TRQCUP OVCSTP POVC21 POVC22 | 1782 1783 1784 1785 1786 | 2159 2160 2161 2162 2163 | 0 0 32767 | 0 0 120 32767 | 0 0 140 32765 | 0 0 140 32718 | 0 0 120 32767 | 0 0 120 32766 | 0 0 120 32767 | 0 0 140 32766 23 | 0 0 0 32766 | 0 0 140 32766 | 0 0 0 32766 30 |
| POVC22 POVCLMT MAXCRT | | 2163 2164 2165 | 14 2586 45 | 14 2665 25 | 33 6099 165 | 629 10707 165 | 666 | 29 5407 25 | 1352 45 | 4214 165 | 28 5218 85 | 29 5369 165 | 30 5432 85 |

B-65270EN/06

| Symbol | | Motor model or specification Motor ID No. FS16 <i>i</i> ,etc | αiS40 4000 0272 222 | αiS40 4000HV 0273 223 | αiS50 3000 0275 224 | αiS50 3000Fan 0275 225 | α <i>i</i> S50 3000HVFan 0276 226 | αiS50 3000HV 0276 227 | αiS100 2500 0285 235 | αiS100 2500HV 0286 236 | αiS200 2500 0288 238 | αiS200 2500HV 0289 239 | αiS300 2000HV 0293 243 |
|---|--------------------------------------|---|--|--|--|--|---|--|--|--|--|--|---|
| GAUIDO | 1808 1809 1883 1884 | 2003 2004 2005 2006 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 01000110 00000000 00000000 | 00001000 01000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 01000110 00000000 00000000 |
| | 1951 1952 1953 1954 | 2007 2008 2009 2010 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| | 1955 1956 1707 1708 1750 | 2011 2012 2013 2014 2210 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00100000 00000000 00000000 00000000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 |
| PK1 | 1751 2713 2714 1852 | 2211 2300 2301 2040 | 00001010 00000000 00000000 748 | 00001010 00000000 00000000 | 00001010 00000000 00000000 | 00001010 00000000 00000000 | 00001010 00000000 00000000 | 00001010 00000000 00000000 680 | 00001010 00000000 00000000 874 | 00000000 00000000 00000000 | 00001010 00000000 00000000 1309 | 00001010 00000000 00000000 1194 | 00001010 00000000 00000000 1077 |
| PK2 PK3 PK1V PK2V | 1853 1854 1855 1856 | 2041 2042 2043 2044 | -3055 -2682 92 | 860 -3457 -2700 93 | 528 -2088 -2690 69 | 528 -2088 -2690 69 | -2697 | -2961 -2697 70 | -4483 -2717 91 | 980 -4082 -2718 91 | -5199 -2719 115 | -5535 -2719 115 | -5101 -2712 114 |
| PK3V PK4V POA1 | 1857 1858 1859 | 2045 2046 2047 | -827 0 -8235 4589 | -831 0 -8235 4569 | -622 0 -8235 6099 | -622 0 -8235 6099 | 0 -8235 6039 | -628 0 -8235 6039 | -819 0 -8235 4632 | -819 0 -8235 4636 | -1026 0 -8235 3699 | -1026 0 -8235 3699 | -1025 0 -8235 3703 |
| BLCMP DPFMX POK1 POK2 | 1860 1861 1862 1863 | 2048 2049 2050 2051 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 |
| RESERV PPMAX PDDP PHYST | 1864 1865 1866 1867 | 2052 2053 2054 2055 | 0 21 1894 319 | 0 21 1894 319 | 0 31979 3 319 | 0 31979 319 | 31979 3 319 | 0 31979 3 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 3787 319 |
| EMFCMP PVPA PALPH PPBAS | 1868 1869 1870 1871 | 2056 2057 2058 2059 | 0 -5648 -3000 0 | 0 -5652 -3600 0 | 0 -5646 -2000 0 | -5646 -2000 | -5646 -2000 | 0 -5646 -2000 0 | 0 -4368 -1359 0 | 0 -3846 -900 0 | 0 -3090 -2700 0 | 0 -3088 -3000 0 | 0 -3846 -900 0 |
| TQLIM EMFLMT POVC1 POVC2 | 1872 1873 1877 1878 | 2060 2061 2062 2063 | 7282 0 32511 3215 | 7282 0 32501 3332 | 7282 0 32558 2627 | 7282 0 32348 5245 | 0 32371 | 7282 0 32554 2680 | 7282 0 32310 5728 | 7282 0 32474 3672 | 7282 0 32309 5734 | 7282 0 32309 5734 | 7282 0 32391 4714 |
| TGALMLV POVCLMT PK2VAUX FILTER | 1892 1893 1894 1895 | 2064 2065 2066 2067 | 4 9565 0 0 | 4 9912 0 0 | 4 7810 0 0 | 4 15639 0 0 | 0 | 4 7968 0 0 | 4 15662 0 0 | 4 15982 0 0 | 4 27346 0 0 | 4 27346 0 0 | 4 23263 0 0 |
| FALPH VFFLT ERBLM PBLCT | 1961 1962 1963 1964 | 2068 2069 2070 2071 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1965 1966 1967 1970 | 2072 2073 2074 2077 | 0 0 4096 0 | 0 0 4096 0 | 0 0 4096 0 | 0 0 4096 0 | 0 | 0 0 0 0 | 0 0 20480 0 | 0 0 12288 0 | 0 0 12288 0 | 0 0 12288 0 | 0 0 12288 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD | 1975 1976 1979 1980 | 2082 2083 2086 2087 | 0 0 2073 0 | 0 0 2083 0 | 0 0 1439 0 | 0 0 2037 0 | 0 2057 | 0 0 1454 0 | 0 0 1960 0 | 0 0 2033 0 | 0 0 2712 0 | 0 0 2712 0 | 0 0 2483 0 |
| MCNFB BLBSL ROBSTL ACCSPL | 1981 1982 1983 1984 | 2088 2089 2090 2091 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| ADFF1 VMPK3V BLCMP2 AHDRTL | 1985 1986 1987 1988 | 2092 2093 2094 2095 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| RADUSL SMCNT DEPVPL ONEPSL | 1989 1990 1991 1992 | 2096 2097 2098 2099 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF | 1993 1994 1995 1996 | 2100 2101 2102 2103 | 0 0 0 | 0 0 0 | 0 0 0 0 | | | 0 0 0 | 0 0 0 | 0 0 10000 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| ABTSH TRQCST LP24PA VLGOVR | 1997 1998 1999 1700 | 2104 2105 2106 2107 | 0 1701 0 | 0 1693 0 0 | 0 3312 0 0 | 0 3312 0 0 | 3279 0 0 | 0 3279 0 0 | 0 4589 0 0 | 0 4423 0 0 | 0 5973 0 0 | 0 5973 0 0 | 0 10871 0 0 |
| RESERV BELLTC MGSTCM DETQLM | 1701 1702 1703 1704 | 2108 2109 2110 2111 2111 | 0 0 776 5682 | 0 0 769 5682 | 0 0 519 6174 | 0 0 519 6174 | 0 0 519 6174 | 0 519 6174 | 0 0 776 3787 | 0 0 1291 0 | 0 0 1290 0 | 0 0 1291 3428 | 0 0 1296 0 |
| AMRDML NFILT NINTCT MFWKCE | 1705 1706 1735 1736 | 2112 2113 2127 2128 | 0 0 1853 4000 | 0 0 5230 4000 | 0 0 2046 6500 | 0 0 2046 6500 | 0 0 4861 2500 | 0 0 4861 2500 | 0 0 3520 6500 | 0 0 6952 2000 | 0 0 3518 4000 | 0 0 6729 4000 | 0 0 7634 5000 |
| MFWKBL LP2GP LP4GP LP6GP | 1752 1753 1754 1755 | 2129 2130 2131 2132 | 2063 0 0 0 | 2063 0 0 0 | 2063 0 0 0 | 2063 0 0 0 | | 2068 0 0 0 | 1297 0 0 0 | 1549 0 0 0 | 1298 0 0 0 | 1551 0 0 | 1301 0 0 |
| PHDLY1 PHDLY2 DGCSMM TRQCUP | 1756 1757 1782 1783 | 2133 2134 2159 2160 | 5150 8988 0 0 | 5150 8988 0 0 | 5150 8990 0 0 | 5150 8990 0 0 | 9000 0 0 | 5140 9000 0 0 | 2570 8970 0 106 | 0 0 0 | 2068 12820 0 0 | 2575 8984 0 0 | 2574 12814 0 0 |
| OVČŠTP POVC21 POVC22 POVCLMT MAXCRT | 1784 1785 1786 1787 1788 | 2161 2162 2163 2164 2165 | 140 32765 38 6846 165 | 0 32765 38 6908 85 | 0 32754 174 3300 365 | 0 32739 365 6608 365 | 32738 373 6736 | 0 32754 178 3366 185 | 106 32750 223 6581 365 | 140 32759 112 6752 185 | 140 32745 292 13952 365 | 140 32745 292 13952 185 | 140 32738 375 13952 365 |

B-65270EN/06

| Symbol | Motor FS15 <i>i</i> | Motor model specification Motor ID No. FS16 <i>i</i> ,etc | α <i>i</i> S500 2000 0295 245 | α <i>i</i> S500 2000HV 0296 246 | αiS1000 2000HV 0298 248 |
|---------------------------|------------------------|--|--|--|----------------------------------|
| | 1808 | 2003 | 00001000 | 00001000 | 00001000 |
| | 1809 | 2004 | 00000110 | 01000110 | 01000110 |
| | 1883 | 2005 | 00000000 | 00000000 | 00000000 |
| | 1884 | 2006 | 00000000 | 00000000 | 00000000 |
| | 1951 | 2007 | 000000 | 000000 | 000000 |
| | 1952 | 2008 | 0000000 | 0000000 | 0000000 |
| | 1953 | 2009 | 00000000 | 0000000 | 00000000 |
| | 1954 | 2010 | 00000000 | 00000000 | 00000000 |
| | 1955 | 2011 | 00000000 | 00000000 | 00100000 |
| | 1956 | 2012 | 00000000 | 00000000 | 00000000 |
| | 1707 1708 1750 | 2013 2014 | 0000000 00000000 | 0000000 00000000 | 0000000 00000000 |
| | 1750 | 2210 | 00000000 | 00000000 | 00000000 |
| | 1751 | 2211 | 00001010 | 00001010 | 00000010 |
| | 2713 | 2300 | 00000000 | 00000000 | 00000000 |
| PK1 | 2714 | 2301 | 00000000 | 00000000 | 00000000 |
| PK2 | 1852 | 2040 | 1943 | | 1053 |
| PK2 | 1853 | 2041 | -6970 | -6505 | -3316 |
| PK3 | 1854 | 2042 | -2711 | -2713 | -2722 |
| PK1V | 1855 | 2043 | 134 | 134 | 234 |
| PK2V PK3V PK4V | 1856 1857 | 2044 2045 2046 | -1199 0 | -1199 0 | -2096 0 |
| POA1 BLCMP | 1858 1859 1860 | 2046 2047 2048 | -8235 3164 0 | -8235 3164 0 | -8235 1811 0 |
| DPFMX POK1 | 1861 1862 | 2049 2050 2051 | 0 956 | 0 956 | 0 956 |
| POK2 | 1863 | 2051 | 510 | 510 | 510 |
| RESERV | 1864 | 2052 | 0 | 0 | 0 |
| PPMAX | 1865 | 2053 | 21 | 21 | 21 |
| PDDP | 1866 | 2054 | 1894 | 3787 | 3787 |
| PHYST | 1867 | 2055 | 319 | 319 | 319 |
| EMFCMP | 1868 | 2056 | 0 | 0 | 0 |
| PVPA | 1869 | 2057 | -2068 | -2070 | -3097 |
| PALPH | 1870 | 2058 | -2600 | -2700 | -2000 |
| PPBAS | 1871 | 2059 | 0 | 0 | 0 |
| TQLIM | 1872 | 2060 | 7282 | 7282 | 7282 |
| EMFLMT | 1873 | 2061 | 0 | 0 | 0 |
| POVC1 | 1877 | 2062 | 32309 | 32309 | 32309 |
| POVC2 | 1878 | 2063 | 5734 | 5734 | 5734 |
| TGALMLV | 1892 | 2064 | 4 | 4 | 4 |
| POVCLMT | 1893 | 2065 | 27346 | 27346 | 27346 |
| PK2VAUX | 1894 | 2066 | 0 | 0 | 0 |
| FILTER | 1895 | 2067 | 0 | 0 | 0 |
| FALPH | 1961 | 2068 | 0 | 0 | 0 |
| VFFLT ERBLM | 1962 1963 | 2069 2070 | 0 | 0 | 0 0 |
| PBLCT | 1964 | 2071 | 0 | 0 | 0 |
| SFCCML | 1965 | 2072 | 0 | 0 | 0 |
| PSPTL | 1966 | 2073 | 0 | 0 | 0 |
| AALPH | 1967 | 2074 | 12288 | 12288 | 12288 |
| OSCTPL | 1970 | 2077 | 0 | 0 | 0 |
| PDPCH | 1971 | 2078 | 0 | 0 | 0 |
| PDPCL | 1972 | 2079 | 0 | 0 | 0 |
| DPFEX | 1973 | 2080 | 0 | 0 | 0 |
| DPFZW | 1974 | 2081 | 0 | 0 | 0 |
| BLENDL | 1975 | 2082 | 0 | 0 | 0 |
| MOFCTL | 1976 | 2083 | 0 | 0 | 0 |
| RTCURR | 1979 | 2086 | 2980 | 2980 | 2834 |
| TDPLD | 1980 | 2087 | 0 | 0 | 0 |
| MCNFB | 1981 | 2088 | 0 | 0 | 0 |
| BLBSL | 1982 | 2089 | 0 | 0 | |
| ROBSTL ACCSPL ADFF1 | 1983 1984 1985 | 2090 2091 2092 | 0 0 0 | 0 | 0 |
| VMPK3V BLCMP2 | 1985 1986 1987 | 2092 2093 2094 | 0 | 0 0 0 | 0 0 0 0 0 |
| AHDRTL RADUSL SMCNT | 1988 1989 1990 | 2095 2096 2097 | 0 | 0 | 0 |
| DEPVPL ONEPSL | 1990 1991 1992 | 2097 2098 2099 | 0 0 400 | 0 0 400 | 0 0 400 |
| INPA1 INPA2 DBLIM | 1993 1994 1995 | 2100 2101 2102 | 0 | 0 | 0 0 15000 |
| ABVOF ABTSH | 1996 1997 | 2103 2104 | 0 0 0 | 0 0 0 | 15000 0 0 |
| TRQCST | 1998 | 2105 | 15096 | 15096 | 28573 |
| LP24PA | 1999 | 2106 | 0 | 0 | 0 |
| VLGOVR | 1700 | 2107 | 0 | 0 | 0 |
| RESERV BELLTC | 1701 1702 | 2107 2108 2109 | 0 0 | 0 | 0 0 |
| MGSTCM | 1703 | 2110 | 1296 | 1293 | 1296 |
| DETQLM | 1704 | 2111 | 0 | 3714 | 3172 |
| AMRDML | 1705 | 2112 | 0 | 0 | 0 |
| NFILT | 1706 | 2113 | 0 | 0 | 0 |
| NINTCT | 1735 | 2127 | 4175 | 8341 | 8637 |
| MFWKCE | 1736 | 2128 | 4000 | 4500 | 6000 |
| MFWKBL | 1752 | 2129 | 1041 | 788 | 1047 |
| LP2GP | 1753 | 2130 | 0 | 0 | 0 |
| LP4GP | 1754 | 2131 | 0 | 0 | 0 |
| LP6GP | 1755 | 2132 | 0 | 0 | 0 |
| PHDLY1 | 1756 | 2133 | 2069 | 2324 | 2580 |
| PHDLY2 | 1757 | 2134 | 8981 | 8984 | 8985 |
| DGCSMM | 1782 | 2159 | 0 | 0 | 0 |
| TRQCUP | 1783 | 2160 | 0 | 0 | 0 |
| | 1784 | 2161 | 140 | 140 | 140 |
| POVC21 | 1785 | 2162 | 32745 | 32745 | 32745 |
| POVC22 | 1786 | 2163 | 292 | 292 | 292 |
| POVCLMT | 1787 | 2164 | 13952 | 13952 | 13952 |
| MAXCRT | 1788 | 2165 | 365 | 365 | 365 |

6.2 PARAMETERS FOR HRV2 CONTROL

December, 2005

Series 90B0 Series 90B1 Series 90B6 and 90B5 Series 90D0 and 90E0

| Querchal | | Motor model Motor specification Motor ID No. | β <i>i</i> S2 4000HV 0062 251 | αiF1 5000 0202 252 | β <i>i</i> S2 4000 0061 253 | β <i>i</i> S2/4000 SVSP40A 0061 254 | αiF2 5000 0205 255 | β <i>i</i> S4 4000 0063 256 | βiS4/4000 SVSP40A 0063 257 | β <i>i</i> S8 3000 0075 258 | βiS8/3000 SVSP40A 0075 259 | β <i>i</i> S0.2 5000 0111 260 | β <i>i</i> S0.3 5000 0112 261 |
|---|---|---|--|--|--|--|--|--|--|--|--|--|--|
| Symbol | FS15 <i>i</i> 1808 1809 1883 1884 1951 | FS30,16 <i>i</i> ,etc 2003 2004 2005 2006 2007 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 |
| | 1952 1953 1954 1955 | 2008 2009 2010 2011 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| | 1956 1707 1708 1750 | 2012 2013 2014 2210 | 00000000 00000100 00000100 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000100 00000100 00000000 | 00000000 00010000 00010000 00010000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00001110 00001110 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00001110 00001110 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| PK1 | 1751 2713 2714 1852 | 2211 2300 2301 2040 | 00001110 00000000 00000000 348 | 00001010 00000000 00000000 | 00001110 00000000 00000000 360 | 00001110 00000000 00000000 720 | 00001010 00000000 00000000 760 | 00001110 00000000 00000000 400 | 00001110 00000000 00000000 800 | 00001110 00000000 00000000 650 | 00001110 00000000 00000000 1160 | 00000010 00000000 00000000 123 | 00000010 00000000 00000000 210 |
| PK2 PK3 PK1V | 1853 1854 1855 | 2041 2042 2043 | -1676 -1232 78 | 620 -3034 -1256 66 | -1920 -1237 78 | -3840 -1237 39 | -3743 -1283 76 | -1920 -1253 112 | -3840 -1253 56 | -3831 -1299 164 | -5600 -1299 82 | -510 -1069 4 | -970 -1146 4 |
| PK2V PK3V PK4V POA1 | 1856 1857 1858 1859 | 2044 2045 2046 2047 | -700 0 -8235 -1085 | -594 0 -8235 6384 | -698 0 -8235 -1089 | -349 0 -8235 -2178 | -680 0 -8235 5578 | -1008 0 -8235 -753 | -504 0 -8235 -1506 | -1476 0 -8235 5143 | -738 0 -8235 -1029 | -36 0 -8235 -10638 | -33 0 -8235 -11550 |
| BLCMP DPFMX POK1 POK2 | 1860 1861 1862 1863 | 2048 2049 2050 2051 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 |
| RESERV PPMAX PDDP PHYST | 1864 1865 1866 1867 | 2052 2053 2054 2055 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 |
| EMFCMP PVPA PALPH PPBAS | 1868 1869 1870 1871 | 2056 2057 2058 2059 | 0 -10250 -1000 0 | -5130 0 0 | 0 -10250 -1000 0 | 0 -10245 -500 0 | -10 -12298 -1275 0 | 0 -7694 -2800 0 | 0 -7687 -1400 0 | -2570 -5140 -3200 0 | 0 -5131 -1600 0 | 0 0 0 | 0 0 0 |
| TQLIM EMFLMT POVC1 POVC2 | 1872 1873 1877 1878 | 2060 2061 2062 2063 | 6554 0 32538 2879 | 7282 0 32613 1933 | 6554 0 32531 2963 | 3277 0 32531 2963 | 7282 0 32497 3390 | 7282 0 32289 5988 | 3641 0 32289 5988 | 7282 0 32289 5994 | 3641 0 32289 5994 | 7282 0 32725 533 | 7282 0 32725 533 |
| TGALMLV POVCLMT PK2VAUX FILTER | 1892 1893 1894 1895 | 2064 2065 2066 2067 | 2073 4 8560 0 0 | 1308 4 5739 0 0 | 2300 4 8811 0 0 | 2203 0 0 | 4 10085 0 0 | 4 17873 0 0 | 4468 0 | 17889 0 0 | 4472 0 | 4 3163 0 | 4 3163 0 |
| FALPH VFFLT ERBLM PBLCT | 1961 1962 1963 1964 | 2068 2069 2070 2071 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1964 1965 1966 1967 1970 | 2072 2073 2074 | 0 0 20480 | 0 0 20480 0 | 0 0 16384 | 0 0 0 0 | 0 0 12288 0 | 0 0 20480 | 0 0 0 0 | 0 0 16384 | 0 0 0 0 | 0 0 20480 | 0 0 20480 |
| PDPCH PDPCL DPFEX DPFZW | 1970 1971 1972 1973 1974 | 2077 2078 2079 2080 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 |
| BLENDL MOFCTL RTCURR | 1975 1976 1979 | 2081 2082 2083 2086 | 0 0 1507 | 0 0 1234 | 0 0 1529 | 0 0 764 | 0 0 1636 | 0 0 2178 | 0 0 1089 | 0 0 2780 | 0 0 1390 | 0 0 1929 | 0 0 1929 |
| TDPLD MCNFB BLBSL ROBSTL | 1980 1981 1982 1983 | 2087 2088 2089 2090 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 |
| ACCSPL ADFF1 VMPK3V BLCMP2 | 1984 1985 1986 1987 | 2091 2092 2093 2094 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL | 1988 1989 1990 1991 | 2095 2096 2097 2098 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| ONEPSL INPA1 INPA2 DBLIM | 1992 1993 1994 1995 | 2099 2100 2101 2102 | 400 0 0 0 | 400 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 |
| ABVOF ABTSH TRQCST LP24PA | 1996 1997 1998 1999 | 2103 2104 2105 2106 | 0 0 119 0 | 0 0 72 0 | 0 0 119 0 | 0 0 238 0 | 0 0 109 0 | 0 0 146 0 | 0 0 292 0 | 0 0 226 0 | 0 0 452 0 | 0 0 7 0 | 0 0 14 0 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 1701 1702 1703 | 2107 2108 2109 2110 | 0 0 1048 | 0 0 0 32 | 0 0 1048 | 0 0 815 | 0 0 0 32 | 0 0 780 | 0 0 0 532 | 0 0 0 1807 | 0 0 0 1045 | 0 0 0 | 0 0 0 1 |
| DETQLM AMRDML NFILT NINTCT | 1704 1705 1706 1735 | 2111 2112 2113 2127 | 11600 0 2345 | 10260 0 1188 | 11600 0 0 1172 | 11600 0 1172 | 10280 0 1276 | 7790 0 0 796 | 7790 0 0 796 | 7930 0 1442 | 7930 0 1442 | 7710 0 0 379 | 7700 0 0 852 |
| MFWKCE MFWKBL LP2GP LP4GP | 1736 1752 1753 1754 | 2128 2129 2130 2131 | 1000 3358 0 | 1667 3858 0 0 | 2500 3358 0 | 5000 3358 0 | 2000 3862 0 | 3000 3392 0 | 6000 3392 0 | 3500 1298 0 0 | 7000 1298 0 | 0 0 0 0 | 3000 3880 0 0 |
| LP6GP PHDLY1 PHDLY2 DGCSMM | 1755 1756 1757 1782 | 2132 2133 2134 2159 | 0 7192 8990 0 | 0 7690 12840 0 | 0 7192 8990 0 | 0 7192 8990 0 | 0 7693 12840 0 | 0 8992 12864 0 | 0 8992 9024 0 | 0 3858 8990 0 | 0 3858 8990 0 | 0 7700 12825 0 | 0 7695 12840 0 |
| TRQCUP OVCSTP POVC21 | 1783 1784 1785 | 2160 2161 2162 | 0 0 32766 | 0 0 32767 | 0 0 32766 | 0 0 32766 | 0 0 32766 | 0 0 32765 | 0 0 32765 | 0 0 327 <u>62</u> | 0 0 32762 | 0 0 0 | 0 0 0 |
| POVC22 POVCLMT MAXCRT | 1786 1787 1788 | 2163 2164 2165 | 19 3617 10 | 13 2425 25 | 20 3723 25 | 20 931 45 | 23 4261 25 | 42 7551 25 | 42 1888 45 | 74 12305 25 | 74 3076 45 | 0 0 4 | 0 0 4 |

B-65270EN/06

| Symbol | | Motor model tor specification Motor ID No. FS30,16 <i>i</i> ,etc | αiS2 5000 0212 262 | αiS2 5000HV 0213 263 | βiS4 4000HV 0064 264 | αiS4 5000 0215 265 | αiS4 5000HV 0216 266 | βiS8 3000HV 0076 267 | β <i>i</i> S12 2000 0077 269 | β <i>i</i> S12 3000HV 0079 270 | αC4 3000 <i>i</i> 0221 271 | β <i>i</i> S12 3000 0078 272 | αiF4 4000 0223 273 |
|---|--------------------------------------|---|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|-----------------------------------|---------------------------------------|---|-------------------------------------|---------------------------------------|-----------------------------------|
| 01 | 1808 | 2003 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 |
| | 1809 | 2004 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 | 00000011 |
| | 1883 | 2005 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1884 | 2006 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1951 | 2007 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 |
| | 1952 | 2008 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1953 | 2009 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1954 | 2010 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1955 | 2011 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0010000 |
| | 1956 | 2012 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000 | 0000000 |
| | 1707 | 2013 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1708 | 2014 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1750 | 2210 | 0000000 | 0000000 | 00000000 | 00000000 | 0000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 0000000 |
| | 1751 | 2211 | 00001010 | 00001010 | 00001110 | 00001010 | 00001010 | 00001110 | 00001110 | 00001110 | 00001010 | 00001110 | 00000010 |
| | 2713 | 2300 | 0000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 000000 | 0000000 |
| PK1 PK2 PK3 PK1V | 2714 1852 1853 1854 1855 | 2301 2040 2041 2042 2043 | 00000000 530 -2543 -1251 | 00000000 400 -2312 -1251 | 00000000 331 -1560 -1246 | 00000000 420 -1748 -1276 | 00000000 425 -1641 -1266 | 00000000 605 -3028 -1300 | 00000000 547 -3289 -1305 | 00000000 427 -2301 -1302 | 00000000 1240 -6415 -1309 | 00000000 402 -2217 -1304 | 00000000 993 -4260 -1311 |
| PK2V PK3V PK4V | 1856 1857 1858 | 2044 2045 2046 | 39 -350 0 -82 <u>3</u> 5 | 39 -351 0 -8235 | 112 -1010 0 -8235 | 64 -574 0 -8235 | 64 -574 0 -8235 | 166 -1482 0 -8235 | 230 -2054 0 -8235 | 170 -1524 0 -8235 | 115 -1034 0 -8235 | 170 -1530 0 -8235 | 106 -953 0 -8235 |
| POA1 BLCMP DPFMX POK1 | 1859 1860 1861 1862 | 2047 2048 2049 2050 | 10853 0 0 956 | -1081 0 956 | -751 0 956 | -661 0 956 | -661 0 956 | 5118 0 956 | 3695 0 956 | 4978 0 956 | 3670 0 956 | 4960 0 956 | 3980 0 0 956 |
| POK2 | 1863 | 2051 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 |
| RESERV | 1864 | 2052 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PPMAX | 1865 | 2053 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 |
| PDDP | 1866 | 2054 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 |
| PHYST | 1867 | 2055 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 | 319 |
| EMFCMP | 1868 | 2056 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | -5130 |
| PVPA | 1869 | 2057 | -10250 | -10252 | -7694 | -8974 | -10262 | -5140 | -3884 | -5140 | -5915 | -5140 | -11789 |
| PALPH | 1870 | 2058 | -2000 | -1600 | -2800 | -3641 | -3300 | -3200 | -4350 | -3500 | -1500 | -3500 | -180 |
| PPBAS | 1871 | 2059 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| TQLIM | 1872 | 2060 | 7282 | 7282 | 7282 | 7282 | 7282 | 7282 | 7282 | 7282 | 7282 | 7282 | 8010 |
| EMFLMT POVC1 POVC2 TGALMLV | 1873 1877 1878 1892 | 2061 2062 2063 2064 | 0 32528 3005 4 | 0 32532 2953 4 | 0 32299 5865 | 0 32289 5994 | 0 32289 5994 | 0 32301 5842 | 0 32284 6045 | 0 32435 4164 | 32406 4529 | 0 32205 7041 4 | 0 32446 4029 4 |
| POVCLMT | 1893 | 2065 | 8936 | 8782 | 17504 | 17889 | 17889 | 17435 | 18045 | 12399 | 13493 | 21044 | 11998 |
| PK2VAUX | 1894 | 2066 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| FILTER | 1895 | 2067 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| FALPH | 1961 | 2068 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| VFFLT | 1962 | 2069 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ERBLM | 1963 | 2070 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PBLCT | 1964 | 2071 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| SFCCML | 1965 | 2072 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PSPTL | 1966 | 2073 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| AALPH | 1967 | 2074 | 20480 | 16384 | 20480 | 12288 | 8192 | 20480 | 8192 | 20480 | 12288 | 16384 | 8192 |
| OSCTPL | 1970 | 2077 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PDPCH PDPCL DPFEX | 1971 1972 1973 1974 | 2078 2079 2080 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 |
| DPFZW BLENDL MOFCTL RTCURR | 1975 1976 1979 | 2081 2082 2083 2086 | 0 0 1540 | 0 0 0 1526 | 0 0 2155 | 0 0 2824 | 0 0 2824 | 0 0 2793 | 0 0 3126 | 0 0 2356 | 0 0 1892 | 0 0 2363 | 0 0 0 1784 |
| TDPLD MCNFB BLBSL ROBSTL | 1980 1981 1982 1983 | 2087 2088 2089 2090 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| ACCSPL ADFF1 VMPK3V | 1984 1985 1986 | 2091 2092 2093 | 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| BLCMP2 | 1987 | 2094 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| AHDRTL | 1988 | 2095 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| RADUSL | 1989 | 2096 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| SMCNT | 1990 | 2097 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DEPVPL | 1991 | 2098 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ONEPSL | 1992 | 2099 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 |
| INPA1 | 1993 | 2100 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| INPA2 | 1994 | 2101 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DBLIM ABVOF ABTSH TRQCST | 1995 1996 1997 | 2102 2103 2104 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 15000 0 0 |
| LP24PA VLGOVR RESERV | 1998 1999 1700 1701 | 2105 2106 2107 2108 | 117 0 0 0 | 117 0 0 0 | 146 0 0 0 | 127 0 0 0 | 127 0 0 0 | 225 0 0 0 | 315 0 0 0 | 420 0 0 0 | 190 0 0 0 | 418 0 0 0 | 201 0 0 0 |
| BELLTC | 1702 | 2109 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| MGSTCM | 1703 | 2110 | 32 | 40 | 780 | 8 | 40 | 1807 | 1 | 1814 | 1289 | 1814 | 32 |
| DETQLM | 1704 | 2111 | 8995 | 10260 | 7790 | 10295 | 10260 | 7930 | 3940 | 7930 | 3900 | 7930 | 5130 |
| AMRDML | 1705 | 2112 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| NFILT | 1706 | 2113 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| NINTCT | 1735 | 2127 | 1137 | 4548 | 1592 | 646 | 1293 | 2885 | 1350 | 2388 | 2544 | 1194 | 1443 |
| MFWKCE | 1736 | 2128 | 1000 | 1250 | 500 | 1667 | 3000 | 1000 | 4000 | 3000 | 5000 | 3000 | 2000 |
| MFWKBL | 1752 | 2129 | 3851 | 3847 | 3339 | 3847 | 5122 | 1298 | 280 | 2056 | 1812 | 2056 | 3338 |
| LP2GP | 1753 | 2130 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP4GP | 1754 | 2131 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP6GP | 1755 | 2132 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PHDLY1 | 1756 | 2133 | 7690 | 7690 | 8972 | 7690 | 7685 | 3848 | 3614 | 5138 | 3855 | 5138 | 6670 |
| PHDLY2 | 1757 | 2134 | 12840 | 12850 | 12816 | 12840 | 12850 | 8990 | 8980 | 6430 | 8995 | 8990 | 8980 |
| DGCSMM | 1782 | 2159 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| TRQCUP | 1783 | 2160 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OVČSTP POVC21 POVC22 POVCLMT MAXCRT | 1784 1785 1786 | 2161 2162 2163 2164 2165 | 0 32766 20 3776 25 | 0 32766 20 3711 10 | 0 32765 41 7395 10 | 0 32762 77 12702 25 | 0 32762 77 12702 10 | 0 32762 75 12424 10 | 0 32760 99 15559 25 | 0 32764 50 8836 25 | 0 32766 31 5701 25 | 0 32764 51 8891 45 | 0 32766 27 5069 45 |

B-65270EN/06

| Symbol | | Motor model Motor specification Motor ID No. | β <i>i</i> S22 2000 0085 274 | α <i>i</i> F4 4000HV 0225 275 | αC8 2000 <i>i</i> 0226 276 | α <i>i</i> F8 3000 0227 277 | β <i>i</i> S22 2000HV 0086 278 | αiF8 3000HV 0229 279 | β <i>i</i> S0.4 5000 0114 280 | β <i>i</i> S0.5 6000 0115 281 | β <i>i</i> S1 6000 0116 282 | β <i>i</i> S8/3000 FS0 <i>i</i> 0075–Bxx67 283 | αiS2 6000 0218 284 |
|---|---|---|--|--|--|---|---|--|---|--|--|---|--|
| Symbol | FS15 <i>i</i> 1808 1809 1883 1884 1951 1952 1953 | FS30.16 <i>i</i> .etc 2003 2004 2005 2006 2007 2008 2009 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 |
| | 1954 1955 1956 1707 1708 | 2010 2011 2012 2013 2014 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 00100000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 0000000 00000 |
| PK1 | 1750 1751 2713 2714 1852 | 2210 2211 2300 2301 2040 | 00000000 00001110 00000000 00000000 | 00000000 00001010 00000000 00000000 | 00000000 00001010 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00001110 00000000 00000000 | 00000000 00001010 00000000 00000000 | 00000000 00000010 00000000 00000000 | 00000000 00001010 00000000 00000000 | 00000000 00001010 00000000 00000000 | 00000000 00001110 00000000 00000000 | 0000000 00001010 0000000 0000000 |
| PK2 PK3 PK1V PK2V | 1852 1853 1854 1855 1856 | 2040 2041 2042 2043 2044 | 1184 -6800 -1331 242 -2172 | 570 -3578 -1309 113 -1009 | 1276 -6288 -1326 150 -1342 | 787 -4184 -1325 113 -1009 | 1446 -5822 -1332 244 -2182 | 1222 -5890 -1322 113 -1008 | 100 -430 -2463 7 -61 | 138 -673 -1205 7 -59 | 312 -1360 -1203 6 -53 | 650 -3831 -1299 164 -1476 | 552 -2288 -1252 48 -429 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 3496 0 | 0 -8235 3762 0 | 0 -8235 2827 0 | 0 -8235 3760 0 | 0 -8235 3478 0 | 0 -8235 3764 0 | -8235 -6249 0 | 0 -8235 -6462 0 | 0 -8235 -7176 0 | 0 -8235 5143 0 | 0 -8235 -884 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA | 1866 1867 1868 1869 | 2054 2055 2056 2057 | 1894 319 -5130 -3612 | 1894 319 0 0 | 1894 319 0 -3854 | 1894 319 0 -6420 | 1894 319 0 -3612 | 1894 319 0 -6159 | 1894 319 -12850 0 | 1894 319 -12850 0 | 1894 319 -12850 -15420 | 1894 319 -2570 -5140 | 1894 319 0 -13062 |
| PALPH PPBAS TQLIM EMFLMT POVC1 | 1870 1871 1872 1873 1877 | 2058 2059 2060 2061 2062 | -3000 0 7282 0 32106 | 0 0 7282 0 32433 | -1236 0 7282 0 32289 | -2000 0 8010 0 32383 | -3000 0 7282 0 32433 | -1261 0 8010 0 32433 | 0 0 5826 0 32640 | 0 0 7282 0 32674 | -1000 0 7282 0 32695 | -3200 0 7282 0 32381 | -1000 0 7282 0 32415 |
| POVC2 TGALMLV POVCLMT PK2VAUX | 1878 1892 1893 1894 | 2063 2064 2065 2066 | 8275 4 24770 0 | 4184 4 12461 0 | 5994 4 17889 0 | 4807 4 14327 0 | 4185 4 12462 0 | 4184 4 12461 0 | 1603 4 4759 0 | 1178 4 3497 0 | 915 4 2714 0 | 4835 4 14410 0 | 4413 4 13146 0 |
| FILTER FALPH VFFLT ERBLM PBLCT | 1895 1961 1962 1963 1964 | 2067 2068 2069 2070 2071 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL PDPCH | 1965 1966 1967 1970 1971 | 2072 2073 2074 2077 2078 | 0 0 16384 0 0 | 0 0 12288 0 0 | 0 0 8192 0 0 | 0 0 8192 0 0 | 0 0 8192 0 0 | 0 0 12288 0 0 | 0 0 20480 0 0 | 0 0 20480 0 0 | 0 0 20480 0 0 | 0 0 16384 0 0 | 0 0 20480 0 0 |
| PDPCL DPFEX DPFZW BLENDL | 1972 1973 1974 1975 | 2079 2080 2081 2082 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| MOFCTL RTCURR TDPLD MCNFB BLBSL | 1976 1979 1980 1981 1982 | 2083 2086 2087 2088 2089 | 0 2618 0 0 0 | 0 1888 0 0 0 | 0 2593 0 0 0 | 0 1950 0 0 0 | 0 2611 0 0 0 | 0 1948 0 0 0 | 0 1605 0 0 0 | 0 1376 0 0 0 | 0 1212 0 0 0 | 0 2780 0 0 0 | 0 1868 0 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 | 1983 1984 1985 1986 1987 | 2090 2091 2092 2093 2094 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL | 1987 1988 1989 1990 1991 | 2095 2096 2097 2098 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| ONEPSL INPA1 INPA2 DBLIM ABVOF | 1992 1993 1994 1995 1996 | 2099 2100 2101 2102 2102 2103 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 15000 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 |
| ABTSH TRQCST LP24PA VLGOVR | 1997 1998 1999 1700 | 2104 2105 2106 2107 | 0 692 0 0 | 0 190 0 0 | 0 277 0 0 | 0 369 0 0 | 0 689 0 0 | 0 369 0 0 | 0 22 0 0 | 0 42 0 0 | 0 89 0 0 | 0 226 0 0 | 0 96 0 0 |
| RESERV BELLTC MGSTCM DETQLM AMRDML | 1701 1702 1703 1704 1705 | 2108 2109 2110 2111 2112 | 0 0 2866 0 | 0 0 1032 0 0 | 0 0 1552 3880 0 | 0 0 776 3870 0 | 0 0 2866 0 | 0 0 782 0 0 | 0 0 30 10290 0 | 0 0 25 10290 0 | 0 0 1556 10290 0 | 0 0 1807 7930 0 | 0 0 1555 11550 0 |
| NFILT NINTCT MFWKCE MFWKBL LP2GP | 1706 1735 1736 1752 1753 | 2113 2127 2128 2129 2130 | 0 2459 5000 562 0 | 0 2573 4000 3348 0 | 0 2380 4500 1550 0 | 0 2103 3500 1815 0 | 0 5149 3000 562 0 | 0 4191 6000 1810 0 | 0 400 0 0 0 | 0 504 0 0 0 | 0 881 1500 5135 0 | 0 1442 3500 1298 0 | 0 1137 3000 4112 0 |
| LP4GP LP6GP PHDLY1 PHDLY2 DGCSMM | 1754 1755 1756 1757 1782 | 2131 2132 2133 2133 2134 2159 | 0 0 3350 8979 0 | 0 0 5130 8990 0 | 0 0 3860 8990 0 | 0 0 0 0 0 | 0 0 3352 8989 0 | 0 0 5150 8990 0 | 0 0 7690 12820 0 | 0 0 7690 12820 0 | 0 0 15400 12840 0 | 0 0 3858 8990 0 | 0 0 7690 7740 0 |
| TROCUP OVCSTP POVC21 POVC22 POVCLMT MAXCRT | 1783 1784 1785 1786 1787 1788 | 2160 2161 2162 2163 2164 2165 | 0 0 32763 64 10913 45 | 0 0 32766 31 5676 25 | 0 0 32763 63 10709 25 | 0 0 32765 33 6053 45 | 0 0 32763 64 10854 25 | 0 0 32765 33 6042 25 | 0 0 32766 22 4104 25 | 0 0 32767 16 3015 25 | 0 0 32767 12 2340 25 | 0 0 32764 51 8896 25 | 0 0 32766 30 5554 25 |

| Symbol | | Motor model or specification Motor ID No. FS30,16 <i>i</i> ,etc | αiS8 4000 0235 285 | αiS8 4000HV 0236 286 | αiS2 6000HV 0219 287 | αiS12 4000 0238 288 | αiS12 4000HV 0239 289 | αiS8 6000 0232 290 | αC12 2000 <i>i</i> 0241 291 | αiS8 6000HV 0233 292 | αiF12 3000 0243 293 | β <i>i</i> S8/3000 FS0 <i>i</i> _40A 0075–Bxx6 294 | α <i>i</i> F12 3000HV 0245 295 |
|---|--|--|--|--|--|--|--|--|---|---|--|---|---|
| Gymbol | 1808 1809 1883 1884 1951 1952 1953 | 2003 2004 2005 2006 2007 2008 2009 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 |
| | 1954 1955 1956 1707 1708 1750 1751 | 2010 2011 2012 2013 2014 2210 2211 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 0000000 00100000 00000000 00000000 000000 | 00000000 00000000 00000000 00000000 0000 | 0000000 00100000 00000000 00000000 000000 | 00000000 00000000 0000000 00001110 00001110 000000 | 0000000 0010000 0000000 0000000 0000000 000000 |
| PK1 PK2 PK3 PK1V PK2V | 2713 2714 1852 1853 1854 1855 1856 | 2300 2301 2040 2041 2042 2043 2044 | 0000000 0000000 -3449 -1307 33 | 00000000 00000000 694 -3858 -1318 34 | 0000000 0000000 497 -2371 -1249 48 | 00000000 00000000 -3358 -1319 52 | 00000000 00000000 -4294 -1333 52 | 0000000 0000000 -1760 -1305 53 | 0000000 0000000 1875 -9137 -1339 280 | 00000000 00000000 -1749 -1305 53 | 00000000 00000000 -6391 -1315 192 | 0000000 0000000 -5600 -1299 82 | 0000000 0000000 -6059 -1339 193 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | -294 0 -8235 -1289 0 | -306 0 -8235 -1240 0 | -429 0 -8235 -884 0 | -466 0 -8235 -815 0 | -470 0 -8235 -808 0 | -478 0 -8235 -794 0 | -2504 0 -8235 1516 0 | -478 0 -8235 -794 0 | -1721 0 -8235 2204 0 | -738 0 -8235 -1029 0 | -1727 0 -8235 2197 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH | 1866 1867 1868 1869 1870 | 2054 2055 2056 2057 2058 | 1894 319 0 -7685 -2000 | 1894 319 0 -7685 -2000 | 1894 319 0 -13062 -1200 | 1894 319 0 -5898 -3000 | 1894 319 0 -5898 -3000 | 1894 319 -12850 -16398 -1000 | 1894 319 0 -1804 -2500 | 1894 319 -12850 -16398 -1000 | 1894 319 0 -8199 -747 | 1894 319 0 -5131 -1600 | 1894 319 0 -8203 -1178 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 | 1871 1872 1873 1877 1878 | 2059 2060 2061 2062 2063 | 0 7282 0 32609 1993 | 0 7282 0 32596 2153 | 7282 0 32416 4405 | 0 7282 0 32534 2923 | 0 7282 0 32530 2976 | 0 7282 0 32520 3101 | 0 7282 0 32289 5994 | 0 7282 0 32548 2755 | 0 7282 0 32520 3101 | 0 3641 0 32671 1214 | 7282 0 32548 2755 |
| TGALMLV POVCLMT PK2VAUX FILTER FALPH | / 1892 [1893 | 2064 2065 2066 2067 2068 | 5920 0 0 | 4 6396 0 0 | 13123 0 0 0 | 2323 4 8692 0 0 0 | 4 8848 0 0 0 | 9224 0 0 0 | 17889 0 0 | 2103 4 8192 0 0 0 | 4 9224 0 0 0 | 4 3603 0 0 | 4 8192 0 0 0 |
| VFFLT ERBLM PBLCT SFCCML PSPTL | 1962 1963 1964 1965 1966 | 2069 2070 2071 2072 2073 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| AALPH OSCTPL PDPCH PDPCL DPFEX | 1967 1970 1971 1972 1973 | 2074 2077 2078 2079 2080 | 0 0 0 0 | 8192 0 0 0 0 | 20480 0 0 0 0 | 0 0 0 0 0 | 8192 0 0 0 | 8192 0 0 0 0 | 8192 0 0 0 0 | 8192 0 0 0 0 | 8192 0 0 0 | 000000000000000000000000000000000000000 | 12288 0 0 0 0 |
| DPFZW BLENDL MOFCTL RTCURR TDPLD | 1974 1975 1976 1979 1980 | 2081 2082 2083 2086 2087 | 0 0 1253 0 | 0 0 1302 | 0 0 1866 0 | 0 0 1518 0 | 0 0 1532 0 | 0 0 2075 0 | 0 0 3020 | 0 0 2075 0 | 0 0 2085 0 | 0 0 1390 0 | 0 0 2092 0 |
| MCNFB BLBSL ROBSTL ACCSPL ADFF1 | 1981 1982 1983 1984 1985 | 2088 2089 2090 2091 2092 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| VMPK3V BLCMP2 AHDRTL RADUSL SMCNT | 1986 1987 1988 1989 1990 | 2093 2094 2095 2096 2097 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| DEPVPL ONEPSL INPA1 INPA2 DBLIM | 1991 1992 1993 1994 1995 | 2098 2099 2100 2101 2102 | 0 400 0 0 0 | 0 400 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 0 0 | 0 400 0 15000 | 0 400 0 0 | 0 400 0 15000 | 0 400 0 0 | 400 0 0 15000 |
| ABVOF ABTSH TRQCST LP24PA VLGOVR | 1996 1997 1998 1999 1700 | 2103 2104 2105 2106 2107 | 0 562 0 | 0 0 541 0 0 | 0 96 0 | 0 696 0 | 0 0 690 0 | 0 346 0 | 0 0 350 0 | 0 346 0 | 0 0 517 0 | 0 452 0 | 0 0 516 0 |
| RESERV BELLTC MGSTCM DETQLM AMRDML | 1701 1702 1703 1704 1705 | 2108 2109 2110 2111 2112 | 0 519 7268 0 | 0 0 519 7268 0 | 0 1555 11550 0 | 0 0 521 6174 0 | 0 521 6159 0 | 0 0 1284 10255 0 | 0 0 2168 0 | 0 0 1284 10255 0 | 0 0 32 0 0 | 0 0 1045 7930 0 | 0 0 774 0 0 |
| NFILT NINTCT MFWKCE MFWKBL LP2GP | 1706 1735 1736 1752 1753 | 2113 2127 2128 2129 2130 | 0 2106 4000 2580 0 | 0 5103 4500 2580 0 | 0 2302 2200 4112 0 | 0 1592 2000 2575 0 | 0 4904 2000 2575 0 | 0 801 1000 5388 0 | 0 4150 12000 1044 0 | 0 1600 1400 5390 0 | 0 2388 2000 2568 0 | 0 1442 7000 1298 0 | 0 4787 4000 2320 0 |
| LP4GP LP6GP PHDLY1 PHDLY2 DGCSMM | 1754 1755 1756 1757 1782 | 2131 2132 2133 2134 2159 | 0 0 5150 8990 0 | 0 5150 8990 0 | 0 0 7690 7740 0 | 0 0 6174 8990 0 | 0 0 6174 8990 0 | 0 0 10250 12830 0 | 0 0 5150 8990 0 | 0 0 10260 12835 0 | 0 0 0 0 0 | 0 0 3858 8990 0 | 0 0 0 0 0 |
| TRQCUP OVCSTP POVC21 POVC22 POVCLMT MAXCRT | 1783 1784 1785 1786 | 2160 2161 2162 2163 2164 2165 | 0 0 32767 13 2501 85 | 0 0 32767 14 2702 45 | 0 0 32766 30 5544 10 | 0 0 32766 19 3672 85 | 0 0 32766 20 3738 45 | 0 0 32765 38 6857 85 | 0 0 32761 91 14518 25 | 0 0 32765 38 6857 45 | 0 0 32765 38 6924 85 | 0 0 32767 12 2224 45 | 0 0 32765 39 6969 45 |

| | | Motor model or specification Motor ID No. | αC22 2000 <i>i</i> 0246 296 | αiF22 3000 0247 297 | β <i>i</i> S12/2000 FS0 <i>i</i> 0077–Bxx6 298 | αiF22 3000HV 0249 299 | αC30 1500 <i>i</i> 0251 301 | β <i>i</i> S22/1500 FS0 <i>i</i> 0084–Bxx6 302 | α <i>i</i> F30 3000 0253 303 | β <i>i</i> S22/1500 FS0 <i>i</i> _40A 0084-Bxx6 305 | β <i>i</i> S2/4000 FS0 <i>i</i> 0061–Bxx6 306 | αiF40 3000 0257 307 | α <i>i</i> F40 3000Fan 0257 308 |
|--|---|---|--|--|---|--|--|---|--|--|--|--|--|
| Symbol | FS15 <i>i</i> 1808 1809 1883 1884 1951 | FS30,16 <i>i</i> ,etc 2003 2004 2005 2006 2007 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 |
| | 1957 1952 1953 1954 1955 | 2008 2009 2010 2011 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 00100000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00100000 | 00000000 00000000 00000000 |
| | 1955 1956 1707 1708 1750 | 2012 2013 2014 2210 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 00000100 00000100 000000 | 00000000 00000000 00000000 00000000 0000 | 00100000 00000000 00000000 00000000 000000 |
| PK1 | 1751 2713 2714 | 2210 2211 2300 2301 2040 | 00001010 00000000 00000000 | 00000000 00000000 00000000 | 00001110 00000000 00000000 | 00000000 00000000 00000000 | 00001010 00000000 00000000 | 00001110 00000000 00000000 | 00001010 00000000 00000000 | 00001110 00000000 00000000 | 00001110 00000000 00000000 | 00001010 00000000 00000000 | 00000010 00000000 00000000 |
| PK2 PK3 PK1V | 1852 1853 1854 1855 | 2041 2042 2043 | 2320 -10593 -1347 271 | 1750 -6000 -1345 198 | 547 -3289 -1305 230 | 1919 -9132 -1346 197 | 2238 -13330 -1347 166 | 2171 -8178 -1329 280 | 768 -4492 -1347 230 | 4342 -16356 -1329 140 | 360 -1920 -1237 78 | 1613 -7446 -1348 191 | 1613 -7446 -1348 191 |
| PK2V PK3V PK4V POA1 | 1856 1857 1858 1859 | 2044 2045 2046 2047 | -2426 0 -8235 1565 | -1775 0 -8235 2137 | -2054 0 -8235 3695 | -1765 0 -8235 2150 | -1486 0 -8235 2553 | -2507 0 -8235 3027 | -2057 0 -8235 1845 | -1254 0 -8235 6054 | -698 0 -8235 -1089 | -1712 0 -8235 2216 | -1712 0 -8235 2216 |
| BLCMP DPFMX POK1 POK2 RESERV | 1860 1861 1862 1863 1864 | 2048 2049 2050 2051 2052 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 0 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 | 0 0 956 510 |
| PPMAX PDDP PHYST EMFCMP | 1865 1866 1867 | 2053 2054 2055 | 0 21 1894 319 0 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 | 0 21 1894 319 0 | 0 21 1894 319 | 21 1894 319 | 0 21 1894 319 0 | 0 21 1894 319 0 | 0 21 1894 319 | 0 21 1894 319 |
| PVPA PALPH PPBAS | 1868 1869 1870 1871 1872 | 2056 2057 2058 2059 | -2597 -1942 0 | 0 -5136 -2800 0 | 0 -3884 -4350 0 | 0 -5136 -2824 0 | -1545 -1300 0 | 0 -2110 -4691 0 | -20500 -8465 -1657 0 | -2079 -2342 0 | -10250 -1000 0 | 0 -2570 -2000 0 | 0 -2570 -2000 0 |
| TQLIM EMFLMT POVC1 POVC2 | 1873 1877 1878 | 2060 2061 2062 2063 | 8010 0 32114 8171 | 7282 0 32520 3101 | 7282 0 32323 5566 | 7282 0 32548 2755 | 7282 0 32520 3101 | 7282 0 32319 5617 | 7282 0 32511 3215 | 3641 0 32655 1411 | 6554 0 32652 1455 | 7282 0 32511 3215 | 7282 0 32431 4212 |
| TGALMLV POVCLMT PK2VAUX FILTER | 1892 1893 1894 1895 | 2064 2065 2066 2067 | 24454 0 0 | 9224 0 0 | 4 16603 0 0 | 8192 0 0 | 9224 0 0 | 16756 0 0 | 4 9565 0 0 0 | 4 4189 0 0 | 4317 0 0 0 | 9565 0 0 | 12545 0 0 |
| FALPH VFFLT ERBLM PBLCT SFCCML | 1961 1962 1963 1964 1965 | 2068 2069 2070 2071 2072 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| PSPTL AALPH OSCTPL PDPCH | 1965 1966 1967 1970 1971 | 2072 2073 2074 2077 2078 | 0 0 4096 0 0 | 0 0 12288 0 0 | 0 0 8192 0 0 | 0 0 8192 0 0 | 0 0 8192 0 0 | 0 0 8192 0 0 | 0 0 4096 0 0 | 0 0 0 0 0 | 0 0 16384 0 | 0 0 16384 0 0 | 0 0 16384 0 0 |
| PDPCL DPFEX DPFZW BLENDL | 1972 1972 1973 1974 1975 | 2079 2080 2081 2082 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| MOFCTL RTCURR TDPLD MCNFB | 1973 1976 1979 1980 1981 | 2082 2083 2086 2087 2088 | 0 2911 0 0 | 0 2131 0 0 | 0 3126 0 0 | 0 2118 0 0 | 0 1655 0 0 | 0 3012 0 0 | 0 2306 0 0 | 0 1506 0 0 | 0 1529 0 0 | 0 1957 0 0 | 0 2593 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 | 1982 1983 1984 1985 | 2089 2090 2091 2092 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 0 |
| VMPK3V BLCMP2 AHDRTL RADUSL | 1986 1987 1988 1988 1989 | 2093 2094 2095 2096 | 0000 | 0 0 0 | 0 0 0 0 | 0000 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0000 | 0000 | 0000 | 0 0 0 |
| SMCNT DEPVPL ONEPSL INPA1 | 1990 1991 1992 1993 | 2097 2098 2099 2100 | 0 0 400 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 | 0 0 400 0 | 0 0 400 | 0 0 400 | 0 0 400 0 |
| INPA2 DBLIM ABVOF ABTSH | 1994 1995 1996 1997 | 2101 2102 2103 2104 | 0 0 0 0 | 0 15000 0 0 | 0 0 0 0 | 0 15000 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0000 | 0 12000 0 | 0 12000 0 |
| TRQCST LP24PA VLGOVR RESERV | 1998 1999 1700 1701 | 2105 2106 2107 2108 | 680 0 0 0 | 929 0 0 0 | 315 0 0 0 | 934 0 0 0 | 1630 0 0 0 | 597 0 0 0 | 1170 0 0 | 1194 0 0 0 | 119 0 0 0 | 1839 0 0 0 | 1839 0 0 0 |
| BELLTC MGSTCM DETQLM AMRDML | 1702 1703 1704 1705 | 2109 2110 2111 2112 | 0 1548 2600 0 | 0 1291 0 0 | 0 1 3940 0 | 0 787 0 0 | 0 2059 2148 0 | 0 1025 2248 0 | 0 1032 7735 0 | 0 514 2248 0 | 0 1048 11600 0 | 0 1291 5220 0 | 0 1291 5140 0 |
| NFILT NINTCT MFWKCE MFWKBL | 1706 1735 1736 1752 | 2113 2127 2128 2129 | 0 3695 4000 1046 | 0 3272 4500 1301 | 0 1350 4000 280 | 0 6547 6000 1808 | 0 6680 14000 539 | 0 3290 5500 1032 | 0 1688 2500 2829 | 0 3290 11000 1032 | 0 1172 2500 3358 | 0 3041 6000 1560 | 0 3041 2000 1553 |
| LP2GP LP4GP LP6GP PHDLY1 | 1753 1754 1755 1756 | 2130 2131 2132 2133 | 0 0 0 2070 | 0 0 0 0 | 0 0 3614 | 0 0 0 0 | 0 0 0 1054 | 0 0 2580 | 0 0 5140 | 0 0 2580 | 0 0 7192 | 0 0 0 2590 | 0 0 3085 |
| PHDLY2 DGCSMM TRQCUP OVCSTP | 1757 1782 1783 1784 | 2134 2159 2160 2161 | 9000 0 0 0 | 0 0 0 0 | 8980 0 0 0 | 0 0 0 | 9000 0 0 0 | 8990 0 0 0 | 8995 0 0 140 | 4382 0 0 0 | 8990 0 0 120 | 8990 0 0 140 | 8990 0 0 140 |
| POVC21 POVC22 POVCLMT MAXCRT | 1785 1786 1787 1788 | 2162 2163 2164 2165 | 32761 83 13493 45 | 32765 40 7229 85 | 32763 60 10250 25 | 32765 40 7142 45 | 32766 23 4361 85 | 32763 60 10345 25 | 32764 48 8466 165 | 32767 14 2586 45 | 32767 14 2665 25 | 32765 33 6099 165 | 32718 629 10707 165 |

| Symbol | M FS15 <i>i</i> | Motor model otor specification Motor ID No. FS30,16 <i>i</i> ,etc | FS01_40A | β <i>i</i> S4/4000 FS0 <i>i</i> 0063–Bxx6 311 | β <i>i</i> S4/4000 FS0 <u>i_</u> 40A 0063-Bxx6 312 | αiS22 4000 0265 315 | αiS22 4000HV 0266 316 | αiS30 4000 0268 318 | α <i>i</i> S30 4000HV 0269 319 | αiS40 4000 0272 322 | αiS40 4000HV 0273 323 | αiS50 3000 0275 324 | α <i>i</i> S50 3000Fan 0275 325 |
|--|--|--|--|--|---|--|---|--|--|---|--|---|--|
| Gymbol | 1808 1809 1883 1884 1951 1952 1953 1954 1955 1956 1707 | 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 |
| PK1 | 1708 1750 1751 2713 2714 1852 | 2014 2210 2211 2300 2301 2040 | 00010000 00000000 00001110 00000000 000000 | 00000000 00000000 00001110 0000000 000000 | 00001110 0000000 00001110 0000000 000000 | 00000000 00000000 00001010 00000000 000000 | 00000000 0000000 00001010 0000000 000000 | 00000000 0000000 00001010 0000000 000000 | 00000000 0000000 00001010 0000000 000000 | 00000000 00000000 00001010 0000000 000000 | 00000000 0000000 00001010 0000000 000000 | 00000000 00000000 00001010 0000000 000000 | 0000000 0000000 00001010 0000000 0000000 |
| PK2 PK3 PK1V | 1853 1854 1855 | 2041 2042 2043 | -3840 -1237 39 | -1920 -1253 112 | -3840 -1253 56 | -3844 -1337 69 | -4008 -1345 76 | -4447 -1317 82 | -4681 -1348 82 | -4138 -1341 92 | -4938 -1350 93 | -3423 -1345 69 | -3423 -1345 69 |
| PK2V PK3V PK4V POA1 | 1856 1857 1858 1859 | 2044 2045 2046 2047 | -349 0 -8235 -2178 | -1008 0 -8235 -753 | -504 0 -8235 -1506 | -616 0 -8235 6163 | -685 0 -8235 5538 | -733 0 -8235 5175 | -738 0 -8235 5143 | -827 0 -8235 4589 | -831 0 -8235 4569 | -622 0 -8235 6099 | -622 0 -8235 6099 |
| BLCMP DPFMX POK1 POK2 | 1860 1861 1862 | 2048 2049 2050 2051 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 |
| RESERV PPMAX PDDP | 1863 1864 1865 1866 | 2051 2052 2053 2054 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 31979 3 | 510 0 31979 3 |
| PHYST EMFCMP PVPA PALPH | 1867 1868 1869 1870 | 2055 2056 2057 2058 | 319 0 -10245 | 319 0 -7694 | 319 0 -7687 | 319 0 -7687 | 319 0 -7683 | 319 0 -6412 | 319 0 -6412 | 319 0 -5645 | 319 0 -5648 | 319 0 -5638 | 319 0 -5638 |
| PPBAS TQLIM EMFLMT | 1870 1871 1872 1873 | 2058 2059 2060 2061 | -500 0 3277 0 | -2800 0 7282 0 | -1400 0 3641 0 | -2000 0 7282 0 | -1000 0 7282 0 | -2300 0 7282 0 | -2300 0 7282 0 | -3000 0 7282 0 | -3000 0 7282 0 | -1000 0 7282 0 | -1000 0 7282 0 |
| POVC1 POVC2 TGALMLV | 1877 1878 1892 | 2062 2063 2064 | 32739 364 4 | 32532 2945 4 | 32709 738 4 | 32511 3215 4 | 32501 3332 4 | 32511 3215 4 | 32501 3332 4 | 32511 3215 4 | 32501 3332 4 | 32558 2627 4 | 32348 5245 4 |
| POVCLM1 PK2VAUX FILTER FALPH | | 2065 2066 2067 2068 | 1079 0 0 0 | 8758 0 0 0 | 2189 0 0 0 | 9565 0 0 0 | 9912 0 0 0 | 9565 0 0 0 | 9912 0 0 0 | 9565 0 0 0 | 9912 0 0 0 | 7810 0 0 | 15639 0 0 0 |
| VFFLT ERBLM PBLCT | 1962 1963 1964 | 2069 2070 2071 | 0 0 0 | 0 0 0 | 0 0 0 | 000 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0000 | 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1965 1966 1967 1970 | 2072 2073 2074 2077 | 0 0 0 0 | 0 0 20480 0 | 0 0 0 | 0 0 4096 | 0 0 8192 0 | 0 0 4096 | 0 0 4096 | 0 0 4096 | 0 0 4096 | 0 0 4096 0 | 0 0 4096 0 |
| PDPCH PDPCL DPFEX | 1971 1972 1973 | 2078 2079 2080 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| DPFZW BLENDL MOFCTL RTCURR | 1974 1975 1976 1979 | 2081 2082 2083 2086 | 0 0 0 764 | 0 0 2178 | 0 0 1089 | 0 0 1627 | 0 0 1810 | 0 0 1836 | 0 0 1847 | 0 0 2073 | 0 0 2083 | 0 0 1439 | 0 0 2037 |
| TDPLD MCNFB BLBSL | 1980 1981 1982 | 2087 2088 2089 | 0 0 0 | 0 0 0 | 0 0 0 | 000 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 2003 0 0 | 0 0 0 | 0 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V | 1983 1984 1985 1986 | 2090 2091 2092 2093 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 0 |
| BLCMP2 AHDRTL RADUSL | 1987 1988 1989 | 2094 2095 2096 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0000 | 0 0 0 | 0000 | 0 0 0 | 0 0 0 |
| SMCNT DEPVPL ONEPSL INPA1 | 1990 1991 1992 1993 | 2097 2098 2099 2100 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 400 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 |
| INPA2 DBLIM ABVOF | 1994 1995 1996 | 2101 2102 2103 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| ABTSH TRQCST LP24PA VLGOVR | 1997 1998 1999 1700 | 2104 2105 2106 2107 | 0 238 0 0 | 0 146 0 0 | 0 292 0 0 | 0 1216 0 0 | 0 1093 0 0 | 1470 0 | 0 1460 0 0 | 0 1701 0 0 | 0 1693 0 0 | 0 3312 0 0 | 0 3312 0 0 |
| RESERV BELLTC MGSTCM | 1701 1702 1703 | 2108 2109 2110 | 0 0 815 | 0 0 780 | 0 0 532 | 0 0 519 | 0 0 513 | 0 0 775 | 0 0 775 | 0 0 776 | 0 0 769 | 0 0 519 | 0 0 519 |
| DETQLM AMRDML NFILT NINTCT | 1704 1705 1706 1735 | 2111 2112 2113 2127 | 11600 0 1172 | 7790 0 0 796 | 7790 0 0 796 | 6224 0 2041 | 6194 0 0 4264 | 6450 0 1871 | 6430 0 5117 | 5682 0 1952 | 5682 0 5230 | 6174 0 2046 | 6174 0 0 2046 |
| MFWKCE MFWKBL LP2GP | 1736 1752 1753 | 2128 2129 2130 | 5000 3358 0 | 3000 3392 0 | 6000 3392 0 | 2500 2580 0 | 2000 3092 0 | 4000 2574 0 | 5117 3000 2574 0 | 1853 4000 2063 0 | 4000 2063 0 | 6500 2063 0 | 6500 2063 0 |
| LP4GP LP6GP PHDLY1 PHDLY2 DGCSMM | 1754 1755 1756 1757 1782 | 2131 2132 2133 2134 2159 | 0 0 7192 8990 0 | 0 0 8992 12864 0 | 0 0 8992 9024 0 | 0 0 5150 8990 0 | 0 0 5150 8990 0 | 0 0 5150 8990 0 | 0 0 5150 8990 0 | 0 0 5150 8988 0 | 0 0 5150 8988 0 | 0 0 5150 8990 0 | 0 0 5150 8990 0 |
| TRQCUP OVCSTP POVC21 POVC22 | 1783 1784 1785 1786 | 2160 2161 2162 2163 | 0 120 32767 | 0 120 32766 29 | 0 120 32767 7 | 0 140 32766 | 0 0 32766 28 | 0 | 0 0 32766 30 | 0 140 32765 38 | 0 0 32765 38 | 0 0 32754 | 0 0 32739 |
| POVC22 POVCLM1 MAXCRT | | 2163 2164 2165 | 3 666 45 | 29 5407 25 | 1352 45 | 23 4214 165 | 5218 525 85 | 5369 165 | 30 5432 85 | 6846 165 | 6908 85 | 174 3300 365 | 365 6608 365 |

| Symbol | M FS15 <i>i</i> | Motor model lotor specification Motor ID No. FS30,16 <i>i</i> ,etc | αiS50 3000HVFan 0276 326 | αiS50 3000HV 0276 327 | αiS100 2500 0285 335 | αiS100 2500HV 0286 336 | αiS200 2500 0288 338 | αiS200 2500HV 0289 339 | α <i>i</i> S2000 2000HV 0290 340 | αiS300 2000 0292 342 | αiS300 2000HV 0293 343 | αiS500 2000 0295 345 | αiS500 2000HV 0296 346 |
|--------------------------------------|--------------------------------------|---|--|--|--|--|--|--|--|--|--|--|--|
| CYNIDO | 1808 1809 1883 1884 1951 | 2003 2004 2005 2006 2007 | 00001000 01000011 00000000 00000000 000000 | 00001000 01000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 01000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 01000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 01000011 00000000 00000000 000000 |
| | 1952 1953 1954 1955 | 2008 2009 2010 2011 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00100000 | 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| | 1956 1707 1708 1750 1751 | 2012 2013 2014 2210 2211 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000001 00000000 00000000 00011110 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 |
| PK1 PK2 | 2713 2714 1852 1853 | 2300 2301 2040 2041 | 00000000 00000000 705 -4855 | 00000000 00000000 705 -4855 | 00000000 00000000 1020 -7093 | 00000000 00000000 1790 -5915 | 00000000 00000000 1834 -7805 | 00000000 00000000 2080 -8139 | 00000000 00000000 643 -3600 | 00000000 00000000 1659 -8045 | 00000000 00000000 1327 -7279 | 00000000 00000000 2660 -10235 | 00000000 00000000 2255 -10049 |
| PK3 PK1V PK2V PK3V | 1854 1855 1856 1857 | 2042 2043 2044 2045 | -1348 70 -628 0 | -1348 70 -628 0 | -1359 91 -819 0 | -1359 91 -819 0 | -1360 115 -1026 0 | -1359 115 -1026 0 | -1358 502 -4500 0 | -1354 114 -1025 0 | -1356 114 -1025 0 | -1355 134 -1199 0 | -1356 134 -1199 0 |
| PK4V POA1 BLCMP DPFMX | 1858 1859 1860 1861 | 2046 2047 2048 2049 | -8235 6039 0 0 | -8235 6039 0 0 | -8235 4632 0 0 | -8235 4636 0 0 | -8235 3699 0 0 | -8235 3699 0 0 | -8235 843 0 0 | -8235 3709 0 0 | -8235 3703 0 0 | -8235 3164 0 0 | -8235 3164 0 0 |
| POK1 POK2 RESERV PPMAX | 1862 1863 1864 1865 | 2050 2051 2052 2053 | 956 510 0 31979 | 956 510 0 31979 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA | 1866 1867 1868 1869 | 2054 2055 2056 2057 | 319 0 -5638 | 3 319 0 -5638 | 1894 319 0 -4368 | 1894 319 0 -3846 | 1894 319 0 -3090 | 1894 319 0 -3088 | 3787 319 -12825 -2120 | 1894 319 0 -3081 | 3787 319 0 -3846 | 1894 319 0 -2068 | 3787 319 0 -2070 |
| PALPH PPBAS TQLIM EMFLMT | 1870 1871 1872 1873 | 2058 2059 2060 2061 | -1000 0 7282 0 | -1000 0 7282 | -1359 0 7282 | -900 0 7282 | -2700 0 7282 0 | -3000 0 7282 | -2800 0 7282 | -700 0 7282 0 | -900 0 7282 | -2600 0 7282 0 | -2700 0 7282 |
| POVC1 POVC2 TGALMLV POVCLMT | 1877 1878 1892 | 2062 2063 2064 2065 | 32371 4967 4 14807 | 32554 2680 4 7968 | 32310 5728 4 15662 | 32474 3672 4 15982 | 32309 5734 4 27346 | 32309 5734 4 27346 | 32309 5734 4 27346 | 32391 4714 4 23263 | 32391 4714 4 23263 | 32309 5734 4 27346 | 32309 5734 4 27346 |
| PK2VAUX FILTER FALPH VFFLT | | 2066 2067 2068 2069 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 27340 0 0 0 | 27340 0 0 0 | 27340 0 0 0 | 23203 0 0 0 | 23203 0 0 0 | 27340 0 0 0 | 27340 0 0 0 |
| ERBLM PBLCT SFCCML PSPTL | 1963 1964 1965 1966 | 2070 2071 2072 2073 | 0000 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0000 |
| AALPH OSCTPL PDPCH PDPCL | 1967 1970 1971 1972 | 2074 2077 2078 2079 | 0 0 0 0 | 0 0 0 0 | 20480 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 | 12288 0 0 0 |
| DPFEX DPFZW BLENDL MOFCTL | 1973 1974 1975 1976 | 2080 2081 2082 2083 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 |
| RTCURR TDPLD MCNFB BLBSL | 1979 1980 1981 1982 | 2086 2087 2088 2089 | 2057 0 0 | 1454 0 0 0 | 1960 0 0 0 | 2033 0 0 | 2712 0 0 0 | 2712 0 0 | 2893 0 0 0 | 2386 0 0 | 2483 0 0 0 | 2980 0 0 0 | 2980 0 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V | 1983 1984 1985 1986 | 2090 2091 2092 2093 | 0000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| BLCMP2 AHDRTL RADUSL SMCNT | 1987 1988 1989 | 2094 2095 2096 2097 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| DEPVPL ONEPSL INPA1 INPA2 | 1990 1991 1992 1993 1994 | 2098 2099 2100 2101 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 |
| DBLIM ABVOF ABTSH TRQCST | 1995 1996 1997 1998 | 2102 2103 2104 2105 | 0 0 0 3279 | 0 0 0 3279 | 0 0 0 4589 | 10000 0 4423 | 0 0 0 5973 | 0 0 0 5973 | 0 0 0 6221 | 0 0 0 10871 | 0 0 0 10871 | 0 0 0 15096 | 0 0 0 15096 |
| LP24PA VLGOVR RESERV BELLTC | 1999 1700 1701 1702 | 2106 2107 2108 2109 | 02/3 | 0 0 0 0 0 | 4003 0 0 0 0 | 0 | 0 0 0 0 0 | 0 0 0 0 | 0000 | 0071 | 0071 | 0000 | 00000 |
| MGSTCM DETQLM AMRDML NFILT | 1703 1704 1705 1706 | 2110 2111 2112 2113 | 519 6174 0 0 | 519 6174 0 0 | 776 3787 0 0 | 1291 0 0 0 | 1290 0 0 0 | 1291 3428 0 | 2068 1430 0 | 1296 0 0 | 1296 0 0 | 1296 0 0 0 | 1293 0 0 0 |
| NINTCT MFWKCE MFWKBL LP2GP | 1735 1736 1752 1753 | 2127 2128 2129 2130 | 4861 2500 2068 0 | 4861 2500 2068 0 | 3520 6500 1297 0 | 6952 2000 1549 0 | 3518 4000 1298 0 | 6729 4000 1551 0 | 3449 4200 1060 0 | 3817 7000 1301 0 | 7634 5000 1298 0 | 4175 4000 1041 0 | 8341 4500 788 0 |
| LP4GP LP6GP PHDLY1 PHDLY2 | 1754 1755 1756 1757 | 2131 2132 2133 2134 | 0 0 5150 8990 | 0 0 5150 8990 | 0 0 2570 8970 | 0 0 0 0 | 0 0 3092 12826 | 0 0 2575 8984 | 0 0 1297 12828 | 0 0 2574 12814 | 0 0 2574 12814 | 0 0 2069 8981 | 0 0 2324 8984 |
| DGCSMM TRQCUP OVCSTP POVC21 | 1783 1784 1785 | 2159 2160 2161 2162 | 0 0 32738 | 0 0 32754 | 0 0 106 32750 | 0 0 140 32759 | 0 0 140 32745 | 0 0 140 32745 | 0 0 140 32745 | 0 0 140 32738 | 0 0 140 32738 | 0 0 140 32745 | 0 0 140 32745 |
| POVC22 POVCLMT MAXCRT | 1786 | 2163 2164 2165 | 373 6736 185 | 178 3366 185 | 223 6581 365 | 112 6752 185 | 292 13952 365 | 292 13952 185 | 292 13952 0 | 375 13952 365 | 375 13952 365 | 292 13952 365 | 292 13952 365 |

| | | Motor model | α <i>i</i> S1000 2000HV |
|----------------------------|--------------------------------------|---------------------------------------|---|
| | Mo | otor specification | 0298 |
| Symbol | FS15i | Motor ID No. FS30,16 <i>i</i> ,etc | 348 |
| | 1808 | 2003 | 00001000 |
| | 1809 | 2004 | 01000011 |
| | 1883 1884 | 2005 | 00000000 |
| | 1951 | 2007 | 00000000 00000000 |
| | 1952 | 2008 | 00000000 |
| | 1953 | 2009 | 00000000 |
| | 1954 1955 | 2010 2011 | 000000000000000000000000000000000000000 |
| | 1956 1707 | 2012 2013 | 000000000000000000000000000000000000000 |
| | 1708 1750 | 2014 2210 | 00000000 |
| | 1751 | 2211 | 00001010 |
| | 2713 | 2300 | 00000000 |
| | 2714 | 2301 | 00000000 |
| PK1 | 1852 | 2040 | 840 |
| PK2 | 1853 | 2041 | -5329 |
| PK3 | 1854 | 2042 | -1361 |
| PK1V | 1855 | 2043 | 234 |
| PK2V | 1856 | 2044 | -2096 |
| PK3V | 1857 | 2045 | |
| PK4V | 1858 | 2046 | -8235 |
| POA1 | 1859 | 2047 | 1811 |
| BLCMP | 1860 | 2048 | 0 |
| DPFMX | 1861 | 2049 | 0 |
| POK1 | 1862 | 2050 | 956 |
| POK2 | 1863 | 2051 | 510 |
| RESERV | 1864 | 2052 | 0 |
| PPMAX | 1865 | 2053 | 21 |
| PDDP | 1866 | 2054 | 3787 |
| PHYST | 1867 | 2055 | 319 |
| EMFCMP | 1868 | 2056 | |
| PVPA | 1869 | 2057 | -2320 |
| PALPH | 1870 | 2058 | -2500 |
| PPBAS TQLIM | 1871 1872 | 2059 | 0 |
| EMFLMT | 1873 | 2060 2061 | 7282 |
| POVC1 | 1877 | 2062 | 32309 |
| POVC2 | 1878 | 2063 | 5734 |
| TGALMLV | 1892 | 2064 | 4 |
| POVCLMT | 1893 | 2065 | 27346 |
| PK2VAUX | 1894 | 2066 | 0 |
| FILTER | 1895 | 2067 | 0 |
| FALPH | 1961 | 2068 | 0 |
| VFFLT | 1962 | 2069 | 0 |
| ERBLM | 1963 1964 | 2070 2071 | Ő |
| PBLCT SFCCML PSPTL | 1965 1966 | 2072 2073 | Ő |
| AALPH | 1967 1970 | 2073 2074 2077 | 12288 |
| OSCTPL PDPCH | 1971 | 2078 | 0 |
| PDPCL | 1972 | 2079 | 0 |
| DPFEX | 1973 | 2080 | |
| DPFZW | 1974 | 2081 | 0 |
| BLENDL | 1975 | 2082 | 0 |
| MOFCTL | 1976 | 2083 | 0 |
| RTCURR | 1979 | 2086 | 2834 |
| TDPLD | 1980 | 2087 | 0 |
| MCNFB | 1981 | 2088 | 0 |
| BLBSL | 1982 | 2089 | 0 |
| ROBSTL | 1983 | 2090 | |
| ACCSPL | 1984 | 2091 | 0 |
| ADFF1 | 1985 | 2092 | |
| VMPK3V | 1986 | 2093 | Ő |
| BLCMP2 | 1987 | 2094 | |
| AHDRTL | 1988 | 2095 2096 | 0 |
| SMCNT | 1989 1990 | 2097 | 0 |
| DEPVPL | 1991 | 2098 | 0 |
| ONEPSL | 1992 | 2099 | 400 |
| INPA1 | 1993 | 2100 | 0 |
| INPA2 | 1994 | 2101 | |
| DBLIM | 1995 | 2102 | 0 |
| ABVOF | 1996 | 2103 | 0 |
| ABTSH | 1997 | 2104 | 0 |
| TRQCST | 1998 | 2105 | 28573 |
| LP24PA | 1999 | 2106 | 0 |
| VLGOVR | 1700 | 2107 | |
| RESERV | 1701 | 2108 | Ő |
| BELLTC | 1702 | 2109 | |
| MGSTCM | 1703 1704 | 2110 | 1296 3172 |
| AMRDML | 1705 | 2111 2112 2113 | 0 |
| NINTCT | 1706 1735 1736 | 2113 2127 2128 | 0 8637 |
| MFWKCE MFWKBL | 1735 1736 1752 1753 1754 | 2128 2129 | 6000 1047 |
| LP2GP LP4GP | 1753 1754 | 2130 2131 2132 | 0 |
| LP6GP PHDLY1 | 1755 | 2132 2133 2134 | 0 2580 |
| PHDLY2 | 1757 | 2159 | 8985 |
| DGCSMM | 1782 | | 0 |
| TRQCUP OVCSTP POVC21 | 1783 | 2160 2161 | 0 140 |
| POVC22 | 1784 1785 1786 | 2162 2163 | 32745 292 |
| POVCLMT | 1787 | 2164 | 13952 |
| | 1788 | 2165 | 365 |
| | | 2.00 | 000 |

| | | Motor model | Lis300A1/4 (200V) | Lis600A1/4 (200V) | Lis900A1/4 (200V) | Lis1500B1/4 (200V) | Lis1500B1/4 (400V) | Lis3000B2/2 (200V) | Lis3000B2/2 (400V) | Lis3000B2/4 (200V) | Lis4500B2 /2HV(400V) | Lis4500B2/2 (200V) | Lis4500B2/2 (400V) |
|-------------------------------------|------------------------------|---|---|---|---|---|---|---|---|---|----------------------------------|----------------------------------|---|
| Symbol | FS15i | otor specification Motor ID No. FS30,16 <i>i</i> ,etc | 351 | 0442-B200 353 | 0443-B200 355 | 0444-B210 357 | 0444-B210 358 | 0445-B110 360 | 0445-B110 361 | 0445-B210 362 | 0446-B010 363 | 0446-B110 364 | 0446-B110 365 |
| | 1808 1809 1883 | 2003 2004 2005 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00000000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 |
| | 1884 1951 1952 | 2006 2007 2008 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| | 1953 1954 1955 | 2009 2010 2011 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 | 00000000 00000100 00000000 |
| | 1956 1707 1708 | 2012 2013 2014 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| | 1750 1751 2713 | 2210 2211 2300 | 00000000 00000000 10000000 | 00000000 00000000 10000000 | 00000000 00000000 10000000 | 00000000 00000000 10000000 | 00000100 00001000 10000000 | 00000100 00000000 10000000 | 00000100 00001000 10000000 | 00000100 00000000 10000000 | 00000100 00001000 10000000 | 00000100 00001000 10000000 | 00000100 00001000 10000000 |
| PK1 PK2 | 2714 1852 1853 | 2301 2040 2041 | 00000000 1968 -7138 | 00000000 1868 -6536 | 00000000 1594 -6162 | 00000000 1512 -11488 | 00000000 409 -2068 | 00000000 961 -5781 | 00000000 602 -3127 | 00000000 324 -4472 | 00000000 2590 -6505 | -10862 | 00000000 802 -4726 |
| PK3 PK1V PK2V | 1854 1855 1856 | 2042 2043 2044 | -2618 16 -217 | -2618 9 -122 | -2618 13 -179 | -2647 19 -260 | -2689 19 -260 | -2667 14 -194 | | -2660 16 -214 | 11 -149 | | -2696 10 -131 |
| PK3V PK4V POA1 | 1857 1858 1859 | 2045 2046 2047 | 0 -8235 -8755 | 0 -8235 -9339 | 0 -8235 -6367 | 0 -8235 -4371 | 0 -8235 -4371 | 0 -8235 -5866 | -5866 | 0 -8235 -5321 | -7658 | -8235 -8705 | 0 -8235 -8705 |
| BLCMP DPFMX POK1 | 1860 1861 1862 | 2048 2049 2050 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 956 | 0 0 956 | 0 956 | 0 956 | 0 0 956 |
| POK2 RESERV PPMAX PDDP | 1863 1864 1865 1866 | 2051 2052 2053 2054 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 0 21 | 510 0 21 | 510 0 21 | 0 21 | 510 0 21 |
| PHYST EMFCMP PVPA | 1867 | 2054 2055 2056 2057 | 1894 319 -6400 | 1894 319 -6400 | 1894 319 -6400 | 1894 319 0 | 1894 319 0 0 | 1894 319 0 | 319 0 | 1894 319 0 | 319 0 | 0 | 1894 319 0 0 |
| PALPH PPBAS TQLIM | 1809 1870 1871 1872 | 2057 2058 2059 2060 | 0 0 5826 | 0 0 6554 | 0 0 7282 | 0 0 7282 | 0 0 7282 | 0 0 7282 | 0 0 | 0 0 7282 | 0 0 | 0 0 | 0 0 |
| EMFLMT POVC1 POVC2 | 1872 1873 1877 1878 | 2060 2061 2062 2063 | 120 32704 802 | 6554 120 32704 802 | 1202 120 32705 785 | 120 120 32698 873 | 120 120 32698 873 | /282 120 32711 719 | 120 32711 | 120 120 32698 873 | 120 32714 | 5462 120 32707 758 | 5462 120 32707 758 |
| TGALML\ POVCLM PK2VAUX | / 1892 T 1893 | 2064 2065 2066 | 4 793 0 | 4 793 0 | 1784 0 | 4 2590 0 | 4 2590 0 | 2131 0 | 2131 0 | 4 2590 0 | 4 1549 0 | 4 1199 | 4 1199 0 |
| FILTER FALPH VFFLT | 1895 1961 1962 | 2067 2068 2069 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0000 | 0 0 0 | Ō | 0 0 0 | 0 0 0 0 | 0 0 | 0 0 0 |
| ERBLM PBLCT SFCCML | 1963 1964 1965 | 2070 2071 2072 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 | 0 0 | 0 0 0 |
| PSPTL AALPH OSCTPL | 1966 1967 1970 | 2073 2074 2077 | –24576 | -8192 | 0 28672 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 20480 | 0 0 0 | Ō | 0 20480 | 0 0 0 |
| PDPCH PDPCL DPFEX | 1971 1972 1973 | 2078 2079 2080 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | Ō | 0 0 0 | 0 0 0 | 0 | 0 0 0 |
| DPFZW BLENDL MOFCTL | 1974 1975 1976 | 2081 2082 2083 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | 0 0 0 | 0 0 0 | | 0 0 0 |
| RTCURR TDPLD MCNFB | 1979 1980 1981 | 2086 2087 2088 | 655 0 0 | 655 0 0 | 983 0 0 | 1184 0 0 | 1184 0 0 | 1074 0 0 | 0 | 1184 0 0 | 915 0 0 | 0 | 805 0 0 |
| BLBSL ROBSTL ACCSPL | 1982 1983 1984 | 2089 2090 2091 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | | 0 | 0 0 0 |
| ADFF1 VMPK3V BLCMP2 | 1985 1986 1987 | 2092 2093 2094 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 0 |
| AHDRTL RADUSL SMCNT | 1988 1989 1990 | 2095 2096 2097 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | 0 0 0 | | Ö 0 | 0 0 0 |
| DEPVPL ONEPSL INPA1 | 1991 1992 1993 | 2098 2099 2100 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 0 400 0 | 0 | 400 0 | 400 0 | 400 0 | 400 0 |
| INPA2 DBLIM ABVOF | 1994 1995 1996 | 2101 2102 2103 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 | 0 | 0 | 0 0 0 |
| ABTSH TRQCST LP24PA | 1997 1998 1999 | 2104 2105 2106 | 0 68 0 | 0 137 0 | 0 137 0 | 0 227 0 | 0 227 0 | 0 502 0 | 0 | 0 455 0 | 884 0 | 1005 0 | 0 1005 0 |
| VLGOVR RESERV BELLTC | 1700 1701 1702 | 2107 2108 2109 | 0 0 0 | 0000 | 0 0 0 | 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 | 0 0 | 0 0 0 |
| MGSTCM DETQLM AMRDML | 1704 1705 | 2110 2111 2112 | 0000 | 0000 | 000000000000000000000000000000000000000 | 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 | 000000000000000000000000000000000000000 | 0 | 0 | 000000000000000000000000000000000000000 |
| NFILT NINTCT MFWKCE MFWKBL | 1706 1735 1736 1752 | 2113 2127 2128 2129 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 | 0 0 | 000000000000000000000000000000000000000 |
| LP2GP LP4GP LP6GP | 1753 1754 | 2129 2130 2131 2132 | 0 0 0 | 0000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 | 0 | 000000000000000000000000000000000000000 |
| PHDLY1 PHDLY2 DGCSMM | 1755 1756 1757 1782 | 2132 2133 2134 2159 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 | 0 0 | 0 0 0 0 | 0 0 | 0 0 | 0 0 0 0 |
| TRQCUP OVCSTP POVC21 | 1782 1783 1784 1785 | 2160 2160 2161 2162 | 0000 | 0000 | 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 | 0000 | 0 0 | 0 0 | 000000000000000000000000000000000000000 |
| POVC22 POVCLM MAXCRT | 1786 | 2163 2164 2165 | 0 0 25 | 0 0 45 | 0 0 45 | 0 | 0 0 45 | 0 0 45 | 0 | 0 0 85 | 0 | 0 | 0 0 85 |

| | | Motor model | Lis6000B2 /2HV(400V) | Lis6000B2/2 (200V) | Lis6000B2/2 (400V) | Lis6000B2/4 (200V) | Lis7500B2 /2HV(400V) | Lis7500B2/2 (200V) | Lis7500B2/2 (400V) | Lis7500B2/4 (200V) | Lis9000B2/2 (200V) | Lis9000B2/2 (400V) | Lis9000B2/4 (200V) |
|-----------------------------|-------------------------------|---------------------------------------|----------------------------------|---|---|---|---|---|---|---|----------------------------------|----------------------------------|---|
| Cumbal | | Motor specification Motor ID No. | 0447-B010 367 | 0447-B110 368 | 0447-B110 369 | 0447-B210 370 | 0448-B010 371 | 0448-B110 372 | 0448-B110 373 | 0448-B210 374 | 0449-B110 376 | 0449-B110 377 | 0449-B210 378 |
| Symbol | FS15 <i>i</i> 1808 1809 | FS30,16 <i>i</i> ,etc 2003 2004 | 00000000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00001000 00000011 | 00000000 00000011 | 00001000 00000011 |
| | 1883 | 2005 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1884 | 2006 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1951 | 2007 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1952 | 2008 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1953 | 2009 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| | 1954 | 2010 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 |
| | 1955 1956 1707 | 2011 2012 2013 | 00000000 00000000 00000110 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000110 | 00000000 00000000 00000010 | 000000000000000000000000000000000000000 |
| | 1708 | 2014 | 00000110 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00001000 | 00001000 | 00000110 | 00000010 | 00001010 |
| | 1750 | 2210 | 00000100 | 00000100 | 00000100 | 00000000 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 | 00000100 |
| | 1751 | 2211 | 00001000 | 00000000 | 00001000 | 00000000 | 00001000 | 00001000 | 0000100 | 0000100 | 00000000 | 00001000 | 00000000 |
| | 2713 | 2300 | 10000000 | 10000000 | 1000000 | 1000000 | 1000000 | 10000000 | 10000000 | 10000000 | 1000000 | 10000000 | 10000000 |
| | 2714 | 2301 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 |
| PK1 | 1852 | 2040 | 1469 | 961 | 766 | 1401 | 1742 | 848 | 1123 | 946 | 1240 | 834 | 1483 |
| PK2 | 1853 | 2041 | -9936 | -5255 | -4195 | -10722 | -6205 | -5532 | -6625 | -6400 | -7877 | -4701 | -7099 |
| PK3 | 1854 | 2042 | -1330 | -2660 | -2696 | -2660 | -2697 | -2696 | -2696 | -1331 | -2660 | -1330 | -2660 |
| PK1V PK2V PK3V | 1855 1856 1857 | 2043 2044 2045 | -96 0 | 13 -169 0 | 13 -169 0 | 15 -202 0 | 9 -117 0 | -103 0 | -92 0 | 8 -101 0 | 12 -158 0 | -128 0 | 10 -141 0 |
| PK4V | 1858 | 2046 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 | -8235 |
| POA1 | 1859 | 2047 | -11870 | -6746 | -6746 | -5642 | -9690 | -11014 | -12391 | -11240 | -7199 | -8929 | -8099 |
| BLCMP | 1860 | 2048 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DPFMX | 1861 | 2049 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| POK1 | 1862 | 2050 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 | 956 |
| POK2 | 1863 | 2051 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 | 510 |
| RESERV | 1864 | 2052 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PPMAX | 1865 | 2053 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 | 21 |
| PDDP | 1866 | 2054 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 | 1894 |
| PHYST EMFCMP PVPA | 1867 1868 1869 | 2055 2056 2057 | -7680 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 | -7936 0 | 319 0 0 | -7680 0 | 319 0 0 | -9216 0 | 319 0 0 |
| PALPH PPBAS | 1870 1871 | 2058 2059 | 0 0 | 0 0 | 0 0 | 0 0 | Ŏ | Ő | 0 | 0 0 | 0 | 0 | 0 |
| TQLIM | 1872 | 2060 | 4369 | 7282 | 7282 | 7282 | 5462 | 4551 | 4046 | 4046 | 5917 | 5259 | 4855 |
| EMFLMT | 1873 | 2061 | 120 | 120 | 120 | 120 | 120 | 120 | 120 | 120 | 120 | 120 | 120 |
| POVC1 | 1877 | 2062 | 32749 | 32711 | 32711 | 32708 | 32714 | 32707 | 32709 | 32687 | 32707 | 32709 | 32696 |
| POVC2 | 1878 | 2063 | 232 | 719 | 719 | 753 | 680 | 765 | 739 | 1010 | 758 | 737 | 895 |
| TGALMLV | 1892 | 2064 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 | 4 |
| POVCLMT | 1893 | 2065 | 688 | 2131 | 2131 | 2233 | 1075 | 832 | 858 | 799 | 1199 | 947 | 1151 |
| PK2VAUX | 1894 | 2066 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| FILTER | 1895 | 2067 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| FALPH | 1961 | 2068 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| VFFLT | 1962 | 2069 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ERBLM | 1963 | 2070 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PBLCT | 1964 | 2071 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| SFCCML | 1965 | 2072 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PSPTL | 1966 | 2073 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| AALPH | 1967 | 2074 | 20480 | 0 | 0 | 0 | 20480 | -24576 | 0 | 20480 | 0 | 20480 | 0 |
| OSCTPL PDPCH PDPCL | 1970 1971 1972 | 2077 2078 2079 | 0000 | Ŭ O O | Ŭ O O | Ŭ O O | 0 | 0 | 0 0 0 | 0 | 0 0 0 | 0 | 0 0 0 |
| DPFEX DPFZW BLENDL | 1973 1974 1975 | 2080 2081 2082 | 000 | 0 | 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| MOFCTL | 1976 | 2083 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| RTCURR | 1979 | 2086 | 610 | 1074 | 1074 | 1184 | 763 | 671 | 671 | 658 | 805 | 716 | 789 |
| TDPLD MCNFB BLBSL | 1980 1981 1982 | 2087 2088 2089 | 0 0 0 | 0 0 0 | 0000 | 0000 | 0 0 0 | 0 0 | 0 0 0 | 0000 | 0 0 0 | 0 0 0 | 0 0 0 |
| ROBSTL ACCSPL ADFF1 | 1983 1984 1985 | 2090 2091 2092 | 0 0 | 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 0 |
| VMPK3V | 1986 | 2093 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BLCMP2 | 1987 | 2094 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| AHDRTL | 1988 | 2095 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| RADUSL | 1989 | 2096 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| SMCNT | 1990 | 2097 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DEPVPL | 1991 | 2098 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ONEPSL | 1992 | 2099 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 | 400 |
| INPA1 | 1993 | 2100 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| INPA2 | 1994 | 2101 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DBLIM | 1995 | 2102 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| ABVOF | 1996 | 2103 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | 0 | 0 | 0 |
| ABTSH | 1997 | 2104 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | 0 | 0 | 0 |
| TRQCST LP24PA VLGOVR | 1998 1999 1700 | 2105 2106 2107 | 1768 0 0 | 1005 0 0 | 1005 0 | 911 0 0 | 1768 0 0 | 2010 0 0 | 2261 0 0 | 2051 0 0 | 2010 0 0 | 2261 0 0 | 2051 0 0 |
| RESERV BELLTC MGSTCM | 1700 1701 1702 1703 | 2108 2109 2110 | 0 0 | 0 0 | 0 | 0 0 | 0 | 0 | 0 0 | 0 | 0 | 0 0 | 0 |
| DETQLM AMRDML | 1704 1705 | 2111 2112 | 0 0 0 | 0000 | 0000 | 0000 | 0000 | 000000000000000000000000000000000000000 | 0 0 0 | Ő | 0000 | 0000 | 0 0 0 |
| NFILT | 1706 | 2113 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| NINTCT | 1735 | 2127 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| MFWKCE | 1736 | 2128 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| MFWKBL | 1752 | 2129 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP2GP | 1753 | 2130 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP4GP | 1754 | 2131 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| LP6GP | 1755 | 2132 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PHDLY1 | 1756 | 2133 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| PHDLY2 | 1757 | 2134 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DGCSMM | 1782 | 2159 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| TRQCUP | 1783 | 2160 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| OVCSTP | 1784 | 2161 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| POVC21 POVC22 POVCLMT | 1785 1786 1787 | 2162 2163 2164 | 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| MAXCRT | 1787 | 2164 2165 | 0 85 | 0 85 | 0 85 | 0 165 | 0 85 | 0 165 | 0 185 | 0 365 | 0 165 | 0 185 | 0 365 |

| Symbol | Mo FS15 <i>i</i> | Motor model otor specification Motor ID No. | (200V) | Lis3300C1/2 (400V) 0451-B110 381 | Lis9000C2/2 (200V) 0454-B110 384 | Lis9000C2/2 (400V) 0454-B110 385 | Lis11000C2 /2HV(400V) 0455-B010 387 | Lis11000C2/2 (200V) 0455-B110 388 | Lis11000C2/2 (400V) 0455-B110 389 | L <i>i</i> s15000C2 /3HV(400V) 0456-B010 391 | Lis15000C2/2 (200V) 0456-B110 392 | Lis15000C2/3 (200V) 0456-B210 394 | Lis10000C3/2 (200V) 0457-B110 396 |
|--|--|---|--|---|---|--|--|--|--|---|--|--|--|
| Symbol | 1808 1809 1883 1884 1951 1952 | FS30,16 <i>i</i> ,etc 2003 2004 2005 2006 2007 2008 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00000000 00000011 00000000 00000000 000000 |
| | 1953 1954 1955 1956 1707 1708 | 2009 2010 2011 2012 2013 2014 | 00000000 00000000 00000000 0000000 00000 | 00000000 00000000 00000000 0000000 00000 | 00000000 00000100 00000000 0000000 000000 | 00000000 00000100 00000000 00000000 000000 | 00000000 00000100 00000000 00000000 000000 | 00000000 00000100 00000000 00000000 000000 | 00000000 00000000 00000000 0000000 00000 | 00000000 00000000 00000000 0000000 00000 | 00000000 00000100 00000000 00000000 00001010 00001010 | 00000000 00000100 00000000 00000000 000000 | 00000000 00000100 00000000 00000000 000000 |
| PK1 | 1750 1751 2713 2714 1852 | 2210 2211 2300 2301 2040 | 00000100 00001000 10000000 00000000 1346 | 00000100 00001000 10000000 00000000 636 | 00000100 00001000 10000000 00000000 587 | 00000100 00001000 10000000 00000000 910 | 00000100 00001000 10000000 0000000 605 | 00000100 00001000 10000000 0000000 431 | 00000100 00001000 10000000 00000000 702 | 00000100 00001000 10000000 00000000 989 | 00000100 00000000 10000000 00000000 1704 | 00000100 00000000 10000000 00000000 478 | 00000100 00001000 10000000 00000000 158 |
| PK2 PK3 PK1V PK2V | 1853 1854 1855 1856 | 2041 2042 2043 2044 | -6448 -2695 9 -126 | -3246 -2695 9 -126 | -3839 -2696 8 -110 | -4971 -2696 7 -98 | -3361 -2694 10 -136 | -3377 -2695 10 -136 | -4479 -2695 9 -121 | -6312 -2695 10 -131 | -13440 -2663 7 -87 | -3379 -2657 10 -128 | -1761 -2695 10 -141 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 -9048 0 | 0 -8235 -9048 0 | 0 -8235 -10377 0 | 0 -8235 -11674 0 | 0 -8235 -8363 0 | 0 -8235 -8363 0 | 0 -8235 -9409 0 | 0 -8235 -8681 0 | 0 -8235 -13022 0 | 0 -8235 -8861 0 | 0 -8235 -8077 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA | 1866 1867 1868 1869 | 2054 2055 2056 2057 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 | 1894 319 0 0 |
| PALPH PPBAS TQLIM EMFLMT POVC1 | 1870 1871 1872 1873 1877 | 2058 2059 2060 2061 2062 | 0 0 5462 120 | 0 0 5462 120 | 0 0 6372 120 32729 | 0 0 5663 120 32728 | 0 0 7282 120 | 0 0 7282 120 32723 | 0 0 6877 120 | 0 0 7282 120 | 0 0 4855 120 32729 | 0 0 7282 120 | 0 0 7282 120 32722 |
| POVC2 TGALMLV POVCLM PK2VAUX | 1878 / 1892 T 1893 | 2063 2064 2065 2066 | 32708 749 4 1184 0 | 32708 749 4 1184 0 | 489 4 1112 0 | 32728 494 4 879 0 | 32723 560 4 1661 0 | 52723 560 4 1661 0 | 32730 474 4 1312 0 | 32730 471 4 1396 0 | 483 4 621 0 | 32732 452 4 1340 0 | 582 582 4 1719 0 |
| FILTER FALPH VFFLT ERBLM | 1895 1961 1962 1963 | 2067 2068 2069 2070 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 |
| PBLCT SFCCML PSPTL AALPH OSCTPL | 1964 1965 1966 1967 1970 | 2071 2072 2073 2074 2077 | 0 0 0 0 0 | 0 0 0 0 | 0 0 -16384 0 | 0 0 0 0 0 | 0 0 -24576 0 | 0 0 -24576 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 -24576 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB | 1975 1976 1979 1980 1981 | 2082 2083 2086 2087 2088 | 0 0 801 0 0 | 0 0 801 0 0 | 0 0 776 0 0 | 0 0 689 0 | 0 0 948 0 0 | 0 0 948 0 | 0 0 843 0 0 | 0 0 869 0 0 | 0 0 579 0 0 | 0 0 852 0 0 | 0 0 964 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 | 1982 1983 1984 1985 | 2089 2090 2091 2092 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 |
| VMPK3V BLCMP2 AHDRTL RADUSL SMCNT | 1986 1987 1988 1989 1990 | 2093 2094 2095 2096 2097 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| DEPVPL ONEPSL INPA1 INPA2 | 1991 1992 1993 1994 | 2098 2099 2100 2101 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 |
| DBLIM ABVOF ABTSH TRQCST LP24PA | 1995 1996 1997 1998 1999 | 2102 2103 2104 2105 2106 | 0 0 741 0 | 0 0 741 0 | 0 0 2087 0 | 0 0 2348 0 | 0 0 2087 0 | 0 0 2087 0 | 0 0 2348 0 | 0 0 3104 0 | 0 0 4656 0 | 0 0 3168 0 | 0 0 1865 0 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 1701 1702 1703 | 2107 2108 2109 2110 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| DETQLM AMRDML NFILT NINTCT MFWKCE | 1704 1705 1706 1735 1736 | 2111 2112 2113 2127 2128 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| MFWKBL LP2GP LP4GP LP6GP | 1752 1753 1754 1755 | 2129 2130 2131 2132 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| PHDLY1 PHDLY2 DGCSMM TRQCUP OVCSTP | 1756 1757 I 1782 1783 1784 | 2133 2134 2159 2160 2161 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| POVC21 POVC22 POVC22 POVCLM MAXCRT | 1785 1786 | 2162 2163 2164 2165 | 0 0 0 85 | 0 0 0 85 | 0 0 0 165 | 0 0 0 185 | 0 0 0 85 | 0 0 0 165 | 0 0 0 185 | 0 0 0 185 | 0 0 0 365 | 0 0 0 365 | 0 0 0 165 |

| | | otor specification Motor ID No. | (400V) | Lis17000C3/2 (200V) 0459-B110 400 | Lis17000C3/2 (400V) 0459-B110 401 | DiS85/400 (200V) 0483–B20x 423 | DiS85/400 (400∨) 0483–B20x 424 | D <i>i</i> S110/300 (200V) 0484–B10x 425 | D <i>i</i> S110/300 (400V) 0484–B10x 426 | D <i>i</i> S260/600 (200V) 0484–B31x 429 | D <i>i</i> S260/600 (400V) 0484–B31x 430 | D <i>i</i> S370/300 (200V) 0484–B40x 431 | D <i>i</i> S370/300 (400V) 0484–B40x 432 |
|--|---|---|--|---|---|--|---|--|--|--|--|--|--|
| Symbol | FS15 <i>i</i> 1808 1809 1883 1884 1951 | FS30,16 <i>i</i> ,etc 2003 2004 2005 2006 2007 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 0000000 000000 | 00001000 00000011 00000000 00000000 000000 |
| | 1952 1953 1954 1955 1956 1707 | 2008 2009 2010 2011 2012 2013 | 00000000 00000000 00000100 00000000 000000 | 0000000 0000000 00000100 0000000 0000000 | 00000000 00000000 00000100 00000000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 |
| | 1708 1750 1751 2713 2714 | 2014 2210 2211 2300 2301 | 0000000 00000100 00000000 10000000 000000 | 0000000 0000100 00001000 1000000 0000000 | 00000000 00000000 00000100 00000000 1000000 | 00000000 00000000 00000100 00000000 10000100 000000 | 0000000 0000000 00000100 0000000 10000100 000000 | 0000000 00000100 0000000 10000100 000000 | 00000000 00000100 00000000 10000100 000000 | 00001000 00001000 00000100 00000000 10000100 000000 | 00001000 00001000 00000100 00000000 10000100 000000 | 00000000 00000100 00000000 10000100 000000 | 0000000 00000100 0000000 10000100 000000 |
| PK1 PK2 PK3 PK1V PK2V | 1852 1853 1854 1855 1856 | 2040 2041 2042 2043 2044 | 839 -4103 -2695 9 -125 | 2182 -8540 -2696 7 -99 | 253 -3693 -2696 7 -99 | 344 -2368 -2491 242 -2164 | 172 -1184 -2491 242 -2164 | 156 -1045 -2448 420 -3763 | 78 -523 -2448 420 -3763 | 571 -4138 -2573 240 -2146 | 321 -2327 -2573 213 -1907 | 478 -3338 -2515 264 -2361 | 239 -1669 -2515 264 -2361 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 -9086 0 | 0 -8235 -11497 0 | 0 -8235 -11497 0 | 0 -8235 3897 0 | 0 -8235 3897 0 | 0 -8235 2241 0 | 0 -8235 2241 0 | 0 -8235 3931 0 | 0 -8235 4422 0 | 0 -8235 3572 0 | 0 -8235 3572 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 21 | 0 956 510 0 | 0 956 510 0 21 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 21 | 0 956 510 0 | 0 956 510 0 21 | 0 956 510 0 |
| PDDP PHYST EMFCMP PVPA | 1865 1866 1867 1868 1869 | 2053 2054 2055 2056 2057 | 21 1894 319 0 0 | 21 1894 319 0 0 | 1894 319 0 0 | 21 1894 319 0 0 | 1894 319 0 0 | 21 1894 319 0 0 | 21 1894 319 0 0 | 1894 319 0 0 | 21 1894 319 0 0 | 1894 319 0 0 | 21 1894 319 0 0 |
| PALPH PPBAS TQLIM EMFLMT POVC1 | 1870 1871 1872 1873 1877 | 2058 2059 2060 2061 2062 | 0 0 6877 120 32720 | 0 0 6887 120 32711 | 0 0 6877 120 | 0 0 7282 0 | 0 0 7282 0 | 0 0 7282 0 32682 | 0 0 7282 0 32682 | 0 0 5352 0 32722 | 0 0 4758 0 | 0 0 7282 0 | 0 0 7282 0 |
| POVC2 TGALMLV POVCLMT PK2VAUX | 1878 1892 1893 1894 | 2063 2064 2065 2066 | 52720 597 4 1358 0 | 52711 709 4 981 0 | 32711 709 4 981 0 | 32683 1069 4 3172 0 | 32683 1069 4 3172 0 | 32082 1069 4 3173 0 | 1069 4 3173 0 | 578 578 1714 0 | 32731 457 4 1354 0 | 32705 782 4 2322 0 | 32705 782 4 2322 0 |
| FILTER FALPH VFFLT ERBLM PBLCT | 1895 1961 1962 1963 1964 | 2067 2068 2069 2070 2071 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL | 1965 1966 1967 1970 | 2072 2073 2074 2077 | 0 0 20480 0 | 0 0 20480 0 | 0 0 20480 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| PDPCH PDPCL DPFEX DPFZW BLENDL | 1971 1972 1973 1974 1975 | 2078 2079 2080 2081 2082 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| MOFCTL RTCURR TDPLD MCNFB | 1976 1979 1980 1981 | 2083 2086 2087 2088 | 0 857 0 0 | 0 729 0 0 | 0 729 0 0 | 0 1310 0 | 0 1310 0 0 | 0 1310 0 0 | 1310 0 | 0 963 0 0 | 0 856 0 | 0 1121 0 0 | 0 1121 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 VMPK3V | 1982 1983 1984 1985 1986 | 2089 2090 2091 2092 2093 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| BLCMP2 AHDRTL RADUSL SMCNT DEPVPL | 1987 1988 1989 1990 1991 | 2094 2095 2096 2097 2098 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| ONEPSL INPA1 INPA2 DBLIM | 1992 1993 1994 1995 | 2099 2099 2100 2101 2102 | 400 0 0 0 | 400 0 0 0 | 0 400 0 0 0 | 400 0 0 | 400 0 0 0 | 400 0 0 | 400 0 0 | 400 0 0 | 400 0 0 | 400 0 0 | 0 400 0 0 0 |
| ABVOF ABTSH TRQCST LP24PA VLGOVR | 1996 1997 1998 1999 1700 | 2103 2104 2105 2106 2107 | 0 0 2098 0 0 | 0 0 4197 0 0 | 0 0 4197 0 0 | 0 0 1167 0 0 | 0 0 1167 0 | 0 0 1510 0 0 | 0 0 1510 0 0 | 0 0 4857 0 0 | 0 0 5464 0 0 | 0 6020 0 | 0 0 6020 0 0 |
| RESERV BELLTC MGSTCM DETQLM | 1701 1702 1703 1704 | 2108 2109 2110 2111 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| AMRDML NFILT NINTCT MFWKCE MFWKBL | 1705 1706 1735 1736 1752 | 2112 2113 2127 2128 2129 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 |
| LP2GP LP4GP LP6GP PHDLY1 | 1753 1754 1755 1756 1757 | 2130 2131 2132 2133 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| PHDLY2 DGCSMM TRQCUP OVCSTP POVC21 | 1782 1783 1784 1785 | 2134 2159 2160 2161 2162 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 |
| POVC22 POVCLMT MAXCRT | 1786 | 2163 2164 2165 | 0 0 185 | 0 0 365 | 0 0 365 | 0 0 45 | 0 0 45 | 0 | 0 0 85 | 0 0 165 | 0 0 185 | 0 0 85 | 0 0 85 |

6.3 PARAMETERS FOR HRV1 CONTROL (FOR Series 0*i*-A)

December, 2003

9066 series (Series 0i-A)

NOTE

The parameters listed below cannot be loaded automatically. In parameter No. 2020 for entering a motor ID number, enter an appropriate number (15, for

example), and perform automatic loading. Then, overwrite these parameters manually.

| | Motor model specification Motor ID No | α1 5000 <i>i</i> 0202 | α2 5000 <i>i</i> 0205 | αC4 3000 <i>i</i> 0221 | α4 4000 <i>i</i> 0223 | α4 4000HV <i>i</i> 0225 | αC8 2000 <i>i</i> 0226 | α8 3000 <i>i</i> 0227 | α8 3000HV <i>i</i> 0229 | βM0.5 0115 | βM1 0116 | αC12 2000 <i>i</i> 0241 | α12 3000 <i>i</i> 0243 |
|--|--|--|--|--|--|---|--|---|---|--|--|---|--|
| Symbol | 0 <i>i</i> M-A 2003 2004 2005 2006 2007 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00001000 00000110 00000000 00000000 000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 |
| | 2008 2009 2010 2011 2012 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 00000000 0000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 |
| | 2013 2014 2210 2211 2300 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 0000000 0000000 00000010 000000 | 00000000 0000000 0000000 0000000 000000 | 00000000 0000000 0000000 00001010 000000 | 00000000 00000000 0000000 00001010 000000 | 00000000 0000000 0000000 0000000 000000 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 00000000 00000010 000000 | 00000000 00000000 0000000 00000010 000000 | 00000000 00000000 00000000 00000000 0000 |
| PK1 PK2 PK3 PK1V | 2301 2040 2041 2042 2043 | 00000000 672 -2294 -2514 66 | 00000000 680 -2247 -2568 | 00000000 | 0000000 659 -2463 -2623 106 | 00000000 525 -2056 -2619 113 | 00000000 1096 -4638 -2651 150 | 00000000 712 -3187 -2651 113 | 00000000 886 -3174 -2645 113 | 00000000 141 -511 -2415 7 | 00000000 398 -1137 -2388 6 | 0000000 3809 -8197 -2679 280 | 00000000 1072 -3835 -2630 192 |
| PK2V PK3V PK4V POA1 BLCMP | 2044 2045 2046 2047 2048 | -594 0 -8235 6384 0 | -680 0 -8235 5578 0 | -1034 0 -8235 3670 0 | -953 0 -8235 3980 0 | -1009 0 -8235 3762 0 | -1342 0 -8235 2827 0 | -1009 0 -8235 3760 0 | -1008 0 -8235 3764 0 | -59 0 -8235 -6462 0 | -53 0 -8235 -7176 0 | -2504 0 -8235 1516 0 | -1721 0 -8235 2204 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 | Õ | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 956 510 21 |
| PDDP PHYST EMFCMP PVPA PALPH | 2054 2055 2056 2057 | 1894 319 0 0 0 | 1894 319 -20485 -10256 | 1894 319 0 -5915 | 1894 319 0 -11789 | 1894 319 0 0 | 1894 319 0 -3854 | 1894 319 0 -6418 | 1894 319 0 -6159 | 1894 319 -12850 0 | 1894 319 -12850 -11530 | 1894 319 0 -1804 | 1894 319 0 -8199 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 | 2058 2059 2060 2061 2062 2063 | 0 7282 0 32692 | 7282 0 32635 | -1500 0 7282 0 32590 32590 | -180 0 8010 32610 1070 | 0 0 7282 32591 2216 | -1236 0 7282 0 32434 | -3000 0 8010 32579 2363 | -1261 0 8010 32579 2358 | 0 6918 32674 | -1000 0 7282 32695 | -2500 0 7282 32317 | -747 0 7282 0 32552 2702 |
| TGALMLV POVCLMT PK2VAUX FILTER | 2064 2065 2066 2067 | 948 4 5739 0 0 | 4 10085 0 0 | 4 13493 0 0 | 1979 4 11998 0 0 | 4 12461 0 0 | 4170 4 17889 0 0 | 4 14327 0 0 | 4 12461 0 0 | 1178 4 3497 0 0 | 915 4 2714 0 0 | 4 17889 0 0 | 9224 0 |
| FALPH VFFLT ERBLM PBLCT SFCCML | 2068 2069 2070 2071 2072 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0000 |
| PSPTL AALPH OSCTPL PDPCH PDPCL | 2073 2074 2077 2078 2078 | 000000000000000000000000000000000000000 | 4096 0 0 0 | 12288 0 0 0 | 0 8192 0 0 | 20480 0 0 | 0 8192 0 0 | 0 12288 0 0 0 | Ō | 20480 0 0 | 20480 0 0 0 | 0 8192 0 0 | 0 8192 0 0 |
| DPFEX DPFZW BLENDL MOFCTL RTCURR | 2080 2081 2082 2083 2083 | 0 0 0 1234 | 0 | | 0 0 0 1784 | 0 0 0 1888 | 0 0 0 2593 | 0 0 0 1950 | 0 0 0 1948 | 0 0 0 1376 | 0 0 0 1212 | | 0 0 2085 |
| TDPLD MCNFB BLBSL ROBSTL ACCSPL ADFF1 | 2087 2088 2089 2090 2091 | | Ŭ O Q | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | | | 000000000000000000000000000000000000000 | 00000 | 000000000000000000000000000000000000000 | | 000000000000000000000000000000000000000 |
| VMPK3V BLCMP2 AHDRTL RADUSL | 2092 2093 2094 2095 2096 | 0 0 0 0 | 0 0 0 0 | 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | Ó | 00000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 000000 |
| SMCNT DEPVPL ONEPSL INPA1 INPA2 | 2096 2097 2098 2099 2100 2101 | 0 0 400 0 | 0 400 0 0 | 0 400 0 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 0 400 0 | 0 400 0 | 0 0 400 0 | | 400 0 0 |
| DBLIM ABVOF ABTSH TRQCST LP24PA | 2102 2103 2104 2105 2106 | 0 0 72 0 | 0 0 109 0 | 190 0 | 15000 0 201 | 15000 0 190 | 0 0 277 0 | 0 0 369 0 | 15000 0 369 0 | 0 0 42 0 | 0 0 89 0 | 0 0 350 0 | 15000 0 517 0 |
| VLGOVR RESERV BELLTC MGSTCM DETQLM | 2107 2108 2109 2110 2111 | 0 0 32 7710 | 0 0 32 6460 | 0 1289 3900 | 0 0 32 5130 | 0 0 1032 0 | 0 0 1552 3880 | 0 0 786 5180 | 0 0 782 0 | 0 0 30 10290 | 0 0 30 10290 | 0 0 2168 | 0 0 32 0 |
| AMRĎML NFILT NINTCT MFWKCE MFWKBL | 2112 2113 2127 2128 2129 | 0 0 1188 570 3211 | 0 1276 855 3211 | 2544 5000 1812 | 0 0 1443 2000 3338 | 0 0 2573 4000 3348 | 0 0 2380 4500 1550 | 0 0 2103 1500 1815 | 0 0 4191 6000 1810 | 0 0 1009 0 | 0 0 1763 0 0 | 1044 | 0 2388 2000 2568 |
| LP2GP LP4GP LP6GP PHDLY1 PHDLY2 | 2130 2131 2132 2133 2133 2134 2159 | 0 0 2571 12850 | 0 2565 12850 | 5155 | 0 0 6670 5140 | 000000000000000000000000000000000000000 | 0 0 3860 5150 | 0 0 5140 5145 | 000000000000000000000000000000000000000 | 0 0 7690 12820 | 0 0 11560 12880 | 0 0 5150 5150 | 000000000000000000000000000000000000000 |
| DGCSMM TRQCUP OVCSTP POVC21 POVC22 POVC22 | 2160 2161 2162 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 0 | 0 0 0 0 0 |
| POVC22 POVCLMT MAXCRT | 2 2164 2165 | 0 25 | 0 25 | 0 25 | 0 45 | 0 25 | 0 25 | 0 45 | 0 25 | 0 25 | 0 25 | 0 25 | 0 85 |

| Motor Symbol | Motor model specification Motor ID No 0 <i>i</i> M-A | α12 3000HV <i>i</i> 0245 | αC22 2000 <i>i</i> 0246 | α22 3000 <i>i</i> 0247 | α22 3000HV <i>i</i> 0249 | αC30 1500 <i>i</i> 0251 | α30 3000 <i>i</i> 0253 | α40 3000 <i>i</i> 0257 | α40 3000 <i>i</i> Fan 0258 |
|---|---|--|--|--|--|--|--|--|--|
| oymbol | 2003 2004 2005 2006 2007 2008 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00000110 00000000 00000000 00000000 | 00001000 00000110 00000000 00000000 000000 | 00000110 00000000 00000000 00000000 |
| | 2009 2010 2011 2012 2013 | 0000000 0000000 00100000 0000000 0000000 | 00000000 00000000 00000000 00000000 | 0000000 0000000 0010000 0000000 | 00000000 00000000 00100000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 0000000 00100000 0000000 000000 | 00000000 00000000 00100000 00000000 |
| PK1 | 2014 2210 2211 2300 2301 2040 | 00000000 00000000 00000000 00000000 0000 | 00000000 00001010 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00001010 00000000 | 00000000 00001010 00000000 | 00000000 00000010 00000000 | 00000000 00000010 00000000 |
| PK2 PK3 PK1V PK2V PK3V | 2041 2042 2043 2044 2045 | -3677 -2679 193 -1727 0 | 1755 -6536 -2694 271 -2426 0 | -5416 -2690 198 -1775 0 | 1532 -5641 -2692 197 -1765 0 | -10345 -2695 166 -1486 0 | -1896 -2694 283 -2531 0 | -4102 -2696 235 -2107 | -4102 -2696 235 -2107 0 |
| PK4V POA1 BLCMP DPFMX | 2046 2047 2048 2049 | -8235 2197 0 0 | -8235 1565 0 0 | -8235 2137 0 0 | -8235 2150 0 0 | -8235 2553 0 0 | -8235 1499 0 0 | -8235 1801 0 0 | -8235 1801 0 0 |
| POK1 POK2 RESERV PPMAX | 2050 2051 2052 2053 | 956 510 0 21 | 956 510 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 21 |
| PDDP PHYST EMFCMP PVPA | 2054 2055 2056 2057 | 1894 319 0 -8214 | 1894 319 -2597 | 1894 319 0 -5136 | 1894 319 0 -4392 | 1894 319 0 -1545 | 1894 319 0 -5181 | 1894 319 -2572 | 1894 319 0 -2572 |
| PALPH PPBAS TQLIM EMFLMT | 2058 2059 2060 2061 | -2350 0 7282 0 | -1942 0 8010 0 | -2800 0 7282 0 | -2824 0 7282 0 | -1300 0 7282 0 | -1231 0 7282 0 | -2462 0 7282 0 | -2462 0 7282 0 |
| POVC1 POVC2 TGALMLV POVCLMT PK2VAUX | 2062 2063 2064 2065 2066 | 32550 2719 4 8192 0 | 32348 5248 4 24454 0 | 32542 2820 4 9224 0 | 32545 2786 4 8192 0 | 32632 1704 9224 0 | 32369 4989 4 14489 0 | 32480 3600 4 14489 0 | 32264 6300 4 19003 0 |
| FILTER FALPH VFFLT ERBLM | 2067 2068 2069 2070 | 0 0 0 0 | 0000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | |
| PBLCT SFCCML PSPTL AALPH | 2071 2072 2073 2074 | 0 0 12288 | 0 0 8192 | 0 0 8192 | 0 0 8192 | 0 0 8192 | 0 0 8192 | 0 0 8192 | 0 0 8192 |
| OSCTPL PDPCH PDPCL DPFEX DPFZW | 2077 2078 2079 2080 2081 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD | 2082 2083 2086 2087 | 0 0 2092 0 | 0 0 2911 0 | 0 0 2131 0 | 0 0 2118 0 | 0 0 1655 0 | 0 0 2838 0 | 0 0 2409 0 | 3191 |
| MCNFB BLBSL ROBSTL ACCSPL ADFF1 | 2088 2089 2090 2091 2092 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | |
| VMPK3V | 2092 2093 2094 2095 2096 2097 | 0 0 0 0 0 | 0000 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 000000 | 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL ONEPSL INPA1 INPA2 | 2097 2098 2099 2100 2101 | 0 400 0 | 0 0 400 0 | 0 400 0 | 0 400 0 | 0 400 0 | 0 400 0 | 0 0 400 0 | 0 0 400 0 |
| DBLIM ABVOF ABTSH TRQCST | 2101 2102 2103 2104 2105 | 0 15000 0 516 | 0 0 0 680 | 0 15000 0 929 | 0 15000 0 934 | 0 0 0 1630 | 0 0 0 951 | 0 15000 0 1494 | 0 15000 0 1494 |
| LP24PA VLGOVR RESERV BELLTC | 2106 2107 2108 2109 | | 000 | 0 0 0 0 | 0 0 0 0 | 0000 | 0 0 0 0 | 0 | |
| MGSTCM DETQLM AMRDML NFILT | 2110 2111 2112 2113 | 774 0 0 0 | 1548 2600 0 0 | 1291 0 0 0 | 787 0 0 0 | 2059 2148 0 0 | 1030 7735 0 0 | 1544 5140 0 0 | 1544 5140 0 0 |
| NINTCT MFWKCE MFWKBL LP2GP LP4GP | 2127 2128 2129 2130 2131 2132 | 4787 4000 2320 0 0 | 3695 4000 1046 0 0 | 3272 4500 1301 0 0 | 6547 6000 1808 0 0 | 6680 14000 539 0 0 | 1688 2031 2829 0 0 | 3041 1625 1553 0 0 | 3041 1625 1553 0 0 |
| LP6GP PHDLY1 PHDLY2 DGCSMM | 2133 2134 2159 | 0 0 0 0 | 0 2070 5160 0 | 0 0 0 0 | 0 0 0 0 | 0 1054 5160 0 | 0 5140 5155 0 | 0 3087 5150 0 | 0 3087 5150 0 |
| TROCUP OVČSTP POVC21 POVC22 POVC22 POVCLMT | 2160 2161 2162 | 0 0 0 0 | | 000000000000000000000000000000000000000 | 0 | 0 | 0 140 0 0 | 0 140 0 0 | 0 140 0 0 |
| MAXCRT | 2 2164 2165 | 0 45 | 0 45 | 0 85 | 0 0 45 | 0 85 | 0 135 | 0 135 | 0 135 |

APPENDIX

A

ANALOG SERVO INTERFACE SETTING PROCEDURE

(1) Overview

Appendix A describes the method of setting parameters required when using the analog servo function with an analog servo interface unit.

- 1 For the CNCs that support this function, contact FANUC.
- 2 For analog servo axes, only the feed-forward, backlash compensation, pitch error compensation, and position gain switch functions can be used as digital servo functions.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)

Series 90D0/J(10) and subsequent editions Series 90E0/J(10) and subsequent editions

(Series 15*i*-B,16*i*-B,Power Mate *i*)

Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions

(3) Setting parameters

- (1) Setting start: Switch on the CNC power from an emergency stop.
- (2) Set up the FSSB. Switch the power off and on again.
- (3) Initialize the servo parameters. Switch the power off and on again.
- (4) Enable the analog servo interface function. Switch the power off and on again. Now setting is completed.

(4) FSSB setting

(a) Connecting the analog servo interface unit requires that the FSSB be set up manually. (The FSSB setting screen cannot be used.)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | | |
|------------------------------------|---------------------------|---|----|----|----|----|----|-----|--|--|
| 1090 (FS15 <i>i</i>) | | | | | | | | FMD | | |
| 1902 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | | | |
| FMD (#0) | Specif | Specifies the FSSB set mode as follows: | | | | | | | | |
| | 0: Automatic setting mode | | | | | | | | | |
| | <u>1:</u> N | 1: Manual setting mode \leftarrow To be set | | | | | | | | |

A.ANALOG SERVO INTERFACE SETTING PROCEDURE APPENDIX

(b) Directly enter all parameters listed in the following table. Before doing this, understand the meaning of each parameter sufficiently. For detailed descriptions about parameter setting, refer to the respective CNC Connection Manuals and Parameter Manuals. Analog and digital servo axes can be used together as shown in the reference examples below.

| | Parameter nun | nber | Meaning | | | |
|---------------|-----------------------------|--------------------|--|--|--|--|
| FS15 <i>i</i> | FS16 <i>i</i> , PM <i>i</i> | FS30 <i>i</i> | Meaning | | | |
| 1023 | 1023 | 1023 | Servo axis number for each axis | | | |
| 1093#6, #7 | 1905#6, #7 | 1905#6, #7, #1, #2 | Selection of interface unit used | | | |
| 1080 to 1089 | 1910 to 1919 | 14340 to 14357 | Conversion table value for slave number | | | |
| 1120 to 1129 | 1970 to 1979 | 14358 to 14375 | | | | |
| 1094 | 1936 | 1936 | Connector number for interface unit 1 | | | |
| 1095 | 1937 | 1937 | Connector number for interface unit 2 | | | |
| - | - | 1938 | Connector number for interface unit 3 | | | |
| - | - | 1939 | Connector number for interface unit 4 | | | |
| | | 14376 to 14383 | Conversion table value for connector number of | | | |
| - | - | 14370 10 14303 | interface unit 1 | | | |
| | _ | 14384 to 14391 | Conversion table value for connector number of | | | |
| | _ | 14304 10 14331 | interface unit 2 | | | |
| - | - | 14392 to 14400 | Conversion table value for connector number of | | | |
| | | 11002 10 11100 | interface unit 3 | | | |
| - | - | 14401 to 14407 | Conversion table value for connector number of | | | |
| | | | interface unit 4 | | | |
| 1100 to 1109 | _ | - | Conversion table value for number of slave connected | | | |
| 1130 to 1139 | | | to 1st axis card on additional-axis board | | | |
| 1110 to 1119 | - | - | Conversion table value for number of slave connected | | | |
| 1140 to 1149 | | | to 2nd axis card on additional-axis board | | | |
| _ | - | 14408 to 14425 | Conversion table value for slave number on | | | |
| | | | additional-axis board | | | |
| - | - | 14444 to 14451 | Conversion table value for connector number of | | | |
| | | | interface unit 1 on additional-axis board | | | |
| - | - | 14452 to 14459 | Conversion table value for connector number of | | | |
| | | | interface unit 2 on additional-axis board | | | |

NOTE

| 1 | The FSSB settings for the analog servo interface |
|---|--|
| | unit are also used for the separate detector |
| | interface unit. |
| | (Bits 6, 7, 1, and 2 of parameter No, 1905 or bits 6 |

- and 7 of parameter No. 1093 are used in common.) 2 The slave number of an analog servo axis must be
- added to behind the last slave number of the units actually connected to the FSSB line. (See the setting examples provided below.)
- 3 With the FS15*i*, 16*i*, and PM*i*, when an analog servo interface unit is used, HRV3 control (high-speed HRV current control) cannot be used.
- 4 With the FS30*i*, up to two interface units (separate detector interface unit and (or) analog servo interface unit) can be connected per FSSB line. Therefore, the first and second interface units are connected to the FSSB1 line, and the third and fourth interface units are connected to the FSSB2 line.


With the FS15*i*, 16*i*, and PMi, up to two units (separate detector interface unit, analog servo interface unit, and (or) FSSB I/O unit) can be connected to the entire FSSB line of one axis card.

(Reference)

FSSB setting example where an analog servo interface unit is used

[Setting example 1: Two analog servo axes]

Let the analog servo interface unit be slave 1. Assume that analog amplifiers are connected behind the analog servo interface unit, and let them be slaves 2 and 3 sequentially.

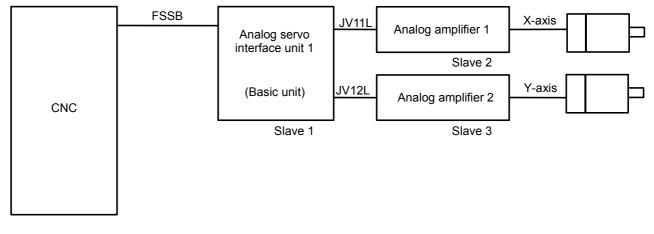


| Parameter No. (FS15 <i>i</i>) | 1080 | 1081 | 1082 | 1083 | 1084 | 1085 | 1086 | 1087 | 1088 | 1089 |
|---|------|------|------|------|------|------|------|------|------|------|
| Parameter No. (FS16 <i>i</i> , PM <i>i</i>) | 1910 | 1911 | 1912 | 1913 | 1914 | 1915 | 1916 | 1917 | 1918 | 1919 |
| Set value | 16 | 0 | 1 | 40 | 40 | 40 | 40 | 40 | 40 | 40 |

| Parameter No. (FS30 <i>i</i>) | 14340 | 14341 | 14342 | 14343 to 14357 |
|-----------------------------------|-------|-------|-------|----------------|
| Set value | 64 | 0 | 1 | -96 |

| Parameter No. (FS15 <i>i</i>) | No.1023 | No.1093 | No.1094 | No.1095 |
|---|---------|----------|---------|---------|
| Parameter No. (FS16 <i>i</i> , PM <i>i</i>) (FS30 <i>i</i>) | No.1023 | No.1905 | No.1936 | No.1937 |
| X axis | 1 | 0100000 | 0 | 0 |
| Y axis | 2 | 01000000 | 1 | 0 |

| Parameter No. (FS30 <i>i</i>) | 14376 | 14377 | 14378 to 14407 |
|-----------------------------------|-------|-------|----------------|
| Set value | 0 | 1 | 32 |

[Setting example 2: One digital servo axis + one analog servo axis] The digital servo amplifier and analog servo interface unit are slaves 1 and 2, as in the sequence in which they are connected to the FSSB. Assuming that the axis connected to the analog servo amplifier is behind the analog servo interface unit, it is slave 3.

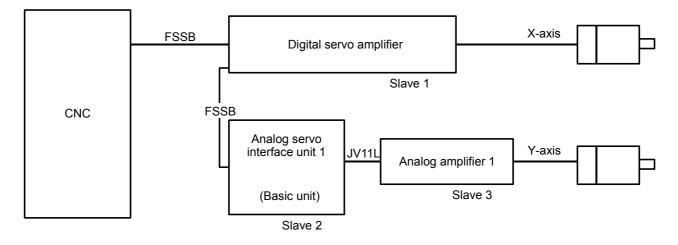

| Parameter No. (FS15 <i>i</i>) | 1080 | 1081 | 1082 | 1083 | 1084 | 1085 | 1086 | 1087 | 1088 | 1089 |
|---|------|------|------|------|------|------|------|------|------|------|
| Parameter No. (FS16 <i>i</i> , PM <i>i</i>) | 1910 | 1911 | 1912 | 1913 | 1914 | 1915 | 1916 | 1917 | 1918 | 1919 |
| Set value | 0 | 16 | 1 | 40 | 40 | 40 | 40 | 40 | 40 | 40 |

| Parameter No. (FS30 <i>i</i>) | 14340 | 14341 | 14342 | 14343 to 14357 |
|-----------------------------------|-------|-------|-------|----------------|
| Set value | 0 | 64 | 1 | -96 |

| Parameter No. (FS15 <i>i</i>) | No.1023 | No.1093 | No.1094 | No.1095 |
|---|---------|----------|---------|---------|
| Parameter No. (FS16 <i>i</i> , PM <i>i</i>) (FS30 <i>i</i>) | No.1023 | No.1905 | No.1936 | No.1937 |
| X axis | 1 | 0000000 | 0 | 0 |
| Y axis | 2 | 01000000 | 0 | 0 |

| Parameter No. (FS30 <i>i</i>) | 14376 | 14377 to 14407 |
|-----------------------------------|-------|----------------|
| Set value | 0 | 32 |

[Setting example 3: Five analog servo axes + two digital servo axes]

The first analog servo interface unit (including expansion) is slave 1, two digital servo amplifiers are slaves 2 and 3, the second analog servo interface unit is slave 4, as in the sequence in which they are connected to the FSSB. Assuming that the analog amplifiers are connected behind the analog servo interface unit, they are slaves 5 to 9

| | | | | unit, they | are slave | s 5 to 9. | | | _ | |
|---|-------|---------|-------|-------------------|-------------------|---------------------------|-------------------|---------------|--------------------------|-------------------|
| | | | _ | FSSB | Analog se | rvo | /11L Analo | g amplifier 1 | X-axis | |
| | | | | Г | interface u | Init | | Slave | | |
| | | CN | | | (Basic ur | | '12L | | ј ^{Y-axis} г | |
| | | | | | Slave | 1 | Analog | g amplifier 2 | | |
| | | | | | | | '13L | Slave | ۔ ۲ | |
| | | | | FSSB | Analog se | rvo | | g amplifier 3 | Z-axis | |
| | | | | | interface i | | | Slave |] L 7 | |
| | | | | | (Expansio | n unit) JV1 | | g amplifier 4 | A-axis | |
| | | | | | | | Analo | | | |
| | | | | | | | | Slave | 8 B-axis - | |
| | | | | L | | ervo amplifie wo axes) | ers 📃 | Slave 2 | | |
| | | | | FSSE | ((| wo axes) | 5 | Slave 3 | C-axis | |
| | | | | | | _ | J | | | |
| | | | | | Analog se | | 11L | | U-axis | |
| | | | | | | | Analo | g amplifier 5 | | |
| | | | | | (Basic u Slave | | | Slave | L 9 | |
| | | | | l | Clave | · | | | | |
| Parameter No. (FS15 <i>i</i>) | 1080 | 1081 | 1082 | 1083 | 1084 | 1085 | 1086 | 1087 | 1088 | 1089 |
| Parameter No. | 1910 | 1911 | 1912 | 1913 | 1914 | 1915 | 1916 | 1917 | 1918 | 1919 |
| (FS16 <i>i</i> , PM <i>i</i>) | | | | | | | | | | |
| Set value | 16 | 4 | 5 | 48 | 0 | 1 | 2 | 3 | 6 | 40 |
| Parameter No. (FS30 <i>i</i>) | 14340 | 14341 | 14342 | 14343 | 14344 | 14345 | 14346 | 14347 | 14348 | 14349 to 14357 |
| Set value | 64 | 4 | 5 | -56 | 0 | 1 | 2 | 3 | 6 | -96 |
| Parameter I (FS15 <i>i</i>) | No. | No.1023 | 3 | No.1093 | No | o.1094 | No. ⁻ | 1095 | | |
| Parameter I (FS16 <i>i</i> , PM <i>i</i>), (I | | No.1023 | 3 | No.1905 | No | p.1936 | No. | 1937 | | |
| X axis | | 1 | | 01000000 | | 0 | | 0 | | |
| Y axis | | 2 | | 01000000 | | 1 | | 0 | | |
| Z axis A axis | | 3 | | 01000000 01000000 | | 2 3 | | 0 0 | | |
| B axis | | 4 5 | | 00000000 | | 0 | | 0 0 | | |
| C axis | | 6 | | 00000000 | | 0 | | 0 | | |
| U axis | | 7 | | 10000000 | | 0 | | 0 | | |
| Parameter No. (FS30 <i>i</i>) | 14376 | 14377 | 14378 | 14379 | 14380 to 1438 | 3 1438 | 4 1438 4 to 14 | | | |
| Set value | 0 | 1 | 2 | 3 | 32 | 6 | 32 | | | |
| | | | | | | | | | | |

(5) Servo parameter initialization

For axes connected to an analog servo circuit, initialize the servo parameters as listed below.

| Parar | neter number | Name | Set value | | | | | |
|---------------|-----------------------------------|------------------------------|---|--|--|--|--|--|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> , etc. | Name | Set Value | | | | | |
| 1804 | 2000 | Initialization bit | 00000000 | | | | | |
| 1874 | 2020 | Motor ID number | 50 (for HRV1) 252 (for HRV2) | | | | | |
| 1806 | 2001 | AMR | 00000000 | | | | | |
| 1820 | 1820 | CMR | | | | | | |
| 1977 | 2084 | FFG (numerator) | Perform the same initialization as for digital servo according toyour machine tool. | | | | | |
| 1978 | 2085 | FFG (denominator) | | | | | | |
| 1879 | 2022 | Direction of movement | 111 (counterclockwise) or -111 (clockwise) | | | | | |
| 1896 | 1821 | Reference counter | Specify the number of pulses per motor revolution (after FFG) in the same manner as for the digital servo circuit. | | | | | |
| 1876 | 2023 | Number of velocity pulses | Set value = $1536.797 \times E$ where E is the voltage (V) that corresponds to a velocity command of 1000 min ⁻¹ . | | | | | |
| 1891 | 2024 | Number of position pulses | Specify the number of pulses per motor revolution (before FFG) in the same manner as for the digital servo circuit. | | | | | |

NOTE

Although difference in HRV setting is not directly related to analog servo axes, they must be initialized with the same HRV setting by reason of the relationship with the settings of other digital servo axes.

The Series 30*i* does not support HRV1 control, so it is necessary to perform initialization with the motor ID number (252) for HRV2.

(6) Setting the analog servo function

To enable the analog servo function, set the following parameters for the axes to be connected to an analog servo circuit. (It is also necessary to enable the dummy serial feedback function.)

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------------------|-------------|------------|-----------|------------|--------------|-----|-------------------|-----|
| 1953 (FS15 <i>i</i>) | | | | ANALOG | | | | DMY |
| 2009 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| DMY (#0) | The se | erial feed | lback du | mmy fur | ction is: | | | |
| | 0: N | Not used | | | | | | |
| | <u>1:</u> U | Jsed ← | - To be | set | | | | |
| ANALOG (#4) | The a | nalog sei | rvo inter | face func | tion is: | | | |
| | 0: N | Not used | | | | | | |
| | <u>1: U</u> | Jsed ← | - To be | set | | | | |
| · | | | | | | | | |
| 1788 (FS15 <i>i</i>) | | | Ma | kimum am | plifier curr | ent | | |
| 2165 (FS30 <i>i</i> ,16 <i>i</i>) | | | | | | | | |
| | G | G. 0 fam 4 | he erie | . b | mantad ta | | ~ ~ ~ ~ ~ ~ ~ ~ ~ | |

Specify 0 for the axis to be connected to an analog servo circuit.

PARAMETERS SET WITH VALUES IN DETECTION UNITS

If the detection unit is changed with a CMR or flexible feed gear, it is also necessary to change the parameters that are set with values in detection units. This appendix lists these parameters.

For details of these parameters, refer to the respective CNC parameter manuals.

B.1 PARAMETERS FOR Series 15*i*

| No. | Description |
|--------------|--|
| 1718 | For vibration damping control : position pulses conversion coefficient |
| 1730 | Variable proportional gain function in the stop state : stop judgement level |
| 1827 | Effective area (in-position check) for individual axis |
| 1828 | Position error limit for individual axis during movement |
| 1829 | Position error limit for individual axis at stop |
| 1830 | Position error limit for individual axis with servo off |
| 1832 | Position error limit for individual axis with feed at stop |
| 1837 | Position error limit during rigid tapping movement |
| 1841 | Servo error amount within which reference position return is assumed to be possible |
| 1843 | Position error limit with torque limit skipped |
| 1844 | Grid shift for reference position shift function |
| 1846 | Distance for starting second stage compensation in smooth backlash compensation |
| 1847 | Distance for ending second stage compensation in smooth backlash compensation |
| 1848 | First stage compensation value in smooth backlash compensation |
| 1849 | Backlash compensation for individual axis at rapid traverse |
| 1850 | Grid shift for individual axis |
| 1851 | Backlash compensation for individual axis |
| 1881 | Permissible error amount for starting chopping compensation |
| 1896 | Mark 1 intervals on linear scale having reference marks |
| 1912 | Zero-width synchronization error for each axis |
| 1913 | Maximum permissible synchronization error for each axis at rapid traverse |
| 1914 | Maximum permissible synchronization error for each axis at stop |
| 1917 | Zero-width synchronization error for each axis No.2 |
| 1975 | Second stage start/end parameter (when the two-stage backlash acceleration function is used) |
| 1994 | Overshoot compensation enable level |
| 1996 | Unexpected disturbance torque detection pull-back amount |
| 2786 | Lifting function against gravity at emergency stop : distance to lift |
| 2795 | Torsion preview control: maximum compensation value (LSTCM) |
| 2799 | Torsion preview control: acceleration torsion compensation value K1 (LSTK1) |
| 2800 | Torsion preview control: acceleration torsion compensation value K2 (LSTK2) |
| 2801 | Torsion preview control: acceleration torsion compensation value K3 (LSTK3) |
| 2804 | Torsion preview control: acceleration torsion compensation value K1N (LSTK1N) |
| 2805 | Torsion preview control: acceleration torsion compensation value K2N (LSTK2N) |
| 2806 | Torsion preview control: acceleration torsion compensation value K3N (LSTK3N) |
| 2817 5226 | Synchronous axes automatic compensation function : maximum compensation value |
| 5226 5227 | Mark 2 intervals on linear scale having reference marks Distance from origin to reference position on linear scale having reference marks |
| 5227 | Pitch error compensation magnification |
| 5423 | |
| 5428 | Pitch error compensation (absolute value) at reference position for movement to reference position in direction opposite to origin return direction |
| E422 | |
| 5433 | Second cyclic pitch error compensation magnification |
| 5449 5450 | Three-dimensional error compensation magnification |
| 5450 | Three-dimensional error compensation magnification |
| 5451 5471 | Three-dimensional error compensation magnification |
| 5471 | Compensation α at compensation point number a for individual axis |
| 5472 | Compensation β at compensation point number b for individual axis |

B.PARAMETERS SET WITH VALUES IN DETECTION UNITS APPENDIX B-65270EN/06

| No. | Description |
|------|---|
| 5473 | Compensation γ at compensation point number c for individual axis |
| 5474 | Compensation ϵ at compensation point number d for individual axis |
| 5504 | Compensation point number d for movement axis 1 subjected to straightness compensation |
| 5551 | Compensation at compensation point number a for movement axis 1 |
| 5552 | Compensation at compensation point number b for movement axis 1 |
| 5553 | Compensation at compensation point number c for movement axis 1 |
| 5554 | Compensation at compensation point number d for movement axis 1 |
| 5561 | Compensation at compensation point number a for movement axis 2 |
| 5562 | Compensation at compensation point number b for movement axis 2 |
| 5563 | Compensation at compensation point number c for movement axis 2 |
| 5564 | Compensation at compensation point number d for movement axis 2 |
| 5571 | Compensation at compensation point number a for movement axis 3 |
| 5572 | Compensation at compensation point number b for movement axis 3 |
| 5573 | Compensation at compensation point number c for movement axis 3 |
| 5574 | Compensation at compensation point number d for movement axis 3 |
| 5591 | Compensation magnification 1 for movement axis 1 subjected to straightness compensation |
| 5592 | Compensation magnification 1 for movement axis 2 subjected to straightness compensation |
| 5593 | Compensation magnification 1 for movement axis 3 subjected to straightness compensation |
| 5594 | Compensation magnification 1 for movement axis 4 subjected to straightness compensation |
| 5595 | Compensation magnification 1 for movement axis 5 subjected to straightness compensation |

B.2 PARAMETERS FOR Series 16*i*, 18*i*, AND 21*i*

| No. | Description |
|------|--|
| 1821 | Reference counter capacity for individual axis |
| 1826 | Effective area (in-position check) for individual axis |
| 1827 | Effective area (in-position check) for individual axis at cutting feed |
| 1828 | Position error limit for individual axis during movement |
| 1829 | Position error limit for individual axis at stop |
| 1830 | Position error limit for individual axis with servo off |
| 1832 | Position error limit for individual axis with feed at stop |
| 1836 | Servo error amount within which reference position return is assumed to be possible |
| 1846 | Distance for starting second stage compensation in smooth backlash compensation |
| 1847 | Distance for ending second stage compensation in smooth backlash compensation |
| 1848 | First stage compensation value in smooth backlash compensation |
| 1850 | Grid shift/reference position shift for individual axis |
| 1851 | Backlash compensation for individual axis |
| 1852 | Backlash compensation for individual axis at rapid traverse |
| 1876 | Inductosyn 1-pitch interval |
| 1877 | Inductosyn shift |
| 1882 | Mark 2 intervals on linear scale having reference marks |
| 1883 | Distance from origin to reference position on linear scale having reference marks |
| 1884 | Distance from origin to reference position on linear scale having reference marks |
| 1885 | Permissible cumulative movement value during torque control (PMC axis control) |
| 1886 | Position error with torque control canceled (PMC axis control) |
| 2033 | For vibration damping control : position pulses conversion coefficient |
| 2082 | Second stage start/end parameter (when the two-stage backlash acceleration function is used) |
| 2101 | Overshoot compensation enable level |
| 2103 | Unexpected disturbance torque detection amount retrace distance |
| 2119 | Function for changing the proportional gain in the stop state : stop judgement level |
| 2373 | Lifting function against gravity at emergency stop : distance to lift |
| 2382 | Torsion preview control: maximum compensation value (LSTCM) |
| 2386 | Torsion preview control: acceleration torsion compensation value K1 (LSTK1) |
| 2387 | Torsion preview control: acceleration torsion compensation value K2 (LSTK2) |
| 2388 | Torsion preview control: acceleration torsion compensation value K3 (LSTK3) |
| 2391 | Torsion preview control: acceleration torsion compensation value K1N (LSTK1N) |
| 2392 | Torsion preview control: acceleration torsion compensation value K2N (LSTK2N) |
| 2393 | Torsion preview control: acceleration torsion compensation value K3N (LSTK3N) |
| 2404 | Synchronous axes automatic compensation function : maximum compensation value |
| 3623 | Pitch error compensation magnification for individual axis |
| 5300 | Rigid tapping effective area (in-position check) for tapping axis |
| 5302 | Second-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5304 | Third-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5310 | Rigid tapping position error limit for tapping axis during movement |
| 5312 | Rigid tapping position error limit for tapping axis at stop |
| 5314 | Rigid tapping position error limit for tapping axis during movement |
| 5350 | Second-spindle rigid tapping position error limit for tapping axis during movement |
| 5352 | Second-spindle rigid tapping position error limit for tapping axis at stop |
| 5354 | Third-spindle rigid tapping position error limit for tapping axis during movement |
| 5356 | Third-spindle rigid tapping position error limit for tapping axis at stop |
| 5761 | Compensation at compensation point number a for movement axis 1 (straightness compensation) |
| 5762 | Compensation at compensation point number b for movement axis 1 (straightness compensation) |
| 5763 | Compensation at compensation point number c for movement axis 1 (straightness compensation) |

| No. | Description |
|------|---|
| 5764 | Compensation at compensation point number d for movement axis 1 (straightness compensation) |
| 5771 | Compensation at compensation point number a for movement axis 2 (straightness compensation) |
| 5772 | Compensation at compensation point number b for movement axis 2 (straightness compensation) |
| 5773 | Compensation at compensation point number c for movement axis 2 (straightness compensation) |
| 5774 | Compensation at compensation point number d for movement axis 2 (straightness compensation) |
| 5781 | Compensation at compensation point number a for movement axis 3 (straightness compensation) |
| 5782 | Compensation at compensation point number b for movement axis 3 (straightness compensation) |
| 5783 | Compensation at compensation point number c for movement axis 3 (straightness compensation) |
| 5784 | Compensation at compensation point number d for movement axis 3 (straightness compensation) |
| 5871 | Compensation α at compensation point number a for individual axis (gradient compensation) |
| 5872 | Compensation β at compensation point number b for individual axis (gradient compensation) |
| 5873 | Compensation γ at compensation point number c for individual axis (gradient compensation) |
| 5874 | Compensation ϵ at compensation point number d for individual axis (gradient compensation) |
| 8313 | Limit to difference in position error between master and slave axes (pair under simplified synchronization |
| 0313 | control) |
| 8315 | Maximum compensation for synchronization (pair under simplified synchronization control) |
| 8316 | Difference in reference counter between master and slave axes (pair under simplified synchronization control) |
| 8323 | Limit to difference in position error between master and slave axes (more than one pair under simplified |
| 0020 | synchronization control) |
| 8325 | Maximum compensation for synchronization (more than one pair under simplified synchronization control) |
| 8326 | Difference in reference counter between master and slave axes (more than one pair under simplified |
| 0320 | synchronization control) |

Setting data for shifting external machine coordinate systems •

B.3 PARAMETERS FOR THE Power Mate *i*

| No. | Description |
|----------|---|
| 1821 | Reference counter capacity for individual axis |
| 1826 | Effective area (in-position check) for individual axis |
| 1827 | Effective area (in-position check) for individual axis at cutting feed |
| 1828 | Position error limit for individual axis during movement |
| 1829 | Position error limit for individual axis at stop |
| 1830 | Position error limit for individual axis with servo off |
| 1832 | Position error limit for individual axis with feed at stop |
| 1836 | Servo error amount within which reference position return is assumed to be possible (when ISC is in use) |
| 1850 | Grid shift/reference position shift for individual axis |
| 1851 | Backlash compensation for individual axis |
| 1852 | Backlash compensation for individual axis at rapid traverse |
| 1872* | Servo position error check value |
| 1882 | Mark 2 intervals on linear scale having reference marks |
| 1883 | Distance from origin to reference position on linear scale having reference marks |
| 1884 | Distance from origin to reference position on linear scale having reference marks |
| 1885 | Permissible cumulative movement value during torque control (PMC axis control) |
| 1886 | Position error with torque control canceled (PMC axis control) |
| 2033 | For vibration damping control : position pulses conversion coefficient |
| 2082 | Second stage start/end parameter (when the two-stage backlash acceleration function is used) |
| 2101 | Overshoot compensation enable level |
| 2103 | Unexpected disturbance torque detection amount retrace distance |
| 2119 | Function for changing the proportional gain in the stop state : stop judgement level |
| 2404 | Synchronous axes automatic compensation function : maximum compensation value |
| 3623 | Pitch error compensation magnification for individual axis (H is optional) |
| 5300(D) | Rigid tapping effective area (in-position check) for tapping axis |
| 5310(D) | Rigid tapping position error limit for tapping axis during movement |
| 5312(D) | Rigid tapping position error limit for tapping axis at stop |
| 5314(D) | Rigid tapping position error limit for tapping axis during movement |
| 5761 | Compensation at compensation point number a for movement axis 1 (straightness compensation) |
| 5762 | Compensation at compensation point number b for movement axis 1 (straightness compensation) |
| 5763 | Compensation at compensation point number c for movement axis 1 (straightness compensation) |
| 5764 | Compensation at compensation point number d for movement axis 1 (straightness compensation) |
| 5771 | Compensation at compensation point number a for movement axis 2 (straightness compensation) |
| 5772 | Compensation at compensation point number b for movement axis 2 (straightness compensation) |
| 5773 | Compensation at compensation point number c for movement axis 2 (straightness compensation) |
| 5774 | Compensation at compensation point number d for movement axis 2 (straightness compensation) |
| 5781 | Compensation at compensation point number a for movement axis 3 (straightness compensation) |
| 5782 | Compensation at compensation point number b for movement axis 3 (straightness compensation) |
| 5783 | Compensation at compensation point number c for movement axis 3 (straightness compensation) |
| 5784 | Compensation at compensation point number d for movement axis 3 (straightness compensation) |
| 8313 | Limit to difference in position error between master and slave axes (pair under simplified synchronization control) |
| 8315 | Maximum compensation for synchronization (pair under simplified synchronization control) |
| 8316 | Difference in reference counter between master and slave axes (pair under simplified synchronization control) |
| 8323(H) | Limit to difference in position error between master and slave axes (more than one pair under simplified control) |
| 8325(H) | Maximum compensation for synchronization (more than one pair under simplified synchronization control) |
| 0020(11) | Difference in reference counter between master and slave axes (more than one pair under simplified |
| 8326(H) | |
| | synchronization control) |

The parameter No. indicated with an asterisk (*) is related to a function unique to the Power Mate. The parameter No. suffixed with "(D)" are related to the functions

The parameter No. suffixed with "(D)" are related to the functions dedicated to the Power Mate i-D.

The parameter No. suffixed with "(H)" are related to the functions dedicated to the Power Mate i-H.

B.4 PARAMETERS FOR Series 30*i*, 31*i*, AND 32*i*

| No. | Description |
|------|---|
| 1821 | Reference counter capacity for individual axis |
| 1826 | Effective area (in-position check) for individual axis |
| 1827 | Effective area (in-position check) for individual axis at cutting feed |
| 1828 | Position error limit for individual axis during movement |
| 1829 | Position error limit for individual axis at stop |
| 1830 | Position error limit for individual axis with servo off |
| 1832 | Position error limit for individual axis with feed at stop |
| 1836 | Servo error amount within which reference position return is assumed to be possible |
| | Distance from the point at which deceleration dog is turned off to first grid point when reference position shift |
| 1844 | of the reference position shift function is set to 0 |
| 1846 | Distance for starting second stage compensation in smooth backlash compensation |
| 1847 | Distance for ending second stage compensation in smooth backlash compensation |
| 1848 | First stage compensation value in smooth backlash compensation |
| 1850 | Grid shift/reference position shift for individual axis |
| 1851 | Backlash compensation for individual axis |
| 1852 | Backlash compensation for individual axis at rapid traverse |
| 1876 | Inductosyn 1-pitch interval |
| 1877 | Inductosyn shift |
| 1882 | Mark 2 intervals on linear scale having reference marks |
| 1883 | Distance from origin to reference position on linear scale having reference marks |
| 1884 | Distance from origin to reference position on linear scale having reference marks |
| 1885 | Permissible cumulative movement value during torque control (PMC axis control) |
| 1886 | Position error with torque control canceled (PMC axis control) |
| 2033 | For vibration damping control : position pulses conversion coefficient |
| 2082 | Second stage start/end parameter (when the two-stage backlash acceleration function is used) |
| 2101 | Overshoot compensation enable level |
| 2103 | Unexpected disturbance torque detection amount retrace distance |
| 2119 | Function for changing the proportional gain in the stop state : stop judgment level |
| 2382 | Torsion preview control: maximum compensation value (LSTCM) |
| 2373 | Lift amount in lifting function against gravity at emergency stop |
| 3623 | Pitch error compensation magnification for individual axis |
| 3627 | Pitch error compensation value at reference position when movement to reference position is made in the |
| 3027 | direction opposite to reference position return direction |
| 5300 | First-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5302 | Second-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5304 | Third-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5306 | Fourth-spindle rigid tapping effective area (in-position check) for tapping axis |
| 5310 | First-spindle rigid tapping position error limit for tapping axis during movement |
| 5312 | First-spindle rigid tapping position error limit for tapping axis at stop |
| 5350 | Second-spindle rigid tapping position error limit for tapping axis during movement |
| 5352 | Second-spindle rigid tapping position error limit for tapping axis at stop |
| 5354 | Third-spindle rigid tapping position error limit for tapping axis during movement |
| 5356 | Third-spindle rigid tapping position error limit for tapping axis at stop |
| 5358 | Fourth-spindle rigid tapping position error limit for tapping axis during movement |
| 5360 | Fourth-spindle rigid tapping position error limit for tapping axis at stop |
| 5761 | Compensation at compensation point number a for movement axis 1 (straightness compensation) |
| 5762 | Compensation at compensation point number b for movement axis 1 (straightness compensation) |
| 5763 | Compensation at compensation point number c for movement axis 1 (straightness compensation) |
| 5764 | Compensation at compensation point number d for movement axis 1 (straightness compensation) |

B.PARAMETERS SET WITH VALUES IN DETECTION UNITS APPENDIX B-65270EN/06

| No. | Description |
|-------|--|
| 5771 | Compensation at compensation point number a for movement axis 2 (straightness compensation) |
| 5772 | Compensation at compensation point number b for movement axis 2 (straightness compensation) |
| 5773 | Compensation at compensation point number c for movement axis 2 (straightness compensation) |
| 5774 | Compensation at compensation point number d for movement axis 2 (straightness compensation) |
| 5781 | Compensation at compensation point number a for movement axis 3 (straightness compensation) |
| 5782 | Compensation at compensation point number b for movement axis 3 (straightness compensation) |
| 5783 | Compensation at compensation point number c for movement axis 3 (straightness compensation) |
| 5784 | Compensation at compensation point number d for movement axis 3 (straightness compensation) |
| 5871 | Compensation α at compensation point number a for individual axis (gradient compensation) |
| 5872 | Compensation β at compensation point number b for individual axis (gradient compensation) |
| 5873 | Compensation γ at compensation point number c for individual axis (gradient compensation) |
| 5874 | Compensation ϵ at compensation point number d for individual axis (gradient compensation) |
| 6287 | Position error limit at torque limit skip |
| 7772 | Number of pulses from position detector per rotation of EGB master axis (tool axis) [path type] |
| 7773 | Number of pulses from position detector per rotation of EGB slave axis (workpiece axis) [path type] |
| 7782 | Number of pulses from position detector per rotation of EGB master axis [axis type] |
| 7783 | Number of pulses from position detector per rotation of EGB slave axis [axis type] |
| 8181 | Synchronous error limit for each axis (axis recomposition) |
| 8323 | Limit of position error check in feed axis synchronous control |
| 8326 | Difference in reference counter value between master axis and slave axis |
| 8331 | Maximum permissible synchronous error in synchronous error excess alarm 1 |
| 8332 | Maximum permissible synchronous error in synchronous error excess alarm 2 |
| 8333 | Synchronous error zero width for each axis |
| 8335 | Synchronous error zero width 2 for each axis |
| 8377 | Permissible error at start of chopping compensation |
| 14010 | Maximum permissible movement amount at reference position setup of linear scale with absolute addressing reference marks |
| 14988 | Magnification of cycle type second pitch error compensation for each axis |

Setting data for shifting external machine coordinate systems •

C FUNCTION-SPECIFIC SERVO PARAMETERS

☆ : Parameters set up automatically or cleared at initialization Parenthesized parameters : Common parameters that are also used for other functions

| Param | Parenthesized parameters : Common parameters that are also used for other function Parameter number | | | | |
|---------------|---|---|---|---------------------|--|
| FS15 <i>i</i> | Meaning | | | | |
| [Servo ini | tialization func | tions] | | | |
| 1804 | 2000 | Initialization bits | | | |
| 1874 | 2020 | Motor ID number | | | |
| 1806 | 2001 | AMR | | | |
| 1820 | 1820 | CMR | | | |
| 1977 | 2084 | Flexible feed gear (numerator) | | | |
| 1978 | 2085 | Flexible feed gear (denominator) | | | |
| 1879 | 2022 | Move direction | | | |
| 1876 | 2023 | Number of velocity pulses | | \rightarrow 2.1.2 | |
| 1891 | 2024 | Number of position pulses | | | |
| 2628 | 2185 | Position pulses conversion coefficient | | | |
| 1804#0 | 2000#0 | 1: Multiplies the number of velocity pulses and position pulses by 10. | | | |
| 1896 | 1821 | Reference counter capacity | | | |
| 2622 | 2179 | Reference counter capacity (denominator) | | | |
| 1875 | 2021 | Load inertia ratio | | | |
| I | 3111#0 | 1: Displays the servo setting screen. | | | |
| [HRV con | trol] | | | | |
| 1707#0 | 2013#0 | 1: Servo HRV3 control | ☆ | | |
| - | 2014#0 | 1: Servo HRV4 control | ☆ | | |
| _ | 2300#0 | 1: Extended HRV function | ☆ | \rightarrow 4.2 | |
| 2747 | 2334 | High-speed HRV current control mode: Current loop gain magnification | | | |
| 2748 | 2335 | High-speed HRV current control mode: Velocity loop gain magnification | | | |
| [Vibration | | unctions in the stop state] | | | |
| 1959#7 | 2017#7 | Velocity loop high cycle management function | | \rightarrow 4.4.1 | |
| 1894 | 2066 | 250 μ s acceleration feedback gain | ☆ | \rightarrow 4.4.2 | |
| 1958#3 | 2016#3 | Variable proportional gain function in the stop state | | | |
| 1730 | 2119 | Variable proportional gain function in the stop state : stop judgement level | | | |
| 1747#3 | 2207#3 | 1: The velocity loop proportional gain in the stop state is 50%. | | \rightarrow 4.4.3 | |
| 2733 | 2324 | Function for changing the proportional gain in the stop state : arbitrary magnification | | | |
| 1808#4 | 2003#4 | N pulse suppression function | ☆ | | |
| 1992 | 2099 | N pulse suppression level | ☆ | \rightarrow 4.4.4 | |
| 1895 | 2067 | TCMD filter coefficient | ☆ | \rightarrow 4.3 | |
| 1779 | 2156 | Torque command filter coefficient for rapid traverse | | \rightarrow 4.5.1 | |
| | | pression functions] | | | |
| 1706 | 2113 | Resonance elimination filter 1 : attenuation center frequency | ☆ | | |
| 2620 | 2177 | Resonance elimination filter 1 : attenuation bandwidth | | | |
| 2772 | 2359 | Resonance elimination filter 1 : damping | | → 4.5.2 | |
| 2773 | 2360 | Resonance elimination filter 2 : attenuation center frequency | | - | |
| | 2361 | Resonance elimination filter 2 : attenuation bandwidth | | | |

C.FUNCTION-SPECIFIC SERVO PARAMETERS APPENDIX

☆ : Parameters set up automatically or cleared at initialization
 Parenthesized parameters : Common parameters that are also used for other functions

| Parameter number | | Meaning | | |
|------------------|----------------------------------|--|---|--|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> ,etc. | wearing | | |
| 2775 | 2362 | Resonance elimination filter 2 : damping | | |
| 2776 | 2363 | Resonance elimination filter 3 : attenuation center frequency | | |
| 2777 | 2364 | Resonance elimination filter 3 : attenuation bandwidth | | |
| 2778 | 2365 | Resonance elimination filter 3 : damping | | |
| 2779 | 2366 | Resonance elimination filter 4 : attenuation center frequency | | → 4.5.2 |
| 2780 | 2367 | Resonance elimination filter 4 : attenuation bandwidth | | 74.0.2 |
| 2781 | 2368 | Resonance elimination filter 4 : damping | | |
| 2683#3 | 2270#3 | 1: Active resonance elimination filter function (applied with resonance elimination filter 1) | | |
| 2765 | 2352 | Detection level (active resonance elimination filter) | | |
| 2611#0 | 2223#0 | 1: disturbance elimination filter function | | |
| 2731 | 2318 | Disturbance elimination filter : gain | | |
| 2732 | 2319 | Disturbance elimination filter : inertia ratio | | → 4.5.3 |
| 2733 | 2320 | Disturbance elimination filter : gain for inverse model | | → 4.5.5 |
| 2734 | 2321 | Disturbance elimination filter : filter time constant | | |
| 2735 | 2322 | Disturbance elimination filter : acceleration feedback limit | | |
| 1808#2 | 2003#2 | Observer function | ☆ | |
| 1859 | 2047 | Observer coefficient (POA1) | ☆ | |
| 1862 | 2050 | Observer coefficient (POK1) | ☆ | |
| 1863 | 2051 | Observer coefficient (POK2) | ☆ | → 4.5.4 |
| 1960#1 | 2018#1 | Disable function for observer in the stop state | | |
| 1730 | 2119 | Disable function for observer in the stop state : judgment level for stop state | | |
| 1743#2 | 2203#2 | 1: Current loop 1/2 PI control function enabled | | |
| 1742#1 | 2202#1 | 1: Current loop 1/2 PI control function enabled only in cutting feed | | |
| 1742#2 | 2202#2 | (Common to the cutting/rapid velocity gain switching function)1: Current loop 1/2 PI control function is always enabled when the above bit is used. | | \rightarrow 4.5.5 \rightarrow 4.3 |
| 2736 | 2323 | Current control PI ratio | | |
| 1718 | 2033 | Position feedback pulse count (vibration damping control) | | |
| 1710 | 2033 | Vibration damping control gain | | · → 4.5.6 |
| 1709#7 | 2019#7 | Dual position feedback function (optional function) | ☆ | |
| 1861 | 2049 | Dual position feedback function : maximum amplitude | ☆ | |
| 1971 | 2078 | Dual position feedback function : conversion coefficient (numerator) | ☆ | |
| 1972 | 2079 | Dual position feedback function : conversion coefficient (denominator) | ☆ | |
| 1973 | 2080 | Dual position feedback function : primary delay time constant | ☆ | |
| 1974 | 2081 | Dual position feedback function : zero zone | ☆ | |
| 1729 | 2118 | Dual position feedback function : alarm detection level of Semi-Full error (Only this function can be used even if there is no option.) | ~ | → 4.5.7 |
| 1954#5 | 2010#5 | 1: The backlash compensation amount is added to the error counter | | , |
| 1504#0 | 2010#3 | on the full-closed side. | | |
| 1954#4 | 2010#4 | The pitch error compensation amount is added to the error counter on the semi-closed side. | | |
| 1746#4 | 2206#4 | The backlash compensation amount and pitch amount are added to the error counters on both the full- and semi-closed sides. | | |
| 1742#4 | 2202#4 | 1: Improvement of judge on zero width | | |
| 1956#1 | 2012#1 | Machine speed feedback function | ☆ | . 1 5 9 |
| 1981 | 2088 | Machine speed feedback gain | ☆ | · → 4.5.8 |

APPENDIX C.FUNCTION-SPECIFIC SERVO PARAMETERS

☆ : Parameters set up automatically or cleared at initialization
 Parenthesized parameters : Common parameters that are also used for other functions

| Parame | ter number | Parentnesized parameters . Common parameters that are also us | | | | |
|---------------------------------------|----------------------------------|---|------------|--|--|--|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> ,etc. | Meaning | | | | |
| [Contour error suppression functions] | | | | | | |
| [Feed-forw | vard functions | | 1 | | | |
| 1808#3 | 2003#3 | PI control | ☆ | | | |
| 1883#1 | 2005#1 | Feed-forward function | ☆ | \rightarrow 4.6.1 to 4.6.3 | | |
| 1961 | 2068 | Feed-forward coefficient | ☆ | \rightarrow 4.0.1 to 4.0.3 | | |
| 1962 | 2069 | Velocity feed-forward coefficient | ☆ | | | |
| 1985 | 2092 | Advanced preview feed-forward coefficient | ☆ | → 4.6.2 | | |
| 1959#5 | 2017#5 | 1: The response of feed-forward is improved when RISC is used. | | | | |
| 1740#5 | 2200#5 | 1: The response of the position command is improved when RISC is used. | | → 4.6.3 | | |
| 1800#3 | 1800#3 | Enables feed-forward in rapid traverse. | | \rightarrow 4.3 \rightarrow 4.8.3 | | |
| 1988 | 2095 | Feed-forward timing adjustment coefficient | | | | |
| 2808 | 2395 | Feed-forward timing adjustment coefficient (for use when FAD is enabled) | | → 4.6.5 | | |
| (1742#0) | (2202#0) | Switches the feed-forward coefficient between cutting and rapid traverse. (This parameter is also used for the cutting/rapid traverse-specific fine acc./dec. function.) | | | | |
| 2602#3 | 2214#4 | Switches the feed-forward coefficient between cutting and rapid traverse. (This function is independent of fine acc./dec) | | | | |
| 1767 | 2144 | Position feed-forward coefficient for cutting | | | | |
| 1768 | 2145 | Velocity feed-forward coefficient for cutting | | | | |
| (1985) | (2092) | Position feed-forward coefficient for rapid traverse | ☆ | | | |
| (1962) | (2069) | Velocity feed-forward coefficient for rapid traverse | ☆ | | | |
| [Backlash | acceleration f | unctions] | | | | |
| 1808#5 | 2003#5 | Backlash acceleration function | ☆ | | | |
| 1860 | 2048 | Backlash acceleration amount | ☆ | | | |
| 1964 | 2071 | Period during which backlash acceleration remains effective | ☆ | | | |
| (1725) | (2114) | Acceleration amount override | | | | |
| (2751) | (2338) | Limit of acceleration amount | | | | |
| (1987) | (2094) | Backlash acceleration amount (for reverse from negative to positive direction) | ☆ | . 400 | | |
| (2753) | (2340) | Acceleration amount override (for reverse from negative to positive direction) | | → 4.6.6 | | |
| (2754) | (2341) | Limit of acceleration amount (for reverse from negative to positive direction) | | | | |
| 1953#7 | 2009#7 | Backlash acceleration stop | ☆ | | | |
| 1975 | 2082 | Timing at which the backlash acceleration is stopped | ☆ | | | |
| 1953#6 | 2009#6 | 1: Enables the backlash acceleration function during cutting feed only. | ☆ | | | |
| 1851 | 1851 | Backlash compensation | 1 | | | |
| 1884#0 | 2006#0 | 1: Does not reflect the backlash compensation in positions. | ☆ | \rightarrow 4.6.6 to 4.6.7 | | |
| 1957#6 | 2015#6 | Two-stage backlash acceleration function | | | | |
| (1808#5) | (2003#5) | (The backlash acceleration function is also enabled.) | F . | | | |
| | | | ☆ | → 4.6.7 | | |
| (1860) | (2048) | First stage acceleration amount | ☆ | , 1.0.7 | | |
| 1987 | 2094 | First stage acceleration amount from negative direction to positive direction | ☆ | | | |

C.FUNCTION-SPECIFIC SERVO PARAMETERS APPENDIX

| Parame | eter number | Parenthesized parameters : Common parameters that are also use | | |
|--------------------|----------------------------------|---|--------|---------|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> ,etc. | Meaning | | |
| 1760 | 2137 | First stage acceleration override | | |
| 1975 | 2082 | Second stage start position | ☆ | |
| 1982 | 2089 | Second stage end scale factor | ☆ | |
| 1724 | 2039 | Second stage acceleration amount | | |
| 1790 | 2167 | Second stage offset | | |
| 1725 | 2114 | Second stage acceleration override | | |
| 2751 | 2338 | Second stage acceleration amount limit value | | |
| 2752 | 2339 | Second stage acceleration amount (for turn-over from negative direction to positive direction) | | |
| 2753 | 2340 | Second stage acceleration amount override (for turn-over from negative direction to positive direction) | | → 4.6.7 |
| 2754 | 2341 | Second stage acceleration amount limit value (for turn-over from negative direction to positive direction) | | |
| 1960#2 | 2018#2 | The format of the second stage acceleration override is changed. | | |
| 1953#6 | 2009#6 | 1: Enables backlash acceleration only during cutting feed. | ☆ | |
| 2611#7 | 2223#7 | When bit 3 of parameter No. 1800 = 1, the backlash acceleration function is enabled only for cutting feed. | ~ | |
| (1980) | (2087) | Torque offset | ☆ | |
| (2603#1) | (2215#1) | Torque offset canceling when an emergency stop is released | ~ | |
| 1883#7 (1808#5) | 2005#7 (2003#5) | Static friction compensation function (The backlash acceleration function is also enabled.) | ☆☆ | |
| (1964) | (2071) | Compensation count | | |
| 1965 | 2072 | Static friction compensation | ☆ ☆ | → 4.6.8 |
| 1966 | 2072 | Stop state judgement parameter | ¤ ☆ | |
| (1953#7) | (2009#7) | Stop of static friction compensation | ¤ ☆ | |
| 1990 | 2097 | Parameter for stopping static friction compensation | ⊼ ☆ | |
| | preview control | | м | |
| 2795 | 2382 | Torsion preview control: maximum compensation value (LSTCM) (Setting maximum compensation value enables torsion preview control.) | | |
| 2796 | 2383 | Torsion preview control: acceleration 1 (LSTAC1) | | |
| 2797 | 2384 | Torsion preview control: acceleration 2 (LSTAC2) | | |
| 2798 | 2385 | Torsion preview control: acceleration 3 (LSTAC3) | | |
| 2799 | 2386 | Torsion preview control: acceleration torsion compensation value K1 (LSTK1) | | |
| 2800 | 2387 | Torsion preview control: acceleration torsion compensation value K2 (LSTK2) | | |
| 2801 | 2388 | Torsion preview control: acceleration torsion compensation value K3 (LSTK3) | | → 4.6.9 |
| 2802 | 2389 | Torsion preview control: torsion delay compensation value KD (LSTKD) | | |
| 2803 | 2390 | Torsion preview control: torsion delay compensation value KDN (LSTKDN) | | |
| 2804 | 2391 | Torsion preview control: acceleration torsion compensation value K1N (LSTK1N) | | |
| 2805 | 2392 | Torsion preview control: acceleration torsion compensation value K2N (LSTK2N) | | |
| 2806 | 2393 | Torsion preview control: acceleration torsion compensation value K3N (LSTK3N) | | |

☆ : Parameters set up automatically or cleared at initialization Parenthesized parameters : Common parameters that are also used for other functions

APPENDIX C.FUNCTION-SPECIFIC SERVO PARAMETERS

☆ : Parameters set up automatically or cleared at initialization
 Parenthesized parameters : Common parameters that are also used for other functions

| Param | eter number | Parentnesized parameters . Common parameters that are also us | | |
|--|------------------|---|---|---------------------|
| FS15 <i>i</i> FS30 <i>i</i> ,16 <i>i</i> ,etc. | | Meaning | | |
| 2815 | 2402 | Torsion preview control: torsion torque compensation coefficient (LSTKT) | | → 4.6.9 |
| [Oversho | ot compensatio | on functions] | | |
| 1808#6 | 2003#6 | Overshoot compensation function | ☆ | |
| 1857 | 2045 | Velocity loop incomplete integral gain (PK3V) | ☆ | |
| 1970 | 2077 | Overshoot compensation counter | ☆ | \rightarrow 4.7 |
| 1994 | 2101 | Overshoot compensation enable level | ☆ | |
| 1742#3 | 2202#3 | Overshoot compensation type 2 | | |
| [High-spe | ed positioning | functions] | | |
| 1957#0 | 2015#0 | Position gain switch function | | |
| 1714 | 2029 | Limit speed for enabling position gain switching | | |
| 1744#1 | 2204#1 | Increases the increment system for the effective switch velocity to 10 times. | | → 4.8.1 |
| 1957#0 1744#5 | 2015#0 2204#5 | Position gain switch function type 2 | | |
| 1957#1 | 2015#1 | Low-speed integration function | | |
| 1714 | 2029 | Limit speed for disabling low-speed integration at acceleration | | |
| 1716 | 2030 | Limit speed for enabling low-speed integration at deceleration | | → 4.8.2 |
| (1744#1) | (2204#1) | 1: Increases the increment system for the switch velocity to 10 times. | | |
| 1951#6 | 2007#6 | Fine acc./dec. (FAD) function | | |
| 1749#2 | 2209#2 | 0: FAD bell-shaped, 1: FAD linear type | | 4.0.0 |
| (4005) | (0000) | Position feed-forward coefficient | | → 4.8.3 |
| (1985) | (2092) | (This parameter is also used for look-ahead control.) | | |
| 1742#0 | 2202#0 | Cutting/rapid traverse-specific fine acc./dec. function | | |
| 1800#3 | 1800#3 | Enables feed-forward in rapid traverse. | | |
| 1702 | 2109 | Fine acc./dec. time constant | | |
| 1766 | 2143 | Fine acc./dec. time constant 2 | | \rightarrow 4.3 |
| (1767) | (2144) | Position feed-forward coefficient for cutting | | \rightarrow 4.8.3 |
| (1768) | (2145) | Velocity feed-forward coefficient for cutting | | |
| (1985) | (2092) | Position feed-forward coefficient for rapid traverse | ☆ | |
| (1962) | (2069) | Velocity feed-forward coefficient for rapid traverse | ☆ | |
| 1749#3 | 2209#3 | 1: Synchronization is established in the rigid tapping mode when FAD is specified. | | → 4.8.3 |
| [Serial fee | edback dummy | functions] | | |
| 1953#0 | 2009#0 | Dummy serial feedback function | ☆ | |
| 1800#1 | 1800#1 | 1: Ignores the V-READY ON alarm. | | \rightarrow 4.9 |
| 1745#2 | 2205#2 | Separate detector-based dummy feedback function | | |
| [Brake co | ntrol functions |] | | |
| 1883#6 | 2005#6 | Brake control function | ☆ | |
| 1976 | 2083 | 2083 Brake control timer | | → 4.10 |
| 2686#7 | 2273#7 | Torque limit setting function during brake control | | 7.10 |
| 2788 | 2375 | Torque limit magnification during brake control | | |
| [Stop dist | ance reduction | functions] | | |
| 1959#0 | 2017#0 | Emergency stop distance reduction function type 1 (VCMD0) | | → 4.11.1 |
| 1744#7 | 2204#7 | Emergency stop distance reduction function type 2 (return) | | → 4.11.2 |
| 2786 | 2373 | Lifting function against gravity at emergency stop : distance to lift | | → 4.11.3 |
| 2787 | 2374 | Lifting function against gravity at emergency stop : lifting time | | / |

C.FUNCTION-SPECIFIC SERVO PARAMETERS APPENDIX

☆ : Parameters set up automatically or cleared at initialization
 Parenthesized parameters : Common parameters that are also used for other functions

| Parame | eter number | Parentnesized parameters . Common parameters that are also use | | | |
|--|--------------------------------------|--|----------------------|----------------------|--|
| FS15 <i>i</i> FS30 <i>i</i> ,16 <i>i</i> ,etc. | | Meaning | | | |
| 1745#4 | 2205#4 | Separate detector hardware disconnection stop distance reduction | | | |
| | | function | \rightarrow 4.11.4 | | |
| 1745#5 | 2205#5 | For axes under synchronization control, this bit is also set. | | | |
| 2600#7 | 2212#7 | OVL and OVC alarm stop distance reduction function | | \rightarrow 4.11.5 | |
| [Unexpect | ted disturbance | e torque detection functions] (Optional functions) | 1 | | |
| 1958#0 | 2016#0 | Unexpected disturbance torque detection function | | | |
| 1740#5 | 2200#5 | Improvement in the accuracy of an estimated disturbance load | | | |
| 2716 | 2302 | Improvement in the accuracy of an estimated disturbance load (A Q-phase current phase lag is compensated for.) | ☆ | | |
| 1980 | 2087 | Torque offset | ☆ | | |
| 1727 | 2116 | Dynamic friction compensation value | ☆ | | |
| 2758 | 2345 | Dynamic friction compensation value in the stop state | | | |
| 2759 | 2346 | Dynamic friction compensation limit value | | | |
| 1997 | 2104 | Unexpected disturbance torque detection alarm level | | | |
| 1996 | 2103 | Retrace distance | ☆ | \rightarrow 4.12 | |
| 1740#3 | 2200#3 | Cutting/traverse unexpected disturbance torque detection switching function | ☆ | | |
| 2603#7 | 2215#7 | Cutting/traverse unexpected disturbance torque detection switching function type-2 | | | |
| (1997) | (2104) | Unexpected disturbance torque detection alarm level for cutting | | | |
| 1765 | 2142 | Unexpected disturbance torque detection alarm level for rapid traverse | ☆ | | |
| 2684#2 | 2271#2 | 2-axes simultaneous retract function at unexpected disturbance torque detection | | | |
| 2603#1 | 2215#1 | Torque offset canceling when an emergency stop is released | | | |
| [Linear m | otor functions] | | | | |
| 1954#2 | 2010#2 | Linear motor control function | ☆ | | |
| 1705 | 2112 | AMR conversion coefficient 1 | ☆ | | |
| 1761 | 2138 | MR conversion coefficient 2 | | | |
| 1762 | 2139 | AMR offset | | | |
| 2683#0 | 2270#0 | AMR offset setting range expansion from -60 degrees to +60 degrees | | | |
| (2628) | (2185) | Position pulse conversion coefficient | | | |
| 1740#6 | 2200#6 | The velocity loop proportional gain format is changed. | | | |
| 1750#2 | 2210#2 | Current gain internally 4 times function | ☆ | | |
| 1753 | 2130 | Smoothing compensation performed twice per pole pair | | | |
| 1754 | 2131 | Smoothing compensation performed four times per pole pair | ☆ | → 4.14 | |
| 1755 | 2132 | Smoothing compensation performed six times per pole pair | | | |
| 2782 | 2369 | Smoothing compensation performed twice per pole pair (negative direction) | | | |
| 2783 | 2370 | Smoothing compensation performed four times per pole pair (negative direction) | | | |
| 2784 | 2371 | Smoothing compensation performed six times per pole pair (negative direction) | | | |
| 174040 | | | | | |
| 1743#6 | 2203#6 | Linear motor quadruple smoothing compensation | | | |
| 1743#6 2713#7 | 2203#6 2300#7 | | ☆ | | |
| 2713#7 | 2300#7 | Linear motor quadruple smoothing compensation | ☆ | | |
| 2713#7 | 2300#7 | Linear motor quadruple smoothing compensation 1: Determines overheat via PMC. rvo motor functions] | ☆ | | |
| 2713#7 [Synchror | 2300#7 nous built-in se | Linear motor quadruple smoothing compensation 1: Determines overheat via PMC. | , | | |
| 2713#7 [Synchror 1954#2 | 2300#7 nous built-in se 2300#2 | Linear motor quadruple smoothing compensation 1: Determines overheat via PMC. rvo motor functions] Synchronous built-in servo motor control | , | → 4.15 | |

APPENDIX C.FUNCTION-SPECIFIC SERVO PARAMETERS

☆ : Parameters set up automatically or cleared at initialization Parenthesized parameters : Common parameters that are also used for other functions

| Param | eter number | Tarentiesized parameters . Common parameters that are also us | | |
|---------------|---|---|---|--------------------|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> ,etc. | Meaning | | |
| 1761 | 2138 | AMR conversion coefficient 2 | | |
| 1762 | 2139 | AMR offset | | |
| 2601#7 | 2213#7 | Pole position detection function (optional) | | |
| 2616#3 | 2228#3 | Motor saliency 0: Lq>Ld, 1: Lq <ld< td=""><td></td><td></td></ld<> | | |
| 2617#0 | 2229#0 | 1: AMR offset is used. | | |
| 2617#3 | 2229#3 | 0: After pole detection, an abnormal movement is monitored. | | |
| 2617#4 | 2229#4 | 0: Automatic selection mode (minute operation mode + stop mode) 1: Minute operation mode | | |
| 2625 | 2182 | Current A for pole detection | | |
| 2641 | 2198 | Current B for pole detection | | \rightarrow 4.15 |
| 2642 | 2199 | Current C for pole detection | | |
| 2681 | 2268 | Allowable travel distance magnification/stop speed decision value | | |
| 2790 | 2377 | Smoothing compensation performed 1.5 times per pole pair | | |
| 2791 | 2378 | Smoothing compensation performed 1.5 times per pole pair (negative direction) | | |
| 2793 | 2380 | Smoothing compensation performed three times per pole pair | | |
| 2794 | 2381 | Smoothing compensation performed three times per pole pair (negative direction) | | |
| 2713#7 | 2300#7 | 1: Oveaheat is checked via the PMC. | ☆ | |
| [Torque c | ontrol function | s] | • | |
| 1951#7 | 2007#7 | Torque control type 1 | ☆ | |
| 1743#4 | 2203#4 | Torque control type 2 | | \rightarrow 4.16 |
| 1998 | 2105 | Torque constant | ☆ | |
| [Tandem | disturbance eli | mination control] (Optional functions) | 1 | |
| 1709#1 | 2019#1 | Enables tandem disturbance elimination control. | | |
| 1952#2 | 2008#2 | Enables the velocity feedback average function. (Set this parameter for the main axis only.) | | |
| 1721 | 2036 | Tandem disturbance elimination control proportional gain (Set this parameter for the main axis only.) | | |
| 1721 | 2036 | Tandem disturbance elimination control phase compensation coefficient (Set this parameter for the sub-axis only.) | | → 4.17 |
| 2738 | 2325 | Tandem disturbance elimination control integral gain (Set this parameter for the main axis only.) | | |
| 2738 | 2325 | Tandem disturbance elimination control phase compensation coefficient (Set this parameter for the sub-axis only.) | | |
| 2746 | 2333 | Tandem disturbance elimination control incomplete integral time constant (Set this parameter for the main axis only.) | | |
| [Synchro | nous axes auto | matic compensation function] | | |
| 2688#3 | 2275#3 | Enables synchronous axes automatic compensation. (Set this parameter for the sub-axis.) | | |
| 2816 | 2403 | Synchronous axes automatic compensation: coefficient (K) (sub-axis) | | |
| 2817 | Synchronous axes automatic compensation | | | → 4.18 |
| 2818 | 2405 | Synchronous axes automatic compensation : filter coefficient (sub-axis) | | |
| | | ns] (Optional functions) | | |
| 1817#6 | 1817#6 | Tandem control function (main- and sub-axes) | | |
| _ | 1010 | Number of CNC controlled axes | | → 4.19 |
| 1021 | _ | Parallel-axis name (main axis: 77, sub-axis: 83) | | · · · · · · |
| 1980 | 2087 | Preload value | | → 4.19.1 |
| 1000 | 2007 | | | / 1.10.1 |

C.FUNCTION-SPECIFIC SERVO PARAMETERS APPENDIX

| Param | Parenthesized parameters : Common parameters that are also used for other functions Parameter number | | | | | | |
|------------------|--|--|---|--------------------------|--|--|--|
| FS15 <i>i</i> | FS30 <i>i</i> ,16 <i>i</i> ,etc. | Meaning | | | | | |
| 1952#7 | 2008#7 | Damping compensation function | ☆ | | | | |
| 1721 | 2036 | Damping compensation gain (main axis) and damping compensation \rightarrow 4.19 phase (sub-axis) | | | | | |
| 1952#2 | 2008#2 | Velocity feedback average function | ☆ | → 4.19.3 | | | |
| 1951#1 | 2007#1 | Servo alarm two-axis monitor function | ☆ | → 4.19.4 | | | |
| 1960#7 | 2018#7 | Motor feedback sharing function (sub-axis) | | → 4.19.5 | | | |
| 1940#1 | 2200#1 | Full-closed loop feedback sharing function (sub-axis) | | → 4.19.6 | | | |
| [Servo ch | eck board func | tions] | | | | | |
| 1956#5 1956#4 | 2012#5 2012#4 | VCMD output magnification 00: 1, 01: 16, 10: 16 ² , 11: 16 ³ | ☆ | \rightarrow Appendix I | | | |
| 1957#5 | 2015#5 | Outputs an estimated load to the check board. (The estimated load is output to the torque command channel.) | | → 4.6.7, 4.12 | | | |
| 1743#5 | 2203#5 | Enables the four-times torque command output. (Small-torque command output can be measured.) | | · → 4.14, | | | |
| 1726 | 2115 | For internal data output: Must be kept at 0. The output of the SPEED signal (number of revolutions) is disabled. (Series 9096) | | Appendix I | | | |
| 1774 | 2151 | Internal data output: Always specify 0. (Series 90B0) | | | | | |
| 1775 | 2152 | Internal data output: Always specify 0. (Series 90B0) | | \rightarrow 4.14 | | | |
| 1776 | 2153 | Internal data output: Always specify 0. (Series 90B0) | | | | | |
| 1746#7 | 2206#7 | 1: Performs high-speed data output to the check board (Series 90B0). | | | | | |
| 2613#1 | 2225#1 | 1: TCMD signal check board output 1/2 (Series 90B0) | | \rightarrow Appendix I | | | |
| 2613#2 | 2225#2 | SPEED signal check board output 1/2 (7500 min⁻¹/5 V) (Series 90B0) | | | | | |
| 2208#3 | - | 1: Arbitrary data screen is displayed. | | | | | |
| | DGN353 | DGN for internal data display | | \rightarrow 4.14 | | | |
| - | DGN354 | DGN for internal data display | | | | | |
| [Related t | o simplified fre | quency characteristics measurement] | i | | | | |
| 2683#7 | 2270#7 | 1: Starts disturbance input. | | | | | |
| 2683#6 | 2270#6 | 1: Inputs disturbance for both of an odd-numbered axis and even-numbered axis simultaneously. (Used for synchronous axes or tandem axes) | | | | | |
| 2683#5 | 2270#5 | 1: The input waveform of disturbance input is a square wave. (Usually, select 0: Sine wave.) | | \rightarrow Appendix H | | | |
| 2739 | 2326 | Disturbance input gain | | | | | |
| 2740 | 2327 | Disturbance input start frequency | | | | | |
| 2741 | 2328 | Disturbance input end frequency | | | | | |
| 2742 | 2329 | Number of disturbance input measurement points | | | | | |

☆ : Parameters set up automatically or cleared at initialization Parenthesized parameters : Common parameters that are also used for other functions

D

PARAMETERS RELATED TO HIGH-SPEED AND HIGH PRECISION OPERATIONS

The i series CNCs are provided with some functions for high-speed and high precision operations. This appendix lists parameters categorized by model and function and their standard setting values so as to make it easy to tune the functions.

Appendix D consists of the following two items:

(1) CNC model-specific information

This section lists high-speed and high precision functions and parameters related to them for individual CNC models. The parameter tables in this section contain standard setting values.

(2) Servo parameters This section lists servo parameters common to all CNC models and standard setting values for them.

NOTE

1 Use the standard setting values included in the parameter tables as reference data for initialization. If a parameter needs tuning based on the machine type, determine a final setting for the parameter according to the characteristic of the machine and how to use it.

To reduce machining time, change parameters from standard settings to speed priority I to speed priority II while checking the operation status. (The settings for speed priority II can reduce much more machining time than the settings for speed priority I.)

- 2 For the specifications of CNC models and detailed explanations about their functions, refer to the respective CNC manuals.
- 3 In the following table, the circle indicates that the item is supported, the triangle indicates partial support, and the cross indicates non-support.

D.1 MODEL-SPECIFIC INFORMATION

D.1.1 Series 15*i*-MB

[Functions related to high-speed and high precision operations]

| High-speed high precision functions | Look-ahead acc./dec. before interpolation | Fine HPCC |
|---|---|---|
| Series 15 <i>i</i> -MB | 0 | 0 |
| Acc./dec. before interpolation | | |
| Туре | Linear/Bell-shaped | Linear/Bell-shaped/ Smooth bell-shaped |
| Time constant setting for individual axes | 0 | 0 |
| Velocity control | | |
| Automatic corner deceleration | 0 | 0 |
| Arc radius-based velocity control | 0 | 0 |
| Acceleration-based velocity control | × | 0 |
| Cutting load-based velocity control | × | 0 |
| Jerk control | × | 0 |
| Optimum torque acc./dec. | 0 | 0 |
| Other functions | | |
| Nano interpolation | 0 | 0 |
| 5-axis machining function | 0 | 0 |
| Smooth interpolation | 0 | 0 |
| NURBS | 0 | 0 |
| Nano smoothing | 0 | 0 |
| Additional hardware | None | None |

[Parameters]

Use the standard setting values included in the parameter tables as reference data for initialization. If a parameter needs tuning based on the machine type, determine a final setting for the parameter according to the characteristic of the machine and how to use it.

- Standard settings (precision priority) When there is vibration or significant impact, or when machining is to be performed more precisely, make settings based on the standard settings.
- Cutting time-first setting To reduce machining time, make settings for speed priority I then for speed priority II in stages. The settings for speed priority II can reduce much more machining time than the settings for speed priority I.

| Parameter | Stand | dard setting | value | |
|-----------|--------------------------|--------------|----------------------|---|
| No. | No. Standard Speed Speed | | Speed priority II | Description |
| | setting | priority I | priority ii | Allowable speed difference (mm/min) in acceleration-dependent |
| 1478 | 400.0 | 500.0 | 1000.0 | on speed difference at corners |
| 1635 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after interpolation |
| 4050 | 0.4 | 40 | 00 | Time constant (msec) for bell-shaped acc./dec. before |
| 1656 | 64 | 48 | 32 | interpolation (portion with the time fixed) |
| | | | | Acceleration of linear-/bell-shaped acc./dec. before interpolation |
| 1660 | 700.0 | 2000.0 | 4000.0 | (portion with the acceleration fixed) |
| | | | | (Acceleration is specified in mm/sec ² units for individual axes.) |
| | | | | Allowable acceleration (mm/sec ²) during acceleration-dependent |
| 1663 | 525.0 | 1500.0 | 3000.0 | deceleration (HPCC mode) |
| | | | | (Acceleration is specified in mm/sec ² for individual axes.) |
| | | | | Allowable acceleration (mm/sec ²) at arc interpolation during |
| 1665 | 525.0 | 1500.0 | 3000.0 | acceleration-dependent deceleration (non-HPCC mode) |
| | | | | (Acceleration is specified in mm/sec ² for individual axes.) |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description | | |
|------------------|-----------------------------|--|--|--|
| 1483 | 100.0 | Lower speed limit to acceleration-dependent deceleration (HPCC mode) (mm/min) | | |
| 1491 | 100.0 | Lower speed limit to deceleration acceleration-dependent (non-HPCC mode) (mm/min) | | |
| 1517#6 | 0 | Speed difference- or acceleration-dependent deceleration type O: Compatible with the 15B (by making the most of allowable speed difference and acceleration for each axis) 1: Fixed speed regardless of the direction of movement as long as the same contour is involved. | | |
| 1600#4 | 0 | 0: Linear- or bell-shaped acc./dec. after interpolation enabled ^(Note 1) 1: Exponential acc./dec. after interpolation enabled | | |
| 1603#6 | 1/0 | When using the function for changing the time constant of bell-shaped acc./dec. before interpolation, set 1. | | |
| 1473 | mm / inch 10000.0/3937.0 | Reference speed in the function for changing the time constant of bell-shaped acc./dec. before interpolation (mm/min / inch/min) | | |
| 2401#6 | 0 | Setting this parameter to 1 enables look-ahead acc./dec. before interpolation and multibuffer when the power is switched on and in the cleared state. Fine HPCC is also enabled if available. If it is reset to 0, it is turned on with the G05.1Q1 command. | | |
| 7565#7 | 0 | Setting this parameter to 1 causes a specified speed to be ignored and assumes that a speed set in parameter No. 7567 is specified | | |
| 7567 | 0 | Specified clamp value in the fine HPCC mode (mm/min (input unit)) If the parameter setting is 0, no clamp takes place except for the maximum cutting speed specified in parameter No. 1422. | | |
| 7565#4 | 0/1 | Set this parameter to 1 if the cutting load-based deceleration function is to be enabled. (This parameter is used if the mechanical rigidity of the Z-axis is low.) | | |
| 7697#1 | 0/1 | When using the slant type for override by cutting load, set 1. (Note 2) | | |
| 7698 | 80 | Override of area 1 in deceleration by cutting load (This setting is unnecessary if bit 4 of parameter No. 7565 is set to 0 or bit 1 of parameter No. 7697 is set to 0.) (%) $^{(Note 2)}$ | | |
| 7591 | 80 | Region 2 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 7565 = 0) | | |

| Parameter No. | Standard setting value | Description |
|------------------|------------------------|--|
| 7592 | 70 | Region 3 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 7565 = 0) |
| 7593 | 60 | Region 4 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 7565 = 0) |
| 8495#0 | 0/1 | When using smooth velocity control as velocity control by acceleration, set 1. (Note 2) |

NOTE

| 1 | To perform bell-shaped acc./dec. after cutting feed |
|---|---|
| | interpolation, the option for bell-shaped acc./dec. |
| | after cutting feed interpolation is required. |
| 2 | Only fine HPCC can be used. |

D.1.2 Series 16*i*/18*i*/21*i*/0*i*/0*i* Mate-MB, 0*i*/0*i* Mate-MC/20*i*-FB

[Functions related to high-speed and high precision operations]

| High-speed and high precision function | Advanced preview control (APC) | Al advanced preview control (AI-APC) | Al contour control (AICC) | Al nano contour control (Al nano CC) | High precision contour control (HPCC) | Al high precision contour control (AI-HPCC) | Al nano high precision contour control (Al nano HPCC) |
|--|---|--|--|--|---|---|---|
| Series 0 <i>i</i> Mate M-C | X | 0 | X | X | X | X | X |
| Series 0 <i>i</i> -MC | X | 0 | 0 | X | X | × | X |
| Series20 <i>i</i> -FB | 0 | X | 0 | X | X | × | × |
| Series 0 <i>i</i> Mate-MB | X | 0 | X | X | X | × | × |
| Series 0 <i>i</i> -MB | X | 0 | 0 | X | X | X | X |
| Series21 <i>i</i> -MB | 0 | 0 | 0 | 0 | X | X | X |
| Series18 <i>i</i> -MB | 0 | × | 0 | 0 | 0 | 0 | 0 |
| Series16 <i>i</i> -MB | 0 | X | 0 | 0 | 0 | 0 | 0 |
| Acc./dec. before interpolation | | | | | | | |
| Туре | Linear | Linear/ Bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped | Linear/ Bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped |
| Time constant setting for individual axes | × | × | × | × | × | 0 | 0 |
| Velocity control | | | | | | | |
| Automatic corner deceleration | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Arc radius-based velocity control | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Acceleration-based velocity control | × | 0 | 0 | 0 | 0 | 0 | 0 |
| Cutting load-based velocity control | × | × | × | × | 0 | 0 | 0 |
| Jerk control (Note 1) | X | X | Δ | Δ | X | 0 | 0 |
| Optimum torque acc./dec. | X | × | × | X | X | 0 | 0 |
| Other functions | | | | | | | |
| Nano interpolation | X | × | × | 0 | X | × | 0 |
| 5-axis machining function | X | × | × | X | X | 0 | 0 |
| Smooth interpolation | × | × | × | × | 0 | 0 | 0 |
| NURBS | × | × | × | × | 0 | 0 | 0 |
| Nano smoothing | × | × | × | × | × | 0 | 0 |
| Additional hardware | None | None | None | None | RISC I | board is nec | essary. |

NOTE

1 Jerk control can be used in the Series 16*i*-MB/18*i*-MB.

[Parameters]

Described below are the parameters that must be specified for individual high-speed and high precision cutting machines separately. Use the standard setting values included in the parameter tables as reference data for initialization. If a parameter needs tuning based on the machine type, determine a final setting for the parameter according to the characteristic of the machine and how to use it.

- Standard settings (precision priority) When there is vibration or significant impact, or when machining is to be performed more precisely, make settings based on the standard settings.
- Cutting time-first setting To reduce machining time, make settings for speed priority I then for speed priority II in stages. The settings for speed priority II can reduce much more machining time than the settings for speed priority I.

NOTE

- 1 Performing bell-shaped acc./dec. after interpolation requires the look-ahead bell-shaped acc./dec. after interpolation option.
- 2 Performing linear-shaped acc./dec. after cutting feed interpolation requires the linear-shaped acc./dec. after cutting feed interpolation option.
- 3 Performing bell-shaped acc./dec. after cutting feed interpolation requires the bell-shaped acc./dec. after cutting feed interpolation option.
- 4 Performing bell-shaped acc./dec. in rapid-traverse requires the bell-shaped acc./dec. in rapid-traverse option.

(1) Advanced preview control

| Parameter | Parameter Standard setting value | | value | |
|-----------|----------------------------------|---------------------|----------------------|---|
| No. | Standard setting | Speed priority I | Speed priority II | Description |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | - | - | - | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse for individual axes |
| 1621 | - | - | - | Time constant T2 (msec) for bell-shaped acc./dec. in rapid-traverse for individual axes |
| 1730 | 3060 | 5150 | 7275 | Feedrate upper limit (mm/min) for arc radius R |
| 1731 | 5000 | 5000 | 5000 | Arc radius R (1 μ m) for arc radius-based feedrate upper limit |
| 1732 | 100 | 100 | 100 | Arc radius-based feedrate clamp lower speed limit (mm/min) |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 1770 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before interpolation |
| 1771 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate during acc./dec. before interpolation is reached |
| 1783 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent on speed difference at corners |
| 1784 | - | - | - | Speed (mm/min) at occurrence of overtravel alarm To be specified according to the overrun distance at overtravel |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|------------------|------------------------|---|
| 1602#0 | 1 | The type of linear-shaped acc./dec. before interpolation is B. |
| 1602#4 | 1 | Automatic deceleration at corners is under speed difference-dependent control |
| | #6,#3 | |
| 1602#6 #2 | 1,0 | Acc./dec. after interpolation is of a linear type (to be specified when FAD is used) |
| 1602#6,#3 | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (to be specified when FAD is not used) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |
| 3403#0 | 1 | To be set to the standard setting value. |

(2) Al advanced preview control

| Parameter | Standard setting value | | | |
|-----------|------------------------|------------|-------------|---|
| No. | Standard | Speed | Speed | Description |
| | setting | priority l | priority II | |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | _ | _ | _ | Time constant (msec) for linear-shaped acc./dec. in |
| 1020 | _ | _ | _ | rapid-traverse for individual axes |
| 1621 | _ | _ | _ | Time constant T2 (msec) for bell-shaped acc./dec. in |
| 1021 | | | | rapid-traverse for individual axes |
| 1730 | 3060 | 5150 | 7275 | Feedrate upper limit (mm/min) for arc radius R |
| 1731 | 5000 | 5000 | 5000 | Arc radius R (1 μ m) for arc radius-based feedrate upper limit |
| 1732 | 100 | 100 | 100 | Arc radius-based feedrate clamp lower speed limit (mm/min) |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 1770 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before |
| 1770 | 10000 | 10000 | 10000 | interpolation |
| 1771 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate during |
| | 240 | 00 | 40 | acc./dec. before interpolation is reached |
| 1772 | 64 | 64 48 | 32 | Time constant of bell-shaped acc./dec. before interpolation (for |
| | | 10 | | constant-time part) (msec) |
| 1783 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent |
| | 100 | 000 | 1000 | on speed difference at corners |
| 1784 | _ | - | - | Speed (mm/min) at occurrence of overtravel alarm |
| | | | | To be specified according to the overrun distance at overtravel |
| | | | | Parameter (msec) for determining an allowable acceleration in |
| | 320 | 320 112 | | determining acceleration-dependent speed. The parameter is to |
| 1785 | | | 56 | be set with the time allowed before a maximum cutting feedrate |
| | | | 00 | (1432) is reached. |
| | | | | A maximum cutting feedrate of 10000 mm/min is used as the |
| <u> </u> | | | | standard setting value. |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|------------------|---------------------------|--|
| | #6,#3 | |
| 1602#6.#3 | 1,0 | Acc./dec. after interpolation is of a linear type (to be specified when FAD is used) |
| 1002#0,#3 | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (to be specified when FAD is not used) |
| 1603#7 | 1 | Acc./dec. before interpolation is of bell-shaped type. (0: Linear-shaped acc./dec. before interpolation) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |

(3) Al contour control

| Parameter | Standard setting value | | | |
|-----------|------------------------|---------------------|----------------------|---|
| No. | Standard setting | Speed priority I | Speed priority II | Description |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | - | - | - | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse for individual axes |
| 1621 | - | - | - | Time constant T2 (msec) for bell-shaped acc./dec. in rapid-traverse for individual axes |
| 1730 | 3060 | 5150 | 7275 | Feedrate upper limit (mm/min) for arc radius R |
| 1731 | 5000 | 5000 | 5000 | Arc radius R (1 $\mu m)$ for arc radius-based feedrate upper limit |
| 1732 | 100 | 100 | 100 | Arc radius-based feedrate clamp lower speed limit (mm/min) |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 1770 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before interpolation |
| 1771 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate during acc./dec. before interpolation is reached |
| 1772 | 64 | 48 | 32 | Time constant (msec) for bell-shaped acc./dec. before interpolation (portion with the time fixed) |
| 1783 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent on speed difference at corners |
| 1784 | - | - | - | Speed (mm/min) at occurrence of overtravel alarm To be specified according to the overrun distance at overtravel |
| 1785 | 320 | 112 | 56 | Parameter (msec) for determining an allowable acceleration in determining acceleration-dependent speed. The parameter is to be set with the time allowed before a maximum cutting feedrate (1432) is reached. A maximum cutting feedrate of 10000 mm/min is used as the standard setting value. |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|---------------|-------------------------|---|
| | #6,#3 | |
| 1602#6,#3 | 1,0 | Acc./dec. after interpolation is of a linear type (if bell-shaped acc./dec. before interpolation is used) |
| | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (if linear-shaped acc./dec. before interpolation is used) |
| 1603#7 | 1 | Acc./dec. before interpolation is of a bell-shaped type (0: Linear-shaped acc./dec. before interpolation) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |
| 7050#5 | 1 | To be set to the standard setting value. |
| 7050#6 | 0 | To be set to the standard setting value. |
| 7052#0 | 0/1 | To be set to 1 for the PMC and Cs axes. |
| 7055#3 | 1/0 | To be set to 1 if a function of changing the time constant for bell-shaped acc./dec. before interpolation is to be used. |
| 7058 | 0 | To be set to standard value. |
| 7066 | mm / inch 10000/3937 | Reference speed (mm/min / inch/min) for a function of changing the time constant for bell-shaped acc./dec. before interpolation |

(4) Al nano contour control

| Parameter | Stand | lard setting | value | |
|-----------|----------|--------------|-------------|---|
| No. | Standard | Speed | Speed | Description |
| | setting | priority I | priority II | |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | | | | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse |
| 1020 | - | - | - | for individual axes |
| 1621 | | | | Time constant T2 (msec) for bell-shaped acc./dec. in |
| 1021 | - | - | - | rapid-traverse for individual axes |
| 1730 | 3060 | 5150 | 7275 | Feedrate upper limit (mm/min) for arc radius R |
| 1731 | 5000 | 5000 | 5000 | Arc radius R (1 μ m) for arc radius-based feedrate upper limit |
| 1732 | 100 | 100 | 100 | Arc radius-based feedrate clamp lower speed limit (mm/min) |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 1770 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before |
| 1770 | 10000 | 10000 | 10000 | interpolation |
| 1771 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate during |
| 1771 | 240 | 00 | 40 | acc./dec. before interpolation is reached |
| 1772 | 64 | 64 48 | 32 | Time constant (msec) for bell-shaped acc./dec. before interpolation |
| 1772 | 04 | 40 | 52 | (portion with the time fixed) |
| 1783 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent on |
| 1705 | 400 | 500 | 1000 | speed difference at corners |
| 1784 | _ | _ | _ | Speed (mm/min) at occurrence of overtravel alarm |
| 1704 | _ | _ | _ | To be specified according to the overrun distance at overtravel |
| | | | | Parameter (msec) for determining an allowable acceleration in |
| | | | | determining acceleration-dependent speed. The parameter is to be |
| 1785 | 320 | 320 112 | 56 | set with the time allowed before a maximum cutting feedrate |
| | | | | (1432) is reached. A maximum cutting feedrate of 10000 mm/min |
| | | | | is used as the standard setting value. |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|------------------|-------------------------|---|
| | #6,#3 | |
| 1602#6,#3 | 1,0 | Acc./dec. after interpolation is of a linear type (if bell-shaped acc./dec. before interpolation is used) |
| | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (if linear-shaped acc./dec. before interpolation is used) |
| 1603#7 | 1 | Acc./dec. before interpolation is of a bell-shaped type (0: Linear-shaped acc./dec. before interpolation) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |
| 7052#0 | 0/1 | To be set to 1 for the PMC and Cs axes. |
| 7053#0 | 0 | Al nano contour control (1: Al contour control is enabled.) |
| 7055#3 | 1/0 | To be set to 1 if a function of changing the time constant for bell-shaped acc./dec. before interpolation is to be used. |
| 7058 | 0 | To be set to standard value. |
| 7066 | mm / inch 10000/3937 | Reference speed (mm/min / inch/min) for a function of changing the time constant for bell-shaped acc./dec. before interpolation |

(5) High-precision contour control

| Parameter | Stand | lard setting | value | |
|-----------|------------------|---------------------|----------------------|--|
| No. | Standard setting | Speed priority l | Speed priority II | Description |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | - | - | - | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse for individual axes |
| 1621 | - | - | - | Time constant T2 (msec) for bell-shaped acc./dec. in rapid-traverse for individual axes |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 8400 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before interpolation |
| 8401 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate during acc./dec. before interpolation is reached |
| 8410 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent on speed difference at corners |
| 8416 | 64 | 48 | 32 | Time constant (msec) for bell-shaped acc./dec. before interpolation (portion with the time fixed) |
| 8470 | 320 | 112 | 56 | Parameter (msec) for determining an allowable acceleration in determining acceleration-dependent speed. The parameter is to be set with the time allowed before a maximum cutting feedrate (1432) is reached. A maximum cutting feedrate of 10000 mm/min is used as the standard setting value. |

Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|------------------|---------------------------|--|
| | #6,#3 | |
| 1602#6,#3 | 1,0 | Acc./dec. after interpolation is of a linear type (if bell-shaped acc./dec. before interpolation is used) |
| | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (if linear-shaped acc./dec. before interpolation is used) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |
| 7510 | - | Largest of controlled-axis numbers for which high precision contour control is performed |
| 8402#7,#1, | 1,1 | Acc./dec. before interpolation is of a bell-shaped type (with the acceleration |
| 1603#3 | 1 | change fixed) |
| 8402#4 | 0 | To be set to the standard setting value. |
| 8402#5 | 1 | To be set to the standard setting value. |
| 8403#7,#1, | 1,1 | No alarm is raised on an M, S, T, B, or rapid traverse command. |
| 8404#1,#0 | 1,1 | Rapid traverse is processed on the RISC side. |
| 8420 | 180 | Number of blocks to be looked ahead (0: 120 blocks) |
| 8451#0 | 1 | To be set to the standard setting value. |
| 8451#4 | 0/1 | Set this parameter to 1 if cutting load-dependent override is to be used. (This parameter is used if the mechanical rigidity of the Z-axis is low.) |
| 8456 | 80 | Region 2 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8457 | 70 | Region 3 override (%) for the cutting load-based deceleration function) (needn't be specified if bit 4 of parameter No. 8451 = 0) |

| D.PARAMETERS RELATED TO HIGH-SPEED AND HIGH PRECISION OPERATIONS APPENDIX B-65270EN/06 |
|--|
|--|

| Parameter No. | Standard setting value | Description |
|------------------|------------------------|---|
| 8458 | 60 | Region 4 override (%) for the cutting load-based deceleration function) (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8459#0 | 0 | To be set to the standard setting value. |
| 8459#1 | 1 | To be set to the standard setting value. |
| 8475#2 | 1 | Automatic deceleration at corners is enabled. |
| 8475#3 | 1 | Acceleration-dependent determination of speed during arc interpolation is enabled. |
| 8480#4 | 0/1 | To be set to 1 if the software series on the RISC side is B435. Otherwise, to be reset to 0. |
| 8480#5 | 0 | To be set to the standard setting value. |
| 8480#6 | 0 | To be set to the standard setting value. |
| 8485#0 | 1/0 | Scaling/coordinate system rotation in high precision contour control mode is enabled/disabled. (An option is necessary.) |
| 8485#1 | 1/0 | A canned cycle in high precision contour control mode is enabled/disabled. (An option is necessary.) |
| 8485#2 | 1/0 | A helical interpolation in high precision contour control mode is enabled/disabled. (An option is necessary.) |
| 8485#4 | 1/0 | A involute interpolation in high precision contour control mode is enabled/disabled. (An option is necessary.) |
| 8485#5 | 1/0 | A smooth interpolation in high precision contour control mode is enabled/disabled. (An option is necessary.) |

(6) Al high precision contour control, Al nano high precision contour control

| Parameter | Stand | lard setting | value | |
|-----------|------------------|---------------------|----------------------|---|
| No. | Standard setting | Speed priority I | Speed priority II | Description |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | - | - | - | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse for individual axes |
| 1621 | - | - | - | Time constant T2 (msec) for bell-shaped acc./dec. in rapid-traverse for individual axes |
| 1768 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 8400 | 10000 | 10000 | 10000 | Maximum cutting feedrate (mm/min) during acc./dec. before interpolation |
| 19510 | 240 | 80 | 40 | Time (msec) allowed before a maximum cutting feedrate is reached for an individual axis during acc./dec. before interpolation. If this parameter is 0, a setting in parameter No. 8401 is used. |
| 8410 | 400 | 500 | 1000 | Allowable speed difference (mm/min) in acceleration-dependent on speed difference at corners |
| 8416 | 64 | 48 | 32 | Time constant (msec) for bell-shaped acc./dec. before interpolation (portion with the time fixed) |
| 8470 | 320 | 112 | 56 | Parameter (msec) for determining an allowable acceleration in determining acceleration-dependent speed. The parameter is to be set with the time allowed before a maximum cutting feedrate (1432) is reached. A maximum cutting feedrate of 10000 mm/min is used as the standard setting value. |

- Parameters that need tuning based on the machine type

| Parameter No. | Standard setting value | Description |
|------------------|------------------------|--|
| | #6,#3 | |
| 1602#6,#3 | 1,0 | Acc./dec. after interpolation is of a linear type (if bell-shaped acc./dec. before interpolation is used) |
| | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (if linear-shaped acc./dec. before interpolation is used) |
| 1802#7 | 0/1 | To be set to 1 if the CMR setting is 2 or greater (parameter No. 1820 setting is 4 or greater). |
| 7510 | - | Largest of controlled-axis numbers for which high precision contour control is performed |
| 8402#7,#1 | 1,1 | Acc./dec. before interpolation is of a bell-shaped type (with the acceleration change fixed) |
| 8403#1 | 1 | No alarm is raised on an M, S, T, B, or rapid traverse command. |
| 8451#4 | 0/1 | Set this parameter to 1 if cutting load-dependent override is to be used. (This parameter is used if the mechanical rigidity of the Z-axis is low.) |
| 19516 | 80 | Region 1 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8456 | 80 | Region 2 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8457 | 70 | Region 3 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8458 | 60 | Region 4 override (%) for the cutting load-based deceleration function) (needn't be specified if bit 4 of parameter No. 8451 = 0) |
| 8480#4 | 0 | To be set to the standard setting value. |

| D.PARAMETERS RELATED TO HIGH-SPEED AND HIGH PRECISION OPERATIONS | APPENDIX | B-65270EN/06 |
|--|----------|--------------|
| BIT AT WELLER THE THE THE THE THE THE THE THE THE CONTENT OF ERVITIONE | | D 00210L100 |

| Parameter No. | Standard setting value | Description |
|------------------|-------------------------|--|
| 8480#5 | 0 | To be set to the standard setting value. |
| 8480#6 | 0 | To be set to the standard setting value. |
| 19501#6 | 1/0 | To be set to 1 if a function of changing the time constant for bell-shaped acc./dec. before interpolation is to be used. |
| 19504#0 | 1 | Bell-shaped rapid traverse acc./dec. is used. |
| 19520 | mm / inch 10000/3937 | Reference speed (mm/min / inch/min) for a function of changing the time constant for bell-shaped acc./dec. before interpolation |
| 19600#0 | 0/1 | Scaling is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |
| 19600#1 | 0/1 | Programmable mirror image is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |
| 19600#2 | 0/1 | Rotary dynamic fixture offset is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |
| 19600#3 | 0/1 | Coordinate rotation is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |
| 19600#4 | 0/1 | Three-dimensional coordinate conversion is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |
| 19600#5 | 0/1 | Cutter compensation C is performed on the CNC side or, as 5-axis control mode, on the RISC side. (An option is necessary.) |

D.1.3 Series 30*i*/31*i*/32*i*-A, 31*i*-A5

[Functions related to high-speed and high precision operations]

| ł | High-speed and high precision function | Al contour control I | Al contour control II ^(Note 1) | AI contour control II + High-speed processing ^(Note 2) | | |
|----|---|-------------------------|---|---|--|--|
| S | eries30 <i>i</i> -A | 0 | 0 | 0 | | |
| S | eries31 <i>i</i> -A/A5 | 0 | 0 | 0 | | |
| S | eries32 <i>i</i> -A | 0 | 0 | × | | |
| Ac | c./dec. before interpolation | | | | | |
| | Туре | Linear/ Bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped | Linear/ Bell-shaped/ Smooth bell-shaped | | |
| | Acceleration setting for each axis | 0 | 0 | 0 | | |
| Ve | locity control | | | | | |
| | Velocity control by speed difference among axes | 0 | 0 | 0 | | |
| | Velocity control by acceleration in circular interpolation | 0 | 0 | 0 | | |
| | Acceleration-based velocity control | 0 | 0 | 0 | | |
| | Cutting load-based velocity control | × | 0 | 0 | | |
| | Jerk control | × | 0 | 0 | | |
| | Optimum torque acc./dec. | 0 | 0 | 0 | | |
| Ot | Other functions | | | | | |
| 1 | Nano interpolation | 0 | 0 | 0 | | |
| | 5-axis machining functions (Note 3) | 0 | 0 | 0 | | |
| 1 | Smooth interpolation (Note 4) | 0 | 0 | 0 | | |
| 1 | NURBS (Note 4) | 0 | 0 | 0 | | |
| | Nano smoothing (Note 4) | 0 | 0 | 0 | | |

NOTE

- 1 In FS30*i* systems controlling more than four paths and more than 20 axes, this function cannot be used.
- 2 In FS30*i* and FS31*i* systems controlling more than two paths and more than 12 axes, this function cannot be used.
- 3 These functions can be used with the FS30*i*-A and FS31*i*-A5 only.
- 4 These functions cannot be used with the FS32*i*.

[Parameters]

Described below are the parameters that must be specified for individual high-speed and high precision cutting machines separately. Use the standard setting values included in the parameter tables as reference data for initialization. If a parameter needs tuning based on the machine type, determine a final setting for the parameter according to the characteristic of the machine and how to use it.

- Standard settings (precision priority) When there is vibration or significant impact, or when machining is to be performed more precisely, make settings based on the standard settings.
- Cutting time-first setting To reduce machining time, make settings for speed priority I then for speed priority II in stages. The settings for speed priority II can reduce much more machining time than the settings for speed priority I.

(1) AI high precision contour control, AI nano high precision contour control

| Parameter | Stand | Standard setting value | | |
|-----------|------------------|------------------------|----------------------|---|
| No. | Standard setting | Speed priority I | Speed priority II | Description |
| 1432 | - | - | - | Maximum cutting feedrate (mm/min) for individual axes |
| 1620 | - | - | - | Time constant (msec) for linear-shaped acc./dec. in rapid-traverse for individual axes |
| 1621 | - | - | - | Time constant T2 (msec) for bell-shaped acc./dec. in rapid-traverse for individual axes |
| 1769 | 24 | 16 | 16 | Time constant (msec) for acc./dec. after cutting feed interpolation |
| 1660 | 700.0 | 2000.0 | 4000.0 | Acceleration in acc./dec. before interpolation (for constant-acceleration part) (Acceleration is specified in mm/sec ² for individual axes.) |
| 1772 | 64 | 48 | 32 | Time constant of bell-shaped acc./dec. before interpolation (msec) (for constant-acceleration part) |
| 1783 | 400.0 | 500.0 | 1000.0 | Allowable speed difference (mm/min) in acceleration-dependent on speed difference at corners |
| 1737 | 525.0 | 1500.0 | 3000.0 | Permissible acceleration in deceleration by acceleration (Acceleration is specified in mm/sec ² for individual axes.) |
| 1735 | 525.0 | 1500.0 | 3000.0 | Permissible acceleration in deceleration by acceleration in circular interpolation (Acceleration is specified in mm/sec ² for individual axes.) |

- Parameters that need tuning based on the machine type

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. | Standard setting value | Description |
|------------------|-----------------------------|--|
| | #6,#3 | |
| 1602#6,#3 | 1,0 | Acc./dec. after interpolation is of a linear type |
| | 1,1 | Acc./dec. after interpolation is of a bell-shaped type (Note 1) |
| 7055#3 | 1/0 | To be set to 1 if a function of changing the time constant for bell-shaped acc./dec. before interpolation is to be used. |
| 7066 | mm / inch 10000.0/3937.0 | Reference speed (mm/min / inch/min) for a function of changing the time constant for bell-shaped acc./dec. before interpolation |
| 19503#0 | 0/1 | When using smooth velocity control as velocity control by acceleration, set 1. (Note 2) |
| 8451#4 | 0/1 | Set this parameter to 1 if cutting load-dependent override is to be used. (This parameter is used if the mechanical rigidity of the Z-axis is low.) ^(Note 2) |
| 19515#1 | 0/1 | When using the slant type for override by cutting load, set 1. (Note 2) |
| 19516 | 80 | Region 1 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. 8451 or bit 1 of parameter No. 19515 = 0) $^{(Note 2)}$ |
| 8456 | 80 | Region 2 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. $8451 = 0$) (Note 2) |
| 8457 | 70 | Region 3 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. $8451 = 0$) (Note 2) |
| 8458 | 60 | Region 4 override (%) for the cutting load-based deceleration function (needn't be specified if bit 4 of parameter No. $8451 = 0$) (Note 2) |

NOTE

1 To perform bell-shaped acc./dec. after cutting feed interpolation, the option for bell-shaped acc./dec. after cutting feed interpolation is required.

2 These functions cannot be used with AI contour control I.

D.2 SERVO PARAMETERS RELATED TO HIGH-SPEED AND HIGH PRECISION OPERATIONS

Described below are the servo parameters that need setting and tuning for high-speed and high precision operations.

To specify parameters, follow this procedure.

- 1. First specify one of items (1) to (3) about fixed parameters that are dependent on the CNC model and mode to be used.
- 2. Specify item (4) about parameters to be tuned in common to all CNC models and modes. (See Chapters 3 and 4 of this parameter manual for explanations about how to tune the parameters and detailed descriptions of the related functions.)
- 3. If you want to use SERVO HRV control, specify item (5).

(1) When HRV2 and fine ACC./Dec. is used (Series 16i/18i/21i/20i/0i)

- Using advanced preview control in the Series 16*i*/18*i*/21*i*
- Using AI advanced preview control in the Series 21*i*/20*i*/0*i* (servo software Series 90B0)

For the above cases, make the following settings for using HRV2 control and fine acc./dec.

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. FS16 <i>i</i> , etc. | Standard setting value | Description |
|---------------------------------------|--------------------------------------|--|
| 2003#3 | 1 | Enables PI control function |
| 2003#5 | 1 | Enables backlash acceleration |
| 2004 | 0X000011 (Note 1) | HRV2 current control |
| 2005#1 | 1 | Enables feed-forward |
| 2006#4 | 1 | Uses the latest feedback data for velocity feedback. |
| 2007#6 | 1 | Enables FAD (Fine acc./dec.) |
| 2015#6 | 1 | Enables stage-2 backlash acceleration. |
| 2016#3 | 1 | Enables variable proportional gain in the stop state |
| 2017#7 | 1 | Enables velocity loop high cycle management function |
| 2018#2 | 1 | Changes the second override format for stage-2 backlash |
| 2010#2 | 1 | acceleration. |
| 2040 | Standard parameter for HRV2 (Note 2) | Current integral gain |
| 2041 | Standard parameter for HRV2 (Note 2) | Current proportional gain |
| 2092 | 10000 | Advanced preview (position) feed-forward coefficient |
| 2110 | 2 (detection unit of 1 μm) | For variable proportional gain function in the stop state : |
| 2119 | 20 (detection unit of 0.1µm) | judgment level for stop state (specified in detection units) |
| 2146 | 50 | Stage-2 backlash acceleration end timer |
| 2202#1 | 1 | Cutting/rapid traverse velocity loop gain variable |
| 2209#2 | 1 | Enables FAD of linear type. |

NOTE

- 1 Keep the bit indicated with X (bit 6) at the standard setting.
- 2 For motors not supporting the HRV2 standard parameters, change the parameter settings to the settings for HRV2 according to the instructions described in Section G.4.

- Parameters whose settings must be changed according to the size of the machine but needn't tuning once set up

| | Standard setting value | | value | |
|---------------|------------------------|---------------------|----------------------|-------------------|
| Parameter No. | Standard setting | Speed priority I | Speed priority II | Description |
| 2109 | 24 | 16 | 16 | FAD time constant |

(2) When HRV2 is used, but fine acc./dec. is not (Series 30*i*/31*i*/32*i*/15*i*/16*i*/18*i*/21*i*/0*i*)

When using AI contour control I, AI contour control II, look-ahead acc./dec. before interpolation, Fine HPCC, AI nano high precision contour control, AI high precision contour control, AI nano contour control, AI contour control, or high precision contour control, make the following settings.

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. FS30 <i>i</i> ,16 <i>i</i> , etc. FS15 <i>i</i> | Standard setting value | Description |
|---|--|--|
| 2003#3 1808#3 | 1 | Enables PI control function |
| 2003#5 1808#5 | 1 | Enables backlash acceleration |
| 2004 1809 | 0X000011 ^(Note 1) | HRV2 current control |
| 2005#1 1883#1 | 1 | Enables feed-forward |
| 2006#4 1884#4 | 1 | Uses the latest feedback data for velocity feedback. |
| 2015#6 1957#6 | 1 | Enables two-stage backlash acceleration |
| 2016#3 1958#3 | 1 | Enables variable proportional gain in the stop state |
| 2017#7 1959#7 | 1 | Enables velocity loop high cycle management function |
| 2018#2 1960#2 | 1 | Changes the second override format for stage-2 backlash acceleration. |
| 2040 1852 | Standard parameter for HRV2 (Note 2) | Current integral gain |
| 2041 1853 | Standard parameter for HRV2 (Note 2) | Current proportional gain |
| 2092 1985 | 10000 | Advanced preview (position) feed-forward coefficient |
| 2119 1730 | 2 (detection unit of 1 μ m) 20 (detection unit of 0.1 μ m) | For variable proportional gain function in the stop state : judgment level for stop state (specified in detection units) |
| 2146 1769 | 50 | Stage-2 backlash acceleration end timer |
| 2202#1 1742#1 | 1 | Cutting/rapid traverse velocity loop gain variable |

NOTE

- 1 Keep the bit indicated with X (bit 6) at the standard setting.
- 2 For motors not supporting the HRV2 standard parameters, change the parameter settings to the settings for HRV2 according to the instructions described in Section G.4.

(3) When using HRV1 and FAD (Series 21*i*/0*i*)

To use AI advanced preview control in the Series 21i/0i (servo software Series 9096), make the following settings for using HRV1 control and fine acc./dec.

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. FS21 <i>i</i> | Standard setting value | Description |
|--------------------------------|---|---|
| 2003#3 | 1 | Enables PI control function |
| 2003#5 | 1 | Enables backlash acceleration |
| 2004 | Standard parameter for HRV1 | HRV1 current control |
| 2005#1 | 1 | Enables feed-forward |
| 2006#4 | 1 | Uses the latest feedback data for velocity feedback. |
| 2007#6 | 1 | Enables FAD (Fine acc./dec.) |
| 2015#6 | 1 | Enables two-stage backlash acceleration |
| 2016#3 | 1 | Enables variable proportional gain in the stop state |
| 2017#7 | 1 | Enables velocity loop high cycle management function |
| 2018#2 | 1 | Changes the second override format for stage-2 backlash acceleration. |
| 2040 | Standard parameter for HRV1 | Current integral gain |
| 2041 | Standard parameter for HRV1 | Current proportional gain |
| 2092 | 10000 | Advanced preview (position) feed-forward coefficient |
| 2119 | 2 (detection unit of 1 μ m) 20 (detection unit of 0.1 μ m) | For variable proportional gain function in the stop state : judgment level for stop state (specified in detection units) |
| 2146 | 50 | Stage-2 backlash acceleration end timer |
| 2202#1 | 1 | Cutting/rapid traverse velocity loop gain variable |
| 2209#2 | 1 | Enables FAD of linear type. |

- Parameters whose settings must be changed according to the size of the machine but needn't tuning once set up

| | Standard setting value | | | |
|---------------|------------------------|---------------------|----------------------|-------------------|
| Parameter No. | Standard setting | Speed priority I | Speed priority II | Description |
| 2109 | 24 | 16 | 16 | FAD time constant |

(4) Parameters common to all CNC models (requiring tuning)

| Parameter No. FS30 <i>i</i> ,16 <i>i</i> , etc. | Setting at tuning start | Description | Items to be referenced in tuning |
|---|--|---|---|
| FS15 <i>i</i> 2021 1875 | 300 | Load inertia ratio (velocity gain) * When the cutting/rapid velocity gain switching function is used, this parameter is applied to rapid traverse. | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. \rightarrow See 3.3.1(6) |
| 2107 1700 | 150 | Cutting load inertia ratio override (in % units) * When the cutting/rapid velocity gain switching function is used, the gain magnified by this parameter setting is applied to cutting. | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. \rightarrow See 3.3.1(6) and 4.3. |
| 1825 | Standard: 3000 Speed priority I: 5000 Speed priority II: 10000 | Position gain | After determining the velocity loop gain, find the upper limit of the range in which hunting (low frequency vibration) does not occur. \rightarrow See 3.3.1(6). |
| 2069 1962 | Standard: 50 When nano interpolation is used, see Note 2. 200 | Velocity feed-forward coefficient | Make adjustment while observing the shape of rounded corners. \rightarrow See 3.3.1(11). |
| 2047 1859 | Standard parameter | Observer parameter | Make adjustment while observing estimated disturbance value on the check board. \rightarrow See 4.12.1. |
| 2087 1980 | 0 | Torque offset | Make adjustment while measuring positive and negative torque commands at a constant low feedrate. |
| 2048 1860 | 30 | Stage-1 acceleration amount for 2-stage backlash acceleration | Make adjustment while observing the quadrant protrusion size. \rightarrow See 4.6.7. |
| 2039 1724 | 100 | 2nd-stage acceleration amount | Make adjustment while observing the quadrant protrusion size. |
| 2082 1975 | 10 | Stage-2 start distance (detection unit) | Make adjustment while observing the quadrant protrusion size. |
| 2089 1982 | 50 | Stage-2 end distance (set with a ratio to the start distance specified in 10% units) | Make adjustment while observing the quadrant protrusion size. |
| 2114 1725 | 10 | Stage-2 override | Make adjustment while observing the quadrant protrusion size. |

- Parameters requiring tuning for finding optimum values

NOTE

1 There is the following relationship between the load inertia ratio and velocity loop gain (%).

Velocity loop gain (%) = $(1 + \text{load inertia ratio}/256) \times 100$

2 The phrase "using nano interpolation" means using AI contour control I, AI contour control II, Fine HPCC, look-ahead acc./dec. before interpolation, AI nano high precision contour control, or AI nano contour control.

(5) Parameters common to all CNC models (parameters needed to use HRV3)

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. FS30 <i>i</i> ,16 <i>i</i> , etc. FS15 <i>i</i> | Standard setting value | Description |
|---|--------------------------------------|---|
| 2004 1809 | 0X000011 ^(Note 1) | HRV2 current control (in a mode other than high-speed HRV control) |
| 2013#0 1707#0 | 1 | In the G05.4Q1 command, high-speed HRV control (HRV3 current control) |
| 2202#1 1742#1 | 1 | Cutting/rapid velocity loop gain switching function |
| 2040 1852 | Standard parameter for HRV2 (Note 2) | Current integral gain |
| 2041 1853 | Standard parameter for HRV2 (Note 2) | Current proportional gain |
| 2334 2747 | 150 | Current loop gain magnification for high-speed HRV current control |

NOTE

- 1 Keep the bit indicated with X (bit 6) at the standard setting.
- 2 For motors not supporting the HRV2 standard parameters, change the parameter settings to the settings for HRV2 according to the instructions described in Section G.4.

- Parameters that need tuning

| Parameter No. FS30 <i>i</i> ,16 <i>i</i> , etc. FS15 <i>i</i> | Setting Description | | Items to be referenced in tuning |
|---|---------------------|---|---|
| 2107 1700 | 150 | Cutting load inertia ratio override (in % units) | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. |
| 2335 2748 | 200 | Cutting load inertia ratio override (in % units) when high-speed HRV current control is in use | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. |

(6) Parameters for Series 30*i* and 31*i* (parameters needed to use HRV4)

- Parameters that do not usually need tuning so often and can be left at fixed values

| Parameter No. FS30 <i>i</i> | Standard setting value | Description | | | | | |
|--------------------------------|-----------------------------|---|--|--|--|--|--|
| 2004 | 0X000011 (Note 1) | HRV3 current control (in a mode other than high-speed HRV control) | | | | | |
| 2014#0 | 1 | In the G05.4Q1 command, high-speed HRV control (HRV4 current control) | | | | | |
| 2300#0 | 1 | Extended HRV function | | | | | |
| 2202#1 | 1 | Cutting/rapid velocity loop gain switching function | | | | | |
| 2040 | Standard parameter for HRV2 | Current integral gain | | | | | |
| 2041 | Standard parameter for HRV2 | Current proportional gain | | | | | |
| 2334 | 150 | Current loop gain magnification for high-speed HRV current control | | | | | |

NOTE1 Keep the bit indicated with X (bit 6) at the standard setting.

- Parameters that need tuning

| Parameter No. FS30 <i>i</i> , etc. | Setting | Description | Items to be referenced in tuning |
|---------------------------------------|---------|---|--|
| 2107 | 150 | Cutting load inertia ratio override (in % units) | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. |
| 2335 | 200 | Cutting load inertia ratio override (in % units) when high-speed HRV current control is in use | While checking vibration at stop, abnormal sound during low-speed movement, vibration during high-speed rotation, and so on, find the vibration limit, and set about 70% of the limit. |

E

VELOCITY LIMIT VALUES IN SERVO SOFTWARE

(1) Overview

The feed axis velocity is subject to the feedrate limits that depend on the internal processing of the system itself and that of the servo software. These velocity limit values on the feed axis are explained below.

NOTE

The permissible speeds listed below do not take detector hardware limitations into account. For the maximum permissible speed of a detector itself, refer to the specifications of the detector.

(2) Velocity feedback (rotation speed) limit

The following limits apply to the rotation speed of motors according to the type of motor speed detector.

| Detector type | Resolution | Allowable rotation speed |
|------------------------|---|-------------------------------|
| ai Pulsecoder | 2 ²⁰ , 2 ²⁴ pulse/rev | 7500min ⁻¹ |
| HEIDENHAIN RCN220 | 2 ²⁰ pulse/rev | 7500min ⁻¹ |
| HEIDENHAIN RCN223, 723 | 2 ²³ pulse/rev | 937min ⁻¹ (HRV1,2) |
| HEIDENHAIN RCN727 | 2 ²⁷ pulse/rev | 1875min ⁻¹ (HRV3) |
| | | 3750min ⁻¹ (HRV4) |

Even if any of the above detectors is used as a position detector, the same speed limits as those given above apply as the speed limits on the detector.

* Limit values related to linear motors

If a linear motor is used, its speed detector is a linear scale. So, a velocity rather than a rotation speed is involved, but the same limits as stated above are applied.

| Detector type | Resolution | Allowable speed |
|---|--------------------|--|
| HEIDENHAIN LS486 (incremental) with high-resolution serial output circuit | 20/512 μm/pulse | 300m/min |
| Sony BS75A (incremental) with high-resolution serial output circuit | 0.1379/512 | 4.2m/min (HRV1,2) 8.4m/min (HRV3) 17m/min (HRV4) |
| HEIDENHAIN LC191F (absolute) | 0.1 μm/pulse | 786m/min |
| HEIDENHAIN LC491F (absolute) | 0.05 µm/pulse | 393m/min |

(3) Position feedback (axis feedrate) limits

The following feedrate limits may be applied according to each of the functions because of a weight on data that is handled in detection units within the servo software.

- When ordinary position control is exercised

(Series 15*i*-B, 16*i*-B, 18*i*-B, 21*i*-B, 20*i*-B, 0*i*-B/C, 0*i* Mate-B/C, Power Mate *i*)

| F | Allowabl | e feedrate | | | | |
|---|---|-------------------------------|------------------------------------|------------------------------------|--|--|
| Hi-speed and high precision function | Feed-forward Fine acc./dec. | | Detection unit of 1 μm | Detection unit of 0.1 μm | | |
| None | None | None | | IS-B : 196m/min IS-C : 100m/min | | |
| None | Performed (conventional type) | None | | 24m/min ^(*1) | | |
| None | Not performed/ performed (conventional type) | Performed | | | | |
| Advanced preview control | Performed (advanced preview type) | Not performed/ performed | IS-B : 240m/min IS-C : 100m/min | 98m/min | | |
| AI contour control High precision contour control | Performed (advanced preview type) | Automatically switched off | | | | |
| Al nano contour control Al high precision contour control Al nano high precision contour control | Performed (advanced preview type) | Automatically switched off | | 98m/min ^(*2) | | |
| Fine HPCC | Performed (advanced preview type) | Automatically switched off | IS-B : 999m/min IS-C : 100m/min | IS-B : 196m/min IS-C : 100m/min | | |
| Electric gear box | Performed (conventional type) | None | IS-B : 240m/min IS-C : 100m/min | 24m/min (*1) | | |

- When speed control based on a PMC axis is exercised using a position command

(Series 15i-B, 16i-B, 18i-B, 21i-B, 20i-B, 0i-B/C, 0i Mate-B/C, Power

Mate *i*)

| | Allowable feedrate | | | |
|---|---------------------------------|----------------------------------|--|--|
| Function used | Detection unit of 1/1000 deg | Detection unit of 1/10000 deg | | |
| PMC-axis-based speed control (position command) | 5461min ⁻¹ | 546min⁻¹ | | |

- When ordinary position control is exercised

(Series 30*i*,31*i*,32*i*)

| Fun | ction used | Allowable feedrate | | | | | | |
|---|---|--------------------------------|-----------------------------|------------------------------|-------------------------------|--|--|--|
| Hi-speed and high precision function | Feed-forward | Detection unit of 1 μm | Detection unit of 0.1 μm | Detection unit of 0.01 μm | Detection unit of 0.001 μm | | | |
| None | Not performed/ performed (advanced preview type) | IS-B:999m/min | IS-B:999m/min | IS-D:10m/min | IS-E:1m/min | | | |
| AI contour control I AI contour control II | Not performed/ performed (advanced preview type) | IS-C:100m/min | IS-C:100m/min | →100m/min(*3) | →100m/min(*3) | | | |
| Electric gear box | Performed (conventional type) | IS-B:240m/min IS-C:100m/min | 24m/min (*1) | 2.4m/min →100m/min(*3) | 0.24m/min →100m/min(*3) | | | |

- When rotary tool control based on a servo motor is used (Series 30*i* 31*i* 32*i*)

| (561165 567,517,527) | | | | | | | | |
|---|--|--|-----------------------------------|------------------------------------|--|--|--|--|
| Function used | | Allowable feedrate | | | | | | |
| Rotary tool control based on a servo motor | Detection unit of 1/1000 deg | Detection unit of 1/10000 deg | Detection unit of 1/100000 deg | Detection unit of 1/1000000 deg | | | | |
| Performed (No.1408#3=0) | IS-B:2777min ⁻¹ IS-C: 277min ⁻¹ | IS-B:2777min⁻ ¹ IS-C: 277min⁻ ¹ | IS-D:27min ⁻¹ | IS-E:2min ⁻¹ | | | | |
| Performed (No.1408#3=1) | IS-B:27777min ⁻¹ IS-C: 2777min ⁻¹ | IS-B:27777min ⁻¹ IS-C: 2777min ⁻¹ | IS-D:277min ⁻¹ | IS-E:27min ⁻¹ | | | | |

* In the table, the values enclosed in a box are the limits due to the internal processing of the servo software. For the limits due to the internal processing of the servo software, if CMR is increased to decrease the detection unit, the permissible feedrate decreases in proportion to the detection unit. (Reducing the detection unit from 0.1 μ m to 0.05 μ m causes the permissible feedrate to be halved.)

- * If a semi-closed system (rotary or linear motor) where a detector with a high resolution is used, using also nano interpolation enables these functions to be used for position control at the highest limit to the detector resolution even if the detection unit is not subdivided.
- ^{*} If you are using these functions with a larger detection unit because of feedrate limits placed by the detection units stated above, velocity feedback data that can seriously affect velocity loop control is used for control at the highest limit to the detector resolution.
 - (*1) If conventional feed-forward is used, the permissible feedrate is decreased.

To avoid this, take one of the following actions:

- Disable feed-forward when not using the high precision function.
- Use fine acc./dec. at the same time.
- (*2) For AI nano contour control, AI high precision contour control, and AI nano high precision contour control, the limit is 98 m/min on the NC and 196 m/min on the servo software. If CMR is increased to further decrease the detection unit, the feedrate limit on the NC is invariable, but the feedrate limit on the servo software decreases in proportion to the detection unit. If the detection unit is decreased, therefore, the feedrate limit will be the smaller one.

| Detection unit | Limit on the NC | Limit on the servo software |
|----------------|-----------------|-----------------------------|
| 0.1µm | 98m/min | 196m/min |
| 0.05µm | 98m/min | 98m/min |
| 0.02µm | 98m/min | 39m/min |
| 0.01µm | 98m/min | 19.6m/min |

- (*3) With the servo software and system software indicated below, the allowable feedrate value applicable when an increment system is selected from IS-D and IS-E is extended. A feedrate of up to 100 m/min can be specified with the increment system IS-D or IS-E by using matching servo software and system software and setting the following parameters:
 - Series and editions of applicable servo software (Series 30*i*,31*i*,32*i*)
 Series 90D0/J(10) and subsequent editions
 Series 90E0/J(10) and subsequent editions
 - Series and editions of applicable system software Series 30*i*-A:

Series G002, G012, and G022/04.0 and subsequent editions

Series 31i-A:

Series G101, G111/04.0 and subsequent editions Series 31i-A5:

Series G121, G131/04.0 and subsequent editions Series 32i-A:

Series G201/04.0 and subsequent editions (IS-E is not supported.)

• Parameter setting method

To extend the feedrate with the increment system IS-D or IS-E, both of parameter No. 1013 and No. 2282 must be set to 1. (The increment systems IS-D and IS-E are optional functions.)

| | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-----------------------|---|------|-----------|----------|----------|----------|-----------|------------|-------------|----|
| 1013 (FS30 <i>i</i>) | | IESP | | | | | | | | |
| IESP(#7 |) | When | the incre | ement sy | stem IS- | D or IS- | E is used | d, the fur | nction that | ıt |

When the increment system IS-D or IS-E is used, the function that can set a value range wider than the conventionally allowed one for speed and acceleration parameters is:

- 0: Not used.
- 1: Used.


With an axis for which this parameter is set, a value range wider than the conventionally allowed one can be set for parameters to be set in speed and acceleration units when the increment system IS-D or IS-E is selected.

Moreover, a movement can be made at a parameter-set speed.

The number of fractional digits displayed on the parameter input screen for an axis with this parameter set is also modified. When IS-D is used, the number of fractional digits is reduced by 1 from the conventional number of fractional digits. When IS-E is used, the number of fractional digits is reduced by 2 from the conventional number of fractional digits.

NOTE

When this parameter has been modified, the power must be turned off before operation is continued.

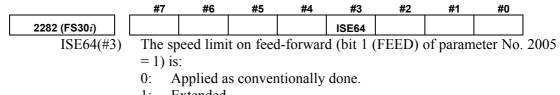

1: Extended.

When feed-forward is enabled, the speed limit on an axis for which this parameter is set is extended if the increment system is IS-D or IS-E. _

SERVO FUNCTIONS

| Servo software series | 9 | 9 | 99 | 9 | 9 | 9 | |
|--|---|---|----|---|---|---|-----------------------|
| | 0 | 0 | 00 | 0 | 0 | 0 | Reference items in |
| | 9 | В | ΒB | В | D | Е | this manual |
| Name of function | 6 | 0 | 65 | 1 | 0 | 0 | |
| [Servo initial setting] | _ | _ | | | | | |
| Flexible feed gear function | А | А | Α | Α | А | Α | 2.1 |
| Position feedback pulses conversion coefficient | - | А | А | А | А | А | 2.1.8 Supplementary 3 |
| Supporting a fraction in reference counter setting | - | А | А | А | Α | А | 2.1.3 |
| Supporting serial-type separate detectors | - | А | А | А | А | А | 2.1.4 |
| Supporting high-resolution serial output circuits H and C | - | Q | Α | А | А | А | 2.1.4 |
| Supporting linear motor position detection circuits H and C | - | Q | Α | А | А | А | 4.14.1 |
| Improving the reference counter when the RCN723 or RCN223 is used | - | Q | Α | А | А | Α | 2.1.4 |
| Supporting analog input separate detector interface unit | - | - | - | - | J | J | 2.1.5 |
| Supporting CZi sensor (serial separate detector) | - | А | А | А | А | А | 2.1.6 |
| Supporting CZ <i>i</i> sensor (synchronous built-in servo motor) | - | - | - | - | А | А | 2.1.6 |
| Supporting PWM distribution module (PDM) | - | - | - | А | - | - | 2.1.7 |
| Illegal parameter setting alarm detail output | А | А | Α | А | А | А | 2.1.8 |
| Automatic format change for position gain | - | А | А | А | А | А | 2.1.8 Supplementary 5 |
| Expanding the position gain setting range | А | А | Α | А | А | А | 2.1.8 Supplementary 5 |
| [Servo functions] | | | | | | | |
| SERVO HRV control | А | А | А | А | - | - | 4.1 |
| SERVO HRV2 control | - | Α | Α | Α | Α | А | 4.1.1 |
| SERVO HRV3 control (high-speed HRV current control) | - | Α | Α | Α | Α | А | 4.2.1 |
| SERVO HRV4 control (high-speed HRV current control) | - | I | - | - | А | - | 4.2.2 |
| Cutting/rapid velocity loop gain switching function | А | А | Α | А | А | Α | 4.3 |
| 1/2 PI is always enabled for cutting/rapid velocity gain | - | А | Α | Α | А | А | 4.3 |
| Upper limit to cutting/rapid velocity loop gain loop of 400% | - | А | Α | Α | А | Α | 4.3 |
| Velocity loop high cycle management function | А | А | Α | Α | А | Α | 4.4.1 |
| Supporting the tandem velocity loop high cycle management function | - | А | А | А | А | А | 4.4.1, 4.18.9 |
| Acceleration feedback function | А | А | А | А | А | А | 4.4.2 |
| Variable proportional gain function in the stop state | А | А | А | А | А | А | 4.4.3 |
| Variable proportional gain function in the stop state : supporting 50% | А | А | А | А | А | А | 4.4.3 |
| Variable proportional gain function in the stop state : supporting arbitrary | | А | ^ | А | ^ | ^ | 4.4.3 |
| magnification | - | А | A | А | А | А | 4.4.3 |
| Addition of N pulses suppression function | А | А | А | А | А | А | 4.4.4 |
| TCMD filter | А | А | А | А | А | А | 4.5.1 |
| TCMD filter (cutting/rapid) | А | А | А | А | А | А | 4.5.1 |
| Resonance elimination filter : stage 1 | - | А | А | А | А | А | 4.5.2 |
| Resonance elimination filter : stage 4 | - | J | А | А | А | А | 4.5.2 |
| Active resonance elimination filter | - | Ρ | А | А | А | А | 4.5.2 |
| Disturbance elimination filter | | А | Α | А | А | Α | 4.5.3 |
| Observer function | Α | Α | А | Α | А | Α | 4.5.4 |
| Observer function (with the disable function for observer in the stop state added) | А | А | А | А | А | А | 4.5.4 |
| Current loop 1/2 PI control function | А | А | А | А | А | Α | 4.5.5 |

B-65270EN/06

APPENDIX

F.SERVO FUNCTIONS

| Servo software series | 9 | 9 | 99 | 9 | 9 | 9 | |
|---|---|---|----|---|---|---|--------------------|
| | 0 | 0 | 00 | 0 | 0 | 0 | Reference items in |
| | 9 | в | ΒВ | в | D | Е | this manual |
| Name of function | 6 | 0 | 65 | 1 | 0 | 0 | |
| Current loop 1/2 PI control function always enabled | Α | А | Α | А | А | А | 4.5.5 |
| Current loop PI control function current control PI ratio variable | I | А | А | А | А | А | 4.5.5 |
| Vibration damping control function | А | А | А | А | А | А | 4.5.6 |
| Dual position feedback function | Α | А | А | А | А | А | 4.5.7 |
| Machine speed feedback function | Α | А | Α | Α | А | А | 4.5.8 |
| Machine speed feedback function (normalization) | Α | А | Α | Α | А | А | 4.5.8 |
| Feed-forward function | А | Α | Α | Α | А | А | 4.6.1 |
| Advanced preview feed-forward function | Α | Α | Α | Α | А | А | 4.6.2 |
| RISC feed-forward function | А | Α | Α | А | - | - | 4.6.3 |
| Feed-forward timing adjustment | А | Α | Α | Α | А | А | 4.6.5 |
| Feed-forward timing adjustment (for supporting FAD) | - | J | А | А | - | - | 4.6.5 |
| Cutting/rapid feed-forward switching function | - | В | А | Α | А | А | 3.4, 4.6.4 |
| Backlash acceleration function | А | Α | Α | Α | А | А | 4.6.6 |
| Supporting backlash acceleration override function | - | W | Α | Α | J | | 4.6.6 |
| Backlash acceleration stop function | А | Α | Α | Α | А | | 4.6.6 |
| 2-stage backlash acceleration function | А | А | Α | А | А | | 4.6.7 |
| 2-stage backlash acceleration function : second stage acceleration limit | - | J | А | А | А | | 4.6.7 |
| 2-stage backlash acceleration function : second stage acceleration | | | | | | | |
| direction-specific setting | - | J | A | А | A | А | 4.6.7 |
| Two-stage backlash acceleration function: second stage acceleration | | | | | | | |
| (type 2) | - | Х | A | А | А | А | 4.6.7 |
| Backlash acceleration function : enabled only for cutting | А | А | А | А | А | А | 4.6.7 |
| Backlash acceleration function : improvement on "enabled only for | | | | | | | |
| cutting" | - | С | A | А | А | А | 4.6.7 |
| Static friction compensation function | А | Α | Α | Α | А | А | 4.6.8 |
| Torsion preview control | - | W | А | А | - | - | 4.6.9 |
| Overshoot compensation function | А | Α | Α | Α | А | А | 4.7 |
| Overshoot compensation function type 2 | А | А | Α | А | А | | 4.7 |
| Position gain switching function | А | Α | А | Α | Α | | 4.8.1 |
| position gain switching function type 2 | А | А | Α | А | А | | 4.8.1 |
| Expanding the velocity setting range for high-speed positioning function | А | А | Α | А | А | | 4.8.1 |
| Low-speed integral function | А | А | Α | А | А | | 4.8.2 |
| Fine acc./dec. function | А | А | А | А | - | - | 4.8.3 |
| Cutting/rapid fine acc./dec. switching function | А | А | А | А | - | - | 3.4, 4.8.3 |
| Synchronization in rigid tapping mode when the FAD function is used | Α | A | A | Α | - | - | 4.8.3 |
| Serial feedback dummy function | - | A | A | A | А | А | 4.9.1 |
| Dummy function for separate detector | - | A | A | A | A | A | 4.9.1 |
| Brake control function | А | A | A | A | A | | 4.10 |
| Quick stop type 1 at emergency stop | A | A | A | A | A | A | 4.11.1 |
| Quick stop type 2 at emergency stop | A | A | A | A | A | | 4.11.2 |
| Lifting function against gravity at emergency stop | - | P | A | A | A | A | 4.11.3 |
| Quick stop function for hardware disconnection of separate detector | Ā | A | A | A | A | | 4.11.4 |
| Quick stop function at the OVC and OVL alarm | A | A | A | A | A | | 4.11.5 |
| Unexpected disturbance torque detection function | A | A | A | A | A | | 4.12.1 |
| | ~ | | ~ | ~ | ~ | A | 7.12.1 |
| Improvement on dynamic friction compensation for estimated disturbance | - | Е | А | Α | Α | A | 4.12.1 |
| 2-axes simultaneous retract function related to unexpected disturbance | _ | Е | А | А | А | Δ | 4.12.1 |
| torque detection | | Ľ | | | А | | 1.16.1 |

F.SERVO FUNCTIONS APPENDIX B-65270EN/06

| Servo software series | 9 | 9 | 99 | 9 | 9 | 9 | |
|---|---|----|----|---|---|---|--------------------|
| | 0 | 0 | 00 | 0 | 0 | 0 | Reference items in |
| | 9 | в | ВΒ | в | D | Е | this manual |
| Name of function | 6 | 0 | 65 | 1 | 0 | 0 | |
| Cutting/rapid unexpected disturbance torque detection switching | А | А | А | А | А | Δ | 4.12.2 |
| function | | | ~ | | | | |
| Current offset acquisition at an emergency stop | А | А | Α | А | А | | 4.13 |
| Supporting linear motors | А | А | Α | А | А | А | 4.14.1 |
| Expanding the AMR offset setting range for linear motors | - | С | Α | А | А | | 4.14.1 |
| Current gain internally 4 times function | - | А | Α | А | А | А | 4.14.1 |
| Function of changing the velocity loop proportional gain format | А | А | Α | А | А | А | 4.14.1 |
| Linear motor smoothing compensation | А | А | Α | А | А | А | 4.14.2 |
| Linear motor smoothing compensation : supporting direction-specific | _ | N | А | А | А | Δ | 4.14.2 |
| operations | - | IN | ~ | | | ~ | 4.14.2 |
| Torque control function type 1 | А | А | Α | А | А | А | 4.16 |
| Torque control function type 2 | А | А | Α | А | А | А | 4.16 |
| Tandem disturbance elimination control function | - | Α | Α | А | А | Α | 4.17 |
| Synchronous axes automatic compensation function | - | V | Α | А | - | - | 4.18 |
| Synchronous axes automatic compensation function (dead-band width) | - | - | - | А | - | - | 4.18 |
| Tandem disturbance elimination control function | А | А | А | А | А | А | 4.19 |
| Tandem control function (preload function) | А | А | Α | А | Α | Α | 4.19.1 |
| Tandem control function (damping compensation function) | А | А | Α | А | Α | Α | 4.19.2 |
| Tandem control function (velocity feedback average function) | А | А | А | А | А | А | 4.19.3 |
| Tandem control function (servo alarm 2-axes simultaneous monitor) | Α | А | А | А | А | А | 4.19.4 |
| Servo alarm 2-axes simultaneous monitor : supporting VRDY OFF | | С | А | А | А | ^ | 4.19.4 |
| invalidation | - | C | A | А | A | А | 4.19.4 |
| Tandem control function (motor feedback sharing function) | А | А | Α | А | Α | Α | 4.19.5 |
| Tandem control function (full-preload function) | А | А | А | А | А | А | 4.19.6 |
| Tandem control function (position feedback switching) | А | А | Α | А | А | А | 4.19.7 |
| Velocity loop integrator copy function | - | Ν | Α | А | А | А | 4.19.9 |
| Supporting SERVO GUIDE | А | F | А | А | С | С | 4.20 |
| Supporting SERVO GUIDE and tuning navigator | - | Т | А | А | С | С | 4.20 |
| Disturbance input function (frequency characteristic measurement) | I | А | А | А | - | - | Appendix H |
| High-speed data output to the check board | I | А | Α | Α | - | - | Appendix I |
| [CNC functions] | _ | _ | | _ | _ | _ | |
| Changing the check board output magnification for TCMD and SPEED | | NI | ^ | ^ | | | Annondiv |
| signals | - | Ν | A | A | - | - | Appendix I |
| Supporting PMC-based velocity loop gain override | А | А | Α | Α | А | А | |
| Supporting the EGB function | - | А | Α | Α | А | А | |
| Supporting the high-speed response function | - | Α | Α | Α | А | Α | |
| Supporting nano interpolation | - | А | А | А | А | А | |

G PARAMETERS FOR α AND OTHER SERIES

The motor ID numbers necessary to automatically set parameters for the α series, β series, and conventional linear motors are explained below.

Search for the motor ID number of the motor used, based on the motor model and the drawing number (4-digit number in the middle of A06B-****-B***).

NOTE

The motor ID numbers for consecutive (odd and even) servo controlled axis numbers must be for one of servo HRV1, servo HRV2, or servo HRV3.

G.1 MOTOR ID NUMBERS OF α SERIES MOTORS

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------|------------------------|--------------|------|------|
| α1/3000 | 0371 | 61 | Α | А |
| α2/2000 | 0372 | 46 | Α | А |
| α2/3000 | 0373 | 62 | Α | А |
| α3/3000 | 0123 | 15 | Α | А |
| α6/2000 | 0127 | 16 | Α | А |
| α6/3000 | 0128 | 17 | Α | А |
| α12/2000 | 0142 | 18 | Α | А |
| α12/3000 | 0143 | 19 | Α | А |
| α22/1500 | 0146 | 27 | Α | А |
| α22/2000 | 0147 | 20 | Α | А |
| α22/3000 | 0148 | 21 | Α | А |
| α30/1200 | 0151 | 28 | Α | А |
| α30/2000 | 0152 | 22 | Α | А |
| α30/3000 | 0153 | 23 | Α | А |
| α40/2000 | 0157 | 30 | Α | А |
| α40/2000FAN | 0158 | 29 | Α | А |
| α65/2000 | 0331 | 39 | Α | А |
| α100/2000 | 0332 | 40 | Α | А |
| α150/2000 | 0333 | 41 | Α | А |
| α300/1200 | 0135 | 113 | Α | А |
| α300/2000 | 0137 | 115 | Α | А |
| α400/1200 | 0136 | 114 | Α | А |
| α400/2000 | 0138 | 116 | Α | А |
| α1000/2000 | 0131 | 117 | S | S |

\blacksquare α series servo motor

The motor ID numbers are for servo HRV1.

αM series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------------|------------------------|---------------------|------|------|
| α/3000 | 0376 | 98 | А | А |
| αM2.5/3000 | 0377 | 99 | А | А |
| α M 3/3000 | 0161 | 24 | А | А |
| αM6/3000 | 0162 | 25 | А | А |
| αM9/3000 | 0163 | 26 | А | А |
| αM22/3000 | 0165 | 100 | А | А |
| αM30/3000 | 0166 | 101 | А | А |
| α M40/3000 | 0169 | 110 | А | А |
| αM40/3000FAN | 0170 | 108 (360-A driving) | А | А |
| awi40/3000FAN | 0170 | 109 (240-A driving) | А | А |

The motor ID numbers are for servo HRV1.

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

aL series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------|------------------------|--------------|------|------|
| αL3/3000 | 0561 | 68 | А | А |
| αL6/3000 | 0562 | 69 | Α | А |
| αL9/3000 | 0564 | 70 | А | А |
| αL25/3000 | 0571 | 59 | Α | А |
| αL50/2000 | 0572 | 60 | Α | A |

The motor ID numbers are for servo HRV1.

αC series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------|------------------------|--------------|------|------|
| α/2000 | 0121 | 7 | А | А |
| αC6/2000 | 0126 | 8 | А | А |
| αC12/2000 | 0141 | 9 | А | А |
| αC22/1500 | 0145 | 10 | А | А |

The motor ID numbers are for servo HRV1.

HV series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------|------------------------|--|------|------|
| α3/3000HV | 0171 | 1 | А | А |
| α6/3000HV | 0172 | 2 | А | А |
| α12/3000HV | 0176 | 3 | А | А |
| α22/3000HV | 0177 | 4 (40-A driving) 102 (60-A driving) | А | А |
| α30/3000HV | 0178 | 5 (40-A driving) 103 (60-A driving) | А | А |
| α40/3000HV | 0179 | 118 | А | Α |

The motor ID numbers are for servo HRV1.

MHV series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|---------------------|------------------------|--------------|------|------|
| αM6/3000HV | 0182 | 104 | А | А |
| αM9/3000HV | 0183 | 105 | А | А |
| α M22/3000HV | 0185 | 106 | А | А |
| α M30/3000HV | 0186 | 107 | А | А |
| αM40/3000HV | 0189 | 119 | А | Α |

The motor ID numbers are for servo HRV1.

G.2 MOTOR ID NUMBERS OF β SERIES MOTORS

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-----------------|------------------------|-------------------|------|------|
| β0.5/3000 | 0113 | 14 (20-A driving) | Ν | D |
| β1/3000 | 0031 | 11 (20-A driving) | Ν | D |
| β2/3000 | 0032 | 12 (20-A driving) | Ν | D |
| β3/3000 | 0033 | 33 | А | А |
| β 6/2000 | 0034 | 34 | А | А |

β series servo motor

The motor ID numbers are for servo HRV1.

βM series servo motor

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|--------------------|------------------------|--------------|------|------|
| β M0.2/4000 | 0111 | * (260) | Ν | * |
| β M0.3/4000 | 0112 | * (261) | Ν | * |
| β M0.4/4000 | 0114 | * (280) | Ν | * |
| β M0.5/4000 | 0115 | 181(281) | Ν | D |
| β M1/4000 | 0116 | 182(282) | Ν | D |

The motor ID numbers not enclosed in parentheses are for servo HRV1, and the motor ID numbers enclosed in parentheses are for servo HRV2 and HRV3.

* For β M0.2, β M0.3, and β M0.4, HRV1 control cannot be used. It cannot, therefore, be used in Series 9096.

(Reference)

In the parameter table in item 4, two motor ID numbers are assigned to the same β series servo motor. One of them is the parameter for driving the motor with an α/β series servo amplifier (12A). Use caution not to use the wrong type number.

| | α servo ar | nplifier drive | αi servo amplifier drive | | | |
|-----------------|-------------------------------------|----------------|-------------------------------------|--------------|--|--|
| Motor model | Maximum amplifier current [A] | Motor ID No. | Maximum amplifier current [A] | Motor ID No. | | |
| β0.5/3000 | 12 | 13 | 20 | 14 | | |
| β 1/3000 | 12 | 35 | 20 | 11 | | |
| β 2/3000 | 12 | 36 | 20 | 12 | | |

G.3 MOTOR ID NUMBERS OF CONVENTIONAL LINEAR MOTORS

| Motor model | Motor specification | Motor ID No. | 90B0 | 9096 |
|-------------|------------------------|---------------------|------|------|
| 300D/4 | 0421 | 124 | Α | А |
| 600D/4 | 0422 | 125 | Α | А |
| 900D/4 | 0423 | 126 | Α | А |
| 1500A/4 | 0410 | 90 | Α | А |
| 3000B/2 | 0411 | 91 | Α | А |
| 3000B/4 | 0411-B811 | 120 | Α | А |
| 6000B/2 | 0412 | 92 | Α | А |
| 6000B/4 | 0412-B811 | 127 (160-A driving) | R | D |
| 9000B/2 | 0413 | 128 (160-A driving) | Ν | D |
| 9000B/4 | 0413-B811 | 129 (360-A driving) | Q | D |
| 15000C/2 | 0414 | 130 (360-A driving) | Q | D |
| 15000C/3 | 0414-B811 | 123 | Α | А |

Linear motor

The motor ID numbers are for servo HRV1. Loading is possible with the servo software of the series and edition listed above or subsequent editions.

(Reference)

In the parameter table in item 4, two motor ID numbers are assigned to the same linear motor. One of them is the parameter for driving the motor with an α series servo amplifier (130A or 240A). Use caution not to use the wrong type number.

| | α servo a | mplifier drive | α <i>i</i> servo a | mplifier drive |
|----------------|-------------------------------------|----------------|-------------------------------------|----------------|
| Motor model | Maximum amplifier current [A] | Motor ID No. | Maximum amplifier current [A] | Motor ID No. |
| 6000B/4 | 240 | 121 | 160 | 127 |
| 9000B/2 | 130 | 93 | 160 | 128 |
| 9000B/4 | 240 | 122 | 360 | 129 |
| 15000C/2 | 240 | 94 | 360 | 130 |


G.4 PARAMETERS FOR SERVO HRV2 CONTROL

By converting parameter settings as shown below, servo HRV1 control parameters can be changed to parameters for servo HRV2 control.

NOTE

This section explains the conversion method to be applied when only servo HRV1 control parameters are provided. For motors for which servo HRV2 control parameters are provided, use these servo HRV2 control parameters.

<1> To set the current control period to 125 µs, set the following:

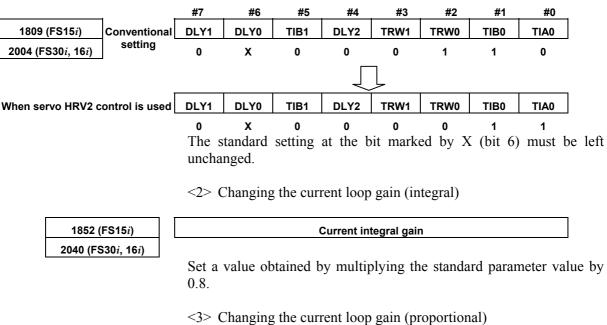

| 1853 (FS15 <i>i</i>) | Current proportional gain |
|-----------------------|---------------------------|
| | ourient proportional gain |

Set a value obtained by multiplying the standard parameter value by 1.6.

G.5 HRV1 CONTROL PARAMETERS FOR α SERIES, β SERIES, AND CONVENTIONAL LINEAR MOTORS

The HRV1 control parameters for the α series, β series, and conventional linear motors are given in the table below. 9096 series 90B0 series

G.PARAMETERS FOR α AND OTHER SERIES APPENDIX

B-65270EN/06

| Querchard | Motor mo Motor specificat Motor ID | tion No. | α 3HV 0171 1 | α6HV 0172 2 | α 12HV 0176 3 | α22HV 0177 (40A) 4 | α 30HV 0178 (40A) 5 | αC3 0121 7 | αC6 0126 8 | αC12 0141 9 | α C22 0145 10 | β 1/3 0031 (20A) 11 | β 2/3 0032 (20A) 12 |
|---|---|---|--|---|---|---|---|---|---|---|---|---|--|
| Symbol | FS15 <i>i</i> I 1808 1809 1883 1884 1951 1952 1953 1954 1955 1956 1707 1708 1750 | FS16 <i>i</i> ,ef 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 2014 2210 | C. 00001000 01000110 00000000 01000100 | 00001000 01000110 01000100 0000000 000000 | 00001000 01000110 01000100 0000000 000000 | 00001000 01000100 01000100 0000000 000000 | 00001000 01000100 01000100 0000000 000000 | 00001000 00000110 01000100 0000000 000000 | 00001000 00000110 01000100 0000000 000000 | 00001000 00000110 01000000 0000000 000000 | 00001000 00000110 01000000 0000000 000000 | 00001000 00000110 01000000 0000000 000000 | 00001000 0000010 01000000 0000000 000000 |
| PK1 PK2 | 1751 2713 2714 1852 1853 | 2210 2211 2300 2301 2040 2041 | 00000000 00000000 00000000 687 -2510 | 00000000 00000000 00000000 828 -3129 | 00000000 00000000 00000000 730 -3038 | 00000000 00000000 00000000 800 -3190 | 00000000 00000000 00000000 1100 -3886 | 00000000 00000000 00000000 1600 -5059 | 00000000 00000000 00000000 1800 -6105 | 00000000 00000000 00000000 3000 -9750 | 00000000 00000000 00000000 2330 -6831 | 00000000 00000000 00000000 598 -1882 | 00000000 00000000 00000000 1173 -4002 |
| PK3 PK1V PK2V | 1854 1855 1856 | 2042 2043 2044 | -2617 107 -955 | -2638 127 -1141 | -2638 188 -1683 | -2694 271 -2426 | -2663 293 -2625 | -2608 107 -955 | -2641 127 -1140 | -2687 251 -2245 | -2694 271 -2426 | -2564 61 -550 | -2596 37 -667 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 3972 0 | 0 -8235 3326 0 | 0 -8235 2254 0 | 0 -8235 1564 0 | 0 -8235 1446 0 | 0 -8235 3974 0 | 0 -8235 3329 0 | 0 -8235 1690 0 | 0 -8235 1564 0 | 0 -8235 -690 0 | 0 -8235 5692 0 |
| DPFMX POK1 POK2 RESERV | 1861 1862 1863 1864 | 2049 2050 2051 2052 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 |
| PPMAX PDDP PHYST EMFCMP PVPA PALPH PPBAS | 1865 1866 1867 1868 1869 1870 1871 | 2053 2054 2055 2056 2057 2058 2059 | 21 3787 319 2500 2200 70 5 | 21 3787 319 4000 -7692 -1920 5 | 21 3787 319 -12840 -6925 -2832 5 | 21 3787 319 3500 -6671 -3000 5 | 21 3787 319 4000 -4113 -3400 5 | 21 1894 319 3046 -6405 -250 5 | 21 1894 319 4381 -3858 -2500 5 | 21 1894 319 4000 -3094 -4000 5 | 21 1894 319 4000 -3872 -2800 5 | 21 1894 319 2500 2100 43 5 | 21 1894 319 3300 -10246 -960 5 |
| TQLIM EMFLMT POVC1 POVC2 | 1872 1873 1877 1878 | 2060 2061 2062 2063 | 7282 120 32686 1031 | 7282 120 32637 1639 | 7282 120 32568 2505 | 7282 120 32370 4981 | 7282 120 32359 5110 | 7282 120 32686 1030 | 7282 120 32637 1636 | 7282 120 32412 4446 | 7282 120 32370 4981 | 4369 120 32605 2034 | 4369 120 32522 3077 |
| TGALMLV POVCLMT PK2VAUX FILTER FALPH VFFLT ERBLM | 1892 1893 1894 1895 1961 1962 1963 | 2064 2065 2066 2067 2068 2069 2070 | 4 3059 0 0 0 0 0 | 4 4866 0 0 0 0 0 0 | 4 7445 0 0 0 0 0 | 4 14847 0 0 0 0 0 0 | 4 15235 0 0 0 0 0 | 4 3056 0 0 0 0 0 | 4 4858 0 0 0 0 0 0 | 4 13245 0 0 0 0 0 0 | 4 14847 0 0 0 0 0 0 | 4 2014 0 0 0 0 0 | 4 3051 0 0 0 0 0 |
| PBLCT SFCCML PSPTL AALPH OSCTPL PDPCH PDPCL | 1964 1965 1966 1967 1970 1971 1972 | 2071 2072 2073 2074 2077 2078 2079 | | 0 0 8192 0 0 0 | 0 0 16288 0 0 0 | 0 0 16288 0 0 0 | 0 0 12192 0 0 0 | 0 0 16288 0 0 0 | 0 0 11192 0 0 0 | 0 0 8192 0 0 0 | 0 0 8192 0 0 0 | | |
| DPFEX DPFZW BLENDL MOFCTL RTCURR TDPLD MCNFB BLBSL ROBSTL | 1973 1974 1975 1976 1979 1980 1981 1982 1983 | 2080 2081 2082 2083 2086 2087 2088 2089 2090 | 0 0 0 1287 0 0 0 0 0 | 0 0 0 1623 0 0 0 0 0 0 | 0 0 2008 0 0 0 0 | 0 0 2836 0 0 0 0 | 0 0 2872 0 0 0 0 | 0 0 0 1286 0 0 0 0 0 0 | 0 0 0 1622 0 0 0 0 | 0 0 2678 0 0 0 0 | 0 0 2836 0 0 0 0 | 0 0 0 1044 0 0 0 0 | 0 0 1285 0 0 0 0 |
| ACCSPL ADFF1 VMPK3V BLCMP2 AHDRTL RADUSL SMCNT DEPVPL | 1984 1985 1986 1987 1988 1989 1990 1991 | 2091 2092 2093 2094 2095 2096 2097 2098 | 0 0 0 0 0 0 5145 | 0 0 0 0 0 0 5145 | 0 0 0 0 0 0 5170 | 0 0 0 0 0 0 10250 | 0 0 0 0 0 0 15370 | 0 0 0 0 0 0 12800 | 0 0 0 0 0 0 17920 | 0 0 0 0 0 0 17920 | 0 0 0 0 0 0 12800 | 0 0 0 0 0 0 0 0 80 | 0 0 0 0 0 0 2786 |
| ONEPSL INPA1 INPA2 DBLIM | 1992 1993 1994 1995 | 2099 2100 2101 2102 | 400 0 15000 | 400 0 15000 | 400 0 15000 | 400 0 15000 | 400 0 15000 | 400 0 15000 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 0 0 | 400 0 7200 |
| ABVOF ABTSH TRQCST LP24PA VLGOVR RESERV | 1996 1997 1998 1999 1700 1701 | 2102 2103 2104 2105 2106 2107 2108 | 13000 0 205 0 0 | 13000 0 325 0 0 | 0 0 527 0 0 0 | 0 0 684 0 0 | 0 0 921 0 0 | 13000 0 205 0 0 | 0 0 326 0 0 0 | 0 0 395 0 0 0 | 0 0 684 0 0 0 | 0 0 86 0 0 | 139 0 0 139 |
| BELLTC MGSTCM DETQLM AMRDML | 1702 1703 1704 1705 | 2109 2110 2111 2112 | 0 2568 6244 0 | 0 0 3870 0 | 0 16 5140 0 | 0 2592 3915 0 | 0 2576 3147 0 | 0 16 0 0 | 0 24 5220 0 | 0 16 0 0 | 0 24 2660 0 | 0 1536 7784 0 | 0 1536 7740 0 |
| NFILT NINTCT MFWKCE MFWKBL | 1706 1735 1736 1752 1753 | 2113 2127 2128 2129 | 0 1700 3333 2578 | 0 300 4286 2076 | 0 3420 2000 2581 | 0 700 2667 2574 | 0 900 3636 1813 | 0 2729 4000 1048 | 0 3326 6500 1047 | 0 4520 6000 785 | 0 3298 7000 1042 | 000000000000000000000000000000000000000 | 0 0 5000 4128 |
| LP2GP LP4GP LP6GP PHDLY1 | 1754 1755 1756 | 2130 2131 2132 2133 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 5140 |
| PHDLY2 DGCSMM TRQCUP OVCSTP | 1757 1782 1783 1784 | 2134 2159 2160 2161 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 7720 0 0 0 |
| POVC21 POVC22 POVCLMT2 MAXCRT | 1785 1786 | 2162 2163 2164 2165 | 0 0 0 25 | 0 0 0 25 | 0 0 0 45 | 0 0 0 45 | 0 0 0 45 | 0 0 0 25 | 0 0 0 25 | 0 0 0 25 | 0 0 0 45 | 0 0 0 25 | 0 0 0 25 |

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

| | Motor model | β 0.5/3 0113 | β 0.5/3 0113 | α 3/3 0123 | α 6/2 0127 | α 6/3 0128 | α 12/2 0142 | α 12/3 0143 | α 22/2 0147 | α 22/3 0148 | α 30/2 0152 | α 30/3 0153 |
|---|--|--|---|---|--|--|---|--|--|---|---|--|
| | Motor specification Motor ID No. | (12A) 13 | (20A) 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
| Symbol | FS15; FS16; etc. 1808 2003 1809 2004 1883 2005 1884 2006 1951 2007 1952 2008 1954 2010 1955 2011 1956 2012 1707 2013 1708 2014 | | 00001000 00000110 0000000 01000100 000000 | 0000000 0000110 0000000 0100100 0000000 000000 | 00000000 0000110 0000000 0000000 0000000 | 0000000 0000110 0000000 01000000 0000000 | 0000000 0000110 0000000 0100100 0000000 000000 | 00000000 0000110 0000000 0100100 0000000 | 00000000 0000110 0000000 0100100 0000000 | 0000000 0000110 0000000 0100100 0000000 000000 | 0000000 0000110 0000000 0100100 0000000 000000 | 00000000 0000110 0000000 0100100 0000000 |
| | 1760 2014 1750 2210 1751 2211 2713 2300 2714 2301 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000010 00000000 00000000 |
| PK1 PK2 PK3 PK1V | 1852 2040 1853 2041 1854 2042 1855 2043 | 220 -540 -2556 9 | 367 -900 -2556 5 | 1183 -2941 -3052 87 | 2054 -4194 -3052 99 | 754 -2363 -2633 91 | 3121 -4953 -3052 188 | 1324 -3671 -3052 165 | 1975 -4041 -3052 203 | 881 -2759 -3052 214 | 3173 -5522 -3052 144 | 1175 -3088 -3052 240 |
| PK2V PK3V PK4V POA1 | 1856 2044 1857 2045 1858 2046 1859 2047 | -79 0 -8235 -4789 | 0 -8235 -7981 | 0 -8235 4858 | 4279 | -818 0 -8235 4639 | 0 -8235 2254 | -1474 0 -8235 2574 | -1821 0 -8235 2084 | 1976 | -1293 0 -8235 2935 | -2153 0 -8235 1763 |
| BLCMP DPFMX POK1 POK2 RESERV | 1860 2048 1861 2049 1862 2050 1863 2051 1864 2052 | 0 0 956 510 0 | 0 956 510 | | 0 956 510 | 0 0 956 510 0 | 0 956 510 | 0 0 956 510 0 | 0 0 956 510 0 | 0 0 956 510 0 | 0 0 956 510 0 | 0 0 956 510 0 |
| PPMAX PDDP PHYST EMFCMP PVPA PALPH PPBAS | 1865 2053 1866 2054 1867 2055 1868 2056 1869 2057 1870 2058 1871 2059 | 21 1894 319 1200 2000 77 5 | 21 1894 319 1200 2000 | 21 1894 319 2000 -7690 | 21 1894 319 3500 -6415 | 21 1894 319 -12820 -3845 -650 5 | 21 1894 319 -6440 -5135 | 21 1894 319 -12840 -7690 -1500 5 | 21 1894 319 4000 -3590 -2000 5 | 21 1894 319 -12820 -8970 | 21 1894 319 -12840 -3097 -1120 5 | 21 1894 319 4500 -5130 -2500 5 |
| TQLIM EMFLMT POVC1 POVC2 | 1872 2060 1873 2061 1877 2062 1878 2063 | 7282 120 32585 2288 | 4369 120 32570 2470 | 7282 120 32713 690 | 7282 120 32689 991 | 7282 120 32698 877 | 7282 120 32568 2505 | 7282 120 32614 1922 | 7282 120 32543 2811 | 7282 120 32518 3128 | 7282 120 32668 1245 | 7282 120 32493 3443 |
| TGALMLV POVCLMT PK2VAUX FILTER FALPH | 1892 2064 1893 2065 1894 2066 1895 2067 1961 2068 | 4 6797 0 0 0 | 0 | 0 | 0 0 | 4 2601 0 0 0 | 0 | 4 5709 0 0 0 | 4 8358 0 0 0 | | | 4 10245 0 0 0 |
| VFFLT ERBLM PBLCT SFCCML PSPTL | 1961 2069 1963 2070 1964 2071 1965 2072 1966 2073 | | 0 0 0 0 | 0 0 0 0 | 0 0 0 | | 0 0 0 0 | 000000000000000000000000000000000000000 | | 0 0 0 | 0 | 0 0 0 0 0 |
| AALPH OSCTPL PDPCH PDPCL DPFEX DPFZW | 1967 2074 1967 2077 1970 2077 1971 2078 1972 2079 1973 2080 1974 2081 | 17384 0 0 0 0 0 0 0 0 | | 3000 0 0 0 0 0 | 8192 0 0 0 0 | 0 0 0 0 0 0 0 0 0 | 10192 0 0 0 0 0 | 18384 0 0 0 0 0 0 | 18384 0 0 0 0 0 0 | 14288 0 0 0 0 0 | 14288 0 0 0 0 0 0 | 9192 0 0 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB BLBSL | 1975 2082 1976 2083 1979 2086 1980 2087 1981 2088 1982 2089 | 0 0 1918 0 0 0 0 | 0 1151 0 0 0 | 0 1052 0 0 0 0 | 0 1261 0 0 0 | 0 0 1187 0 0 0 | 0 2008 0 0 0 | 0 0 1758 0 0 0 | 0 0 2127 0 0 0 | 2245 0 0 0 | 0 | 0 2355 0 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 AHDRTL RADUSL | 1983 2090 1984 2091 1985 2092 1986 2093 1987 2094 1988 2095 1989 2096 | | | 0 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 0 0 0 | 0 | 0 0 0 0 0 0 0 0 | 0 0 0 0 0 0 0 | 0 0 0 0 0 0 |
| SMCNT DEPVPL ONEPSL INPA1 | 1990 2097 1991 2098 1992 2099 1993 2100 | 0 5160 400 0 | 0 5160 400 | 0 0 400 | 0 10265 400 | 0 30 400 0 | 0 12800 400 | 0 5145 400 0 | 0 7680 400 0 | 0 2585 400 0 | 0 10240 400 0 | 0 5145 400 0 |
| INPA2 DBLIM ABVOF ABTSH | 1994 2101 1995 2102 1996 2103 1997 2104 | 0 15000 0 | 9000 0 0 | 15000 0 0 | 15000 0 0 | 0 15000 0 | 0 | 0 15000 0 | 0 15000 0 | 0 | 0 0 0 0 | 0 15000 0 0 |
| TRQCST LP24PA VLGOVR RESERV BELLTC | 1998210519992106170021071701210817022109 | 29 0 0 0 0 0 | 0 0 0 | 0 0 0 | 0 | 454 0 0 0 0 0 | 0 0 0 | 601 0 0 0 0 | 911 0 0 0 0 | 864 0 0 0 0 | 1870 0 0 0 0 | 1123 0 0 0 0 |
| MGSTCM DETQLM AMRDML NFILT | 1703 2110 1704 2111 1705 2112 1706 2113 | 0 7790 0 0 | 0 7790 0 0 | 32 6214 0 0 | 32 3960 0 0 | 32 5170 0 0 | 0 5220 0 0 | 16 0 0 0 | 0 3468 0 0 | 24 5170 0 0 | 20 4040 0 0 | 0 3890 0 0 |
| NINTCT MFWKCE MFWKBL LP2GP LP4GP | 1735212717362128175221291753213017542131 | 400 0 0 0 0 | 0 0 0 | 1812 0 | 0 | 1706 1000 2076 0 0 | 5000 1045 0 | 2615 2000 1551 0 0 | 2956 6000 1300 0 0 | 0 | 4989 6000 1044 0 0 | 2000 6000 2581 0 0 |
| LP6GP PHDLY1 PHDLY2 DGCSMM | 1755 2132 1756 2133 1757 2134 1782 2159 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 3880 12820 0 | 0 0 0 0 | 0 3880 12820 0 | 0 5160 12840 0 |
| TRQCUP OVCSTP POVC21 POVC22 POVCLMT2 | 1783 2160 1784 2161 1785 2162 1786 2163 1787 2164 | | 0 | 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | | 0 0 0 | 0 | 0 0 0 0 |
| MAXCRT | 1788 2165 | 12 | | | | 80 | | 85 | 85 | | 135 | 135 |

G.PARAMETERS FOR α AND OTHER SERIES APPENDIX B-65270EN/06

| | Motor model Motor specification | αM3 0161 | αM6 0162 | αM9 0163 | α 22/1.5 0146 | α 30/1.2 0151 | α 40/FAN 0158 | α 40/2 0157 | β 3/3 0033 | β 6/2 0034 | β 1/3 0031 (12A) | β 2/3 0032 (12A) |
|--|---|--|--|--|--|--|--|--|--|--|--|--|
| Symbol | Motor ID No. FS15i FS16i,etc | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 33 | 34 | 35 | 36 |
| Symbol | 1808 2003 1809 2004 1883 2005 1884 2006 1951 2007 1952 2008 | 00001000 00000110 00000000 01000100 000000 | 00001000 00000110 00000000 01000100 000000 | 00001000 00000110 00000000 01000100 000000 | 00000000 00000110 00000000 01000000 000000 | 00000000 00000110 00000000 01000000 000000 | 00000000 00000110 00000000 01000100 000000 | 00000000 00000110 00000000 01000100 000000 | 00001000 00000110 00000000 01000000 000000 | 00001000 00000110 00000000 01000000 000000 | 00001000 00000110 00000000 01000000 000000 | 00001000 00000110 00000000 01000000 000000 |
| | 1953 2009 1954 2010 1955 2011 1956 2012 1707 2013 1708 2014 | 0000000 0000000 00100000 0000000 0000000 | 00000000 00000000 00100000 0000000 000000 | 0000000 0000000 0000000 0000000 0000000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00100000 0000000 000000 | 00000000 00000000 00100000 0000000 000000 | 00000000 00000000 00100000 0000000 000000 | 00000000 0000000 00100000 0000000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 0000000 00100000 0000000 000000 |
| PK1 | 1750221017512211271323002714230118522040 | 00000000 00000000 00000000 00000000 538 | 00000000 00000000 00000000 00000000 950 | 00000000 0000010 0000000 0000000 748 | 00000000 00000000 00000000 00000000 2330 | 00000000 00000000 00000000 00000000 5060 | 00000000 0000010 0000000 0000000 1649 | 00000000 00000010 00000000 00000000 1649 | 00000000 0000010 0000000 0000000 629 | 00000000 0000010 0000000 0000000 990 | 0000000 0000000 0000000 0000000 359 | 00000000 00000010 00000000 00000000 704 |
| PK2 PK3 PK1V PK2V | 1853 2041 1854 2042 1855 2043 1856 2044 | -1652 -3052 53 -471 | -2582 -3052 38 -328 | -2402 -2632 61 -550 | -6381 -2694 271 -2426 | -9923 -2705 147 -1313 | -5395 -2700 201 -1801 | -5395 -2700 201 -1801 | -2093 -2622 144 -2587 | -3544 -2632 144 -2587 | -1129 -2564 102 -916 | -2401 -2596 62 -1111 |
| PK3V PK4V POA1 BLCMP | 18572045185820461859204718602048 | 0 -8235 -806 0 | 0 -8235 -1156 0 | 0 -8235 -690 0 | 0 -8235 1564 0 | 0 -8235 2891 0 | 0 -8235 2107 0 | 0 -8235 2107 0 | 0 -8235 1467 0 | 0 -8235 1467 0 | 0 -8235 4141 0 | 0 -8235 3415 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 2049 1862 2050 1863 2051 1864 2052 1865 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH | 1865 2054 1866 2054 1867 2055 1868 2056 1869 2057 1870 2058 | 1894 319 2500 2400 70 | 1894 319 3500 -3590 -1440 | 1894 319 3000 -6407 -1600 | 1894 319 4000 -3872 -2800 | 1894 319 8000 -2078 -1800 | 1894 319 -12820 -3855 -2400 | 1894 319 -12820 -3855 -2400 | 1894 319 3000 -10250 -1600 | 1894 319 3200 -6420 -1600 | 1894 319 2500 2100 71 | 1894 319 3300 -10250 -1600 |
| PPBAS TQLIM EMFLMT POVC1 | 1871 2059 1872 2060 1873 2061 1877 2062 | 5 7282 120 32697 | 5 7282 120 32727 | 5 7282 120 32692 | 5 7282 120 32370 | 5 7282 120 32665 | 5 7282 120 32361 | 5 7282 120 32579 | 5 7282 120 32456 | 5 7282 120 32456 | 5 7282 120 32617 | 5 7282 120 32540 |
| POVC2 TGALMLV POVCLMT PK2VAUX FILTER | 1878 2063 1892 2064 1893 2065 1894 2066 1895 2067 | 886 4 2627 0 0 | 516 4 1529 0 0 | 955 4 2832 0 0 | 4981 4 14847 0 0 | 1283 4 3809 0 0 | 5090 4 15175 0 0 | 2358 4 7007 0 0 | 3897 4 11600 0 0 | 3897 4 11600 0 0 | 1884 4 5594 0 0 | 2850 4 8474 0 0 |
| FALPH VFFLT ERBLM PBLCT | 1961 2068 1962 2069 1963 2070 1964 2071 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| SFCCML PSPTL AALPH OSCTPL PDPCH PDPCL | 1965 2072 1966 2073 1967 2074 1970 2077 1971 2078 1972 2079 | 0 0 3000 0 0 | 0 0 31672 0 0 0 | 0 0 12288 0 0 0 | 0 0 12288 0 0 0 | 0 0 12288 0 0 0 | 0 0 14288 0 0 0 | 0 0 14288 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | |
| DPFEX DPFZW BLENDL MOFCTL RTCURR TDPLD MCNFB BLBSL BDSSL | 1973 2080 1974 2081 1975 2082 1976 2083 1979 2086 1980 2087 1981 2088 1982 2089 | 0 0 1193 0 0 0 0 | 0 0 910 0 0 | 0 0 1238 0 0 0 0 | 0 0 2836 0 0 0 | 0 0 0 1436 0 0 0 | 0 0 2867 0 0 0 | 0 0 1948 0 0 0 | 0 0 2506 0 0 0 0 | 0 0 2506 0 0 0 0 | 0 0 0 1740 0 0 | 0 0 2142 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 AHDRTL RADUSL | 1983 2090 1984 2091 1985 2092 1986 2093 1987 2094 1988 2095 1989 2096 | | 0 0 0 0 0 0 | | | 0 0 0 0 0 0 | 0 0 0 0 0 0 | 0 0 0 0 0 0 | | | | |
| SMCNT DEPVPL ONEPSL INPA1 INPA2 | 1990 2097 1991 2098 1992 2099 1993 2100 1994 2101 | 0 25 400 0 0 | 0 5145 400 0 | 0 0 400 0 0 | | 0 12800 400 0 0 | 0 12800 400 0 | 0 12800 400 0 | 0 -1476 400 0 0 | 0 30 400 0 | 0 80 400 0 0 | 0 -2786 400 0 |
| DBLIM ABVOF ABTSH TRQCST LP24PA | 1995 2102 1996 2103 1997 2104 1998 2105 | 0 15000 0 221 0 | 15000 0 581 0 | 0 0 0 653 0 | 0 0 0 684 0 | 0 0 0 1842 0 | 15000 0 1756 0 | 15000 0 1756 0 | 15000 0 0 107 0 | 12000 0 215 0 | 0 0 0 51 0 | 12000 0 0 83 0 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 2107 1701 2108 1702 2109 1703 2110 | 0 0 0 24 | 0 0 0 24 | 0 0 0 32 | 0 0 0 24 | 0 0 0 28 | 0 0 0 20 | 0 0 0 20 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| DETQLM AMRDML NFILT NINTCT MFWKCE | 1704 2111 1705 2112 1706 2113 1735 2127 1736 2128 | 5220 0 1990 2000 | 5220 0 2729 2500 | 5220 0 853 2000 | 2660 0 3298 7000 | 0 0 7846 9500 | 3920 0 3326 7000 | 3920 0 3326 7000 | 2640 0 0 0 0 | 3890 0 0 5000 | 7784 0 0 0 0 | 7740 0 0 3000 |
| MFWKBL LP2GP LP4GP LP6GP PHDLY1 | 1752 2129 1753 2130 1754 2131 1755 2132 1756 2133 | 2588 0 0 0 0 0 | 1298 0 0 0 0 | 2570 0 0 5140 | 1042 0 0 0 | 788 0 0 0 0 | 1300 0 0 20 | 1300 0 0 20 | 0 0 0 0 6164 | 2064 0 0 2573 | 0 0 0 0 0 | 4128 0 0 0 5140 |
| PHDLY2 DGCSMM TRQCUP OVCSTP | 1757 2134 1782 2159 1783 2160 1784 2161 | 0 0 0 0 | 0 0 0 0 | 12840 0 0 0 | 0 0 0 0 | 0 0 0 0 | 12840 0 0 0 | 12840 0 0 0 | 12840 0 0 0 | 12850 0 0 0 | 0 0 0 0 | 12840 0 0 0 |
| POVC21 POVC22 POVCLMT2 MAXCRT | 17852162178621631787216417882165 | 0 0 40 | 0 0 80 | 0 0 85 | | 0 0 85 | 0 0 135 | 0 0 135 | 0 0 25 | 0 0 25 | 0 0 12 | 0 0 12 |

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

| | Motor model Motor specification | α 65/2 0331 | α 100/2 0332 | α 150/2 0333 | α 2/2 0372 | αL25 0571 | αL50 0572 | α 1/3 0371 | α 2/3 0373 | αL3 0561 | αL6 0562 | αL9 0564 |
|--|---|--|--|--|--|--|--|--|--|--|--|--|
| Ourseland | Motor ID No. | 39 | 40 | 41 | 46 | 59 | 60 | 61 | 62 | 68 | 69 | 70 |
| Symbol | FS15 <i>i</i> FS16 <i>i</i> ,etc. 1808 2003 1809 2004 1883 2005 1884 2006 | 00001000 01000110 00000000 00010000 | 00001000 01000110 00000000 00010000 | 00001000 01000110 00000000 00010000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 01000100 | 00001000 00000110 00000000 01000100 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 00000000 |
| | 1951 2007 1952 2008 1953 2009 1954 2010 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| | 1955 2011 1956 2012 1707 2013 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 |
| | 1708 2014 1750 2210 1751 2211 2713 2300 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000010 00000000 | 00000000 00000000 00000110 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| PK1 PK2 PK3 | 2714 2301 1852 2040 1853 2041 1854 2042 | 00000000 790 -3473 -2714 | 00000000 1578 -4761 -2714 | 00000000 1574 -4809 -2718 | 00000000 1170 -2289 -2485 | 00000000 574 -2254 -2700 | 00000000 700 -2000 -2701 | 00000000 390 -1053 -2480 | 00000000 530 -1653 -2490 | 00000000 757 -3394 -2652 | 00000000 855 -3610 -2676 | 00000000 737 -2588 -2673 |
| PK1V PK2V PK3V | 1855 2043 1856 2044 1857 2045 1858 2046 | 121 -1085 0 -8235 | 102 -916 0 -8235 | 120 -1072 0 -8235 | 91 -812 0 -8235 | 92 -825 0 -8235 | 116 -1035 0 -8235 | 111 -997 0 -8235 | 128 -1146 0 -8235 | 0 | 17 -155 0 -8235 | 35 -309 0 -8235 |
| PK4V POA1 BLCMP DPFMX | 1859 2047 1860 2048 1861 2049 | 3498 0 0 | 4141 0 0 | 3541 0 0 | 4674 0 0 | 4599 0 0 | 3666 0 0 | 3806 0 0 | 3311 0 0 | -2395 0 0 | -2455 0 0 | -1227 0 0 |
| POK1 POK2 RESERV PPMAX | 1862 2050 1863 2051 1864 2052 1865 2053 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 956 510 0 21 | 510 | 956 510 0 21 | 956 510 0 21 |
| PDDP PHYST EMFCMP | 1866 2054 1867 2055 1868 2056 | 3787 319 4444 | 3787 319 4884 | 3787 319 6668 | 1894 319 2147 | 1894 319 4500 | 1894 319 4800 | 1894 319 2800 | 1894 319 2520 | 1894 319 2000 | 1894 319 2000 | 1894 319 1240 |
| PVPA PALPH PPBAS TQLIM | 1869 2057 1870 2058 1871 2059 1872 2060 | -4617 -1620 20 7282 | -4617 -1620 20 7282 | -3849 -1890 20 7282 | -7690 -1000 0 7282 | -7692 -2200 5 7282 | -6430 -3300 5 7282 | 2330 57 5 7282 | -6156 -1200 5 7282 | 5 | 0 0 5 7282 | -10249 -800 5 7282 |
| EMFLMT POVC1 POVC2 TGALMLV | 1873 2061 1877 2062 1878 2063 1892 2064 | 120 32482 3569 | 120 32529 2987 | 120 32332 5452 | 120 32627 1766 | 120 32476 3644 | 120 32214 6929 | 120 32623 1811 | 120 32519 3112 | 32693 | 120 32696 894 4 | 120 32607 2010 |
| POVCLMT PK2VAUX | 1893 2065 1894 2066 | 10622 0 | 8881 0 | 16262 0 | 5245 0 | 10844 0 | 20705 0 | 5377 0 | 9256 0 | 2787 0 | 2653 0 | 5970 0 |
| FILTER FALPH VFFLT ERBLM | 1895 2067 1961 2068 1962 2069 1963 2070 | 1100 0 0 0 | 1100 0 0 0 | 1100 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 | 0 0 0 0 | 0 0 0 0 |
| PBLCT SFCCML PSPTL | 1964 2071 1965 2072 1966 2073 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| AALPH OSCTPL PDPCH PDPCL | 1967 2074 1970 2077 1971 2078 1972 2079 | 28672 0 0 0 | 20480 0 0 0 | 20480 0 0 0 | 000000000000000000000000000000000000000 | 24576 0 0 0 | 0 0 0 | 1680 0 0 0 | 8194 0 0 0 | 16384 0 0 0 | 28672 0 0 0 | 20480 0 0 0 |
| DPFEX DPFZW BLENDL MOFCTL | 1973 2080 1974 2081 1975 2082 1976 2083 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 | 0 0 0 0 | 0 0 0 0 |
| RTCURR TDPLD MCNFB | 1979 2086 1980 2087 1981 2088 | 2398 0 0 | 2193 0 0 | 2968 0 0 | 1685 0 0 | 2423 0 0 | 3349 0 0 | 1706 0 0 | 2239 0 0 | 1228 0 | 1198 0 0 | 1798 0 0 |
| BLBSL ROBSTL ACCSPL ADFF1 | 1982 2089 1983 2090 1984 2091 1985 2092 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 | 0 0 0 | 0 0 0 0 |
| VMPK3V BLCMP2 AHDRTL | 1986 2093 1987 2094 1988 2095 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | 0 | 0 0 0 |
| RADUSL SMCNT DEPVPL ONEPSL | 1989 2096 1990 2097 1991 2098 1992 2099 | 0 0 400 | 0 0 400 | 0 0 0 400 | | 0 0 50 400 | 0 0 400 | 0 0 50 400 | 0 0 400 | 0 | 0 0 400 | 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF | 19932100199421011995210219962103 | 0 0 15000 0 | | 0 0 15000 0 | 0 0 15000 0 | 0 0 15000 0 | 0 0 15000 0 | 0 0 | 0 0 15000 0 | 0 15000 | 0 0 15000 0 | 0 0 15000 0 |
| ABTSH TRQCST LP24PA | 1997 2104 1998 2105 1999 2106 | 0 2438 0 | 0 4103 0 | 0 4548 0 | 0 104 0 | 0 928 0 | 0 1343 0 | 0 51 0 | 0 74 0 | 0 219 0 | 0 450 0 | 0 450 0 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 2107 1701 2108 1702 2109 1703 2110 | 0 0 12 | 0 0 | 0 0 0 0 | | 0 0 20 | 0 0 24 | 0 0 0 0 | 0 0 0 0 | 0 | 0 0 0 64 | 0 0 0 16 |
| DETQLM AMRDML NFILT | 1704 2111 1705 2112 1706 2113 | 2148 0 0 | 0 0 0 | 0 0 0 | 6194 0 0 | 50 0 0 | 0 0 0 | 7715 0 0 | 7780 0 0 | 2650 0 0 | 2620 0 0 | 5160 0 0 |
| NINTCT MFWKCE MFWKBL LP2GP | 1735 2127 1736 2128 1752 2129 1753 2130 | 0 3600 1551 0 | 0 4800 1294 0 | 0 3500 1033 0 | 4800 2500 1806 0 | 0 2000 2567 0 | 2402 4000 2321 0 | 785 0 0 0 | 2300 3000 3088 0 | 0 0 0 | 2500 0 0 0 | 2500 2500 2586 0 |
| LP4GP LP6GP PHDLY1 PHDLY2 | 1754 2131 1755 2132 1756 2133 1757 2134 | 0 0 0 0 | 0 | 0 0 0 0 | 0 | 0 0 0 0 | 0 0 0 0 | 0 0 7710 12830 | 0 0 7710 12830 | 0 | 0 0 0 0 | 0 0 0 0 |
| DGCSMM TRQCUP OVCSTP | 1782 2159 1783 2160 1784 2161 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| POVC21 POVC22 POVCLMT2 MAXCRT | 1785 2162 1786 2163 1787 2164 1788 2165 | 0 0 0 245 | 0 | | 0 | 0 0 135 | 0 0 0 135 | | 0 0 0 12 | 0 | 0 0 85 | 0 0 0 85 |

G.PARAMETERS FOR α AND OTHER SERIES APPENDIX B-65270EN/06

| | Motor model | 1500A 0410 | 3000B 0411 | 6000B 0412 | 9000B 0413 | 15000C 0414 | αM2 0376 | α M2.5 0377 | α M22 0165 | α M30 0166 | α22/3HV 0177 | α 30/3HV 0178 |
|----------------------------|--|---|----------------------------------|----------------------------------|---|---|---|---|---|--|----------------------------------|----------------------------------|
| Symbol | Motor specification Motor ID No. FS15 <i>i</i> FS16 <i>i</i> ,etc. | Linear 90 | Linear 91 | Linear 92 | Linear 93 (130A) | Linear 94 (240A) | 98 | 99 | 100 | 101 | 102 (60A) | 103 (60A) |
| Gymbol | 1808 2003 1809 2004 | 00001000 | 00001000 | 00001000 | 00001000 00000110 | 00001000 00000110 | 00001000 | 00001000 | 00001000 | 00001000 | 00001000 00000110 | 00001000 00000110 |
| | 1883 2005 1884 2006 1951 2007 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 01000100 00000000 | 00000000 01000100 00000000 |
| | 1952 2008 1953 2009 1954 2010 | 00000000 00000000 00000100 | 00000000 00000000 00000100 | 00000000 00000000 00000100 | 00000000 00000000 00000100 | 00000000 00000000 00000100 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| | 1955 2011 1956 2012 1707 2013 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00100000 00000000 00000000 | 00000000 00000000 00000000 |
| | 1708 2014 1750 2210 | 00000000 00000000 00000000 | 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 | 00000000 00000100 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000000 00000000 | 00000000 00000000 00000000 00000010 | 00000000 00000000 00000000 | 00000000 00000000 |
| | 2713 2300 2714 2301 | 10000000 00000000 | 00000000 1000000 0000000 | 10000000 00000000 | 00000000 1000000 00000000 | 00000000 1000000 0000000 | 0000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 00000000 |
| PK1 PK2 PK3 | 1852 2040 1853 2041 1854 2042 | 1890 -7180 -2647 | -14453 -2660 | 4804 -13138 -2660 | 5036 -16000 -2660 | 1420 -5600 -2663 | 600 -1957 -2476 | 400 -1154 -2547 | 555 -2698 -2686 | 736 -2623 -2696 | 1050 -3811 -2694 | 1100 -4300 -2663 |
| PK1V PK2V PK3V | 1855 2043 1856 2044 1857 2045 | 19 -260 0 | -214 | 16 -214 0 | 14 -195 0 | 10 -131 0 | 31 -274 0 | 56 -500 0 | 97 -867 0 | 128 -1142 0 | 181 1618- 0 | 195 -1750 0 |
| PK4V POA1 BLCMP | 1858 2046 1859 2047 1860 2048 | -8235 -4371 0 | -5321 | -8235 -5321 0 | -8235 -5849 0 | -8235 -8681 0 | -8235 -1383 0 | -8235 -759 0 | -8235 | -8235 3322 0 | -8235 2346 0 | -8235 2168 0 |
| DPFMX POK1 POK2 | 1861 2049 1862 2050 1863 2051 | 0 956 510 | 0 956 | 0 956 510 | 0 956 510 | 0 956 510 | 0 956 510 | 0 956 510 | 0 956 | 0 956 510 | 0 956 510 | 0 956 510 |
| RESERV PPMAX PDDP | 1864 2052 1865 2053 1866 2054 | 0 21 1894 | 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 | 0 21 1894 |
| PHYST EMFCMP PVPA | 1867 2055 1868 2056 1869 2057 | 319 0 0 | 0 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 -9230 | 319 0 -8722 | 0 | 319 0 -3870 | 319 0 -6412 | 319 0 -3856 |
| PALPH PPBAS TQLIM | 1870 2058 1871 2059 1872 2060 | 0 0 7282 | 0 | 0 0 7282 | 0 0 7282 | 0 0 7282 | -1400 0 7282 | -1800 0 7282 | 0 | -2240 0 7282 | -2240 0 7282 | -3000 0 7282 |
| EMFLMT POVC1 POVC2 | 1873 2061 1877 2062 1878 2063 | 120 32670 1222 | 120 32670 | 120 32670 1222 | 120 32685 1041 | 120 32712 703 | 0 32685 1041 | 0 32645 1535 | 0 32587 | 0 32567 2514 | 0 32590 2221 | 32586 2279 |
| TGALMLV POVCLMT | 1892 2064 1893 2065 | 4 3626 | 4 3626 | 4 3626 | 4 3087 | 4 2086 | 4 3089 | 4 4556 | 4 6714 | 4 7473 | 4 6599 | 4 6771 |
| PK2VAUX FILTER FALPH | 1894 2066 1895 2067 1961 2068 | 000000000000000000000000000000000000000 | 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 | 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0000 | 0 0 0 |
| VFFLT ERBLM PBLCT | 1962 2069 1963 2070 1964 2071 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| SFCCML PSPTL AALPH | 1965 2072 1966 2073 1967 2074 | 0 0 0 | 0 | 0 0 0 | 0 0 | 0 0 0 | 0 0 20480 | 0 0 8192 | 0 0 12288 | 0 0 8192 | 0 0 20480 | 0 0 12288 |
| OSCTPL PDPCH PDPCL | 1970 2077 1971 2078 1972 2079 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| DPFEX DPFZW | 1973 2080 1974 2081 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BLENDL MOFCTL RTCURR | 1975 2082 1976 2083 1979 2086 | 0 0 1402 | 0 1402 | 0 0 1402 | 0 0 1293 | 0 0 1063 | 0 0 1293 | 0 0 1730 | | 0 0 2012 | 0 0 1890 | 0 0 1915 |
| TDPLD MCNFB BLBSL | 1980 2087 1981 2088 1982 2089 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| ROBSTL ACCSPL ADFF1 | 1983 2090 1984 2091 1985 2092 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| VMPK3V BLCMP2 AHDRTL | 1986 2093 1987 2094 1988 2095 | 0 0 0 | 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 | 0 | 0 |
| RADUSL SMCNT DEPVPL | 1989 2096 1990 2097 1991 2098 | 0 0 0 | 0 | 0 0 0 | 000 | 000000000000000000000000000000000000000 | 0 | 0000 | 0 0 0 | 0 0 0 | 000 | 0 0 0 |
| ONEPSL INPA1 | 1992 2099 1993 2100 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 |
| INPA2 DBLIM ABVOF | 1994 2101 1995 2102 1996 2103 | 0 0 0 | 0 | 0 0 0 | 0000 | 0 0 0 | 0 15000 0 | 0 15000 0 | 0 | 0 15000 0 | 0 15000 0 | 0 0 0 |
| ABTSH TRQCST LP24PA | 1997 2104 1998 2105 1999 2106 | 0 227 0 | 455 | 0 911 0 | 0 1481 0 | 0 3104 0 | 0 139 0 | 0 143 0 | 0 943 0 | 0 1341 0 | 0 1026 0 | 0 1381 0 |
| VLGOVR RESERV BELLTC | 1700 2107 1701 2108 1702 2109 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| MGSTCM DETQLM AMRDML | 1703 2110 1704 2111 1705 2112 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 2600 6440 0 | 2584 7780 0 | 40 5220 | 24 5220 0 | 2584 5145 0 | 2592 4658 0 |
| NFILT NINTCT | 1706 2113 1735 2127 | 0 | 0 | 0 | 0 | 0 | 0 1322 | 0 625 | 0 1802 | 0 1756 | 0 4200 | 0 5885 |
| MFWKCE MFWKBL LP2GP | 1736 2128 1752 2129 1753 2130 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 2000 2578 0 | 2500 3847 0 | | 3000 2577 0 | 2778 1554 0 | 4000 1287 0 |
| LP4GP LP6GP PHDLY1 | 1754 2131 1755 2132 1756 2133 | 0 0 0 | 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 2590 | 0 0 0 | 0 0 0 |
| PHDLY2 DGCSMM TRQCUP | 1757 2134 1782 2159 1783 2160 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | 12815 0 0 | 0 0 0 | 0 0 0 |
| OVČSTP POVC21 POVC22 | 1784 2161 1785 2162 1786 2163 | 0 0 0 | 0 0 | 0 0 0 | 0000 | 0 0 0 | 0 0 0 | 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| POVCLMT2 MAXCRT | 1787 2164 1788 2165 | 0 45 | 0 | | 0 135 | 0 245 | 0 25 | | 0 | 0 135 | 0 60 | 0 60 |

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

| | Motor model | α M6HV | α M9HV | α M22HV | αM30HV | α | α | α | α 300/1.2 | α400/1.2 | α 300/2 | α400/2 |
|-------------------------------|--|--|---|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Symbol | Motor specification Motor ID No. FS15 <i>i</i> FS16 <i>i</i> | 104 | 0183 105 | 0185 106 | 0186 107 | 0170 108 (360A) | 0170 109 (240A) | 0169 110 (130A) | 0135 113 | 0136 114 | 0137 115 | 0138 116 |
| | 1808 20 1809 20 | 003 00001000 004 00000110 005 00000000 | 00001000 00000110 00000000 | 00001000 00000110 00000000 | 00001000 00000110 00000000 | 00001000 01000110 00000000 | 00001000 01000110 00000000 | 00001000 00000110 00000000 | 00001000 01000110 00000000 | 00001000 01000110 00000000 | 00001000 01000110 00000000 | 00001000 01000110 00000000 |
| | 1884 20 1951 20 | 06 0000000 07 0000000 | 000000000000000000000000000000000000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 |
| | 1953 20 | 008 00000000 009 00000000 010 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| | 1955 20 1956 20 | 00000000 012 00000000 | 00000000 00000000 | 00100000 00000000 | 00100000 00000000 | 00100000 00000000 | 00100000 00000000 | 00100000 00000000 | 00100000 00000000 | 00000000 00000000 | 00100000 00000000 | 00100000 00000000 |
| | 1708 20 | 13 0000000 14 0000000 10 0000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| | 2713 23 | 11 0000000 00 0000000 01 0000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 |
| PK1 PK2 | 1852 20 1853 20 | 140 783 141 -2832 | 542 -2277 | 430 -2470 | 648 -2532 | 1046 -4459 | 968 -3716 | 822 -2254 | 1715 -5809 | 2910 -7671 | 1357 -4212 | 1593 -5395 |
| PK3 PK1V PK2V | 1855 20 1856 20 | 142 -2607 143 37 144 -329 | -2640 66 -595 | -2682 94 -845 | -2692 161 -1444 | -2664 43 -386 | -2664 65 -579 | -2664 119 -1069 | -2711 116 -1035 | -2712 112 -1003 | -2710 114 -1023 | -2711 113 -1016 |
| PK3V PK4V POA1 | 1858 20 | 145 0 146 -8235 147 -1154 | 0 -8235 6373 | 0 -8235 4490 | 0 -8235 2628 | 0 -8235 -983 | 0 -8235 -656 | 0 -8235 3551 | 0 -8235 3668 | 0 -8235 3782 | 0 -8235 3709 | 0 -8235 3736 |
| BLCMP DPFMX POK1 | 1860 20 1861 20 | 048 0 049 0 050 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | 0 0 956 |
| POK2 RESERV | 1863 20 1864 20 | 051 510 052 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 | 510 0 |
| PPMAX PDDP PHYST | 1866 20 1867 20 | 153 21 154 1894 155 319 | 21 1894 319 | 21 1894 319 | 21 1894 319 | 21 3787 319 | 21 3787 319 | 21 1894 319 | 21 3787 319 | 21 3787 319 | 21 3787 319 | 21 3787 319 |
| EMFCMP PVPA PALPH | 1869 20 | 956 0 957 -7690 958 -1800 | 0 -6408 -1800 | 0 -5135 -2000 | 0 -6422 -3226 | 0 -3852 -1800 | 0 -3858 -2700 | 0 -3873 -4950 | 0 -2323 -2000 | 0 -1822 -4000 | 0 -3850 -800 | 0 -2838 -2000 |
| PPBAS TQLIM | 1871 20 1872 20 | 059 0 060 7282 | 0 7282 | 0 7282 | 0 7282 | 0 7282 | 0 7282 | 0 7282 | 0 8010 | 0 8010 | 0 7282 | 0 7282 |
| EMFLMT POVC1 POVC2 | 1877 20 1878 20 | 62 32725 63 538 | 32678 1119 | 0 32596 2149 | 32447 4009 | 0 32613 1937 | 32420 4345 | 32279 6107 | 120 32343 5312 | 120 32366 5020 | 120 32352 5196 | 120 32356 5145 |
| TGALMLV POVCLMT PK2VAUX | 1893 20 | 164 4 165 1596 166 0 | 4 3321 0 | 4 6385 0 | 4 11935 0 | 4 5752 0 | 4 12943 0 | 4 18231 0 | 4 15843 0 | 4 14964 0 | 4 15494 0 | 4 15339 0 |
| FILTER FALPH VFFLT | 1961 20 | 167 0 168 0 169 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 |
| ERBLM PBLCT SFCCML | 1963 20 1964 20 | 070 0 071 0 072 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| PSPTL AALPH | 1966 20 1967 20 | 073 0 074 28672 | 0 12288 | 0 24576 | 0 | 0 20480 | 0 20480 | 0 | 0 16384 | 0 12288 | 0 12288 | 0 12288 |
| OSCTPL PDPCH PDPCL | 1971 20 1972 20 | 077 0 078 0 079 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| DPFEX DPFZW BLENDL | 1974 20 | 080 0 081 0 082 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| MOFCTL RTCURR TDPLD | 1976 20 1979 20 | 183 0 186 929 187 0 | 0 1341 0 | 0 1859 0 | 0 2542 0 | 0 1453 0 | 0 2180 0 | 0 2302 0 | 0 2412 0 | 0 2344 0 | 0 2385 0 | 0 2373 0 |
| MCNFB BLBSL | 1981 20 1982 20 | 188 0 189 0 | 0 | 0 0 | 0 | 0 | 0 | 0 | 0 0 | 0 0 | 0 | 0 0 |
| ROBSTL ACCSPL ADFF1 | 1984 20 | 90 0 91 0 92 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| VMPK3V BLCMP2 AHDRTL | 1987 20 | 93 0 94 0 95 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 0 | 0 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 0 | 0 0 0 |
| RADUSL SMCNT DEPVPL | 1989 20 1990 20 | 96 0 97 0 98 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| ONEPSL INPA1 | 1992 20 1993 21 | 99 400 00 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 | 400 0 |
| INPA2 DBLIM ABVOF | 1995 21 | 01 0 02 0 03 0 | 0 15000 0 | 0 15000 0 | 0 15000 0 | 0 15000 0 | 0 15000 0 | 0 15000 0 | 0 15000 0 | 0 0 0 | 0 15000 0 | 0 15000 0 |
| ABTSH TRQCST LP24PA | 1998 21 | 04 0 05 580 06 0 | 0 603 0 | 0 967 0 | 0 1061 0 | 0 4330 0 | 0 2887 0 | 0 1563 0 | 0 10808 0 | 0 14575 0 | 0 10931 0 | 0 14398 0 |
| VLGOVR RESERV | 1700 21 1701 21 | 07 0 08 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BELLTC MGSTCM DETQLM | 1703 21 1704 21 | 09 0 10 40 11 0 | 0 40 5220 | 0 40 3940 | 0 24 5220 | 0 0 0 | 0 0 0 | 0 1 4174 | 0 16 0 | 0 16 0 | 0 16 1606 | 0 24 1636 |
| AMRDML NFILT NINTCT | 1706 21 | 12 0 13 0 27 5572 | 0 0 853 | 0 0 4051 | 0 0 2388 | 0 0 5116 | 0 0 3411 | 0 0 1848 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| MFWKCE MFWKBL LP2GP | 1736 21 1752 21 | 28 0 29 0 30 0 | 0 | 0 0 0 | 1000 3221 0 | 2000 1287 0 | 5000 1551 0 | 2000 2051 0 | 7500 787 0 | 5000 272 0 | 5500 791 0 | 6500 784 0 |
| LP4GP LP6GP | 1754 21 1755 21 | 31 0 32 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 |
| PHDLY1 PHDLY2 DGCSMM | 1757 21 1782 21 | 33 0 34 0 59 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 1556 20494 0 | 1550 20494 0 |
| TRQCUP OVCSTP POVC21 | 1784 21 | 60 0 61 0 62 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 |
| POVC22 POVCLMT MAXCRT | 1786 21 1787 21 | 63 0 64 0 65 45 | 0 0 45 | 0 0 65 | 0 0 65 | 0 0 365 | 0 0 245 | 0 0 135 | 0 | 0 0 245 | 0 0 365 | 0 0 365 |
| WIAAGRI | 1700 21 | 40 40 | 40 | 05 | 05 | 305 | 240 | 135 | 245 | 240 | 305 | 305 |

G.PARAMETERS FOR α AND OTHER SERIES APPENDIX

B-65270EN/06

| | Motor model Motor specific Motor ID No. | | α 1000/2 0131 117 | α40HV 0179 118 | α M40HV 0189 119 | 3000B/4N 0411-B811 Linear 120 | 6000B/4N 0412-B811 Linear 121 | Linear 122 | 15000C/3N 0414-B811 Linear 123 | 300D/4 0421 Linear 124 | 600D/4 0422 Linear 125 | 900D/4 0423 Linear 126 | 6000B/4N 0412-B811 Linear 127 |
|---|---|---|--|--|--|--|--|--|--|--|---|--|--|
| Symbol | 1808 1809 1883 | 16 <i>i</i> ,etc. 2003 2004 2005 | 00001000 01000110 00000000 | 00001000 01000110 00000000 | 00001000 00000110 00000000 00000000 | 00001000 00000110 00000000 | (240A) 00001000 00000110 00000000 00000000 | (240A) 00001000 00000110 00000000 | 00001000 00000110 00000000 | 00001000 00000110 00000000 | 00001000 00000110 00000000 | 00001000 00000110 00000000 | (160A) 00001000 00000110 00000000 |
| | 1884 1951 1952 1953 1954 | 2006 2007 2008 2009 2010 | 00000000 00000000 00000000 00000000 0000 | 01000100 00000000 00000000 00000000 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 0000000 0000000 0000000 0000000 0000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 |
| | 1955 1956 1707 1708 | 2011 2012 2013 2014 | 00100000 00000000 00000000 00000000 | 00100000 00000000 00000000 00000000 | 00100000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 |
| DIVA | 1750 1751 2713 2714 | 2210 2211 2300 2301 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 0000000 0000000 0000000 | 00000000 00000000 10000000 00000000 | 00000000 00000000 10000000 00000000 | 0000000 0000000 1000000 0000000 | 00000000 00000000 10000000 00000000 | 00000000 00000000 10000000 00000000 | 00000000 00000000 10000000 00000000 | 00000000 0000000 1000000 0000000 | 00000000 00000000 10000000 00000000 |
| PK1 PK2 PK3 PK1V PK2V | 1852 1853 1854 1855 1855 | 2040 2041 2042 2043 2044 | 1170 -3684 -2722 234 -2100 | 715 -3141 -2699 230 -2061 | 600 -2020 -2680 120 -1077 | 1620 -11180 -2660 16 -214 | 2626 -10051 -2660 10 -135 | 4944 -11831 -2660 16 -211 | 2392 -8448 -2657 10 -128 | 526 -2141 -2618 16 -217 | -3333 -2618 | 390 -2009 -2618 13 -179 | 1751 -6701 -2660 15 -202 |
| PK3V PK4V POA1 BLCMP | 1857 1858 1859 1860 | 2045 2046 2047 2048 | 0 -8235 1807 0 | -2001 0 -8235 1841 0 | 0 -8235 3522 0 | -8235 -5321 0 | -133 0 -8235 -8463 0 | 0 -8235 -5399 0 | -8235 -8861 0 | 0 -8235 -8755 0 | 0 -8235 -9339 0 | -8235 -6367 0 | 0 -8235 -5642 |
| DPFMX POK1 POK2 RESERV | 1861 1862 1863 1864 | 2049 2050 2051 2052 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 21 | 0 956 510 0 | 0 956 510 0 | 956 510 0 | 0 956 510 0 | 0 956 510 0 21 | 956 510 0 | 0 956 510 0 | 956 |
| PPMAX PDDP PHYST EMFCMP PVPA | 1865 1866 1867 1868 1869 | 2053 2054 2055 2056 2057 | 21 3787 319 19379 -3097 | 21 3787 319 0 -6429 | 1894 319 0 -3859 | 21 1894 319 0 0 | 21 1894 319 0 0 | | 21 1894 319 0 0 | 1894 319 0 0 | 0 | 21 1894 319 0 0 | 1894 319 0 |
| PALPH PPBAS TQLIM EMFLMT | 1870 1871 1872 1873 | 2058 2059 2060 2061 | -2000 5 6473 120 | -1529 0 7282 120 32518 | -3186 0 7282 0 32368 | 0 0 7282 120 | 120 | 0 7282 120 | 0 0 7282 120 | 0 0 5826 120 32747 | 0 6554 120 | 0 7282 120 | 0 7282 120 |
| POVC1 POVC2 TGALMLV POVCLMT PK2VAUX | 1877 1878 1892 1893 1894 | 2062 2063 2064 2065 2066 | 31823 7334 4 27745 0 | 32518 3119 4 9277 0 | 32308 4997 4 14897 0 | 32698 873 4 2590 0 | 32740 345 4 1024 0 | | 32732 452 4 1340 0 | 268 4 793 0 | 4 793 | 32720 602 4 1784 0 | |
| FILTER FALPH VFFLT ERBLM | 1895 1961 1962 1963 | 2067 2068 2069 2070 | 00000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 |
| PBLCT SFCCML PSPTL AALPH OSCTPL | 1964 1965 1966 1967 1970 | 2071 2072 2073 2074 2077 | 0 0 16384 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 |
| PDPCH PDPCL DPFEX DPFZW | 1971 1972 1973 1974 | 2078 2079 2080 2081 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| BLENDL MOFCTL RTCURR TDPLD MCNFB | 1975 1976 1979 1980 1981 | 2082 2083 2086 2087 2088 | 0 0 2838 0 0 | 0 0 2241 0 0 | 0 0 2339 0 0 | 0 0 1184 0 0 | 0 0 744 0 0 | 0 1184 0 | 0 0 852 0 0 | 0 0 655 0 0 | 0 655 0 | 0 0 983 0 0 | 0 1117 0 |
| BLBSL ROBSTL ACCSPL ADFF1 | 1982 1983 1984 1985 | 2089 2090 2091 2092 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| VMPK3V BLCMP2 AHDRTL RADUSL SMCNT | 1986 1987 1988 1989 1990 | 2093 2094 2095 2096 2097 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 |
| DEPVPL ONEPSL INPA1 INPA2 | 1991 1992 1993 1994 | 2098 2099 2100 2101 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 | 0 400 0 0 |
| DBLIM ABVOF ABTSH TRQCST LP24PA | 1995 1996 1997 1998 1999 | 2102 2103 2104 2105 2106 | 15000 0 28519 0 | 15000 0 1534 0 | 15000 0 1538 0 | 0 0 455 0 | 0 0 1450 0 | 0 0 1367 | 0 0 3168 0 | 0 0 52 0 | 0 0 104 | 0 0 104 0 | 0 0 966 |
| VLGOVR RESERV BELLTC MGSTCM | 1700 1701 1702 1703 | 2107 2108 2109 2110 | 0 0 2334 | 0 0 0 24 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| DETQLM AMRDML NFILT NINTCT MFWKCE | 1704 1705 1706 1735 1736 | 2111 2112 2113 2127 2128 | 2607 0 0 6500 | 5722 0 4054 2000 | 5160 0 2047 2000 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 |
| MFWKBL LP2GP LP4GP LP6GP | 1752 1753 1754 1755 | 2129 2130 2131 2132 | 1042 0 0 0 | 3075 0 0 0 | 3584 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| PHDLY1 PHDLY2 DGCSMM TRQCUP OVCSTP | 1756 1757 1782 1783 1784 | 2133 2134 2159 2160 2161 | 2581 15381 0 0 140 | 0 0 0 0 0 | 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 | 0 0 0 0 0 | 0 0 0 |
| POVC21 POVC22 POVCLMT MAXCRT | 1785 1786 | 2162 2163 2164 2165 | 32667 1264 21831 365 | 0 0 85 | 0 0 0 | 0 0 0 85 | 0 0 0 | 0 0 0 | 0 0 0 365 | 0 0 0 25 | 0 0 0 | 0 0 0 45 | 0 0 0 |

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

| Symbol | Motor model Motor specification Motor ID No. FS15i FS16i, 1808 200 1883 200 1884 200 1951 200 1955 200 1955 200 1955 200 1955 200 1956 200 1707 20 17708 200 | 33 00001000 44 00000110 55 0000000 66 0000000 76 0000000 98 0000000 00000100 0000000 10 0000000 2 00000000 3 0000110 4 0000010 0 0000000 | 9000B/4N 0413-B811 Linear 129 (360A) 00001000 0000000 0000000 0000000 000000 | 15000C 0414 Linear 130 (360A) 0000100 0000000 0000000 0000000 0000000 | β M0.5 0115 181 00000100 0000010 0000000 0000000 000000 | BM1 0116 182 00001100 0000000 0000000 0000000 000000 |
|--|--|--|---|--|--|---|
| PK1 PK2 PK3 PK1V PK2V | 1751 22 2713 23 2714 23 1852 20 1853 20 1854 20 1855 20 1855 20 1855 20 | 10000000 110000000 10000000 1000000 1000000 1100000 11000000 11000000 11000000 11000000 11000000 11000000 11000000 1100000000 | 00000000 10000000 00000000 7416 -17747 -2660 10 -141 | 0000000 1000000 2130 -8400 -2663 7 -87 | 00000010 0000000 0000000 141 -511 -2415 7 -59 | 00000010 0000000 0000000 -1137 -2388 6 -53 |
| PK3V PK4V POA1 BLCMP | 1857 20- 1858 20- 1859 20- 1860 20- | 6 -8235 7 -7199 | 0 -8235 -8099 0 | 0 -8235 -13022 0 | 0 -8235 -6462 0 | 0 -8235 -7176 0 |
| DPFMX POK1 POK2 RESERV | 1861 20- 1862 20- 1863 20- 1864 20- | 50 956 51 510 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 | 0 956 510 0 |
| PPMAX PDDP PHYST EMFCMP PVPA PALPH | 1865 20 1866 20 1867 20 1868 20 1868 20 1869 20 1870 20 | 1894 1894 5 319 6 0 7 0 8 0 | 21 1894 319 0 0 | 21 1894 319 0 0 | 21 1894 319 -12850 0 0 | 21 1894 319 -12850 -11530 -1000 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 TGALMLV | 1871 203 1872 200 1873 200 1877 200 1877 200 1878 200 1892 200 | 50 5917 51 120 52 32713 53 687 | 0 4855 120 32737 388 4 | 0 4855 120 32743 313 4 | 0 6918 0 32674 1178 4 | 0 7282 0 32695 915 4 |
| POVCLMT PK2VAUX FILTER FALPH VFFLT ERBLM | 1893 200 1893 200 1894 200 1895 200 1961 200 1962 200 1963 20 | 5 2038 6 0 7 0 8 0 9 0 | 1151 0 0 0 0 0 0 | 927 0 0 0 0 0 0 | 3497 0 0 0 0 0 0 | 2714 0 0 0 0 0 |
| PBLCT SFCCML PSPTL AALPH OSCTPL PDPCH | 1964 20 1965 20 1966 20 1967 20 1970 20 1970 20 1971 20 | 1 0 2 0 3 0 4 0 7 0 | 0 0 0 0 0 0 | | 0 0 20480 0 0 | 0 0 20480 0 0 |
| PDPCL DPFEX DPFZW BLENDL MOFCTL RTCURR TDPLD | 1972 20 1973 20 1974 20 1975 20 1976 20 1975 20 1976 20 1978 20 1980 20 | 50 0 51 0 52 0 53 0 56 1050 | 0 0 0 789 0 | 0 0 0 708 0 | 0 0 0 1376 0 | 0 0 0 1212 0 |
| MCNFB BLBSL ROBSTL ACCSPL ADFF1 VMPK3V | 1981 200 1982 200 1983 200 1984 200 1985 200 1985 200 | 88 0 99 0 90 0 91 0 92 0 | | | 0 0 0 0 0 0 | |
| BLCMP2 AHDRTL RADUSL SMCNT DEPVPL ONEPSL | 1987 20 1987 20 1988 20 1989 20 1990 20 1991 20 1992 20 | 04 0 05 0 06 0 07 0 08 0 | 0 0 0 0 400 | 0 0 0 0 0 400 | 0 0 0 0 0 400 | 0 0 0 0 0 400 |
| INPA1 INPA2 DBLIM ABVOF ABTSH | 1993 21 1994 21 1995 21 1996 21 1997 21 | 0 0 01 0 02 0 03 0 04 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 0 |
| TRQCST LP24PA VLGOVR RESERV BELLTC | 1998 210 1999 210 1700 210 1701 210 1702 211 | 06 0 07 0 08 0 09 0 | 2051 0 0 0 | 4656 0 0 0 | 42 0 0 0 | 89 0 0 0 |
| MGSTĊM DETQLM AMRDML NFILT NINTCT MFWKCE | 1703 21 1704 21 1705 21 1706 21 1735 21 1736 21 | 1 0 2 0 3 0 27 0 | 0 0 0 0 0 0 | | 30 10290 0 1009 0 | 30 10290 0 1763 0 |
| MFWKBL LP2GP LP4GP LP6GP PHDLY1 | 1752 21 1753 21 1754 21 1755 21 1755 21 1756 21 | 29 0 60 0 61 0 62 0 63 0 | 0 0 0 0 0 | 0 0 0 0 | 0 0 0 7690 | 0 0 0 11560 |
| PHDLY2 DGCSMM TRQCUP OVCSTP POVC21 POVC21 | 1757 21: 1782 21: 1783 21: 1783 21: 1784 21: 1785 21: | 4 0 59 0 50 0 51 0 52 0 | 0 0 0 0 0 | 0 0 0 0 | 12820 0 0 32767 | 12880 0 0 32767 |
| POVC22 POVCLMT2 MAXCRT | 1786 210 1787 210 1788 210 | 64 0 | 0 0 365 | 0 0 365 | 16 3015 25 | 12 2340 25 |

G.6 HRV2 CONTROL PARAMETERS FOR β M SERIES MOTORS

December, 2002

The HRV2 control parameters for the βM series motors are given in the table below. 90B0 series

NOTE

The parameters cannot be used with Series 9096.

APPENDIX G.PARAMETERS FOR α AND OTHER SERIES

| Symbol | FS15 <i>i</i> | Motor model otor specification Motor ID No. FS16 <i>i</i> .etc. | β M0.2 0111 260 | β M0.3 0112 261 | β M0.4 0114 280 | β M0.5 0115 281 | β M1 0116 282 |
|--|--|--|--|--|--|--|---|
| | 1808 1809 1883 1884 1951 1952 1953 1954 1955 1956 1707 1708 1750 1751 2713 | 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 2014 2210 2211 2300 | 00001000 0000001 0000000 0000000 0000000 | 00001000 0000001 0000000 0000000 0000000 | 00001000 0000001 0000000 0000000 0000000 | 00001000 0000001 0000000 0000000 0000000 | 00001000 00000011 00000000 0000000 000000 |
| PK1 PK2 PK3 PK1V | 2714 1852 1853 1854 1855 | 2300 2301 2040 2041 2042 2043 | 00000000 123 -510 -1069 4 | 00000000 210 -970 -1146 4 | 00000000 00000000 100 -430 -2463 7 | 00000000 138 -673 -1205 7 | 00000000 312 -1360 -1203 6 |
| PK2V PK3V PK4V POA1 BLCMP | 1856 1857 1858 1859 1860 | 2044 2045 2046 2047 2048 | -36 0 -8235 -10638 0 | -33 0 -8235 -11550 0 | -61 0 -8235 -6249 0 | -59 0 -8235 -6462 0 | -53 0 -8235 -7176 0 |
| DPFMX POK1 POK2 RESERV PPMAX | 1861 1862 1863 1864 1865 | 2049 2050 2051 2052 2053 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 | 0 956 510 0 21 |
| PDDP PHYST EMFCMP PVPA PALPH PALPH | 1866 1867 1868 1869 1870 | 2054 2055 2056 2057 2058 2059 | 1894 319 0 0 0 0 | 1894 319 0 0 0 0 | 1894 319 -12850 0 0 0 | 1894 319 -12850 0 0 0 | 1894 319 -12850 -15420 -1000 |
| PPBAS TQLIM EMFLMT POVC1 POVC2 TGALMLV | 1871 1872 1873 1877 1878 1892 | 2059 2060 2061 2062 2063 2064 | 7282 0 32725 533 4 | 7282 0 32725 533 4 | 5826 0 32640 1603 4 | 7282 0 32674 1178 4 | 0 7282 0 32695 915 4 |
| POVCLMT PK2VAUX FILTER FALPH VFFLT | 1893 1894 1895 1961 1962 | 2065 2066 2067 2068 2069 | 3163 0 0 0 0 | 3163 0 0 0 0 | 4759 0 0 0 0 | 3497 0 0 0 0 | 2714 0 0 0 0 |
| ERBLM PBLCT SFCCML PSPTL AALPH OSCTPL | 1963 1964 1965 1966 1967 1970 | 2070 2071 2072 2073 2074 2077 | 0 0 0 20480 0 | 0 0 0 20480 0 | 0 0 0 20480 0 | 0 0 0 20480 0 | 0 0 0 20480 0 |
| PDPCH PDPCL DPFEX DPFZW BLENDL | 1971 1972 1973 1974 1975 | 2078 2079 2080 2081 2082 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 | 0 0 0 0 0 |
| MOFCTL RTCURR TDPLD MCNFB BLBSL | 1976 1979 1980 1981 1982 | 2083 2086 2087 2088 2089 | 0 1929 0 0 0 | 0 1929 0 0 0 | 0 1605 0 0 0 | 0 1376 0 0 0 | 0 1212 0 0 0 |
| ROBSTL ACCSPL ADFF1 VMPK3V BLCMP2 | 1983 1984 1985 1986 1987 | 2090 2091 2092 2093 2094 2095 | | 0 0 0 0 0 | 0 0 0 0 0 | | 0 0 0 0 |
| AHDRTL RADUSL SMCNT DEPVPL ONEPSL INPA1 | 1988 1989 1990 1991 1992 1993 | 2095 2096 2097 2098 2099 2100 | 0 0 0 400 0 | 0 0 0 400 0 | 0 0 0 400 0 | 0 0 0 400 0 | 0 0 0 400 0 |
| INPA2 DBLIM ABVOF ABTSH TRQCST | 1994 1995 1996 1997 1998 | 2101 2102 2103 2104 2104 2105 | 0 0 0 7 | 0 0 0 14 | 0 0 0 22 | 0 0 0 42 | 0 0 0 89 |
| LP24PA VLGOVR RESERV BELLTC MGSTCM | 1999 1700 1701 1702 1703 | 2106 2107 2108 2109 2110 | 0 0 0 1 | 0 0 0 1 | 0 0 0 30 | 0 0 0 25 | 0 0 0 1556 |
| DETQLM AMRDML NFILT NINTCT MFWKCE | 1704 1705 1706 1735 1736 1752 | 2111 2112 2113 2127 2128 2129 | 7710 0 379 0 | 7700 0 852 3000 3880 | 10290 0 400 0 0 | 10290 0 504 0 | 10290 0 881 1500 5135 |
| MFWKBL LP2GP LP4GP LP6GP PHDLY1 PHDLY2 | 1752 1753 1754 1755 1756 1757 | 2129 2130 2131 2132 2133 2133 2134 | 0 0 0 7700 12825 | 3880 0 0 7695 12840 | 0 0 0 7690 12820 | 0 0 0 7690 12820 | 5135 0 0 15400 12840 |
| DGCSMM TRQCUP OVCSTP POVC21 POVC22 | 1782 1783 1784 1785 1786 | 2159 2160 2161 2162 2163 | 0 0 0 0 | 0 0 0 0 | 0 0 32766 22 | 0 0 32767 16 | 0 0 32767 12 |
| POVCLMT2 MAXCRT | 1787 1788 | 2164 2165 | 0 4 | 0 4 | 4104 25 | 3015 25 | 2340 25 |

DETAILS OF HIGH-SPEED AND HIGH-PRECISION ADJUSTMENT

(1) Overview

Appendix H explains in detail the adjustment procedure described in Section 3.3, "ADJUSTING PARAMETERS FOR HIGH-SPEED AND HIGH-PRECISION MACHINING".

(2) Feed-forward coefficient adjustment (using an arc of R10/F4000)

[Purpose of adjustment]

In a conventional position control loop where feed-forward control is not exercised, a velocity command is output based on (positional deviation) \times (position loop gain). This means that the machine moves only when there is a difference between the specification of a command and the machine position. When the position gain is 30 [1/s], for example, a feedrate of 10 m/min generates a positional deviation of 5.56 mm. In linear feed, this positional deviation does not cause a figure error. For an arc or corner, however, this positional deviation causes a large figure error.

A function for eliminating such a positional deviation is feed-forward. Feed-forward converts the position command from the CNC to a velocity command for velocity command compensation. Feed-forward can reduce a positional deviation (to almost 0, theoretically). Accordingly, feed-forward can reduce arc and corner figure errors. However, the servo response is improved, so that a shock can occur. To prevent a shock from occurring, acc./dec. before interpolation must be used at the same time.

[Guideline for adjustment value setting]

Theoretically, a feed-forward coefficient of 100% leads to a positional deviation of 0, and eliminates figure errors. Actually, however, there is a delay in velocity loop response. So, a value slightly less than 100% produces a specified figure. Usually, a value between 95% to 99% (settings of 9500 to 9900) is optimum. As the default, use 9800.

First, adjust the feed-forward coefficient while viewing an arc figure. (Set a velocity feed-forward coefficient of 50% before starting adjustment.)

[Actual adjustment]


Create a program as indicated below for circular movement by R10/F4000, and measure the path with SERVO GUIDE or SD. G08P1 and G08P0 in the program are G codes for starting and ending the advanced preview control mode in Series 16*i* and so on, respectively. For a mode to be used, select the corresponding G codes from Table H (a).


| G91; |
|--------------------|
| G08P1; |
| G17G02I-10.F4000.; |
| I-10.; |
| I-10.; |
| G08P0; |
| G04X3.; |
| M99; |


| | Start | End | |
|--|-----------|---------|--|
| FS16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> + Advanced preview control | G08P1 | G08P0 | |
| FS16 <i>i</i> + High-precision contour control | | | |
| FS16 <i>i</i> + AI high-precision contour control | 005040000 | G05P0 | |
| FS16 <i>i</i> + AI nano high-precision contour control | G05P10000 | GUSPU | |
| FS15 <i>i</i> + Fine HPCC | | | |
| FS30 <i>i</i> + AI contour control I | | | |
| FS30 <i>i</i> + AI contour control II | | | |
| FS16 <i>i</i> + AI contour control | 005 101 | 005 100 | |
| FS16 <i>i</i> + AI nano-contour control | G05.1Q1 | G05.1Q0 | |
| FS15 <i>i</i> + Fine HPCC | | | |
| FS21 <i>i</i> + AI advanced preview control | | | |

In Fig. H (a), the feed-forward coefficient is insufficient, resulting in a radius reduction of about 5 μ m. In addition, the velocity loop gain is low, so that swells and quadrant protrusions are observed. By adjusting the feed-forward coefficient as shown in Fig. H (b), the arc radius reduction can be reduced to nearly 0.

Table H (a) Codes for starting and ending each mode

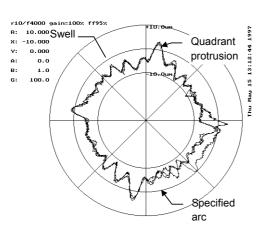

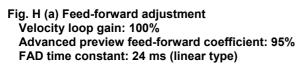


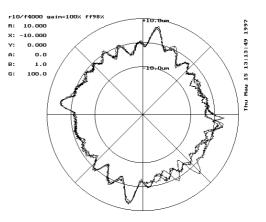


B-65270EN/06

Fig. H (b) Feed-forward adjustment Velocity loop gain: 100% <u>Advanced preview feed-forward coefficient: 98%</u> FAD time constant: 24 ms (linear type)

In the figures above, a low velocity loop gain is used for measurement. By using an increased velocity loop gain, swells and quadrant protrusions can be reduced (Fig. H (c)). Increase the velocity loop gain to 70% to 80% of the limit. Adjust the feed-forward coefficient finely, and apply quadrant protrusion compensation (backlash acc./dec.) to reduce the quadrant protrusions and improve the roundness (Fig. H (d)).

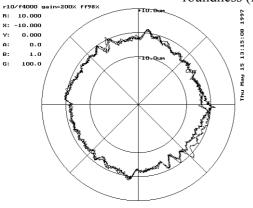

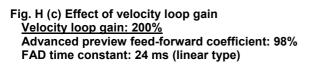

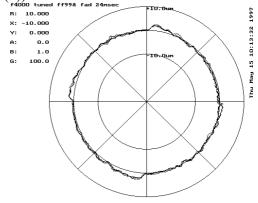


Fig. H (d) Effect of velocity loop gain <u>Velocity loop gain: 300%</u> <u>Advanced preview feed-forward coefficient: 99%</u> FAD time constant: 24 ms (linear type)

(3) Velocity feed-forward coefficient adjustment (example using a square figure with 1/4 arcs)

[Purpose of adjustment]

Feed-forward coefficient adjustment can reduce positional deviation and figure errors. If the response of the velocity loop for executing a velocity command is low, velocity control cannot be exercised as specified where the specified acceleration varies to a large extent, thus causing a figure error. The response of the velocity loop can be improved by increasing the velocity loop gain and by adjusting the velocity feed-forward coefficient.

Velocity feed-forward multiplies a specified rate of variation (acceleration) by an appropriate coefficient for torque command compensation. In the servo velocity loop (PI control), a compensation torque occurs only when a difference (velocity deviation) between a specified velocity and actual velocity actually occurs. On the other hand, velocity feed-forward performs torque command compensation according to an acceleration value specified beforehand. So, a figure error that occurs due to a velocity loop delay can be reduced.

[Guideline for adjustment value setting]


The formula below is applicable. In actual adjustment, however, make an adjustment starting with a velocity feed-forward coefficient of 100.


(Velocity feed-forward coefficient) =

100 × (Motor rotor inertia + load inertia) / Motor rotor inertia

[Actual adjustment]

Make a velocity feed-forward coefficient adjustment by using a square figure with four 1/4 arcs of a 5-mm radius. In this adjustment, disable the velocity clamp function based on an arc radius. (Disable the function, or in the example below, ensure that a velocity equal to or greater than F4000 can be specified.)

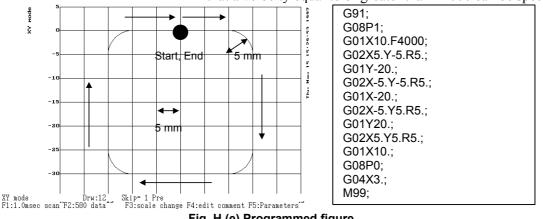

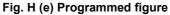

When the actual path is measured in a mode for displaying a reference path, the actual path and reference path are plotted at the same time as shown below:

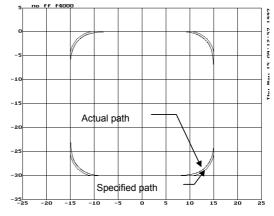


Fig. H (f) Specified path and actual path

When advanced preview feed-forward is disabled, a figure error of hundreds μ m occurs as shown in Fig. H (f), and therefore can be viewed even in the XY mode. However, if advanced preview feed-forward is enabled for figure error reduction, it is difficult to evaluate a figure error correctly unless the error is enlarged.

In such a case, use the figure comparison mode (contour mode) for enlarging errors only for display (Ctrl O).

In addition, set an error display magnification with F3 (scale change). For Fig. H (g), a display magnification of 100 is set.

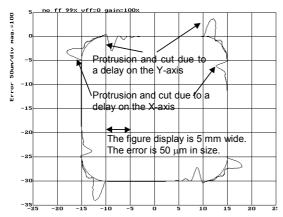


Fig. H (g) Velocity feed-forward adjustment Velocity loop gain: 100% Advanced preview feed-forward coefficient: 99% FAD time constant: 24 ms (linear type) Velocity feed-forward: 0%

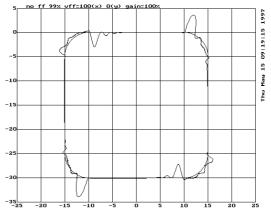


Fig. H (h) Velocity feed-forward adjustment Velocity loop gain: 100% Advanced preview feed-forward coefficient: 99% FAD time constant: 24 ms (linear type) <u>Velocity feed-forward: X100%</u>

In Fig. H (g), the velocity feed-forward coefficient is not specified, so that the movement along each axis delays where acceleration changes to a large extent. As the result, a protrusion occurs at the joint of a straight line with an arc, and a cut occurs at the joint of an arc with a straight line. In Fig. H (h), a velocity feed-forward coefficient is set for the X-axis only. The response of the X-axis has improved, so that a figure improvement can be seen in the areas where acceleration changes to a large extent along the X-axis.

In Fig. H (i), excessively large velocity feed-forward coefficients are specified, so that the protrusions shown in Fig. H (g) have changed to cuts, and the cuts have changed to protrusions. This means that optimum velocity feed-forward coefficients exist and they are less than the values of Fig. H (i). Fig. H (j) shows the result of adjustment to the optimum values. Fig. H (k) enlarges the errors only for display.

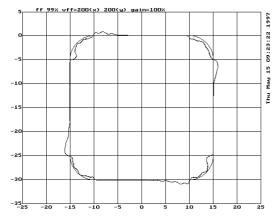


Fig. H (i) Velocity feed-forward adjustment Velocity loop gain: 100% Advanced preview feed-forward coefficient: 99% FAD time constant: 24 ms (linear type) <u>Velocity feed-forward: X200%, Y200%</u>



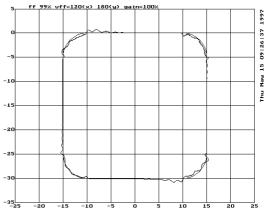


Fig. H (j) Velocity feed-forward adjustment Velocity loop gain: 100% Advanced preview feed-forward coefficient: 99% FAD time constant: 24 ms (linear type) <u>Velocity feed-forward: X120%, Y180%</u>

When the enlarged range is viewed, it is seen that the machine is vibrating in the arc areas. This vibration is caused by a low velocity loop gain. To reduce this vibration, two methods are available. One method increases the velocity loop gain. (This method cannot be used when the velocity loop gain has already been increased to the oscillation limit.) The other method decreases the feedrate in the arc areas with the arc radius based feedrate clamp function as described in Item H (4).

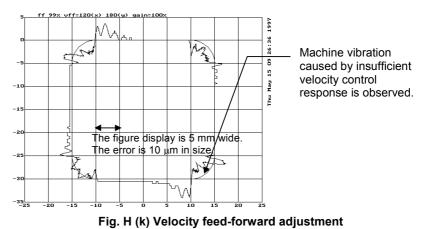

Swells in the arc areas can be reduced by increasing the velocity loop gain (Fig. H (l)). However, figure errors that occur at the joints of straight lines and arcs cannot be fully eliminated. Swells can be additionally reduced by fine adjustment of the velocity feed-forward coefficient or by using the arc radius based feedrate clamp function described in Item H (6).

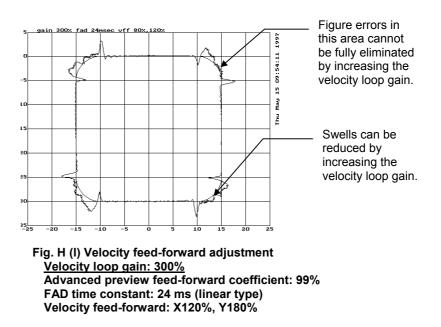


(4) Adjustment of the parameters for arc radius based feedrate clamping

[Purpose of adjustment]

As mentioned above, velocity feed-forward coefficient adjustment can improve a velocity loop response delay, thus reducing figure errors in areas where specified acceleration changes to a large extent. However, velocity feed-forward coefficient adjustment alone cannot fully eliminate figure errors. Moreover, if the rigidity of a machine itself is low, the machine may vibrate due to a change in acceleration.

To reduce variation in specified acceleration in areas where acceleration changes to a large extent, the specified feedrate in the tangent direction is reduced. In part machining (advanced preview control), the arc radius based feedrate clamp function performs this feedrate reduction. By adjusting the parameter of this function, an acceleration value in the normal direction allowable with a machine can be found. As detailed below, such an acceleration value can be used as a guideline for setting the parameter for feedrate reduction by acceleration in high-precision contour control (small successive blocks).

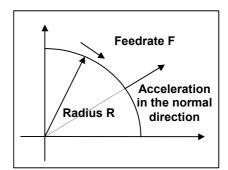

In the above figure, let R be the radius of the arc, and F be the feedrate. Then, the acceleration in the normal direction is F^2/R . The arc radius based feedrate clamp function specifies R and F as its parameters to ensure that the acceleration in the normal direction at a specified arc does not exceed the specified value.


For example, suppose that when R = 5 mm and F = 4000 mm/min are specified as the parameters of the arc radius based feedrate clamp function, the acceleration in the normal direction at the arc is:

 $F^2/R = (4000/60)^2/5 = 889 \text{ mm/sec}^2$

When using the high-precision contour control function, set about the same value as this acceleration as the parameter for feedrate reduction function based on acceleration in small blocks. In the example above, if a cutting feedrate of F4000 (mm/min) is set, the time required to reach this feedrate is calculated as follows:

 $4000/60/889 \times 1000 = 75$ msec

When the feedrate at an arc is reduced using the arc radius based feedrate clamp function, figure precision improves. However, a longer machining time is required as a side effect. Fig. H (m) shows a tangent feedrate and processing time when the arc radius based feedrate clamp function is not used with the adjustment program used in (5) and later. Fig. H (m) indicates that the tangent feedrate remains to be F4000. On the other hand, when feedrate reduction to F3000 at R5 mm is specified with the arc radius based feedrate clamp function, the tangent feedrate is reduced to F3000 at corners as shown in Fig. H (n), but the machining time has increased by 200 msec.

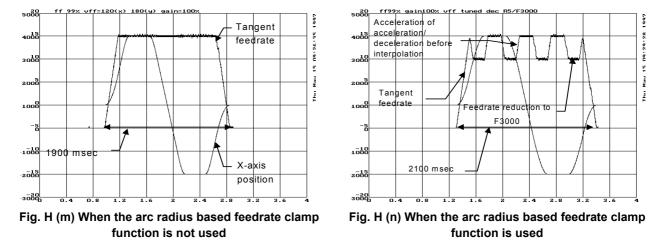

[Guideline for adjustment value setting]

Empirically, the values below are adequate. For the parameter numbers, refer to the parameter manual of each CNC. Standard: F3060 for R5 (527 mm/sec²) Speed priority I: F5150 for R5 (1473 mm/sec²) Speed priority II: F7275 for R5 (2940 mm/sec²)

[Actual adjustment]

Fig. H (o) shows the results of setting R5 mm and F3000 with the arc radius based feedrate clamp function for Fig. H (k). Fig. H (o) indicates that the figure errors at the entries and exits of the arc areas have been reduced.

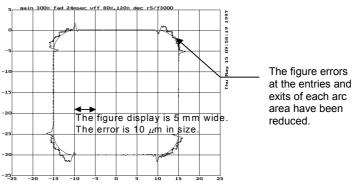


Fig. H (o) Arc radius based feedrate clamping

(5) Adjustment of an allowable feedrate difference of the feedrate difference based corner deceleration function

[Purpose of adjustment]

In the program shown in Fig. H (p), the feedrate along each axis changes to a great extent at each block joint. With a high-precision high-speed system, the CNC reads programmed figures beforehand. If the feedrate along each axis changes at a block joint, such a system can decrease the feedrate by a parameter-specified allowable feedrate difference to reduce a shock and figure error at the block joint. Acc./dec. is performed based on the time constant for acc./dec. before interpolation. A more reduced corner feedrate makes a figure error improvement to a greater extent, but requires a longer machining time. Set a reduced corner feedrate to a highest possible value as long as an allowable figure error is obtained.

[Guideline for setting]

For the parameter number, refer to the parameter manual of each CNC.

Standard: F400 for R5 Speed priority I: F500 for R5 Speed priority II: F1000 for R5

[Actual adjustment procedure]

Execute the following program, and measure the actual path.

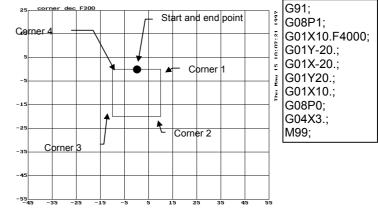


Fig. H (p) Programmed figure

The XY mode (Ctrl-X) is used for drawing. To observe an overshoot along an axis to be stopped, the figure is enlarged in the direction of the axis to be stopped. Corner 1 and corner 3 in Fig. H (p) are enlarged in the X-axis direction, and corner 2 and corner 4 are enlarged in the Y-axis direction. In the examples below, corner 1 is displayed using 0.01 mm/div in the X-axis direction and 0.1 mm/div in the Y-axis direction.

In Fig. H (q) where a reduced corner feedrate of F1000 is set, an overshoot of 10 μ m or more has occurred. In Fig. H (r), however, the overshoot is reduced to about 3 μ m.

If an overshoot cannot be removed by setting a reduced corner feedrate close to 0, the acceleration of acc./dec. before interpolation may be too large. In such a case, set a longer time for acc./dec. before interpolation. (In this case, a longer machining time results.)

Fig. H (s) shows the feedrate along the X-axis and Y-axis (corner 1) when the corner deceleration function is used.


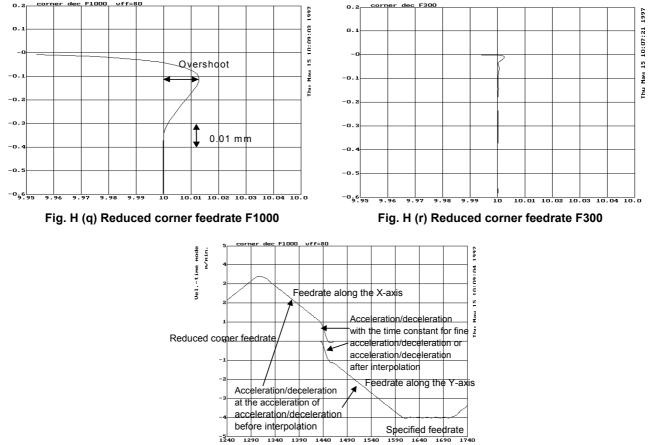



Fig. H (s) Time and feedrate relationship for reduced corner feedrate F1000

(6) Frequency characteristic measurement method (a) Using SERVO GUIDE

To measure the frequency characteristic, follow this procedure.

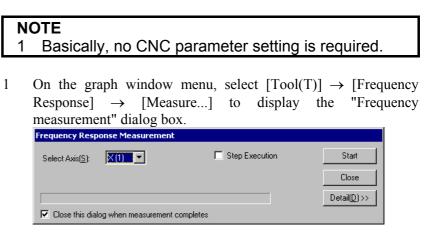

- 2 Select an axis on which you want to measure frequency characteristics, and click the [Start] button. The axis is automatically vibrated, and frequency characteristics (board line chart) are displayed.
- 3 Click the [Detail] button. It becomes possible to specify options. Make option settings as required.
- 4 To re-draw, select [Draw Bode diagram] from [Frequency Response] on the [Tool(T)] menu.

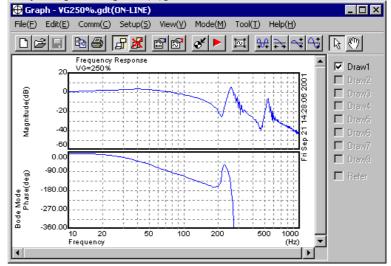


(b) When SERVO GUIDE is not used

Using the disturbance input function enables you to get frequency characteristics.

Disturbance input function

The disturbance input function is a function that lets you apply vibration to axes by entering sinusoidal disturbance wave as a torque command. With this function, you can get the frequency characteristics of the velocity loop of the system (including machine sections).

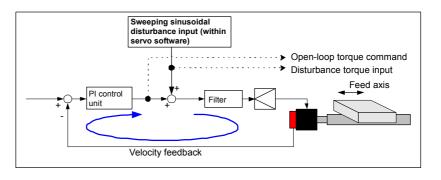

Series and editions of applicable servo software

(Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B0/A(01) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions
(Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions

Parameter setting method

<1> Specify the following parameters.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-------------------------------------|--------|-------------|------------|-------------------|-----------|-----------|-----------|----------|
| 2683 (FS15 <i>i</i>) | DSTIN | DSTTAN | DSTWAV | | | | | |
| 2270 (FS30 <i>i</i> , 16 <i>i</i>) | | | | | | | | |
| DSTIN(#7) | DIST | URBAN | CE INPU | Т | | | | |
| | 0: S | Stop | | | | | | |
| | 1: S | Start (a cl | hange of (| $\rightarrow 1 t$ | riggers d | listurban | ice input | .) |
| DSTTAN(#6) | A dist | urbance | input type | e is spe | cified as | follows | : | |
| | 0: I | nput for | only one | axis | | | | |
| | 1: I | nput for | both L an | nd M a | xes (for | synchro | nous and | d tandem |
| | S | etting is | to be mad | le only | for the I | Laxis.) | | |
| DSTWAV(#5) | The in | nput wav | eform of o | disturba | ance inp | ut is: | | |
| | 0: S | Sine wav | e. (Usuall | y, selec | t the sin | e wave.) |). | |
| | 1: S | Square w | ave. | | | | | |


B-65270EN/06 APPENDIX H.DETAILS OF HIGH-SPEED AND HIGH-PRECISION ADJUSTMENT

| 2739 (FS15 <i>i</i>) | Disturbance input gain |
|---|--|
| 2326 (FS30 <i>i</i> , 16 <i>i</i>) | 0 |
| [Default value] | () 0 to 7282 (to be get in Tand units) a value of 7282 correspondents of |
| [Valid data range] | 0 to 7282 (to be set in Tcmd units; a value of 7282 corresponds to an amplificar maximum current.) |
| | amplifier maximum current.) Usually, specify 500 to apply vibration to the machine so that it wil |
| | sound lightly. |
| | sound rightly. |
| 2740 (FS15 <i>i</i>) | Disturbance input function start frequency (Hz) |
| | |
| 2327 (FS30 <i>i</i> , 16 <i>i</i>) [Valid data range] | 1 to 2000 |
| Recommended value] | 10 |
| | 10 |
| | |
| 2741 (FS15 <i>i</i>) | Disturbance input end frequency |
| 2328 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Default value] | 200 |
| [Valid data range] | 1 to 2000 (Unit : Hz) |
| | 1 to 2000 (Onit : 112) |
| 2742 (FS15 <i>i</i>) | Number of disturbance input measurement points |
| 2329 (FS30 <i>i</i> , 16 <i>i</i>) | |
| [Default value] | 3 |
| [Valid data range] | SWEPT SINE MODE 1 to 32767 |
| [• • • • • • • • • • • • • • • • • • • | Continuous sine mode Less than 0 |
| | Usually, specify 0 or greater to make the machine vibrate in swep |
| | sine mode. |
| | |
| | <2> Cautions |
| | • Turn off the functions that work only when the machine is |
| | at a halt, such as the variable proportional gain function in |
| | the stop state and the overshoot compensation function. |
| | • When measuring cutting characteristics, pay attention to |
| | which function type, cutting or rapid traverse, is in use. |
| | • Decrease the position gain to about 1000. |
| | |
| | <3> How to use |
| | The default disturbance input setting is the swept sine mode. |
| | When the rising edge of the disturbance input bit is detected |
| | application of vibration is started. Vibration is automatically |
| | stopped when sine sweeping from the start frequency to the end frequency is completed. A reset or an emergency stop makes the |
| | machine stop operating. After the emergency stop is released |
| | turning the function bit off and on again restarts disturbance |
| | input. |
| | • Example of setting |
| | No2326 = 500 \rightarrow gain = 500 |
| | $No2320 = 500$ \rightarrow gain = 500 No2327 = 0 \rightarrow start frequency = 10 Hz |
| | $No2328 = 0$ \rightarrow end frequency = 200 Hz |
| | $102320 - 0 \rightarrow chu hequelicy - 200 fiz$ |

No2328 = 0 \rightarrow end frequency = 200 Hz No2329 = 0 \rightarrow repetition = 3 times

H.DETAILS OF HIGH-SPEED AND HIGH-PRECISION ADJUSTMENT APPENDIX B-65270EN/06

<4> Setting for outputting input/output data to the check board Make the following settings so that the disturbance input frequency and current command can be observed on the check board.

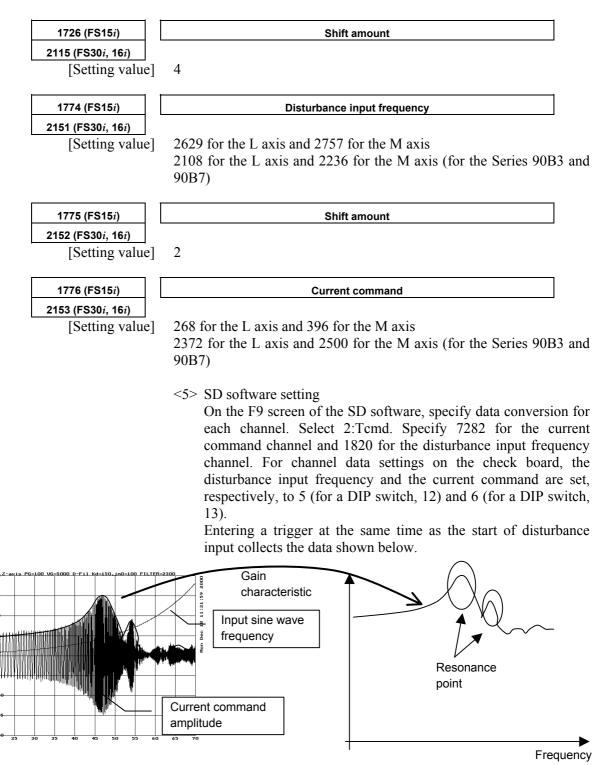

The envelope of the current command amplitude indicates the gain characteristic of the velocity loop.

pode

os.-time


(7) Adjustment of backlash acceleration

| NOTE |
|---|
| The examples given below show the adjustment of |
| backlash acceleration in the Series 30 <i>i</i> and 16 <i>i</i> . |
| Even with other CNCs, the adjustment procedure is |
| the same. When using the Series 15 <i>i</i> , however, |
| replace parameter Nos. according to the table |
| given below. |

(a) Backlash acceleration function

A simple figure as shown below is formed by the compensation value of backlash acceleration. The acceleration compensation value is added to the velocity command to help inversion of the velocity integral gain when the motor is reversed. This effect can reduce the path error in the reverse operation.

(Standard backlash acceleration)

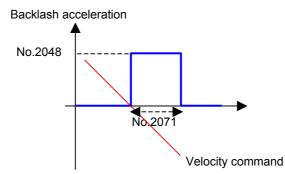

Basically, the above two parameters are considered. Parameter No. 2071 is the backlash acceleration time, and its recommended value is 20. Normally, this value need not be adjusted. Parameter No. 2048 is the backlash acceleration amount. In the initial adjustment stage, set 100 in this parameter. Adjust this value while observing the arc figure.


(b) Setting initial parameters for backlash acceleration

Before starting backlash acceleration adjustment, set the following initial parameters:

| Param | rameter No. Recommended value | | Description | |
|-------------|--------------------------------|---|---|--|
| 15 <i>i</i> | 30 <i>i</i> ,16 <i>i</i> ,etc. | Recommended value | Description | |
| 1851 | 1851 | 1 or greater | Backlash compensation | |
| 1808#5 | 2003 #5 | 1 | Enables backlash acceleration function | |
| 1884#0 | 2006 #0 | 0/1 | 0: Semi-closed loop, 1: Full-closed loop | |
| 1953#7 | 2009 #7 | 1 | Stop of backlash acceleration | |
| 2611#7 | 2223 #7 | 1 | Enables backlash acceleration during cutting only. | |
| 1957#6 | 2015 #6 | 0 | Disables the 2-stage backlash acceleration function. | |
| 1860 | 2048 | 100 | Backlash acceleration amount | |
| 1975 | 2082 | 5 (1μm detection) 50 (0.1μm detection) | Backlash acceleration stop distance (in detection unit) | |
| 1964 | 2071 | 20 | Backlash acceleration time | |


[Basic parameters for backlash acceleration]

These parameters can be set in the parameter window of SERVO GUIDE.

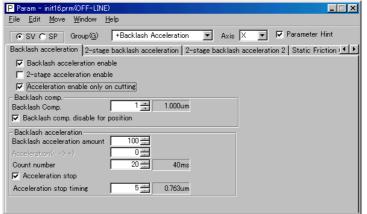


(c) Adjusting backlash acceleration

The following figure shows an arc figure before servo adjustment. Quadrant protrusions of about 4 μ m appear on the X- and Y-axes.

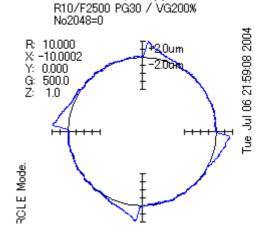


The figure below shows the result of a backlash acceleration adjustment made according to the parameter settings in item (b). By setting recommended values for backlash acceleration, quadrant protrusions can be suppressed.

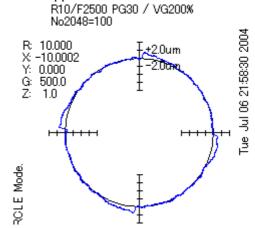


(c)-1 Determining the end of adjustment

First, it is necessary to understand when the backlash acceleration adjustment is ended. The figure below shows the result of an adjustment made by setting parameter No. 2048 to 200. An undercut occurs at the reverse points. Undercuts damage the surface of the machined workpiece, so they must be avoided. Therefore, it is necessary to end the adjustment of parameter No. 2048 just when no undercut occurs.

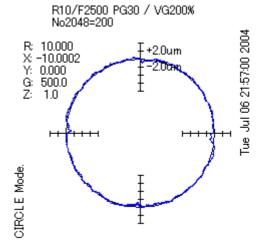

By enlarging the positional deviation at a reverse point, the generation of an undercut can be determined easily. Pressing z widens the figure while pressing Z shrinks the width. Pressing u decreases one grid size while pressing d increases the grid size.


When z and u are pressed, a figure as shown below is obtained:

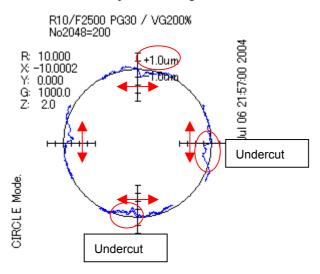

(c)-2 Effect of gain adjustment

According to the description in item (c)-3 - (1), the final value of parameter No. 2048 must be determined to be 100. However, small protrusions are still left at the reverse points. This is because the gain adjustment is insufficient in this example. The power to suppress the position gain and velocity loop gain protrusions is strong and stable. Therefore, it is necessary to make gain adjustments thoroughly before the backlash acceleration adjustment.


B-65270EN/06

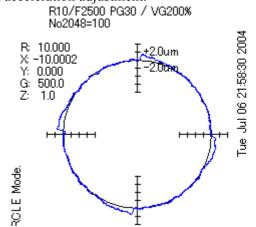


The figure shown below is the result of the gain adjustment, where backlash acceleration is not used. Even when backlash acceleration is not used, protrusions are almost eliminated. Therefore, the importance of gain adjustment can be understood.

(Adjustment items)

- Application of high-speed HRV current control
 - Velocity loop gain: 600% (200% in the above example)
- Position gain: 100/s (30/s in the above example) R10/F2500 PG100 / VG300\$*2(HRV3)

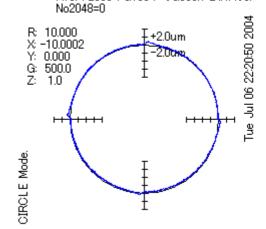

After a thorough gain adjustment, backlash acceleration can be adjusted easily. The figure shown below is the result obtained after the initial parameters of backlash acceleration listed in item (c)-3 - (2) are set. Thanks to the effect of the gain adjustment and a little backlash acceleration, protrusions are completely eliminated.

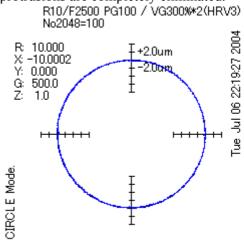


As indicated by this figure, the most important item to eliminate quadrant protrusions is gain adjustment. If gain adjustment is made successfully, backlash acceleration can be adjusted easily. Therefore, backlash acceleration does not play the leading role for suppressing quadrant protrusions.

(c)-3 Override function

The two figures shown below indicate the difference by feedrate. In this example, the same acceleration amount (parameter No. 2048 is set to 100) is used, but the results are completely reversed. This example shows that a low feedrate requires a small backlash acceleration amount and that a high feedrate requires a large acceleration amount. This means that the backlash acceleration amount must be changed according to the feedrate.

B-65270EN/06

An actually optimum acceleration amount is almost proportional to the acceleration. Therefore, an override function is required to change the acceleration amount according to the acceleration.

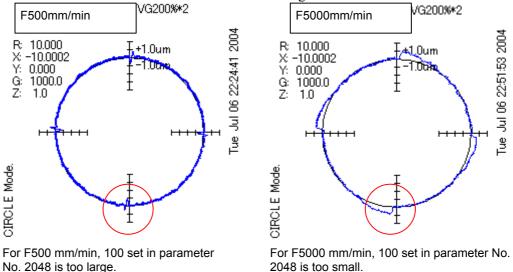


* In this chapter, PG is assumed to be 50, and VG is assumed to be 400%.

The override function has two parameters. Parameter No. 2114 specifies an override coefficient, and parameter No. 2338 specifies a limit. These parameters may be adjusted easily if steps (1) through (3) explained below are followed.


| [Parameters for the override funct | tion] |
|------------------------------------|-------|
|------------------------------------|-------|

| Parame | eter No. | Standard value | Description | |
|-------------|--------------------------------|----------------|--|--|
| 15 <i>i</i> | 30 <i>i</i> ,16 <i>i</i> ,etc. | Stanuaru value | | |
| 1860 | 2048 | 100 | Backlash acceleration amount | |
| 1725 | 2114 | 0 | Backlash acceleration override coefficient | |
| 2751 | 2338 | 0 | acklash acceleration limit | |

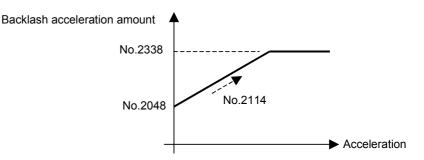

(1) Determining parameter No. 2048


To determine parameter No. 2048, an adjustment must be made at low feedrate. This example assumes a feedrate of F500 mm/min and a radius of 10 mm. Adjust an optimum value at a low feedrate, and set it in parameter No. 2048. The figure below shows the result of setting 30 in parameter No. 2048. Here, this value is set in parameter No. 2048.

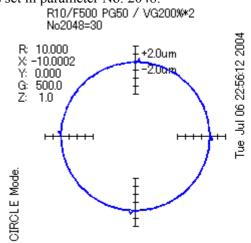

(2) Determining parameter No. 2114

Parameter No. 2114 must be set after the adjustment of parameter No. 2048. About a half of the maximum cutting feedrate is used to determine the value to be set in parameter No. 2114. In this example, F2500 mm/min is used. By increasing the value in parameter No. 2114, determine an optimum value that does not cause undercuts. Increasing the value in parameter No. 2114 increases the actual acceleration amount.


The following figure shows the result of the adjustment of parameter No. 2114. Quadrant protrusions can be suppressed satisfactory.

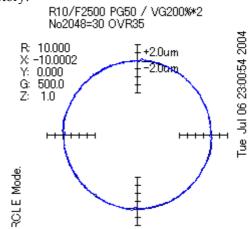


(3) Determining parameter No. 2338

Finally, set parameter No.2338. With an override coefficient determined using a middle feedrate, a large acceleration amount is output when the feedrate is set to a high feedrate. For this reason, the acceleration amount must be limited for high feedrate. In this example, F5000 mm/min is used.

B-65270EN/06

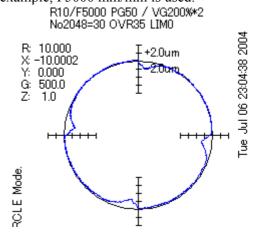

The following shows the result of the adjustment of parameter No. 2338 at high speed. Quadrant protrusions are suppressed well.

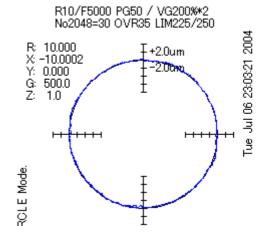


(d) Acceleration amount for each direction

There may be difference in size between the right and left quadrant protrusions or between the top and bottom quadrant protrusions. In such a case, an acceleration amount must be set separately.

If parameter No. 2094 is not 0, parameter No. 2094 is used for the left and bottom reverse points. Parameter No. 2340 is used as the override coefficient for parameter No. 2094, and parameter No. 2341 is used as the limit for parameter No. 2094.

| Parame | eter No. | Standard value | Description | |
|-------------|--------------------------------|----------------|---|--|
| 15 <i>i</i> | 30 <i>i</i> ,16 <i>i</i> ,etc. | Stanuaru value | Description | |
| 1860 | 2048 | 50 | Backlash acceleration amount | |
| 1725 | 2114 | 0 | Backlash acceleration override coefficient | |
| 2751 | 2338 | 0 | Backlash acceleration limit | |
| 1987 | 2094 | 0 | Backlash acceleration amount (- to +) | |
| 2753 | 2340 | 0 | Backlash acceleration override coefficient (- to +) | |
| 2754 | 2341 | 0 | Backlash acceleration limit (- to +) | |

[Parameters of acceleration amount for each direction]

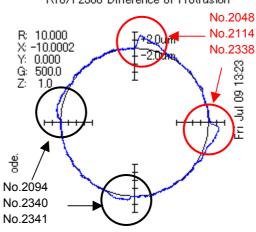



(e) Disabling backlash acceleration after stop


The optimum acceleration amount after a long stop may slightly be different from that at the time of adjustment using an arc. This phenomenon is due to the difference in friction, backlash, and machine torsion in the stopped state. The figure given below shows the bad effect of backlash acceleration, where a 3-µm overshoot is generated at the time of 10-µm step movement. As a solution to this problem, the following servo software can disable backlash acceleration after a stop:

Series and editions of applicable servo software (Series 15*i*-B,16*i*-B,18*i*-B,21*i*-B,0*i*-B,0*i* Mate-B,Power Mate *i*) Series 90B0/W(23) and subsequent editions Series 90B1/A(01) and subsequent editions (Series 0*i*-C,0*i* Mate-C,20*i*-B) Series 90B5/A(01) and subsequent editions


[Parameters for the function for disabling backlash acceleration after a stop]

| Parame | eter No. | Standard value | Description | |
|-------------|--------------------------------|----------------|---|--|
| 15 <i>i</i> | 30 <i>i</i> ,16 <i>i</i> ,etc. | Stanuaru value | | |
| 1883#7 | 2005#7 | 1 | Static friction compensation function | |
| 2696#7 | 2283#7 | 1 | Function for disabling backlash acceleration after a stop | |
| 1966 | 2073 | 5 | Judgment parameter for stop state (ITP) | |
| 1964 | 2071 | 0 | Static friction compensation function enable time | |
| 1965 | 2072 | 0 | Static friction compensation value | |

(*) This function uses the parameters for the static friction compensation function.

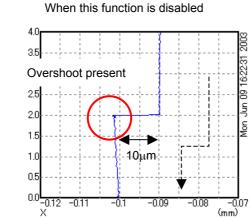

When this function is enabled

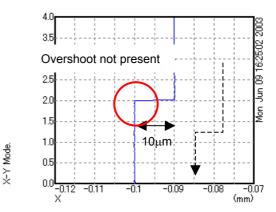

X-Y Mode

B-65270EN/06

SERVO CHECK BOARD OPERATING PROCEDURE

(1) Overview

The servo check board enables digital control values used in a digital servo section to be observed from the outside. The digital control values can be observed in either analog or digital form. Analog outputs can be observed directly with an oscilloscope, and digital outputs can be observed with a personal computer.

(2) Servo check board configuration

The following table lists the signals that can be observed with the servo check board, and the number of supported axes.

| | l able I (a) | Servo check boar | d specificatio | n | - |
|------|----------------|--------------------|--------------------------------|---------------------------------|-----|
| Name | Specification | Output interface | Number of supported axes | Number of output channels | |
| А | A06B-6057-H630 | Analog and digital | 8 | 4 (optional) | |
| В | A06B-6057-H620 | Digital only | 4 | 4 (optional) | (*) |
| С | A06B-6057-H602 | Analog only | 2 | 8 (fixed) | (*) |

Table I (a) Servo check board specification

* Servo check board A (one-piece analog/digital type) is upward-compatible, that is, can be replaced, with digital check board B and analog check board C.

The method for connecting the servo check board with a CNC varies with the type of the CNC.

The method may also vary with the name of a connectable terminal. The following table lists the ordering information for adapters and cables required to connect the check board.

| Table I (b) Adapters and cables required to connect the servo check |
|---|
| board to each CNC |

| CNC | Required adapters and cables | Ordering information |
|---|--|-------------------------|
| Series 16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> , 0 <i>i</i> | Dedicated <i>i</i> -B adapter board + dedicated <i>i</i> -B cable | A02B-0281-K822 |
| | Straight cable | A06B-6050-K872 |
| Series 15 <i>i</i> , Power Mate <i>i</i> | Adapter board + dedicated <i>i</i> series cable | A02B-0236-K822 |
| | Straight cable | A06B-6050-K872 |

NOTE

With the Series 30i, 31i, and 32i, the check board cannot be connected.

(3) Servo check board connection

When connecting the servo check board to an NC, keep the NC power supply switched off. When the servo check board is directly connected not via an adapter board, the circuitry of both of the CNC and check board can be damaged.

(a) Connection between check board A (one-piece analog/digital type) and each CNC


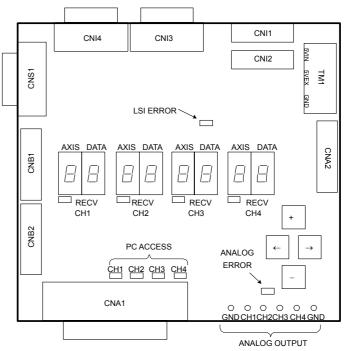


Fig. I (a) Connector layout on servo check board A (A06B-6057-H630)

Series 16i, 18i, 21i, 0i


A dedicated *i*-B cable is used to connect the CA69 connector of the CNC with the adapter.

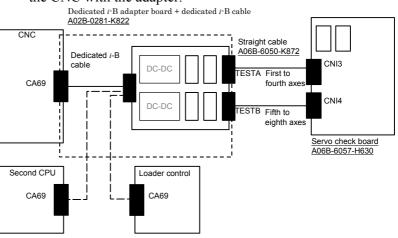

APPENDIX I.SERVO CHECK BOARD OPERATING PROCEDURE

Series 15*i*, Power Mate *i*

* A dedicated cable is used to connect the CA54 connector of the CNC with the adapter.

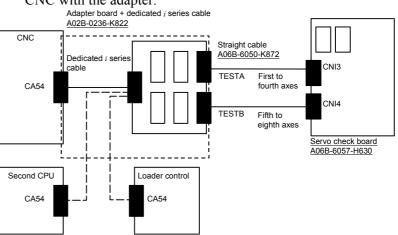

(b) Connection between servo check board B (interface board supporting automatic adjustment) and each CNC

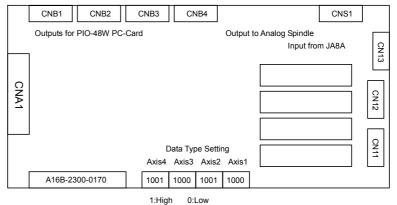


Fig. I (b) Connector layout on servo check board B (A06B-6057-H620)

- The connection method for servo check board C is the same as for servo check board A
 A straight cable is used to connect the dedicated adapter board with the check board, and TESTA or TESTB of the dedicated adapter board is connected to CBI3 on the check board. In this case, the data of axes 1 to 4 and the data of axes 5 to 8 cannot be observed at the same time.
 - (c) Connection between servo check board C (analog check board) and each CNC

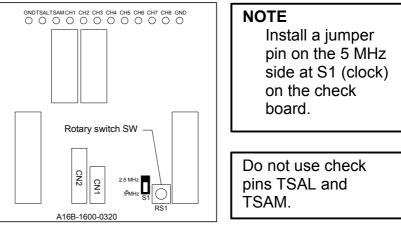


Fig. I (c) Connector layout on servo check board C (A06B-6057-H602)

* The connection method for servo check board B is the same as for servo check board A

A reverse-insertion protection cable is used to connect the dedicated adapter board with the check board, and one of TEST0 through TEST3 of the dedicated adapter board is connected to the connector CN2 on the check board.

(4) Selecting signals for observation

(a) Servo check board A (one-piece analog/digital type)

On servo check board A, a pair of two 7-segment LED digits is used to select the axis and data type for signals to be observed. Set the AXIS digit with the axis number (1 to 8) set in parameter

Set the AXIS digit with the axis number (1 to 8) set in parameter No. 1023.

Also set the DATA digit with the type of data to be observed (the table below).

Data is not output for an axis unless the RECV LED lights for that axis.


| DATA | Data type | | |
|------|--|-------|------|
| 0 | Velocity command (VCMD) | AXIS | DATA |
| 1 | Torque command (TCMD) or estimated load torque | | |
| 2 | Speed (SPEED) | | |
| 4 | Position (POS) | | |
| 5 | Automatic adjustment data | | |
| 6 | Automatic adjustment data 2 | F 🗆 F | RECV |
| 7 | Servo-spindle synchronization error (updated every 8 ms) | | |

DATA7 is output only when the CNC is the Power Mate *i*.

*

APPENDIX I.SERVO CHECK BOARD OPERATING PROCEDURE

(b) Servo check board B (digital type) Set the DIP switches as explained below.

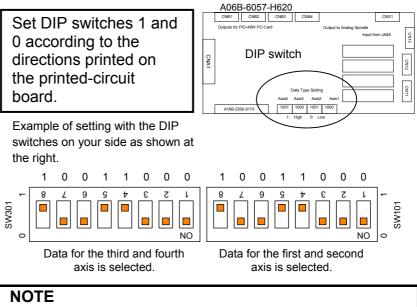

The terms "L axis" and "M axis" refer to an axis assigned an odd number specified in parameter No. 1023 and an axis assigned an even number that follows directly that odd number, respectively.

| Data type | L axis | M axis | | Data type | L axis | M axis | |
|------------------|--------|--------|---|----------------|--------|--------|---|
| Velocity command | | 0 | 1 | Position | 0 | 0 0 | 1 |
| (VCMD) | 0000 | 00 0 | 0 | (POS) | 000 | 00 | 0 |
| Torque command/ | 0 | 00 | 1 | Adjustment | 0 0 | 0 0 0 | 1 |
| estimated load | 000 | 00 | 0 | Adjustment | 0 0 | 0 | 0 |
| | 0 | 0 0 | 1 | A divertment O | 00 | 00 0 | 1 |
| Speed (SPEED) | 0 00 | 0 0 | 0 | Adjustment 2 | 00 | 0 | 0 |

(c) Servo check board C (analog type) Output data is permanently assigned to each check pin as listed below. The rotary switch on the printed-circuit board is kept at 0 for

The rotary switch on the printed-circuit board is kept at 0 for usual use.

* The terms "L axis" and "M axis" refer to an axis assigned an odd number specified in parameter No. 1023 and an axis assigned an even number that follows directly that odd number, respectively.

| | | | | | Chec | k pin | | | |
|------------|---|----------------|----------------|----------------|----------------|-----------------------------|-----------------------------|---------------------------|---------------------------|
| | | CH1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8 |
| | 0 | | | | | L axis SPEED | M axis SPEED | - | - |
| ary switch | 1 | L axis VCMD | L axis TCMD | M axis VCMD | M axis TCMD | L axis POS | M axis POS | L axis adjust- ment | M axis adjust- ment |
| Rotary | 2 | | | | | L axis adjust- ment 2 | M axis adjust- ment 2 | - | - |

(5) VCMD signal


When the feed-forward function is not used, the VCMD signal conveys a velocity command.

With this signal, it is possible to measure very slight vibration in the motor and its motion irregularity.

When the feed-forward function is used, the VCMD signal represents a positional deviation rather than a velocity command. So the signal can be used to measure vibration in the motor and irregularity in the feed distance of the tool driven by the motor.

The signal conversion type for the VCMD signal can be switched using parameters.

This switching is used, if the signal waveform is hard to observe because of the VCMD signal being reciprocating within ± 5 V.

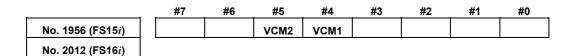

| | Parame | eters for rotary motor |
|------|--------|------------------------------|
| VCM2 | VCM1 | Specified rotation speed/5 V |
| 0 | 0 | 0.9155 min ⁻¹ |
| 0 | 1 | 14 min ⁻¹ |
| 1 | 0 | 234 min ⁻¹ |
| 1 | 1 | 3750 min ⁻¹ |

Parameters for linear motor (Incremental type : P=signal pitch[μ m]) (Absolute type : P= resolution [μ m] × 512)

| VCM2 | VCM1 | Specified velocity/5 V |
|------|------|------------------------|
| 0 | 0 | 0.00375 × P m/min |
| 0 | 1 | 0.006 × P m/min |
| 1 | 0 | 0.96 × P m/min |
| 1 | 1 | 15.36 × P m/min |

Using an oscilloscope to see the movement of the entire signal in DC mode, then its magnified image in AC mode enables you to check very slight vibration in the motor and its motion irregularity.

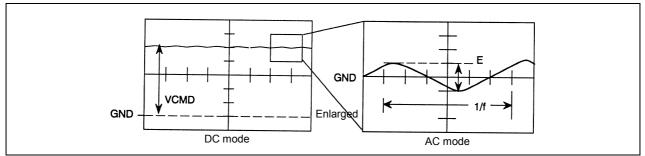


Fig. I (d) Waveform of the VCMD signal

APPENDIX I.SERVO CHECK BOARD OPERATING PROCEDURE

The following table lists the number of positional deviation pulses for a VCMD voltage of 5 V.

Table I (c) Number of positional deviation pulses for a VCMD voltage of 5 V for semi-closed loop

| VCM2 | VCM1 | Number of positional deviation pulses for a VCMD voltage of 5 V |
|------|------|--|
| 0 | 0 | 15,258 × FFG/Kp |
| 0 | 1 | 244,133 × FFG/Kp |
| 1 | 0 | 3,906,133 × FFG/Kp |
| 1 | 1 | 62,498,133 × FFG/Kp |

Kp: Position gain (s^{-1})

FFG: Flexible feed gear (numerator/denominator)

Table I (d) Number of positional deviation pulses for a VCMD voltage of 5 V for full-closed loop

| VCM2 | VCM1 | Number of positional deviation pulses for a VCMD voltage of 5 V |
|------|------|--|
| 0 | 0 | $0.0153 \times (number of positional feedback occurrences per motor revolution)/Kp$ |
| 0 | 1 | 0.2441 \times (number of positional feedback occurrences per motor revolution)/Kp |
| 1 | 0 | 3.96061 \times (number of positional feedback occurrences per motor revolution)/Kp |
| 1 | 1 | $62.5 \times$ (number of positional feedback occurrences per motor revolution)/Kp |

Kp: Position gain (s^{-1})

Table I (e) Number of positional deviation pulses for a VCMD voltage of 5V when a linear motor is in use

| VCM2 | VCM1 | Number of positional deviation pulses for a VCMD voltage of 5 V |
|------|------|--|
| 0 | 0 | 32,000×FFG/Kp |
| 0 | 1 | 512,000×FFG/Kp |
| 1 | 0 | 8,192,000×FFG/Kp |
| 1 | 1 | 131,072,000×FFG/Kp |

Kp: Position gain (s^{-1})

FFG: Flexible feed gear (numerator/denominator) (Example)

Assume the following conditions:

Position gain = 30 (s⁻¹), semi-closed loop, detection unit of 1 μ m/pulse, flexible feed gear = 1/100,

VCM2 = 0, VCM1 = 1 (VCMD waveform signal calculation parameters)

If a waveform with E = 0.3 V and I/f = 20 ms is observed:

Number of positional deviation pulses for a VCMD voltage of 5 V = 244133/100/30 = 81 pulses

Table vibration = $81 \times 0.3/5 = 4.88 \ \mu m$ Vibration frequency = 50 Hz

(6) TCMD signal

The TCMD signal conveys a torque command for the motor. When a motor is running at high speed, its actual currents (IR and IS) may differ from the rating because of back electromotive force. The output voltage of the signal becomes 4.44 V at maximum current. A higher signal voltage may be observed in a motor in which the actual current limit function is enabled, however.

| | | Table I (f) TCMD waveform conversion |
|--------------------|----------|---|
| Maximum current | Ap/V | Applicable servo motor |
| 4Ap | 0.9 | β <i>i</i> S0.2/5000, β <i>i</i> S0.3/5000 |
| 10Ap | 2.3 | α <i>i</i> S2/5000HV, α <i>i</i> S2/6000HV, α <i>i</i> S4/5000HV, |
| | | β <i>i</i> S2/4000HV, β <i>i</i> S4/4000HV, β <i>i</i> S8/3000HV |
| | | α <i>i</i> S2/5000, α <i>i</i> S2/6000, α <i>i</i> S4/5000, α <i>i</i> F1/5000, |
| | | α <i>i</i> F2/5000, α <i>i</i> F4/4000HV, α <i>i</i> F8/3000HV, |
| | | αC4/3000 <i>i</i> , αC8/2000 <i>i</i> , αC12/2000 <i>i</i> , |
| 20Ap | 4.5 | β <i>i</i> S0.4/5000, β <i>i</i> S0.5/5000, β <i>i</i> S0.5/6000, β <i>i</i> S1/5000, β <i>i</i> S1/6000, |
| | | β <i>i</i> S2/4000, β <i>i</i> S4/4000, β <i>i</i> S8/3000, β <i>i</i> S12/3000HV, |
| | | β <i>i</i> S22/2000HV, |
| | ļ | LiS300A1/4, LiS1500B1/4(400V) |
| | | α <i>i</i> F4/4000, α <i>i</i> F8/3000, α <i>i</i> S8/4000HV, α <i>i</i> S8/6000HV, |
| | | α <i>i</i> S12/4000HV, α <i>i</i> F12/3000HV, α <i>i</i> F22/3000HV, αC22/2000 <i>i</i> , |
| 40Ap | 9 | $\beta i S2/4000(40A-driven), \beta i S4/4000(40A-driven),$ |
| | | β <i>i</i> S8/3000(40A-driven), β <i>i</i> S12/3000, β <i>i</i> S22/2000, L <i>i</i> S600A1/4, |
| | - | LiS900A1/4, LiS1500B1/4, LiS3000B2/2 , LiS4500B2/2HV |
| | | αiS8/4000, αiS8/6000, αiS12/4000, αiF12/3000, |
| | | α <i>i</i> F22/3000, α <i>i</i> S22/4000HV, α <i>i</i> S30/4000HV, α <i>i</i> S40/4000HV, |
| 80Ap | 18 | αC30/1500 <i>i</i> , L <i>i</i> S3000B2/4, L <i>i</i> S4500B2/2, L <i>i</i> S6000B2/2, |
| | | LiS6000B2/2HV, LiS7500B2/2HV, LiS3300C1/2, |
| | | LiS11000C2/2HV |
| | | α <i>i</i> S22/4000, α <i>i</i> S30/4000, α <i>i</i> S40/4000, |
| 160Ap | 36 | α <i>i</i> F30/3000, α <i>i</i> F40/3000, α <i>i</i> F40/3000 FAN, |
| | | LiS6000B2/4, LiS7500B2/2, LiS9000B2/2, LiS9000C2/2, |
| | | LiS11000C2/2, LiS10000C3/2 |
| | | αiS50/3000HV, αiS50/3000HV FAN, αiS100/2500HV, |
| 180Ap | 41 | α <i>i</i> S200/2500HV, L <i>i</i> S7500B2/2(400V), L <i>i</i> S9000B2/2(400V), |
| | | LiS9000C2/2(400V), LiS11000C2/2(400V), LiS15000C2/3HV, |
| | | LiS10000C3/2(400V) |
| | | α <i>i</i> S50/3000, α <i>i</i> S50/3000FAN, α <i>i</i> S100/2500, α <i>i</i> S200/2500, |
| 360Ap | 82 | α <i>i</i> S300/2000, α <i>i</i> S500/2000, α <i>i</i> S300/2000HV, α <i>i</i> S500/2000HV, |
| | | α <i>i</i> S1000/2000HV, L <i>i</i> S7500B2/4, L <i>i</i> S9000B2/4, L <i>i</i> S15000C2/2, |
| | | LiS15000C2/3, LiS17000C3/2 |
| 1440Ap | | α <i>i</i> S2000/2000HV |
| * E | Effectiv | ve current (RMS) = TCMD signal output (Ap) \times 0.71 |

(7) SPEED signal

The SPEED signal conveys the rotation speed of the motor. Signal conversion 3750 min⁻¹/5 V

Linear motor (Incremental : $P = signal pitch[\mu m]$) (Absolute : P= resolution [µm] × 512) Signal conversion 15.36 × P (m/min)/5 V

APPENDIX I.SERVO CHECK BOARD OPERATING PROCEDURE

When the SPEED signal is latched at 5 V, check whether the following parameter is set with a value.

| No. 1726 (FS15 <i>i</i>) | | Must be kept at 0. |
|---------------------------|---|---|
| No. 2115 (FS16 <i>i</i>) | | |
| | * | Setting this representation with a seclar other than 0 diself |

* Setting this parameter with a value other than 0 disables the SPEED signal output.

(8) Changing the check board output magnification for the TCMD and SPEED signals

Conventionally, the measured waveforms of the TCMD signal (torque command) and SPEED signal (actual feedrate) were folded at 5 V in some cases and difficult to read if the torque command value is large or the actual feedrate exceeds 3750 min^{-1} , because the ranges of these signals were fixed when output to the check board. An improvement was made so that the output ranges of measured waveforms can be changed according to parameter settings.

Series and editions of applicable servo software Series 90B0/N(14) and subsequent editions Series 90B1/A(01) and subsequent editions Series 90B6/A(01) and subsequent editions Series 90B5/A(01) and subsequent editions

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|---------------------------|---|----|--------|----|----|-------|--------|----|
| No. 2613 (FS15 <i>i</i>) | | | | | | TSA05 | TCMD05 | |
| No. 2225 (FS16 <i>i</i>) | | | | | | | | |
| TCMD05(#1) | The voltage of the TCMD signal output to the check board is: 0: Unchanged (default) 1: Halved * The actual output voltage is affected by the following function bit (TCMD4X). | | | | | | | |
| TSA05(#2) | The voltage of the SPEED signal output to the check board is: 0: Unchanged (3750 min⁻¹/5 V) (default) 1: Halved (7500 min⁻¹/5 V) Conventionally, there has been the following function bit (TCMD4X) for multiplying the output voltage weight of TCMD by 4. This bit can be used along with the newly added function bit (TCMD05). | | | | | | | |
| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
| No. 1743 (FS15 <i>i</i>) | | | TCMD4X | | | | | |
| No. 2203 (FS16 <i>i</i>) | | | | | | | | |
| TCMD4X(#5) | 0: U | | | | | | | |

Using these function bits changes the output ranges of the TCMD and SPEED signals as listed in Table I (g) and Table I (h).

- TCMD signal output range

Table I (g) TCMD signal conversion (improved)

| TCMD4X | TCMD05 | TCMD value/4.4 V | Remark |
|--------|--------|--|-------------------|
| 0 | 1 | Amplifier maximum current \times 2 (A) | |
| 0 | 0 | Amplifier maximum current (A) | Conventional mode |
| 1 | 1 | Amplifier maximum current/2 (A) | |
| 1 | 0 | Amplifier maximum current/4 (A) | × 4 mode |

Example:

Relationships between the output voltage and TCMD value [A] when an 80-A amplifier is used

| TCMD4X | TCMD05 | TCMD value/4.4 V |
|--------|--------|------------------|
| 0 | 1 | 160 [A] |
| 0 | 0 | 80 [A] |
| 1 | 1 | 40 [A] |
| 1 | 0 | 20 [A] |

- SPEED signal output range

| TSA05 | Actual feedrate per 5 V Rotary motor | Actual feedrate per 5 V Linear motor | Remark |
|-------|---|---|-------------------|
| 0 | 3750 [min⁻¹] | 15.36 × P [min ⁻¹] | Conventional mode |
| 1 | 7500 [min ⁻¹] | 30.72 × P [min ⁻¹] | |

Table I (h) SPEED signal conversion (improved)

* Letter P in the linear motor column has a different meaning depending on the type of the scale.

• When the FANUC high-resolution serial conversion circuit is used

```
(Incremental scale) \rightarrow P = signal pitch[µm]
```

• When a scale that matches the FANUC serial interface is used. (Absolute scale) \rightarrow P = resolution [µm] × 512

(9) Acquiring signals using a personal computer

Servo check boards A and B, listed in Table I (a), have a digital output interface. Using the servo adjustment software (SD) enables them to collect servo data such as position and speed through the interface into a personal computer.

(a) Connection between a servo check board and a personal computer (IBM PC/AT compatible)
 Connect servo check board connector CNA1 to the printer port of a personal computer. The printer port must support bidirectional communication mode. (Measurement is impossible in ECP mode.)
 Windows[®] does not support the servo adjustment software (SD).

Windows[®] does not support the servo adjustment software (SD). Use it in full-screen mode or MS-DOS mode.

APPENDIX I.SERVO CHECK BOARD OPERATING PROCEDURE

(b) Basic operating instructions


<1> Enter "SD INIT" at a DOS prompt. The software starts with all its states initialized, and its main screen appears (if the name of the software's executable file is "SD.EXE"). The main screen lets you measure and view data.


Entering "CTRL + letter" switches the drawing mode. Select a drawing mode suitable for the data to be observed. (Pressing the ? key displays a list of the available drawing modes.)

Drawing mode examples:

CTRL + X: XY mode (XY display)

CTRL + T: XTYT mode (time axis display)

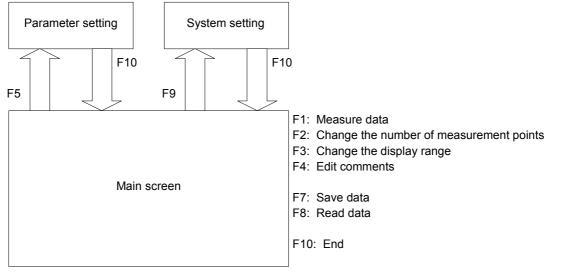

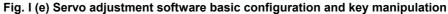

<2> To change the type of data to be measured and the unit of conversion for it, press the F9 key on the main screen to display the system setting screen.

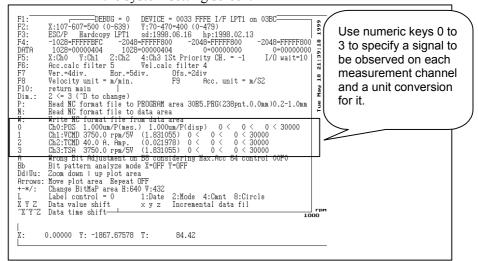


Fig. I (f) System setting screen

Data output on CH1 to CH4 of the check board corresponds to channels 0 to 3 on the SD software. To change the setting, press numeric key 0 to 3. Select a data type (0: position, 1: velocity command, 2: torque command, 3: rotation speed) from the display at the bottom of the screen, then specify the unit of conversion for the data.

Conversion values (except for position data) can be set up according to descriptions in (5) to (8).

| Туре | Display at the bottom of the screen | Meaning of conversion values | Example | Input value |
|-------------------------------------|---|--|----------------------|---|
| POS | 1 pulse = X? | Detection unit (in mm units) | 1 µm | 0.001 |
| VCMD | $5 V = X \min^{-1}$? | What min ⁻¹ corresponds to VCMD of 5 V? | VCM2 = 1 VCM1 = 1 | 3750 ^(Note) |
| TCMD | X Ap. Amp.? | Maximum amplifier current (A) | 40 A | 40 |
| SPEED (number of revolutions) | 5 V = X min ⁻¹ ? | What min ⁻¹ corresponds to SPEED of 5 V? | - | Constantly 3750 (rotary motor) |

Table I (i) Meaning of measurement data conversion values and example setting

NOTE

To observe the VCMD signal as the number of positional deviation pulses, input conversion values listed in Tables I (c) to (e).

To exit the system setting screen, press the F10 key.

<3> To specify measurement intervals, press the F5 key to display the parameter setting screen.

Pressing numeric keys 1, 2, 5, and 0 can change the setting. Usually select 1 ms.

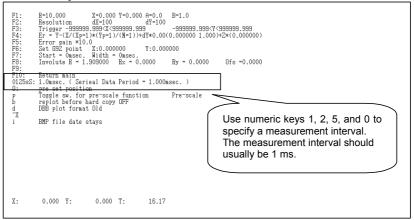


Fig. I (g) Parameter setting screen

To return to the main screen after parameter setting, press the F10 key.

INDEX

<A>

| ABBREVIATIONS OF THE NC MODELS COVER | ED |
|--|-----|
| BY THIS MANUAL | 4 |
| Acceleration Feedback Function | 142 |
| ACTIONS FOR ALARMS | 67 |
| Actions for Illegal Servo Parameter Setting Alarms | 51 |
| ADJUSTING PARAMETERS FOR HIGH-SPEED | |
| AND HIGH-PRECISION MACHINING | 76 |
| Adjustment | 381 |
| Advanced Preview Feed-forward Function | 183 |
| ANALOG SERVO INTERFACE SETTING | |
| PROCEDURE | 457 |
| | |

| Backlash Acceleration Function | 193 |
|---------------------------------------|-----|
| Before Servo Parameter Initialization | 8 |
| Block Diagrams | |
| BRAKE CONTROL FUNCTION | |

<C>

| Cautions for Controlling One Axis with Two Motors | 385 |
|---|-----|
| CONTOUR ERROR SUPPRESSION FUNCTION | 179 |
| Current Loop 1/2 PI Control Function | 166 |
| Cutting/Rapid Feed-forward Switching Function | 188 |
| CUTTING/RAPID SWITCHING FUNCTION | 134 |
| Cutting/Rapid Unexpected Disturbance Torque | |
| Detection Switching Function | 277 |

<D>

| Damping Compensation Function |
|---|
| DEFINITION OF WARNING, CAUTION, AND |
| NOTEs-1 |
| DETAILS OF HIGH-SPEED AND HIGH-PRECISION |
| ADJUSTMENT |
| DETAILS OF PARAMETERS400 |
| DETAILS OF THE SERVO PARAMETERS FOR |
| Series 30 <i>i</i> , 31 <i>i</i> , 32 <i>i</i> , 15 <i>i</i> , 16 <i>i</i> , 18 <i>i</i> , 21 <i>i</i> , 0 <i>i</i> , 20 <i>i</i> , |
| Power Mate <i>i</i> (SERIES 90D0, 90E0, 90B0, 90B1, |
| 90B6, 90B5, AND 9096) |
| Detection of an Overheat Alarm by Servo Software |
| when a Linear Motor and a Synchronous Built-in Servo |
| Motor are Used |

| Detection of an Overheat Alarm by Servo Software |
|--|
| when a Synchronous Built-in Servo Motor are Used 346 |
| Disturbance Elimination Filter Function |
| (Low-Frequency Resonance Elimination Filter) |
| Dual Position Feedback Function (Optional function)170 |
| < |

<F>

| Feed-forward Function | 179 |
|---|-----|
| Feed-forward Timing Adjustment Function | 190 |
| Fine Acceleration/Deceleration (FAD) Function | 239 |
| Full-closed Feedback Sharing Function | 380 |
| FUNCTION FOR OBTAINING CURRENT | |
| OFFSETS AT EMERGENCY STOP | 279 |
| FUNCTION-SPECIFIC SERVO PARAMETERS | 473 |

<H>

| HIGH-SPEED HRV CURRENT CONTROL | 122 |
|---|-----|
| High-speed HRV Current Control | 133 |
| High-Speed Positioning Adjustment Procedure | 99 |
| HIGH-SPEED POSITIONING FUNCTION | 233 |
| How to Use the Dummy Feedback Functions for a | |
| Multiaxis Servo Amplifiers when an Axis is not in | |
| Use | 250 |
| HRV1 CONTROL PARAMETERS FOR α SERIES, | |
| β SERIES, AND CONVENTIONAL LINEAR | |
| MOTORS | 519 |
| HRV2 CONTROL PARAMETERS FOR βM SERIES | |
| MOTORS | 528 |
| | |

</>

| INITIALIZING SERVO PARAMETERS8 |
|--------------------------------|
|--------------------------------|

<L>

| Lifting Function Against Gravity at Emergency Stop 25 | 58 |
|---|----|
| LINEAR MOTOR PARAMETER SETTING | 30 |
| Low-speed Integral Function | 37 |

<M>

| MACHINE RESONANCE ELIMINATION | |
|-------------------------------------|-----|
| FUNCTION | 150 |
| Machine Speed Feedback Function | 176 |
| MODEL-SPECIFIC INFORMATION | 482 |
| Motor Feedback Sharing Function | 379 |
| MOTOR ID NUMBERS OF a SERIES MOTORS | 514 |
| MOTOR ID NUMBERS OF β SERIES MOTORS | 516 |

| | MOTOR ID NUMBERS OF CONVENTIONAL | |
|---|----------------------------------|-----|
| | LINEAR MOTORS | 517 |
| < | V> | |

| N Pulses Suppression Function | N Pulses | Suppression | Function | 148 |
|-------------------------------|----------|-------------|----------|-----|
|-------------------------------|----------|-------------|----------|-----|

<0>

| Observer Function | 162 |
|---|-----|
| Overall Use of the Quick Stop Functions | 265 |
| Overshoot | 112 |
| OVERSHOOT COMPENSATION FUNCTION | 227 |
| OVERVIEW | 1 |

<P>

| Parameter Initialization Flow | 9 |
|--|------|
| PARAMETER LIST | .427 |
| PARAMETERS FOR α AND OTHER SERIES | 513 |
| PARAMETERS FOR HRV1 CONTROL | .428 |
| PARAMETERS FOR HRV1 CONTROL | |
| (FOR Series 0 <i>i</i> -A) | 451 |
| PARAMETERS FOR HRV2 CONTROL | .438 |
| PARAMETERS FOR Series 15i | .465 |
| PARAMETERS FOR Series 16i, 18i, AND 21i | .467 |
| PARAMETERS FOR Series 30i, 31i, AND 32i | .471 |
| PARAMETERS FOR SERVO HRV2 CONTROL | 518 |
| PARAMETERS FOR THE Power Mate <i>i</i> | .469 |
| PARAMETERS RELATED TO HIGH-SPEED AND | |
| HIGH PRECISION OPERATIONS | .481 |
| PARAMETERS SET WITH VALUES IN | |
| DETECTION UNITS | 464 |
| Position Gain Switching Function | 233 |
| Preload Function | .372 |
| Procedure for Setting the Initial Parameters of Linear | |
| Motors | 280 |
| Procedure for Setting the Initial Parameters of | |
| Synchronous Built-in Servo Motors | .320 |

<Q

| QUICK STOP FUNCTION | 255 |
|---|-------|
| Quick Stop Function at OVL and OVC Alarm | 264 |
| Quick Stop Function for Hardware Disconnection of | |
| Separate Detector | . 262 |
| Quick Stop Type 1 at Emergency Stop | 255 |
| Quick Stop Type 2 at Emergency Stop | 257 |

<**R**

Rapid Traverse Positioning Adjustment Procedure...... 102

| | RELATED MANUALS |
|----|---|
| | Resonance Elimination Filter Function |
| | (High-Frequency Resonance Elimination Filter)152 |
| | RISC Feed-forward Function |
| <5 | ~ |
| | SERIAL FEEDBACK DUMMY FUNCTIONS |
| | Serial Feedback Dummy Functions |
| | Series 15i-MB |
| | Series 16 <i>i</i> /18 <i>i</i> /21 <i>i</i> /0 <i>i</i> /0 <i>i</i> Mate-MB, 0 <i>i</i> /0 <i>i</i> Mate-MC/ |
| | 20 <i>i</i> -FB |
| | Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> -A, 31 <i>i</i> -A5 |
| | Servo Alarm 2-axis Simultaneous Monitor Function |
| | SERVO CHECK BOARD OPERATING |
| | PROCEDURE |
| | SERVO FUNCTION DETAILS |
| | SERVO FUNCTION DETAILS |
| | |
| | SERVO GUIDE |
| | |
| | Servo HRV Control Adjustment Procedure |
| | Servo HRV2 Control |
| | Servo HRV3 Control |
| | Servo HRV4 Control |
| | Servo Parameter Initialization Procedure |
| | SERVO PARAMETERS RELATED TO |
| | HIGH-SPEED AND HIGH PRECISION |
| | OPERATIONS |
| | SERVO SOFTWARE AND SERVO CARDS |
| | SUPPORTED BY EACH NC MODEL |
| | SERVO TUNING SCREEN |
| | SERVO TUNING TOOL SERVO GUIDE |
| | SETTING aiS/aiF/biS SERIES SERVO |
| | PARAMETERS |
| | Setting Parameters when an aiCZ Sensor is Used |
| | Setting Parameters when the PWM Distribution Module |
| | is Used |
| | Setting Servo Parameters when a Separate Detector for |
| | the Serial Interface is Used |
| | Setting Servo Parameters when an Analog Input |
| | Separate Interface Unit is Used40 |
| | Smoothing Compensation for Linear Motor |
| | Smoothing Compensation for Synchronous Built-in |
| | Servo Motor |
| | Static Friction Compensation Function |
| | Stick Slip111 |

| SYNCHRONOUS AXES AUTOMATIC | |
|----------------------------------|------|
| COMPENSATION | .362 |
| SYNCHRONOUS BUILT-IN SERVO MOTOR | |
| PARAMETER SETTING | .320 |

<**T**>

| TANDEM DISTURBANCE ELIMINATION | |
|--|-----|
| CONTROL (POSITION TANDEM) | |
| (Optional function) | |
| Torque Command Filter (Middle-Frequency | |
| Resonance Elimination Filter) | |
| TORQUE CONTROL FUNCTION | |
| TORQUE TANDEM CONTROL FUNCTION | |
| (Optional function) | |
| Torsion Preview Control Function | 217 |
| Two-stage Backlash Acceleration Function | |

<U>

| Unexpected Disturbance Torque Detection Function266 |
|---|
| UNEXPECTED DISTURBANCE TORQUE |
| DETECTION FUNCTION (Optional function)266 |

<V>

| Variable Proportional Gain Function in the Stop State . 144 | |
|---|--|
| Velocity Feedback Average Function | |
| VELOCITY LIMIT VALUES IN SERVO | |
| SOFTWARE | |
| Velocity Loop High Cycle Management Function140 | |
| Vibration Damping Control Function168 | |
| Vibration during Travel109 | |
| Vibration in the Stop State107 | |
| VIBRATION SUPPRESSION IN THE STOP | |
| STATE | |
| | |

<α>

 $\alpha \dot{i}$ S/ $\alpha \dot{i}$ F/ $\beta \dot{i}$ S SERIES PARAMETER ADJUSTMENT..63

Revision Record

FANUC AC SERVO MOTOR $\alpha i S/\alpha i F/\beta i S$ series PARAMETER MANUAL (B-65270EN)

| | | | | Model name change Addition of the D <i>i</i> S series motor Addition of functions added after issue of Edition 05 Correction of errors | Contract. |
|---|--|---|--|---|-----------|
| | | | | Model name change Addition of the D<i>i</i>S series motor Addition of functions added after Correction of errors | |
| | | | | Feb., 2006 | Data |
| | | | | 05 | Edition |
| Applied to Series30<i>i</i>/31<i>i</i>/32<i>i</i> Addition of HRV4 control Total revision of chapter of Parameter Adjustment Addition of functions added after issue of Edition 04 Correction of errors | Addition of the SERVO MOTOR β<i>is</i> series Addition of functions added after issue of Edition 03 Correction of errors | Addition of the SERVO MOTOR αis series Addition of item for SERVO GUIDE(Ver 2.00) Addition of functions added after issue of Edition 02 Correction of errors | Addition of the parameter tables for αHVi Addition of item for SERVO GUIDE Addition of functions added after issue of Edition 01 Correction of errors | | Contents |
| May., 2005 | Oct., 2003 | Mar., 2003 | Sep., 2002 | May, 2001 | Date |
| 05 | 04 | 03 | 62 | 01 | Edition |

ADDITIONAL INFORMATION

Notice of the Update of Digital Servo Software for Series 30i/31i/32i (90D0/12 & 90E0/12)

1. <u>Type of applied documents</u>

| Name | FANUC AC SERVO MOTOR $\alpha i S/\alpha i F/\beta i S$ series Parameter manual |
|----------------|--|
| Spec. No./Ver. | B-65270EN/06 |

2. Summary of Change

| Group | Name / Outline | New, Add | Applicable |
|----------------|---|--------------|------------|
| | | Correct, Del | Date |
| Basic Function | - Smoothing compensation for synchronous built-in servo motor | ADD | 2006.01 |
| | - Tandem speed difference alarm | ADD | 2006.01 |
| | - Machining point control | NEW | 2006.01 |
| | - Quick stop function for separate serial detector alarms | ADD | 2006.01 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| Optional | | | |
| Function | | | |
| Unit | | | |
| | | | |
| Maintenance | | | |
| Parts | | | |
| Notice | | | |
| | | | |
| Correction | | | |
| Another | | | |
| | | | |

| | | | | ITTLENotice of the Update of Digital Servo Software for Series 30i/31i /32i (90D0/12 & 90E0/12) | | | | |
|-----|------------|---------|----------------|---|--|--|--|--|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06-001 | | | | |
| Ed. | Date | Design. | Description | FANUC LTD SHEET 1/12 | | | | |

Notice of the Update of Digital Servo Software for Series 30i/31i/32i (90D0/12 & 90E0/12)

1. Update Edition

| ROM series | New edition | Available CNC |
|------------|-------------|--|
| 90D0 | 12 | FS30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (For HRV4 control) |
| 90E0 | 12 | FS30i/31i/32i (For HRV2 and HRV3 control) |

- 2. Contents of change
- Smoothing compensation function for synchronous built-in servo motor is added.
- Tandem speed difference alarm function is added.
- Machining point control function is newly added.
- Quick stop function for separate serial detector alarms is added.

3. Attachments


| Attachment 1. | Smoothing Compensation for Synchronous Built-In Servo Motor |
|---------------|---|
| Attachment 2. | Tandem Speed Difference Alarm Function |
| Attachment 3. | Machining Point Control Function |
| Attachment 4. | Quick Stop Function for Separate Serial Detector Alarms |

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0/12 & 90E0/12) | | | | |
|-----|------------|---------|----------------|---|----------------------------------|------|--|--|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06 | DRAW. No. B-65270EN/06-001 CUST. | | | |
| Ed. | Date | Design. | Description | FANUC LTD | | 2/12 | | |

Attachment 1. Smoothing Compensation for Synchronous Built-in Servo Motor

(1) Overview

Smoothing compensation for synchronous built-in servo motor is a function used to improve the feed smoothness of a synchronous built-in servo motor by applying, to the current command, a sine wave compensation torque 1.5 times and 3 times per pole pair. By setting a compensation gain and phase with parameters for each component, a compensation torque matching each motor can be obtained. A value to be set in a parameter for compensation is automatically calculated using SERVO GUIDE.

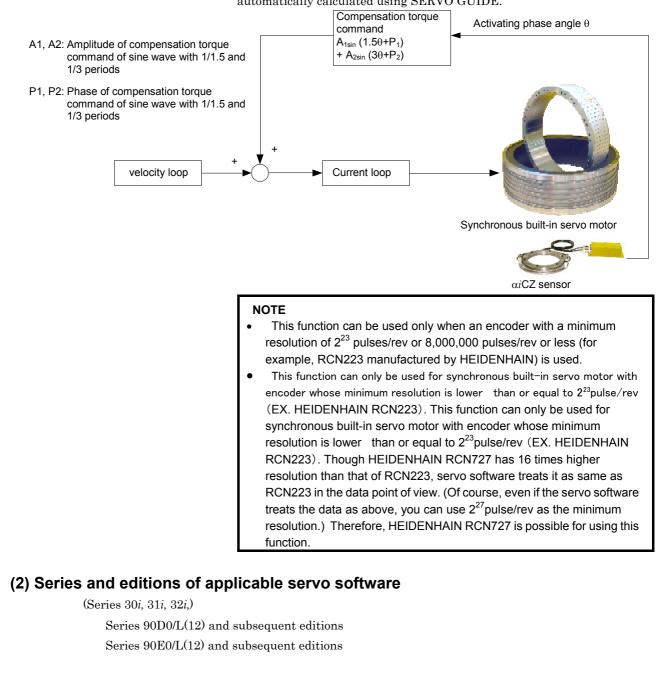


| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0/12 & 90E0/12) | | | | |
|-----|------------|---------|----------------|---|--|-------|--|--|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06-001 | | CUST. | | |
| Ed. | Date | Design. | Description | FANUC LTD | | 3/12 | | |

| (3 | 3) Setting | paramete | ers | | | | | | | | | |
|-----|------------|----------|----------------|---|---|--|---|------------------------------------|-------------------------------------|--------------------------------|----------------------------------|----------------------------------|
| | , . | • | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| | | 2300 (F | S30 <i>i</i>) | | | | | | DD | | | |
| | | | DD(#2) | 0: Dis 1: En | sabled. | | | | or synchr | onous b | uilt-in s | ervo motor |
| | | | | | | | | | | | | _ |
| | | 2377 (F | S30 <i>i</i>) | | | g compens (high-orde | | | 5 times po ion phase | | |) |
| | | 0000 (5) | 220 i) | 0 | | | | | | | | |
| | | 2380 (F | 5301) | | | compensa (high-orde | | | ion phase | | | |
| | | | | Setting can sw positiv compen | g the cor itch bet ^v e directi | rection ga ween the on smootl parameter | in of the negative ning com | followin direction pensation | g paramo 1 smoothi n. In this | eters wi ing com case, t | th a non pensatio he smoot | zero value n and the thing |
| | | 0070 (5) | 220 i) | Smoothin | na compe | nsation per | formed 1 | 5 times ne | r nole nair | (negativ | e directio | 2) |
| | | 2378 (F | 5301) | | • . | • | | - | <u> </u> | | | <u>·</u> |
| | | | | Correct | ion gain | (high-orde | o bits) | Correcti | ion phase | (100-010 | | |
| | | 2381 (F | S30 <i>i</i>) | Smooth | ing compe | ensation per | formed thr | ee times pe | r pole pair | (negative | direction) | |
| | | · · · · | , , | Correct | ion gain | (high-orde | r 8 bits) | Correcti | ion phase | (low-ord | der 8 bits |) |
| | | | | to anot assemb fed at l compen | her). So oled mot ow spee nsation o | , compens | ation pa ue comm ident on is positio | rameters nand vari the posit | s need to ation ger tion. The | be dete nerated applica | rmined f when th tion of s | e motor is moothing |
| | | | | The measuring instruments that can be used to determine these parameters include "SERVO GUIDE" (Ver. 3.20 or later). By using SERVO GUIDE (Ver. 3.20 or later), these parameters can be determined easily. Follow the procedure below to measure the activating phase and torque command, which are required to determine the compensation parameters. | | | | | | n be | | |
| | Measure | ment pro | cedure | | | | | | | | | |
| | | | | Ch | | | | thing cor | npensati | on for s | ynchron | ous built-in |
| | | | | | | | TITLE | Notice Softwa | of the U are for S /12 & 90 | eries 3 | 80 <i>i</i> /31 <i>i</i> / | tal Servo 32 <i>i</i> |
| 01 | 2006.02.17 | Ma | Newly de | esigned | | | DRAW | . No. B | -65270I | EN/06- | 001 | CUST. |
| Ed. | Date | Design. | | | iption | | | FAN | JC LTD | | SHEET | 4/12 |

Select the target axis for measurement, and set "ROTDD" as the data

| Channel | × |
|---|---|
| СН1 СН2 СН3 СН4 СН5 СН6 | |
| Axis Kind Unit Conv. Coef. 1 (Physical Val.) Conv. Base 1 (Raw data Val.) Origin Value 0 | Extended address(E) 0 == Shift(S) 0 == Explanation Smooth compensation counter for Synchronous built-in servo motor |
| ОК | |

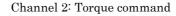

Select the target axis for measurement, and set "TCMD" as the data type. As the conversion coefficient, set the maximum current of the amplifier used for the target axis.

| Channel | × |
|---|-----------------------|
| CH1 CH2 CH3 CH4 CH5 CH6 Axis Kind Unit Conv. Coef. 100 (Physical Val.) Conv. Base 7282 (Raw data Val.) Origin Value 0 | Extended address(E) 0 |
| OK | キャンセル |

<2>With this setting, make bidirectional movements by about ±90 deg at about F (14400/number of poles) deg/min for data measurement. At the time of data measurement, ensure that all smoothing compensation values are set to 0. Smoothing compensation for linear motors may be used. Check this point as well.

Parameters for synchronous built-in servo motor:

No.2377, No.2378, No.2380, No.2381

Parameters for linear motor:

No.2130, No.2131, No.2132, No.2369, No.2370, No.2371


When making measurements, lower the velocity gain to such an extent that hunting does not occur.


- <3>From the "Tools" menu, select "Linear motor compensation calculation". (The shortcut is [Ctrl] + [L].)
- <4> Pressing the [ADD] button on the displayed dialog box analyzes waveform data and registers compensation parameter candidates. The "2/span" item and "4/span" item correspond to smoothing compensation performed 1.5 times per pole and smoothing compensation performed 3 times per pole, respectively. "6/span" is not used for smoothing compensation for synchronous built-in servo motor.

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0/12 & 90E0/12) | | | |
|-----|------------|---------|----------------|---|--|-------|--|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06-001 CUST. | | CUST. | |
| Ed. | Date | Design. | Description | FANUC LTD | | 5/12 | |

| LinearMotor Smoothness Compensation | | | |
|---|----------------------|--|---|
| Display target waveforms and then press [Add] button to calculate Add(<u>A</u>) | Parameter chang | ge(P)CloseClo |] |
| Normal direction Del | | 16494 14578 1299 | |
| data 2/span 3 □ 1 (64: 110) (□ 2 □ 3 □ 4 □ 5 | (56: 242) | 6/span (5: 19) | |
| Reverse direction Del | Calc(R) | 15730 14581 1025 | |
| data 2/span ✓ 1 (61: 114) (| 4/span (56: 245) | 6/span (4: 1) | ! |
| | (30, 273) | | |
| 4-power compensation | | | |

- <5>The compensation parameters slightly vary depending on the measurement situation. So, repeat a data measurement and a press of the [Add] button several times in a similar manner while keeping the dialog box open. (Up to five candidates can be registered.)
 - If the displayed values include an extremely different value, uncheck the corresponding check box on the leftmost side of the list so that the value is not taken into account in the final compensation calculation.
- <6>Finally, press the [Calc] button for each of the forward and backward directions. Then, smoothing compensation parameters are displayed.
- <7>By pressing the [Set param] button, the smoothing compensation parameters are set in the CNC.

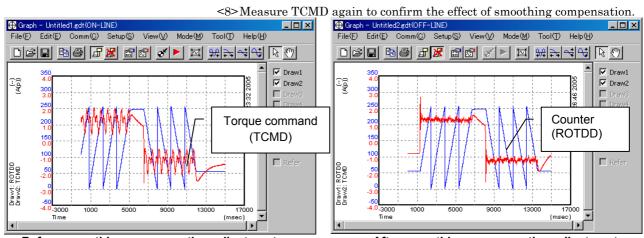

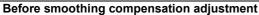

After smoothing compensation adjustment

| (*) | For details on the use of SERVO GUIDE, refer to the online help of |
|-----|--|
| | <u>SERVO GUIDE.</u> |

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0/12 & 90E0/12) | | | | |
|-----|------------|---------|----------------|---|-------|------|--|--|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06 | CUST. | | | |
| Ed. | Date | Design. | Description | FANUC LTD | | 6/12 | | |

Attachment 2. Tandem Speed Difference Alarm Function

(1) Overview

Tandem control is used for rigidly connected machine, which is driven by 2 servo motors. In torque tandem control, the speed of sub-axis is not controlled. In case that main axis and sub-axis's mechanical connection comes off, force on main axis may lead sub-axis to higher rotation speed than it really needs. In order to prevent this risk, "TANDEM SPEED DIFFERENCE ALARM" watchs the speed difference between main axis and sub-axis. When the speed difference becomes higher than maximum permitted speed difference set as servo parameter, "641 Speed difference alarm" will occur.

* In the case that NC software does not support "Tandem speed difference alarm", "448 UNMATCHED FEEDBACK ALARM" will occur.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)

Series 90D0/L(12) and subsequent editions Series 90E0/L(12) and subsequent editions

(3) Setting parameters

01

Ed.

(new parameters)

• All the below new parameters should be set only in main axis.

| | | now now p | #7 | #6 | #5 | 19 111 <u>1118111</u> #4 | #3 | #2 | #1 | #0 | |
|------------|----------------------------|---------------------------------------|----------|--------------|-----------|-----------------------------|-----------|-----------------|----------|-----------|--------------|
| | 2007 (FS | S30 <i>i</i>) | | | | VLDALM | | | | | |
| | VLC | DALM(#4) | Tandem s | peed diffe | rence a | larm funct | tion is | | | | _ |
| | | | 0: Ena | bled (The | function | n is enable | ed in def | ault) | | | |
| | | | 1: Disa | abled | | | | | | | |
| | | | r | | | | | | | | |
| | 2357 (F | | | Мах | imum pe | ermitted tan | idem spe | ed differe | nce | | |
| | [Valid dat | | 0~2000 | | | | | | | | |
| | Unit | of data] | | 0mm/min | | | _ | | | | |
| | | | | 57=0, max | imum p | permitted t | andem s | speed diff | erence v | will be 1 | 000 (default |
| | | | value). | 1 | a | | | | | | |
| | | | If No.23 | 57<0, the | tunction | n will be d | isabled. | | | | |
| | $(\mathbf{D}_{1})_{1} = 1$ | · · · · · · · · · · · · · · · · · · · | | | | | | | | | |
| | (Related par | rameters) | #7 | #6 | 45 | #4 | #2 | #0 | #4 | #0 | |
| | 1817 (FS | S30 <i>i</i>) | #7 | #6 TANDEM | #5 | #4 | #3 | #2 | #1 | #0 | |
| | | | Tandem o | 1 | | unction) | | | | | |
| | | | 0: Disab | - | tionar i | uno (1011) | | | | | |
| | | | 1: Enabl | | | | | | | | |
| | | | | | neter for | r both mai | n axis a | nd sub-ax | cis. | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | TITLE | Notice | of the I | Jodate | of Digi | tal Servo |
| | | | | | | | Softwa | are for S | eries 3 | | |
| | | | | | | | (90D0 | 12 & 90 |)E0/12) | | |
| 2006.02.17 | Ma | Newly d | lesigned | | | DRAW. I | No. B | -65270E | EN/06-0 | 001 | CUST. |
| Date | Design. | | Desc | ription | | | FAN | JC LTD | | SHEET | 7/12 |

Attachment 3. Machining Point Control Function

(1) Overview

01

Ed.

Machining point control function uses acceleration feedback information from acceleration sensor unit installed on machine point to suppress machine point's vibration.


(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)

Series 90D0/L(12) and subsequent editions Series 90E0/L(12) and subsequent editions

(3) Setting parameters


< 1 > set the direction of acceleration feedback.

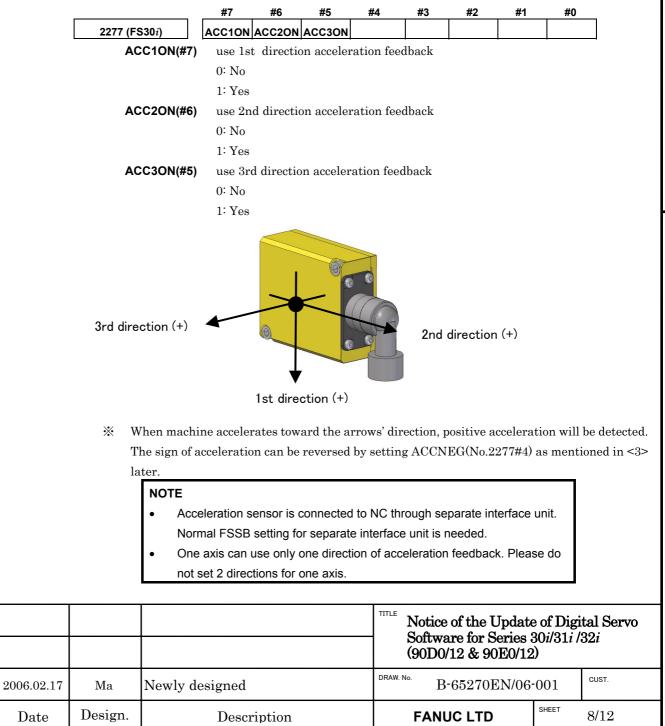

< 2 > set position feedback detection unit.

| : | 2263 (FS30 <i>i</i>) | Position feedback detection unit | | | | | | | | | |
|---|-----------------------|----------------------------------|------|-------|--------|---------|--------|--|--|--|--|
| _ | [Unit of date] | 1nm | | | | | | | | | |
| | Unit of data | 10um | 1um | 0.1um | 0.01um | 0.001um | 0.05um | | | | |
| | Parameter setting | 10000 | 1000 | 100 | 10 | 1 | 50 | | | | |

< 3 > set sign of acceleration feedback.

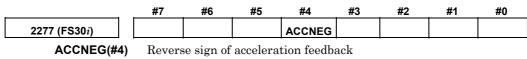



0: No

1: Yes

Set above bit to let 2-order derivative of position feedback (measure POSFB by SERVO GUIDE and show the measured data with Diff2(AT) operation) and acceleration feedback from acceleration sensor have same sign.

For the method of measuring acceleration feedback, please refer supplementation at the end of this attachment.

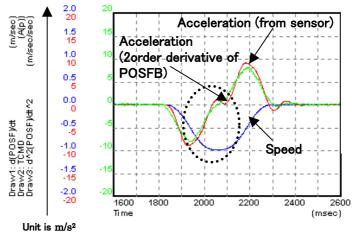

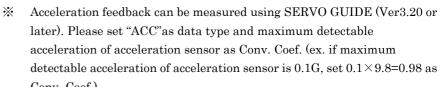



| < | 4 | > | Adjust | acceleration | offset. |
|---|---|---|--------|--------------|---------|
|---|---|---|--------|--------------|---------|

| | | | | Notice of the Update Software for Series 3 (90D0/12 & 90E0/12 | | |
|-----|------------|---------|-----------------------|---|-------|-------|
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. No. B-65270EN/06-001 CUST. | | CUST. |
| Ed. | Date | Design. | Description FANUC LTD | | SHEET | 9/12 |

2264 (FS30i)

Acceleration offset

Set acceleration offset value for acceleration information from acceleration sensor.

senso

• For 90E0 series

No.2115 = 0

No.2151= 4356(No.1023=4n+1)

= 4484(No.1023=4n+2)

= 10500(No.1023=4n+3)

= 10628(No.1023=4n+4)

(n=0,1,2,...)

Set above values to No.2115 and No.2151 considering the setting of No.1023. Then set the value No.353 in Diagnosis screen under emergence stop to No.2264.

• For 90D0 series

No.2115 = 0

No.2151 = 4356(odd axis), 4484(even axis)

Set above values to No.2115 and No.2151 considering the setting of No.1023. Then set the value No.353 in Diagnosis screen under emergence stop to No.2264.

< 5 > set MPC (Machining Point Control) function bit

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
|-----------------------|----------|----------------------------|----|----|----|----|----|----|--|
| 2288 (FS30 <i>i</i>) | MPCEF | | | | | | | | |
| MPCEF(# | 7) Machi | Machining point control is | | | | | | | |
| | 0: dis | sabled | | | | | | | |
| | 1: en | abled | | | | | | | |

< 6 > set MPC timing adjustment parameter


| 2268 (FS30 <i>i</i>) | MPC timing adjustment parameter (MPCTIM) | | | | | | | | |
|--------------------------|---|-------------------|---------------------|----|--|--|--|--|--|
| [Valid data range] | $0 \sim 32767$ | | | | | | | | |
| [Recommended data range] | range] 3000~4000(HRV2, HRV3), 3500~4100(HRV4) | | | | | | | | |
| | Firstly please set No.2268 as "0" to use default value for MPC timing adju parameter. The default value for MPC timing adjustment parameter is s | | | | | | | | |
| | below Table. 1. | for MPC timing ad | iustmont naramote | ٥r | | | | | |
| | | | justillent paramete | | | | | | |
| | | HRV2&HRV3 | HRV4 | | | | | | |
| | Default Value 3273 3854 | | | | | | | | |
| | Table1. Default value Default Value | HRV2&HRV3 | HRV4 | er | | | | | |

< 7 > Adjust MPC gain 1

Adjust MPC gain 1 to decrease acceleration of the vibration occurred after Acc/Dec, as shown in the circled area of below figures. For safety, please adjust MPCK1 from 200.

| | 2266 (FS30 <i>i</i>) | | MPC gain 1 (MPCK1) | |
|----|-----------------------|----------------|--------------------|--|
| [] | Valid data range] | $0 \sim 32767$ | | |


| | | | | Notice of the Update Software for Series | 30i/31i / | |
|-----|------------|---------|---|---|-----------|-------|
| 01 | 2006.02.17 | Ma | (90D0/12 & 90E0/12) Newly designed DRAW. No. B-65270EN/06-001 | | | CUST. |
| Ed. | Date | Design. | Description FANUC LTD | | SHEET | 10/12 |

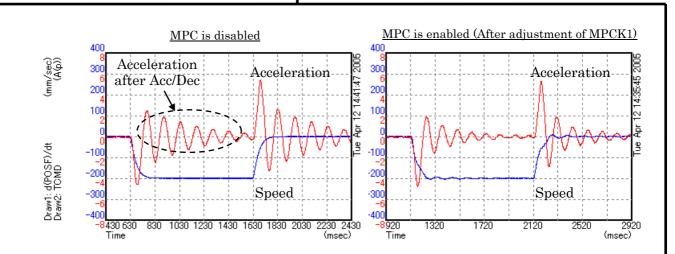

< 8 > Adjust MPC timing adjustment parameter

Adjust MPC timing parameter No.2268 to decrease acceleration of the vibration during Acc/Dec. For HRV2 control and HRV3 control, please adjust No.2268 between $3000 \sim 4000$. For HRV4 control, please adjust No.2268 between $3500 \sim 4100$.

For low frequency vibrations around 20Hz, smaller No.2268 value than its default value is usually effective for vibration suppression. After adjusting No.2268, MPC gain 1 should be re-adjusted. In order to have an optimum vibration suppression performance, please adjust MPC timing parameter and MPC gain 1 continuously until a satisfied result is achieved.

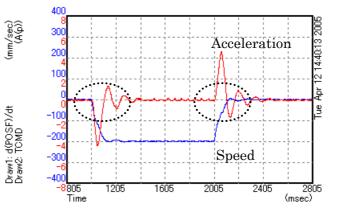

MPC is enabled (After adjustment of MPCK1 and MPCTIM)

In some cases, adjust MPC gain 2 can give a good vibration suppression for low frequency vibration. Before adjusting MPC gain 2, please set MPC timing adjustment parameter No.2268 to "0". Then adjusting MPC gain 1 and MPC gain 2 until a satisfied result is achieved. For safety, please adjust MPCK2 from 100.

| | | 2265 (FS [Valid dat | · · · · · · · · · · · · · · · · · · · | MPC gain2 | (МРСК2) | | | |
|-----|------------|------------------------|---------------------------------------|-----------|--|-------|-------|--|
| | | | | TITLE | Notice of the Update of Digital Server Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0/12 & 90E0/12) | | | |
| 01 | 2006.02.17 | Ma | Newly designed | DRAW. | DRAW. No. B-65270EN/06-001 CUST. | | CUST. | |
| Ed. | Date | Design. | Description | | FANUC LTD | SHEET | 11/12 | |

Attachment 4. Quick Stop Function for Separate Serial Detector Alarms

(1) Overview

Quick stop function for separate serial detector alarms is newly added.

| Alarm Number | Message |
|--------------|-------------------------|
| SV0380 | BROKEN LED (EXT) |
| SV0381 | ABNORMAL PHASE (EXT) |
| SV0382 | COUNT MISS (EXT) |
| SV0383 | PULSE MISS (EXT) |
| SV0384 | SOFT PHASE ALARM (EXT) |
| SV0385 | SERIAL DATA ERROR (EXT) |
| SV0386 | DATA TRANS. ERROR (EXT) |
| SV0387 | ABNORMAL ENCODER (EXT) |

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)

Series 90D0/L(12) and subsequent editions Series 90E0/L(12) and subsequent editions

(3) Setting parameters

(new parameters)

| | | (new param | eters) | | | | | | | | | |
|-----|------------|--------------|-----------------|---------|---------------|-------------|------------|------------|------------|----------------|-----------------|-----------|
| | | | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | , I |
| | | No.2282(| FS30 <i>i</i>) | | | FSAQS | | | | | | |
| | | F | SAQS(#5) | Specif | ies whetl | ner the qu | ick stop i | function f | for separa | ate serial | l detector | alarms is |
| | | | | applie | ed or not. | | | | | | | ŀ |
| | | | | 0: ne | ot apply | | | | | | | |
| | | | | 1: aj | oply | | | | | | | |
| | | (Poloted nor | no motoria) | | | | | | | | | |
| | | (Related par | rameters) | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| | | No.2205(| ES30 <i>i</i>) | #1 | #6 | #5 | #4 | #3 HD2O | #2 | #1 | #0 | |
| | | | HD2O(#3) | Specifi | l na whoth | er the quic | lz stop fi | _ | n hordu | l aro disco | nnoction | of |
| | | | 11020(#3) | - | | or axes sul | - | | | | | |
| | | | | 0: not | | JI axes su | Jecleu i | 0 syncint | nious coi | 11101 18 aj | ppneu or | |
| | | | | | | | | | | | | |
| | | | | 1: app | - | | | | | | | |
| | | | | | - | eter No.22 | | | | - | - | |
| | | | | | | sconnectio | | | | | | uick stop |
| | | | | fun | ction for | separate s | erial det | ector ala | rms (No. | 2282#5= | 1). | |
| | | | | | | | | | | | | |
| | | | | | | | | | | | | |
| | | | | | | | | | | | | |
| | | | | | | | | | | | | |
| | | | | | | | | | | | | |
| | | | | | | | | | | | | |
| | | | 1 | | | | | | | | | |
| | | | | | | | TITLE | Notice | | | of Digita | |
| | | | | | | | | | | |)i/31i /32 | i |
| | | | | | | | | (90D0/ | 12 & 90 |)E0/12) | | |
| 01 | 2006.02.17 | Ma | Newly de | esigned | | | DRAW | . No. B | ·65270E | EN/06-0 | 01 ^c | JST. |
| Ed. | Date | Design. | | Desc | ription | | | FANL | JC LTD | S | HEET 12 | 2/12 |

| Notice of the Update of Digital Servo Software for Series 16 <i>i</i> etc. (90B1/F, 90B8/F) |
|---|
|---|

1. <u>Type of applied documents</u>

| . Type of applied d | Type of applied documents | | | | | |
|---------------------|--|--|--|--|--|--|
| Name | FANUC AC SERVO MOTOR $\alpha i / \beta i$ series, LINEAR MOTOR LiS series, | | | | | |
| | SYNCHRONOUS BUILT-IN SERVO MOTOR DiS series | | | | | |
| | Parameter manual | | | | | |
| Spec. No./Ver. | B-65270EN/06 | | | | | |

2. Summary of Change

| . Dummary of O | iang | 50 | | |
|----------------|------|---|--------------|------------|
| Group | | Name / Outline | New, Add | Applicable |
| | | | Correct, Del | Date |
| Basic Function | 1. | Machining point control | ADD | 06.06 |
| | 2. | PDM current monitoring function and PDM | ADD | 06.06 |
| | | current unbalance alarm | | |
| | 3. | RCN727 for synchronous built-in servo motor | ADD | 06.06 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| Optional | | | | |
| Function | | | | |
| Unit | | | | |
| | | | | |
| Maintenance | | | | |
| Parts | | | | |
| Notice | | | | |
| | | | | |
| Correction | | | | |
| | | | | |
| Another | | | | |
| | | | | |

| | | | | Notice of the update Software for Series | of Digit 16 <i>i</i> etc. | al Servo (90B1/F) |
|-----|-----------|----------|----------------|---|------------------------------|----------------------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06-002 CUST. | | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 1/12 |

Notice of the update of Digital Servo Software for Series 16i etc. (90B1/F)

1. Update Edition

| ROM series | New edition | Available CNC |
|------------|-------------|--|
| 90B1 | 06 | FS15i , 16i, 18i, 21i, 0i ·B, 0i Mate ·B, PMi ·D, PMi ·H |
| | | (with servo card equipped with 320C5410) |

2. Contents of change

- Machining point control, which suppresses a vibration at the machine point by acceleration sensor feedback, has been added.
- In case that one servo motor is driven by two or more servo amplifiers, it requires PWM distribution module (PDM), which distributes PWM command to each amplifier. Concerning PDM, PDM current monitoring function and PDM current unbalance alarm has been added.
- Detector of HEIDENHAIN, RCN727 has been newly applied to the synchronous built-in servo motor.

3. Attached

- Attached 1 <u>Machining point control</u>
- Attached 2 PDM current monitoring function and PDM current unbalance alarm
- Attached 3 <u>RCN727 for synchronous built-in servo motor</u>

| | | | | Notice of the update Software for Series | of Digit | tal Servo (90B1/F) |
|-----|-----------|----------|----------------|---|----------|-----------------------|
| | | | | boltware for beries. | 101 C.C. | |
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06-002 CUST. | | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 2/12 |

Attached 1. Machining point control

(1) Overview

Machining point control(MPC) function uses acceleration feedback information from acceleration sensor unit installed on machine point to suppress machine point's vibration.

(2) Series and editions of applicable servo software

(Series 30*i*,31*i*,32*i*)

Series 90D0/L(12) and subsequent editions


Series 90E0/L(12) and subsequent editions

(Series 15i, 16i, 18i, 21i, 0i -B, 0i Mate-B, PMi -D, PMi -H)

Series 90B1/F(06) and subsequent editions

(3) Setting parameters

< 1 > set the direction of acceleration feedback.

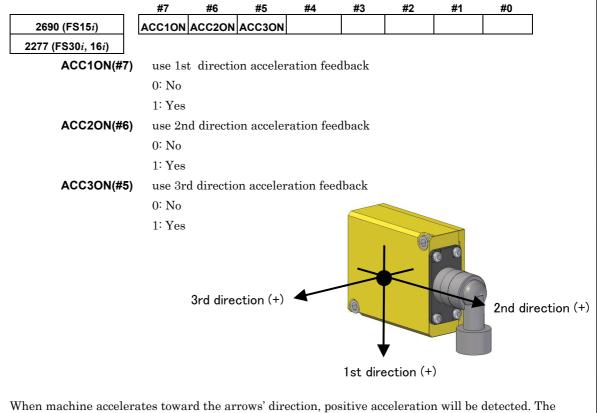

When machine accelerates toward the arrows' direction, positive acceleration will be detected. The sign of acceleration can be reversed by setting ACCNEG(No.2277#4) as mentioned in <3> later.

NOTE

Acceleration sensor is connected to NC through separate interface unit. Normal FSSB setting for separate interface unit is needed.

• One axis can use only one direction of acceleration feedback. Please do not set 2 directions for one axis.

| | | | | Notice of the update Software for Series 1 | | |
|-----|-----------|----------|----------------|---|-------|-------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06-002 | | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 3/12 |

< 2 > set position feedback detection unit.

| 2676 (FS15 <i>i</i>) 2263 (FS30 <i>i</i> , 16 <i>i</i>) | | | osition feedb | | in unit | |
|--|-------|------|---------------|--------|---------|---------|
| [Unit of date] | 1nm | | | | | |
| Unit of data | 10um | 1um | 0.1um | 0.05um | 0.01um | 0.001um |
| Parameter setting | 10000 | 1000 | 100 | 50 | 10 | 1 |
| | | | | | | |




ACCNEG(#4)

Reverse sign of acceleration feedback

0: No

1: Yes

Set above bit to let 2-order derivative of position feedback (measure "POSF" by SERVO GUIDE and show the measured data with Diff2(AT) operation) and acceleration feedback from acceleration sensor have same sign.

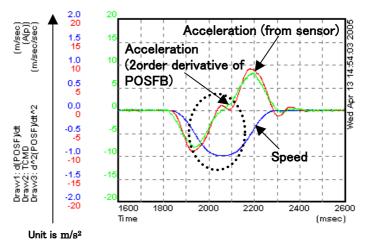

* Acceleration feedback can be measured by using SERVO GUIDE (Ver3.20 or later). Please set "ACC" as data type and maximum detectable acceleration of acceleration sensor as Conv. Coef. (ex. if maximum detectable acceleration of acceleration sensor is 0.1G, set 0.1×9.8=0.98 as Conv. Coef.)

| Channel | × |
|--|--|
| CH1 CH2 CH3 CH4 CH5 CH6 Axis A 1 (1) Kind ACC Unit m/sec/sec Conv. Coef. 0.98 (Physical Val.) Conv. Base 512 (Raw data Val.) Origin Value 0 | Extended address(E) 0 = Shift(S) 0 = Explanation Acceleration sensor data (control) |
| ОК | キャンセル |

| | | | | Notice of the update Software for Series | of Digit 16 <i>i</i> etc. | al Servo (90B1/F) |
|-----|-----------|----------|----------------|---|------------------------------|----------------------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06-002 CUST. | | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 4/12 |

```
< 4 > Adjust acceleration offset.
```

01

Ed.

| | 0677 /50 | 450 | | | | Angel | | | | | |
|-------|-----------------------------------|--|--|---------------------------|------------------|-------------|------------------|-------------|-------------------|------------------------------|-----------------------|
| 1 00/ | 2677 (FS [/] | | | | | Accelerat | ion offset | 1 | | | |
| 220 | 64 (FS30 | i, 16i) | a , 1 | | CC / 1 | C | 1 | · c | <i>.</i> . | c | 1 |
| | | | | eration c | offset val | lue for a | ccelerati | on infori | nation | from ac | cceleration |
| | | | sensor. | | | | | | | | |
| | | | • In case | of 90E0 | series | | | | | | |
| | | | Consid | ering the | e setting | of No.1 | 023, ple | ase set l | No.211 | 5 and N | lo.2151 as |
| | | | follows | | | | | | | | |
| | | | No.2 | 115 = 0 | | | | | | | |
| | | | No.2 | 151 = 43 | | | | | | | |
| | | | | | | 1023 = 4r | | | | | |
| | | | | | | 1023 = 4 | | | | | |
| | | | m 1 | | | | | n = 0, 1, 2 | | , | |
| | | | | | - | iyed in N | o.353 on | Diagnosi | s scree | n under e | emergency |
| | | | stop to | No.2264. | | | | | | | |
| | | | • In case | of 90D0 | series | | | | | | |
| | | | Consid | ering the | e setting | of No.1 | 023, ple | ase set l | No.211 | 5 and N | Vo.2151 as |
| | | | follows | | | | | | | | |
| | | | No.2 | 115 = 0 | | | | | | | |
| | | | No.2 | 151 = 43 | | | | | | | |
| | | | | | |)23 is eve | | | | | |
| | | | | | | iyed in N | o.353 on | Diagnosi | s scree | n under e | emergency |
| | | | stop to | No.2264. | | | | | | | |
| | | | • In case | of 90B1 | series | | | | | | |
| | | | Consid | ering the | e setting | of No.1 | 023, ple | ase set l | No.211 | 5 and N | Vo.2151 as |
| | | | follows | | | | | | | | |
| | | | No.2 | 115 = 0 | | | | | | | |
| | | | No.2 | 151 = 43 | | | | | | | |
| | | | | | | 023 is eve | | | | | |
| | | | | | - | iyed in N | o.353 on | Diagnosi | s scree | n under e | emergency |
| | | | stop to | No.2264. | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| < 5 > | set MP | PC (Mach | ining Point | t Control |) functio | n bit | | | | | |
| < 5 > | set MP | PC (Mach | - | t Control #6 |) function #5 | n bit #4 | #3 | #2 | #1 | #0 | |
| | set MP | | ining Point | | | | #3 | #2 | #1 | #0 | |
| 2 | | 15 <i>i</i>) | ining Point #7 | | | | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) | ining Point #7 MPCEF | | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 | #3 | #2 | #1 | #0 | |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 | | | | | tal Servo |
| 2 | 2701 (FS [:] 88 (FS30 | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 is | Notice | of the u | ıpdate | of Digit | tal Servo (90B1/F) |
| 228 | 2701 (FS 88 (FS30 M | 15 <i>i</i>) <i>i</i> , 16 <i>i</i>) PCEF(#7 | ining Point #7 MPCEF) Machin 0: dis | #6 ning poin sabled | #5 | #4 is | Notice Softwa | of the u | update eries : | of Digit 16 <i>i</i> etc. | |

< 6 > set MPC timing adjustment parameter

| 2681 (FS15 <i>i</i>) | | | | |
|-----------------------|----------------|---------------|--|--|
| 2268 (F | S30 <i>i</i> , | 16 <i>i</i>) | | |

MPC timing adjustment parameter (MPCTIM)

[Valid data range] $0\sim32767$

[Recommended data range]

3000~4000(HRV2, HRV3), 3500~4100(HRV4)

Firstly please set No.2268 as "0" to use default value for MPC timing adjustment parameter. The default value for MPC timing adjustment parameter is shown in below Table. 1.

Table1. Default value for MPC timing adjustment parameter

| | HRV2&HRV3 | HRV4 |
|---------------|-----------|------|
| Default Value | 3273 | 3854 |


Note) As for tuning method of this parameter, please refer to $<\!\!8\!\!>$ later.

< 7 > Adjust MPC gain 1

01

Ed.


Adjust MPC gain 1 to decrease acceleration of the vibration occurred after Acc/Dec, as shown in the circled area of below figures. For safety, please adjust MPCK1 from 200.

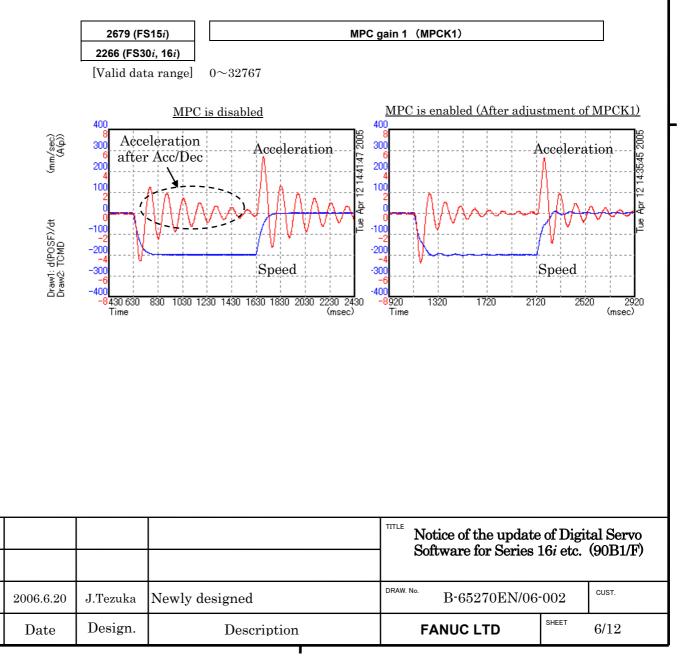

< 8 > Adjust MPC timing adjustment parameter

Adjust MPC timing parameter No.2268 to decrease acceleration of the vibration during Acc/Dec. For HRV2 control and HRV3 control, please adjust No.2268 between $3000 \sim 4000$. For HRV4 control, please adjust No.2268 between $3500 \sim 4100$.

For low frequency vibrations around 20Hz, smaller No.2268 value than its default value is usually effective for vibration suppression. After adjusting No.2268, MPC gain 1 should be re-adjusted. In order to have an optimum suppression performance against vibration, please adjust MPC timing parameter and MPC gain 1 step by step until a satisfied result is achieved.

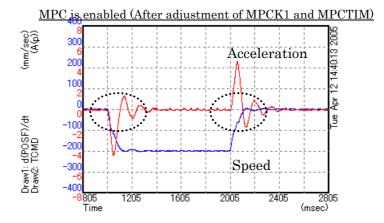

M In some cases, adjust MPC gain 2 can give a good suppression against vibration for low frequency vibration. Before adjusting MPC gain 2, please set MPC timing adjustment parameter No.2268 to "0". Then adjusting MPC gain 1 and MPC gain 2 until a satisfied result is achieved. For safety, please adjust MPCK2 from 100.

| | 2678 (FS | | | MPC g | ain2 | (MPCK2) | | |
|-----------|------------|----------|----------------|-------|---------|----------------------------|----------|----------|
| | 2265 (FS30 | | | | | | | |
| | [Valid dat | a range] | $0 \sim 32767$ | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | TITLE | | | |
| | | | | | | Notice of the update | of Digit | al Servo |
| | | | | | | Software for Series | 161 etc. | (90B1/F) |
| | | | | | | | | |
| 2006.6.20 | J.Tezuka | Newly d | esigned | | DRAW. N | ^{••} B-65270EN/06 | 002 | CUST. |
| Date | Design. | | Description | | | FANUC LTD | SHEET | 7/12 |

01

Ed.

Attached 2. PDM current monitoring function and PDM current unbalance alarm

(1) Overview

In a large servo system, in cases that it drives using PDM (<u>PWM D</u>istribution <u>M</u>odule), two or more servo amplifiers are controlled as a single control axis by CNC.

When a fault occurs in such the system, it is difficult to specify in which part a problem is, because there are many numbers of the power cables.

Then, the following functions are prepared in order to make troubleshooting easier.


- PDM current monitoring function
- PDM current unbalance alarm

For details of troubleshooting method, please refer to the following technical report.

TROUBLE SHOOTING METHOD FOR THE LARGE SERVO WITH PDM (A-72562EN-034)

(2) The system configuration of the large servo using PDM

The following figures are composition figure in the case of driving one set of a large servo motor by four sets of servo amplifier using PDM.

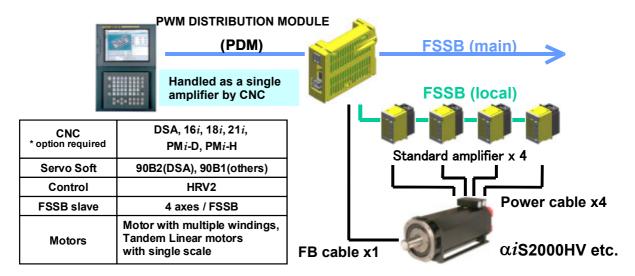

CNC recognizes the axis used PDM as a single axis. The single command (PWM command) from CNC is distributed to four servo amplifiers by PDM. The power cables of each servo amplifier are connected to each winding (electrically independent winding) of a large servo motor, and the current according to a PWM command flows.

Moreover, the current feedback datum is made of the current values detected by each amplifier, and is transmitted to CNC as one current feedback value by averaging.

| | | | | Notice of the update Software for Series | of Digit 16 <i>i</i> etc. | tal Servo (90B1/F) |
|-----|-----------|----------|----------------|---|------------------------------|-----------------------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06 | 002 | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 8/12 |

(2) PDM current monitoring function

The real current of each amplifier connected to PDM can be measured. The data updating cycle is 1ms and resolution is 0.24% of maximum current.

- Servo Soft Series / Editions

 $90\mathrm{B}1$ / F or later

- The number of editions of PDM Total editions number is "C" or later
- The number of editions of SERVO GUIDE

Ver 3.20 or later

SETTING METHOD for SERVO GUIDE

Select IRn which you want to measure, in the "kind" combo box. (IRn means R phase current of Slave n, and ISn means S phase current of Slave n.)


| Channel | | | | × |
|---|---------|------------------------------------|--|-----------------------------|
| СН1 СН2 | СНЗ СН4 | сн5 Сн6 | | |
| Axis Kind Unit Conv. Coef. Conv. Base Origin Value | X (1) | (Physical Val.) (Raw data Val.) | Extended address(E) Shift(S) Explanation R-phase current(Ir) of PDM slave | 0 <u></u> 0 <u></u> 1 |
| | | ОК | <u>ĴĴĴĴĴĴĴĴĴĴ</u> | |

Example) In case that R phase current of Slave 1 (IR1) is measured.

| Channel | <u>×</u> |
|--|---|
| СН1 СН2 СН3 СН4 СН5 СН6 | |
| Axis X (1) X Kind IR1 Unit % Conv. Coef. 100 (Physical Val.) Conv. Base 6554 (Raw data Val.) | Extended address(E) 0 == Shift(S) 0 == Explanation R-phase current(Ir) of PDM slave1 |
| Origin Value 0 OK | |

Note) This data is renewed every 1msec.

| | | | | Notice of the update Software for Series | of Digit 16 <i>i</i> etc. | tal Servo (90B1/F) |
|-----|-----------|----------|----------------|---|------------------------------|-----------------------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06 | ·002 | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 9/12 |

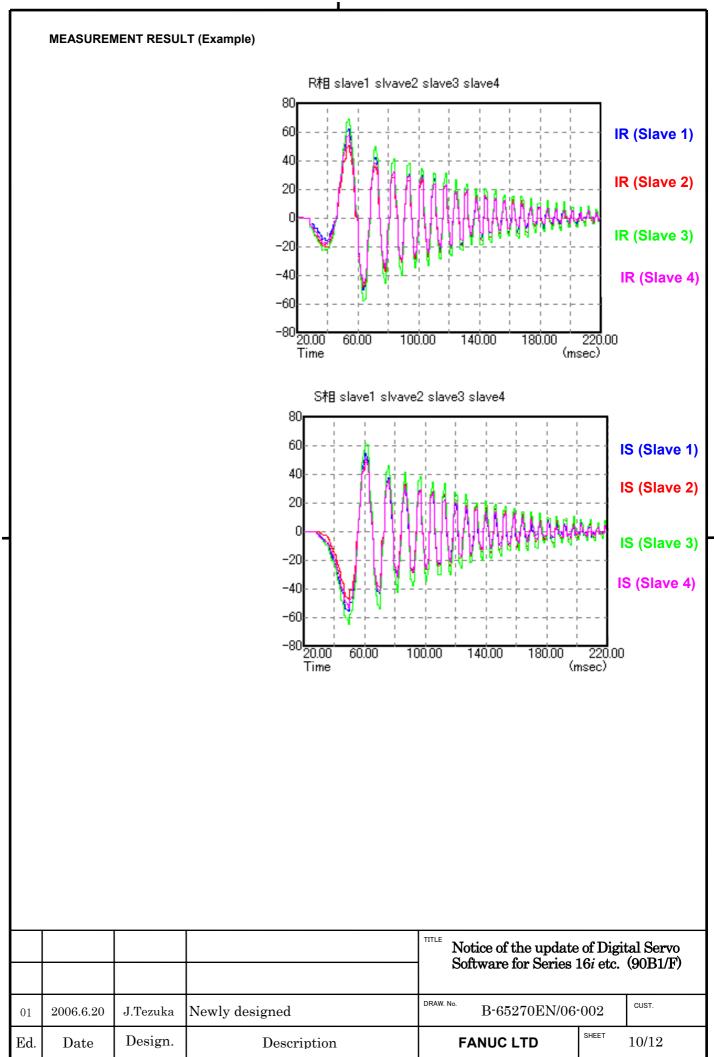

(3) PDM current unbalance alarm

Unbalance alarm is detected in cases that the difference of the average value of the current of all slaves and the current of each slave becomes beyond the value set up with the following parameters. This function is applied to the following Servo Software and PDM.

- Servo Soft Series / Editions

 $90\mathrm{B}1\,/\,\mathrm{F}$ or later

- The number of editions of PDM Total editions number is "C" or later

- Alarm

| Alarm Number | LED indication | Alarm message | Contents (Cause and trouble shooting) |
|-----------------|-------------------|----------------------------------|--|
| 624 | 1 | PDM CURRENT UNBALANCE ALARM (S1) | The value of the current feedback which returned from the servo amplifier of the |
| 625 | 2 | PDM CURRENT UNBALANCE ALARM (S2) | n-th slave connected to PDM is greatly shifted from average value. |
| 626 | 3 | PDM CURRENT UNBALANCE ALARM (S3) | \rightarrow In the servo amplifier applicable to the n-th slave, connection (the order of connection of U, V and W) of a power |
| 627 | 4 | PDM CURRENT UNBALANCE ALARM (S4) | line is wrong, or servo amplifier is out of order. |

| | | | Notice of the update of Software for Series 16 <i>i</i> | | | |
|-----|-----------|----------|--|------------------------|----------|-------|
| | | | | Soloware for Series | 101 Cuc. | |
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06 | -002 | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 11/12 |

Attached 3. RCN727 for synchronous built-in servo motor

(1) Overview

Detector of HEIDENHAIN, RCN727 has been newly applied to the synchronous built-in servo motor.

(2) Series and editions of applicable servo software

Series 90B1/F(06) and subsequent editions

(3) Setting parameters (example)

| Paramete | er number | Paramete | er setting | |
|---------------|---------------|-----------------------------|------------------------------|---|
| FS16 <i>i</i> | FS15 <i>i</i> | Detection unit 1/1000deg | Detection unit 1/10000deg | Contents |
| 2112 | 1705 | 0 | 0 | AMR conversion coefficient 1 |
| 2138 | 1761 | -4 | -4 | AMR conversion coefficient 2 |
| 2000#0 | 1804#0 | 1 | 1 | Multiplies the number of velocity pulses and position pulses by 10 |
| 2001 | 1806 | Number of poles(binary) | Number of poles(binary) | Setting for AMR |
| 2023 | 1876 | 6554 | 6554 | Number of velocity pulses |
| 2024 | 1891 | 10000 | 10000 | Number of position pulses |
| 1821 | 1896 | 360000 | 3600000 | Reference counter capacity |
| 2084 | 1977 | 9 | 9 | Flexible feed gear (numerator) |
| 2085 | 1978 | 200 | 20 | Flexible feed gear (denominator) |
| 2185 | 2628 | 0 | 0 | Position pulses conversion coefficient |
| 2220#0 | 2608#0 | 0 | 0 | Binary detector is used. |
| 2275#0 | 2688#0 | 1 | 1 | Rotary encoder with 8 million p/rev is used. |
| 2275#1 | 2688#1 | 1 | 1 | The speed data is cleared. |
| 2394 | 2807 | 8 | 8 | Number of data mask digits |

Table) Parameter list for RCN727

Note 1) Parameter setteing way for RCN727 is the same as RCN723. The difference between RCN723 and RCN727 is the maximum available value for FFG as shown below. In case of RCN723 : maximum value for FFG = 1 / 1In case of RCN727 : maximum value for FFG = 8 / 1

Note 2) In the system of Dual Check Safety with FS 16*i*, 18*i* or 21*i*, it requires the monitor software, 90B9 series. 90B9 series has not supported RCN727 as a detector for synchronous built-in servo motor, yet. (as of June, 2006)

In the above mentioned case, it requires servo software 90B1 serires edition E or earlier than E and a special parameter setting. For more detailed information, call to FANUC.

| | | | | Notice of the update Software for Series | | |
|-----|-----------|----------|----------------|---|-------|-------|
| 01 | 2006.6.20 | J.Tezuka | Newly designed | DRAW. No. B-65270EN/06 | 002 | CUST. |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 12/12 |

Notice of the Update of Digital Servo Software for Series 16*i* etc. (90B1/08)

1. Type of applied documents

| Name | FANUC AC SERVO MOTOR $\alpha i/\beta i$ series, LINEAR MOTOR LiS series, |
|----------------|--|
| | SYNCHRONOUS BUILT-IN SERVO MOTOR DiS series Parameter manual |
| Spec. No./Ver. | B-65270EN/06 |

2. Summary of Change

| Group | Name / Outline | New, Add Correct, Del | Applicable Date |
|----------------------|---|--------------------------|--------------------|
| Basic Function | | Add | 2006.07 |
| | 2. Display of PDM's slave ready output status | Add | 2006.07 |
| | 3. Standard parameter table has been changed | Add | 2006.07 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| Optional | | | |
| Function | | | |
| Unit | | | |
| Maintenance Parts | | | |
| Notice | | | |
| Correction | | | |
| Another | | | |

| 02 2005.09.28 S.Ikai 3,9,10,11 page were changed. Software 90B1 series | |
|--|-------|
| | |
| 01 2006.07.25 C. Ma Newly designed DRAW. No. B-65270EN/06-003 | CUST. |
| Ed.DateDesign.DescriptionFANUC LTDSHEET1/ | l/11 |

Notice of the Update of Digital Servo Software for Series 16i etc. (90B1/07)

1. Update Edition

| ROM series | eries New edition Available CNC | | | |
|------------|---------------------------------|--|--|--|
| 90B1 | 08 | FS15i, 16i, 18i, 21i, PMi-D, PMi-H | | |
| | | (with servo card equipped with 320C5410) | | |

2. Contents of change

- Lifting function against gravity at emergency stop is upgraded.
- Display of PDM's slave ready output Status is added.
- Parameter table has been changed.

3. Attached

| Attached 1 | Upgrade of Lifting Function against Gravity at Emergency Stop |
|------------|---|
|------------|---|

- Attached 2 Display of PDM's Slave Ready Output Status
- Attached 3 Changes of Standard Parameter Table

| | | | Notice of the update of Digital Serv Software 90B1 series | | | | |
|-----|------------|---------|--|----------------------------------|--|--|--|
| 02 | 2005.09.28 | S.Ikai | | Software Sold series | | | |
| 011 | 2006.07.25 | C. Ma | Newly designed | DRAW. No. B-65270EN/06-003 CUST. | | | |
| Ed. | Date | Design. | Description | FANUC LTD SHEET 2/11 | | | |

Attached 1. Upgrade of Lifting Function against Gravity at Emergency Stop

(1) Overview

From 90B1 Series edition A(01), "Lifting Function Against Gravity at Emergency Stop" is applied for lifting and stoping the vertical axis of a vertical machining center when the machine comes to an emergency stop or power failure. However, based on cutting conditons (postion relationship between work and tool) in compound machines, mechanical interference may occur due to the lifting motion by using this function.

In 90B1 Series edition G(07), additional parameter for lifting distance is added. The additional and original lifting distance parameters can be switched based on DI signal. When lifting distance parameter is set to be 0, the lifting motion can be disabled by using this setting.

(2) Series and editions of applicable servo software

(Series 16*i*-B,18*i*-B,21*i*-B,Power Mate *i*)

90B1 Series edition G(07) and subsequent editions

When this function is used, the following system software is required: B0H1/BDH1/DDH1-24 and subsequent editions (Series 16i/18i-MB)
B1H1/BEH1/DEH1-24 and subsequent editions (Series 16i/18i-TB)
BDH5-14 and subsequent editions (Series 18i-MB5)
DDH1-24 and subsequent editions (Series 21i-MB) (PMC-SB7 required)
DEH1-24 and subsequent editions (Series 21i-TB) (PMC-SB7 required)
88E1-03 and subsequent editions (Power Mate i-D) (PMC-SB6 required)
88E2-10 and subsequent editions (Power Mate i-H) (PMC-SB6 required)
88F3-01 and subsequent editions (Power Mate i-H) (PMC-SB6 required)

*This function is not supported by Series 15*i*.

(02) were modified in edition 02.

(3) Switching signal

Switching signal for lifting function against gravity at emergence stop

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------|--------|--------|--------|--------|--------|--------|--------|--------|
| G323 | SWDBS8 | SWDBS7 | SWDBS6 | SWDBS5 | SWDBS4 | SWDBS3 | SWDBS2 | SWDBS1 |

[Classification]

n] Input signal

[Function] Switch valid lifting distance paremter of lifting function against gravity at emergency stop. The end numbers of signal names means control axes' numbers.

Details:

When SWDBSx=0, No.2373 will be used in lifting function against gravity in emergency stop.

• When SWDBSx=1, No.2173 will be used in lifting function against gravity in emergency stop.

| | | | | Notice of the update of Digital Servo Software 90B1 series | | | |
|-----|------------|---------|----------------|---|--|-------|--|
| 02 | 2005.09.28 | S.Ikai | Modify (02). | | | | |
| 011 | 2006.07.25 | C. Ma | Newly designed | DRAW. No. B-65270EN/06-003 | | CUST. | |
| Ed. | Date | Design. | Description | Description FANUC LTD | | 3/11 | |

- The lifting distance is decided by SWDBSx status when emergency stop occurs. (After the occurrence of emergency stop, the change of SWDBSx status will not be immediately effective until the lifting motion is over and motor excitation is turned off.)
- Except the lifting distance parameters, the other parameters for lifting function against gravity at emergency stop are common and aren't affected by SWDBSx status.

| | , - | paramete | | functio | on bit mu etting of | tion uses Ist be set quick sto | to 1. | | | | | following is not |
|----|-----------------------------------|-----------------|---|---|--|--|---|--|--|--|--|---------------------|
| | | 0004/50 | | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 | , |
| | | 2204(FS | DBS2(#7) | - | - | type 2 at type 2 at | - | | | | | |
| | 2374(FS30 <i>i</i> ,16 <i>i</i>) | | | | | | Lifting | g time | | | | |
| | | [Valid | Unit of data] data range] nded value] | emerg time h machin brake occur y functions 8 to 32 Approx NOT 1 3 2 5 8 3 1 | ency stop has elaps ne elastic is effecti when the on is a qu 2767 ximately FE Specify an To use the Bms or loo | b. The dissed. This sed. This estrain the strain the excitation excitation arter of the 16 or 24 minutes of the lifting function east the portion east the strain estimates are the strain estimates and the strain estimates are the strain east the strain east the strain east the strain estimates are the strain estimates and the strain estimates are the strain es | tortion e functior nat is cau ating this on of amp he distar ns multiple o nction ag e lifting ti ing functio | f 8 as the ainst grav me. on is not | nction is nded to afting a v n can red turned of e lifting tin vity at em used, spe | executed decrease rertical a duced the ff. The in me. negency ecify the f | d after e the xis jus e shoc nitial v stop, s | nger |
| | | | | | <u>han or eq</u> | jual to the | one set ir | <u>the brak</u> | <u>e control</u> | | | ng ume. |
| | | | T | | han or eq | ual to the | | <u>n the brak</u> | e control | | | ng ume. |
| | 2005.00.22 | e n-c: | | | han or eq | ual to the | | Notice | | 1pdate o | | ital Servo |
| 02 | 2005.09.28 2006.07.25 | S.Ikai C. Ma | Newly des | | han or eq | ual to the | | Notice | of the u are 90B | 1pdate o | of Dig | |

| | | 2373(FS3 | 80 <i>i</i> ,16 <i>i</i>) | | | Distan | ce to | lift (1 | or SWDE | 3Sx=0) | | | | |
|-----|------------|----------------------------|--|---|---|--|---|---|---|---|---|--|-------------------------|-------------------------------------|
| | | [Valid | nit of data] data range] nded value] | nge] -32767 to 32767 | | | | | | rgency | | | | |
| | | | | lifting | oaramter distance ater to 0 v | e agains | t gra | wity | at eme | ergency | stop. | | - | - |
| | | 2173(FS3 | 80 <i>i</i> ,16 <i>i</i>) | | | Distan | ce to | lift (1 | or SWDE | 3Sx=1) | | | | |
| | | [Valid | nit of data] data range] nded value] | stop.T Detect -3276' Detect Detect This p lifting NO ' 1 2 3 | paramete The larger tion unit 7 to 32767 tion unit tion unit paramter distance TE If the brak being lifte value. The sign of coordinate Please us does not of | the valu 7 1µm : 0.1µm : against against d. So the of paramt es. e this fur | Appr Appr alid fo gravit ee, the actua ter is a | the la roxim roxim or SW ty at e brak al lifte as sa only | ately 50 ately 50 /DBSx= emerger d distance me as the in the ca | e distance 00 to -500 000 to -50 1. SWDB acy stop. working v ce might b ne sign of use that m | e to lift 000 Sx is s while th be diffe machin rechan | witchin e vertic rent fro ne's me | ng si al ax m set | gnal for is is tting hical |
| | | | | necess Brake | cotnrol f | unction e | enable | e/disa | ble bit | - | | | | ction is |
| | | 80 <i>i</i> ,16 <i>i</i>) | #7 | #6 BRKC | #5 | #4 | 1 | #3 | #2 | #1 | # | 0 | 1 | |
| | | | BRKC(#6) | | control f | unction i | s | | | | | | | |
| 02 | 2005.09.28 | S.Ikai | | <u>1:</u> er | | | | TITLE | | of the u re 90B1 | | | gital | Servo |
| 011 | 2006.07.25 | C. Ma | Newly des | igned | | | | DRAW. N | ^{10.} B· | ·65270E | N/06 ⁻ | ·003 | CL | JST. |
| Ed. | Date | Design. | | - | ription | | | | FANL | JC LTD | | SHEET | 5/ | /11 |

| | I |
|-----------------------------------|--|
| | 0: disable |
| | |
| | Activation delay |
| 2083(FS30 <i>i</i> ,16 <i>i</i>) | Brake control timer |
| | |
| [Unit of data] | ms |
| [Recommended value] | 100ms |
| | |
| | NOTE |
| | |
| | When vertical axis is connected with multi-axis amplifier, brake con |
| | function must be enable for all the axes connected to muliti-axis |
| | amplifier. |

Setting the period of time from the input of the emergency stop signal into the PSM until emergency stop operation is actually performed in the servo amplifier.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|-----------------------------------|----|--------|--------|----|----|----|----|----|
| 2210(FS30 <i>i</i> ,16 <i>i</i>) | | ESPTM1 | ESPTM0 | | | | | |

| ESPTM1 | ESPTM0 | Delay time |
|--------|--------|---------------|
| 0 | 0 | 50ms(default) |
| 0 | 1 | 100ms |
| 1 | 0 | 200ms |
| 1 | 1 | 400ms |

When using brake control, set delay time equal or longer than the setting of brake control timer.


Ex. when set brake control timer is 100ms,

ESPTM1(#6), ESPTM0(#5) = 0, 1 (100ms) should be set.

NOTE

For multi-axis amplifier, the dealy time should be the longest setting value among axes connected to multi-axis amplifier.

| | | | | ITTLE Notice of the update of Digital Servo Software 90B1 series | | | | |
|-----|------------|---------|----------------|--|--|-------|--|--|
| 02 | 2005.09.28 | S.Ikai | | | | | | |
| 011 | 2006.07.25 | C. Ma | Newly designed | DRAW. No. B-65270EN/06-003 CUST. | | CUST. | | |
| Ed. | Date | Design. | Description | FANUC LTD | | 6/11 | | |

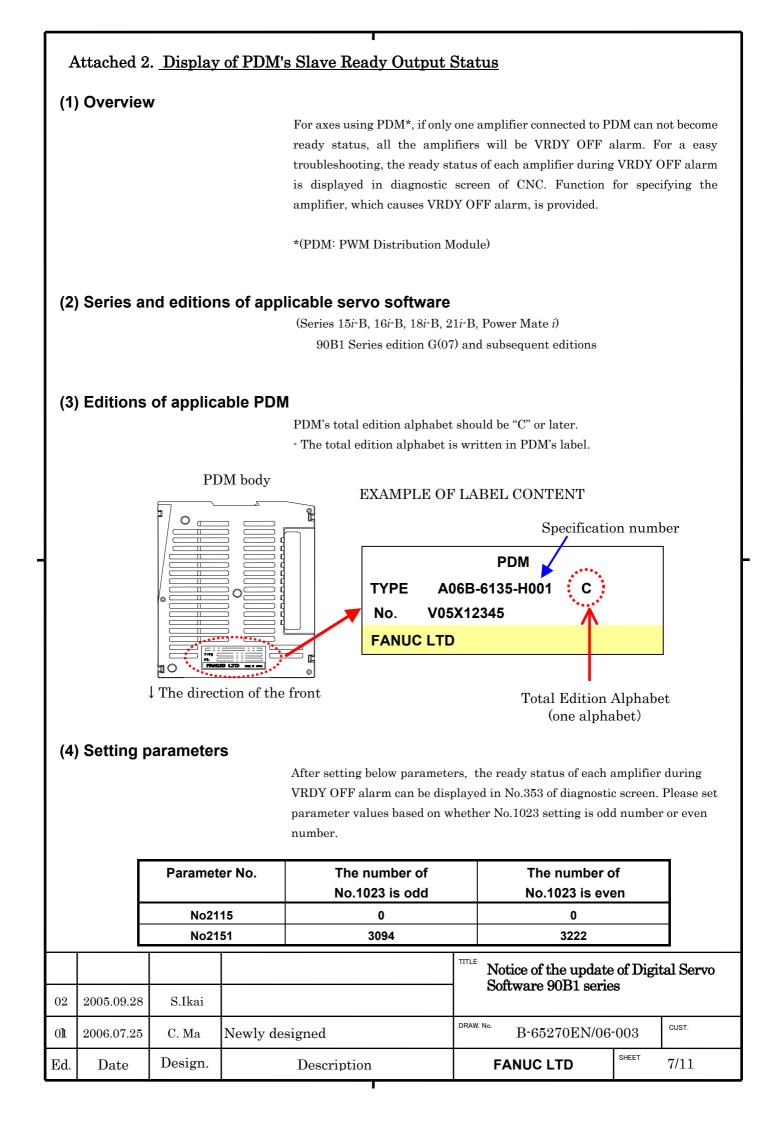

(5) Diagnose Display

DGN 353

Amplifier Ready Status during VRDY OFF (Decimal)

Confirming decimal number displayed in DGN353 can specify the amplifier that causes VRDY OFF alarm.

| | Ready S | Ready Status for amplifiers of slave 1 to 4 | | | | | | | |
|--------|--------------|---|---------------|--------------|--|--|--|--|--|
| DGN353 | (√: Re | eady status, > | ≺: Unready st | atus) | | | | | |
| | Slave1 | Slave2 | Slave3 | Slave4 | | | | | |
| 0 | \checkmark | \checkmark | \checkmark | \checkmark | | | | | |
| 1 | × | \checkmark | \checkmark | \checkmark | | | | | |
| 2 | \checkmark | × | \checkmark | | | | | | |
| 3 | × | × | \checkmark | \checkmark | | | | | |
| 4 | \checkmark | \checkmark | × | \checkmark | | | | | |
| 5 | × | \checkmark | × | \checkmark | | | | | |
| 6 | \checkmark | × | × | \checkmark | | | | | |
| 7 | × | × | × | \checkmark | | | | | |
| 8 | \checkmark | \checkmark | \checkmark | × | | | | | |
| 9 | × | \checkmark | \checkmark | × | | | | | |
| 10 | \checkmark | × | \checkmark | × | | | | | |
| 11 | × | × | \checkmark | × | | | | | |
| 12 | \checkmark | \checkmark | × | × | | | | | |
| 13 | × | \checkmark | × | × | | | | | |
| 14 | \checkmark | × | × | × | | | | | |
| 15 | × | × | × | × | | | | | |

| | | | | ^{IITLE} Notice of the update of Digital Servo Software 90B1 series | | | | |
|-----|------------|---------|----------------|--|--|-------|--|--|
| 02 | 2005.09.28 | S.Ikai | | | | | | |
| 011 | 2006.07.25 | C. Ma | Newly designed | DRAW. No. B-65270EN/06-003 | | CUST. | | |
| Ed. | Date | Design. | Description | FANUC LTD | | 8/11 | | |

Attached 3. Changes of Standard Parameter Table

- The standard parameters of HRV2 and HRV3 control for synchronous built-in servo motors (**D***i***s** series) are added.
 - Series and editions of applicable servo software

(Series 15*i*-B, 16*i*-B, 18*i*-B, 21*i*-B, Power Mate *i*) 90B1 Series edition H(08) and subsequent editions

- List of Motor Model and ID No. for newly added Motors (HRV2, 3 Control):

| | Motor Model | Motor ID No. | Reference | Motor Model | Motor ID No. | Reference |
|----------|----------------------|--------------|------------|----------------------|--------------|------------|
| ~ | D <i>İ</i> S85/400 | 423 | 200V Drive | D <i>İ</i> S85/400 | 424 | 400V Drive |
| (02) | D <i>İ</i> S260/300 | 427 | | D <i>İ</i> S260/300 | 428 | |
| <u> </u> | D <i>İ</i> S110/300 | 425 | | D <i>İ</i> S110/300 | 426 | |
| | D <i>İ</i> S260/600 | 429 | | D <i>İ</i> S260/600 | 430 | |
| _ | D <i>İ</i> S370/300 | 431 | | D <i>İ</i> S370/300 | 432 | |
| 02 | D <i>İ</i> S1200/250 | 435 | | D <i>İ</i> S1200/250 | 436 | |
| 02 | D <i>İ</i> S1500/200 | 437 | | D <i>İ</i> S1500/200 | 438 | |
| 02 | D <i>İ</i> S2100/150 | 439 | | D <i>İ</i> S2100/150 | 440 | |
| (02) | D <i>İ</i> S3000/150 | 441 | | D <i>İ</i> S3000/150 | 442 | |

* Please refer to Table 1 about the standard parameters.

(02) were added in edition 02.

*Parameters for OVC alarm of $D\dot{t}S260/600$ in Parameter Manual (B-65270EN/06) are changed.

• DiS260/600 (200V Drive) [Motor ID No. 429]

| Symbol | FS15 <i>i</i> | FS16 <i>i</i> ,18 <i>i</i> ,21 <i>i</i> ,PM <i>i</i> | Before Change | After Change |
|---------|---------------|--|---------------|--------------|
| POVC1 | No.1877 | No.2062 | 32722 | 32705 |
| POVC2 | No.1878 | No.2063 | 578 | 786 |
| POVCLMT | No.1893 | No.2065 | 1714 | 2331 |

• DiS260/600 (400V Drive) [Motor ID No. 430]

| Symbol | FS15 <i>i</i> | FS16 <i>i</i> ,18 <i>i</i> ,21 <i>i</i> ,PM <i>i</i> | Before Change | After Change |
|---------|---------------|--|---------------|--------------|
| POVC1 | No.1877 | No.2062 | 32731 | 32705 |
| POVC2 | No.1878 | No.2063 | 457 | 786 |
| POVCLMT | No.1893 | No.2065 | 1354 | 2331 |

| | | | | Notice of the update of Digital Servo Software 90B1 series | | | | |
|-----|------------|---------|----------------|---|--|-------|--|--|
| 02 | 2005.09.28 | S.Ikai | Add (02). | | | | | |
| 011 | 2006.07.25 | C. Ma | Newly designed | DRAW. No. B-65270EN/06-003 | | CUST. | | |
| Ed. | Date | Design. | Description | FANUC LTD SHEET 9/11 | | 9/11 | | |

| | | | | | | | I | (02) | 02 | | | | | |
|------------------------|--|--|------------------------------|--|--|--|--|--|---|--|--|--|--|--------------------------|
| | | Motor Model | | DiS85 /400 | DiS85 /400 | DiS110 /300 | DiS110 /300 | DiS260/ 300 (200V) | DiS260/ 300 (400V) | DiS260 /600 | DiS260 /600 | DiS370 /300 | DiS3 /300 | 2 |
| | | Motor Specification Motor ID No. | | (200V) 0483-B20x 423 | (400V) 0483-B20x 424 | (200V) 0484-B10x 425 | (400V) 0484-B10x 426 | (2007) 0484-B30x 427 | | (200V) 0484-B31x 429 | (400V) 0484-B31x 430 | (200V) 0484-B40 431 | (400) 0x 0484-E 432 | 340x |
| syn | nbol | FS15 <i>i</i> 1808 1809 1883 | 2004 | i,PMi 00001000 00000011 00000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 | 00001000 00000011 00000000 00000000 000000 | 00001000 00000011 00000000 00000000 | 00001000 0000001 00000000 | 1 00000 | 011 |
| | | 1884 1951 1952 1953 | 2007 2008 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 00000000 | 00000011 00000000 00000000 0000000 000000 | 00000000 00000000 00000000 00000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 00000000 | 0 00000 0 00000 0 00000 | 000 |
| | | 1954 1955 1956 1707 | 2011 2012 2013 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 00000000 00000000 00000000 00000000 | 0000000 0000000 0000000 0000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00001000 | 00000000 00000000 00000000 00000000 | 0 00000 0 00000 0 00000 0 00000 | 000 000 |
| | | 1708 1750 1751 2713 | 2014 2210 2211 | 00000000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00001000 00000100 00000000 10000100 | 00001000 00000100 00000000 10000100 | 00000000 00000100 00000000 10000100 | 00000 000000 000000 | 000 100 000 |
| PK PK PK | 2 | 2714 1852 1853 1854 | 2301 2040 2041 2042 | 00000000 344 -2368 -2491 | 00000000 172 -1184 -2491 | 00000000 156 -1045 -2448 | 00000000 78 -523 -2448 | 00000000 313 -2146 -2485 | 00000000 157 -1073 -2485 | 00000000 571 -4138 -2573 | 00000000 321 -2327 -2573 | 00000000 47 -333 | 0 00000 78 38 - | |
| PK PK PK | 1V 2V 3V | 1855 1856 1857 1858 | 2043 2044 2045 2046 | 242 -2164 0 -8235 | 242 -2164 0 -8235 | 420 -3763 0 -8235 | 420 -3763 0 -8235 | 326 -2919 0 -8235 | 326 -2919 0 -8235 | 240 -2146 0 -8235 | 213 -1907 0 -8235 | 26 -236 | 54 51 -2 0 | 264 2361 0 3235 |
| PO. BLC | A1 CMP FMX | 1859 1860 1861 1862 | 2047 2048 2049 2050 | 3897 0 0 956 | 3897 0 956 | 2241 0 956 | 2241 0 956 | 2889 0 0 956 | 2889 0 956 | 3931 0 956 | 4422 0 956 | 357 | 72 : 0 0 | 3572 0 0 956 |
| PO RE | K2 SERV MAX | 1863 1864 1865 1866 | 2051 2052 2053 2054 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 510 0 21 1894 | 51 2 | 10 0 21 | 510 0 21 1894 |
| PH EM PVI | YST IFCMP | 1867 1868 1869 1870 | 2055 2056 2057 2058 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 0 | 319 0 0 | 31 | | 319 0 0 0 |
| PPI TQI EM PO | BAS LIM IFLMT VC1 | 1871 1872 1873 1873 | 2059 2060 2061 2062 | 0 7282 0 32683 | 0 7282 0 32683 | 0 7282 0 32682 | 0 7282 0 32682 | 0 7282 0 32682 | 0 7282 0 32682 | 0 5352 0 32705 | 0 4758 0 32705 | 728 | 0 32 0 | 0 7282 0 2705 |
| PO TG PO | VČ2 ALMLV VCLMT 2VAUX | 1878 1892 1893 1894 | 2063 2064 2065 2066 | 1069 4 3172 0 | 1069 4 3172 0 | 1069 4 3173 0 | 1069 4 3173 0 | 1069 4 3173 0 | 1069 4 3173 0 | 786 4 2331 0 | 786 4 2331 0 | 78 232 | 32 4 | 782 4 2322 0 |
| FIL FAL VFI | TER LPH FLT BLM | 1895 1961 1962 1963 | 2067 2068 2069 2070 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| PBI SF(PSI | LCT CCML PTL LPH | 1964 1965 1966 1967 | 2071 2072 2073 2074 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| OS PDI PDI | CTPL PCH PCL FEX | 1970 1971 1972 1973 | 2077 2078 2079 2080 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| DP BLE MO | FZW ENDL DFCTL CURR | 1974 1975 1976 1979 | 2081 2082 2083 2083 | 0 0 1310 | 0 0 1310 | 0 0 1310 | 0 0 1310 | 0 0 0 1310 | 0 0 0 1310 | 0 0 963 | 0 0 856 | | 0 0 0 | 0 0 0 1121 |
| TDI MC | PLD NFB BSL BSTL CSPL | 1980 1981 1982 1983 | 2087 2088 2089 2090 | 0 0 0 0 | 0 0 0 0 | 000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| AD VM | CSPL FF1 PK3V CMP2 | 1984 1985 1986 1987 | 2091 2092 2093 2094 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| AH RA SM DE | DRTL DUSL ICNT PVPL | 1988 1989 1990 1991 | 2095 2096 2097 2098 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| ON INF | EPSL PA1 PA2 | 1992 1993 1994 1995 | 2099 2100 2101 2102 | 400 0 0 | 400 0 0 | 400 0 0 0 | 400 0 0 | 400 0 0 0 | 400 0 0 | 400 0 0 0 | 400 0 0 0 | 40 | 0 | 400 0 0 |
| AB AB TRO | LIM VOF TSH QCST 24PA | 1996 1997 1998 1999 | 2103 2104 2105 2106 | 0 0 1167 0 | 0 0 1167 0 | 0 0 1510 0 | 0 0 1510 0 | 0 0 3570 0 | 0 0 3570 0 | 0 0 4857 0 | 0 0 5464 0 | | 0 | 0 0 5020 0 |
| VLC RE BEI | GOVR SERV LLTC SSTCM | 1700 1701 1702 1703 | 2107 2108 2109 2110 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 | 0 0 0 |
| DE AM NF | TQLM IRDML ILT | 1704 1705 1706 | 2111 2112 2113 2127 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 |
| MF MF LP2 LP4 | NTCT WKCE WKBL 2GP 4GP | 1735 1736 1752 1753 1754 | 2128 2129 2130 2131 | 0 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 | | 0 0 0 | 0 0 0 |
| PH | 2GP 4GP 5GP DLY1 DLY2 5CSMM | 1755 1756 1757 1782 | 2132 2133 2134 2159 | 0000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 000000000000000000000000000000000000000 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 |
| TRO OV PO PO | QCUP CSTP VC21 VC22 | 1783 1784 1785 1786 | 2160 2161 2162 2163 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | 0 0 0 0 | | 0 0 0 0 | 0 0 0 0 |
| PO | VCLMT2 XCRT | 1787 1788 | 2164 2165 | 0 45 | 0 45 | 0 85 | 0 85 | 0 85 | 0 85 | 0 165 | 0 185 | 8 | 0 35 | 0 85 |
| | | | | | | | | | 1 | Notice o Software | | | f Digi | tal Servo |
| 02 | | .09.28 | S.Ikai | Add | | 1 | | | DRAW. No. | D 2 | | | 0.0 | CUST. |
| 01 Ed | | .07.25 | C. Ma | Newly | design | | | | | | 5270EN | | 03 HEET | |
| Ed. | | ate | Design. | | Description | | | | | FANUC | LID | | | 10/11 |

| | | | (02) | (02) | (02) | (102) | (02) | (02) | (02) | (02) | | |
|-----------------------------|---------------------------------------|----------------------|--|--|--|--|--|-----------------------------------|--|----------------------------------|--------|------------|
| | Motor Model | | DiS1200/ 250 | DiS1200/ 250 | DiS1500/ 200 | DiS1500/ 200 | DiS2100/ 150 | DiS2100/ 150 | DiS3000/ 150 | DiS3000/ 150 | | |
| | Motor Specification | | (200V) | (400V) 0485-B50x | (200V) | (400V) | (200V) 0487-B30x | (400V) | (200V) | (400V) | | |
| symbol | Motor ID No. FS15 <i>i</i> 1808 | | 435 1 <i>i</i> ,PM <i>i</i> 00001000 | 436 00001000 | 437 00001000 | 438 00001000 | 439 00001000 | 440 00001000 | 441 00001000 | 442 00001000 | | |
| | 1809 1883 1884 | 2004 2005 2006 | 00000011 00000000 00000000 | 000000011 00000000 00000000 | 000000011 00000000 00000000 | 000000011 00000000 00000000 | 000000011 00000000 00000000 | 000000011 00000000 00000000 | 000000011 00000000 00000000 | 00000011 00000000 00000000 | | |
| | 1951 1952 1953 | 2007 2008 2009 | 00000000 00000000 00000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 | 000000000000000000000000000000000000000 | 00000000 00000000 | | |
| | 1954 1955 | 2010 2011 | 000000000000000000000000000000000000000 | 00000000 | 00000000 | 00000000 | 00000000 | 00000000 00000000 | 00000000 00000000 | 00000000 00000000 00000000 | | |
| | 1956 1707 1708 | 2012 2013 2014 | 00000000 00001000 00001000 | 00000000 00001000 00001000 00000100 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 000000000000000000000000000000000000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | 00000000 00000000 00000000 | | |
| | 1750 1751 2713 | 2210 2211 2300 | 00000100 00000000 10000100 | 00000000 10000100 | 00000000 00000000 00000000 00000100 000000 | 00000000 00000000 00000000 00000000 0000 | 00000000 00000000 00000000 00000000 0000 | 00000100 00000000 10000100 | 00000000 00000000 00000000 00000100 000000 | 00000100 00000000 10000100 | | |
| PK1 PK2 | 2714 1852 1853 | 2301 2040 2041 | 00000000 517 -3361 | 00000000 291 -1891 | 640 -4779 | 00000000 360 -2688 | 637 -4762 | 00000000 359 -2679 | 817 -6084 | 10000000 459 -3422 | | |
| PK3 PK1V PK2V | 1854 1855 1856 | 2042 2043 2044 | -2408 430 -3850 | -2408 382 -3422 | -2619 839 -7513 | -2619 746 -6678 | -2620 1760 -15770 | -2620 1565 -14017 | -2616 1635 -14643 | -2616 1453 -13016 | | |
| PK3V PK4V POA1 | 1857 1858 1859 | 2045 2046 2047 | 0 -8235 2190 | 0 -8235 2464 | 0 -8235 1122 | 0 -8235 1263 | 0 -8235 535 | 0 -8235 602 | 0 -8235 576 | -8235 648 | | |
| BLCMP DPFMX POK1 | 1860 1861 1862 | 2048 2049 2050 | 0 0 956 | 0 0 956 | 0 0 956 | 0 956 | 0 956 | 0 0 956 | 0 0 956 | 0 0 956 | | |
| POK2 RESERV PPMAX | 1863 1864 1865 | 2051 2052 2053 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | 510 0 21 | | |
| PDDP PHYST EMFCMP | 1866 1867 1868 | 2054 2055 2056 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | 1894 319 0 | | |
| PVPA PALPH PPBAS | 1869 1870 1871 | 2057 2058 2059 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| TQLIM EMFLMT POVC1 | 1872 1873 1877 | 2060 2061 2062 | 5648 0 32074 | 5020 0 32074 | 7282 0 32682 | 6473 0 32700 | 7282 0 32682 | 7282 0 32682 | 7282 0 32682 | 7282 0 32682 | | |
| POVC2 TGALMLV POVCLMT | 1878 1892 1893 | 2063 2064 2065 | 803 4 2384 | 803 4 2384 | 1069 4 3173 | 845 4 2507 | 1069 4 3173 | 1069 4 3173 | 1069 4 3173 | 1069 4 3173 | | |
| PK2VAUX FILTER FALPH | 1894 1895 1961 | 2066 2067 2068 | 0 0 0 | 0 0 | 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 | | |
| VFFLT ERBLM PBLCT | 1962 1963 1964 | 2069 2070 2071 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| SFCCML PSPTL AALPH | 1965 1966 1967 | 2072 2073 2074 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| OSCTPL PDPCH PDPCL | 1970 1971 1972 | 2077 2078 2079 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 | | |
| DPFEX DPFZW BLENDL | 1973 1974 1975 | 2080 2081 2082 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| MOFCTL RTCURR TDPLD | 1976 1979 1980 | 2083 2086 2087 | 0 1028 0 | 0 914 0 | 0 1310 0 | 0 1165 0 | 0 1310 0 | 0 1310 0 | 0 1310 0 | 0 1310 0 | | |
| MCNFB BLBSL ROBSTL | 1981 1982 1983 | 2088 2089 2090 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 | 0 | | |
| ACCSPL ADFF1 VMPK3V | 1984 1985 1986 | 2091 2092 2093 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| BLCMP2 AHDRTL RADUSL | 1987 1988 1989 | 2094 2095 2096 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| SMCNT DEPVPL ONEPSL | 1990 1991 1992 | 2097 2098 2099 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | 0 0 400 | | |
| inpa1 Inpa2 Dblim | 1993 1994 1995 | 2100 2101 2102 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| ABVOF ABTSH TRQCST | 1996 1997 1998 | 2103 2104 2105 | 0 0 21246 | 0 0 23902 | 0 0 20598 | 0 0 23173 | 0 0 25635 | 0 0 28839 | 0 0 3667 | 0 0 4125 | | |
| LP24PA VLGOVR RESERV | 1999 1700 1701 | 2106 2107 2108 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| BELLTC MGSTCM DETQLM | 1702 1703 1704 | 2109 2110 2111 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 | | |
| AMRDML NFILT NINTCT | 1705 1706 1735 | 2112 2113 2127 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| MFWKCE MFWKBL LP2GP | 1736 1752 1753 | 2128 2129 2130 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| LP4GP LP6GP PHDLY1 | 1754 1755 1756 | 2131 2132 2133 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | 0 0 0 | | |
| PHDLY2 DGCSMM TRQCUP | 1757 1782 1783 | 2134 2159 2160 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 0 | | |
| OVCSTP POVC21 POVC22 | 1784 1785 1786 | 2161 2162 2163 | 0 0 | 0 0 | 0 0 | 0 0 | 0 0 0 | 0 0 | 0 0 | 0 0 | | |
| POVCLMT2 MAXCRT | 2 1787 1788 | 2164 2165 | 0 165 | 0 185 | 0 165 | 0 185 | 0 165 | 0 185 | 0 165 | 0 185 | | |
| | | | | | | | | | | f the upda | | rital Serv |
| 02 200 | 5.09.28 | S.Ikai | Add (| 02). | | | | | | e 90B1 se | | |
| 01 2000 | 6.07.25 | C. Ma | Newly | v design | ned | | | DRAW. No. | B-6 | 5270EN/0 | 06-003 | CUST. |
| | | Design. | 1 | | escripti | • | | 1 | FANUC | | SHEET | 11/11 |

Notice of the Update of Digital Servo Software for Series 30*i*/31*i*/32*i* (90D0 & 90E0)

1. Type of applied documents

| Name | FANUC AC SERVO MOTOR $\alpha i / \beta i$ series, LINEAR MOTOR LiS series, |
|----------------|--|
| | SYNCHRONOUS BUILT-IN SERVO MOTOR DiS series Parameter manual |
| Spec. No./Ver. | B-65270EN/06 |

2. Summary of Change

| Group | Name / Outline | New, Add Correct, Del | Applicable Date |
|----------------|--|--------------------------|--------------------|
| Basic Function | 1 Standard nonemator table has been sharred | Add | 2006.09 |
| Basic Function | 1. Standard parameter table has been changed | Add | 2006.09 |
| | 2. Pole Position Detection for detach has been available. | New | 2006.09 |
| | 3. Synchronous Axes Automatic Compensation has been available. | Add | 2006.09 |
| | | | |
| | | | |
| | | | |
| | | | |
| Optional | | | |
| Function | | | |
| Unit | | | |
| Maintenance | | | |
| Parts | | | |
| Notice | | | |
| Correction | | | |
| Another | | | |

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0 & 90E0) | | | | |
|-----|------------|---------|----------------|---|-------|-----|--|--|
| 1 | 2006.09.19 | Tang | Newly designed | DRAW. No. B-65270EN/06 | CUST. | | | |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 1/8 | | |

Notice of the Update of Digital Servo Software for Series 16i etc. (90B1/07)

1. Update Edition

| ROM series | New edition | Available CNC |
|------------|-------------|--|
| 90D0 | 14 | FS30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (For HRV4 control) |
| 90E0 | 14 | FS30i /31i /32i (For HRV2 and HRV3 control) |

2. Contents of change

- Standard parameter table has been changed
- Pole Position Detection for detach has been available.
- Synchronous Axes Automatic Compensation has been available.

Attached 1 Changes of Standard Parameter Table

Attached 2 Pole Position Detection for Detach

Attached 3. About Synchronous Axes Automatic Compensation

| | | | | e of Digi 30 <i>i</i> /31 <i>i /</i> 3 | tal Servo 32 <i>i</i> (90D0 | | |
|-----|------------|---------|----------------|---|--------------------------------|------|-------|
| 1 | 2006.09.19 | Tang | Newly designed | | B-65270EN/06 | -004 | CUST. |
| Ed. | Date | Design. | Description | | FANUC LTD | | 2/8 |

Attached 1. Changes of Standard Parameter Table

- The standard parameters of HRV2 and HRV3 control for synchronous built-in servo motors (Dis series) are added.
 - Series and editions of applicable servo software
 - (Series 30*i*, 31*i*, 32*i*)
 - 90D0 Series edition N(14) and subsequent editions
 - 90E0 Series edition N(14) and subsequent editions
 - List of Motor Model and ID No. for newly added Motors (HRV2, 3 Control):

| Motor Model | Motor ID No. | Reference | Motor Model | Motor ID No. | Reference |
|----------------------|--------------|------------|----------------------|--------------|------------|
| D <i>İ</i> S260/300 | 427 | 200V Drive | D <i>İ</i> S260/300 | 428 | 400V Drive |
| D <i>İ</i> S1200/250 | 435 | | D <i>İ</i> S1200/250 | 436 | |
| D <i>İ</i> S1500/200 | 437 | | D <i>İ</i> S1500/200 | 438 | |
| D <i>İ</i> S2100/150 | 439 | | D <i>İ</i> S2100/150 | 440 | |
| D <i>İ</i> S3000/150 | 441 | | D <i>İ</i> S3000/150 | 442 | |

* Please refer to Table 1 about the standard parameters.

- Parameters for OVC alarm of DiS260/600 of synchronous built-in servo motors (DiS series) are changed.
 - Series and editions of applicable servo software
 - (Series 30*i*, 31*i*, 32*i*)
 - 90D0 Series edition N(14) and subsequent editions
 - 90E0 Series edition N(14) and subsequent editions
 - \ast Please refer to Table 1 about the changes of standard parameters.
 - DiS260/600 (200V Drive) [Motor ID No. 429]

| Symbol | FS30 <i>i</i> ,31 <i>i</i> ,32 <i>i</i> | Before Change | After Change |
|---------|---|---------------|--------------|
| POVC1 | No.2062 | 32722 | 32705 |
| POVC2 | No.2063 | 578 | 786 |
| POVCLMT | No.2065 | 1714 | 2331 |

• DiS260/600 (400V Drive) [Motor ID No. 430]

| Symbol | FS30 <i>i</i> ,31 <i>i</i> ,32 <i>i</i> | Before Change | After Change |
|---------|---|---------------|--------------|
| POVC1 | No.2062 | 32731 | 32705 |
| POVC2 | No.2063 | 457 | 786 |
| POVCLMT | No.2065 | 1354 | 2331 |

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0 & 90E0) | | | | |
|-----|------------|---------|----------------|---|-------|-----|--|--|
| | | | | | | | | |
| 1 | 2006.09.19 | Tang | Newly designed | DRAW. No. B-65270EN/06-0 | CUST. | | | |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 3/8 | | |

| symbo | Table1) Stan | dard para Motor Model Motor Specification Motor ID No. FS30i, 16iet | DiS260/ 300 (200V) | able for ch DiS260/ 300 (400V) 0484-B30x 428 | DiS260/ 600 (200V) | DiS260/ 600 (400V) | DiS1200/ 250 (200V) | DiS1200/ 250 (400V) | DiS1500/ 200 (200V) | DiS1500/ 200 (400V) | DiS2100/ 150 (200V) | DiS2100/ 150 (400V) | DiS3000/ 150 (200V) | DiS3000/1 50(400V) |
|---|--|--|---|---|--|---|---|--|---|--|---|---|--|---|
| PK1 PK1 PK2 PK3 PK3V PK4V PK4V PCA1 BLCM DPFM POVC PCA2 PCM2 PCM2 PCM2 PCM2 PCM2 PCM2 PCM2 PCM | 1808 1809 1883 1884 1951 1952 1953 1955 1956 1707 1708 1750 1751 2713 2714 1852 1853 1854 1855 1855 1855 1855 1856 1857 1858 1856 1857 1858 1859 1858 1859 1850 1856 1857 1858 1855 1855 1855 1855 1855 1855 | C. 2003 2004 2005 2006 2007 2008 2009 2010 2011 2012 2013 2014 2210 2014 2210 2014 2012 2013 2014 2014 2012 2013 2014 2014 2014 2015 2006 2007 2014 2040 2041 2042 2043 2044 2044 2045 2046 2055 2056 2059 2061 2062 2068 2069 2071 2073 2074 2073 2074 2077 2078 | 00001000 0000001 00000000 00000000 000000 | 0000011 00000000 00000000 000000000 000000000000 000000000000000000000000000000000000 | 00001000 00000011 0000000 0000000 000000 | 00001000 00000011 0000000 0000000 000000 | $\begin{array}{c} 00001000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | $\begin{array}{c} 0000000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | $\begin{array}{c} 00001000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | 00001000 00000011 0000000 0000000 000000 | $\begin{array}{c} 00001000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | $\begin{array}{c} 00001000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | $\begin{array}{c} 00001000\\ 00000011\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ | $\begin{array}{c} 00001000\\ 0000000\\ 0000000\\ 0000000\\ 0000000\\ 000000$ |
| PDPC DPFE BLEN MOFC RTCL TDPL BLBS ROBS ACCS ADFF BLCM AHDF | 1972 'X 1973 W 1974 DL 1975 STL 1976 JRR 1979 D 1980 FB 1981 L 1982 STL 1983 SPL 1984 1 1985 G3V 1986 IP2 1987 RT 1988 | 2079 2080 2081 2082 2083 2086 2087 2088 2089 2090 2091 2092 2093 2094 2095 | | 0 0 0 0 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 963 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 856 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1028 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 914 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1165 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 0 0 1310 0 0 0 0 0 0 0 0 0 0 0 0 0 |
| RADU SMCI DEPV ONEF INPA: ABUC RESE BELL MGS: DETC AMRT NFILT NFILT NFILT NFWI MFWI MFWI LP2G LP4G LP4G LP4G LP4G LP4G LP4D LP4D LP4D LP4D LP4D LP4D LP4D LP4D | ISL 1989 VT 1990 VPL 1991 VSL 1992 1 1993 2 1994 M 1995 DF 1996 H 1995 DF 1996 PA 1999 PA 1990 RV 1701 RV 1701 RCM 1703 NLM 1705 CT 1753 P 1753 P 1755 Y1 1755 Y1 1756 | 2096 2097 2098 2099 2100 2101 2102 2103 2104 2105 2106 2105 2106 2107 2108 2109 2110 2111 2112 2113 2127 2128 2129 2130 2131 2132 2133 2134 2159 | | 0 0 0 400 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 3570 0 0 0 0 | $\begin{smallmatrix} & & & & \\ & & & & \\ & & & & \\ & & & & $ | $\begin{array}{c} & 0 \\ & 0 \\ & 400 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 5464 \\ & 0 \\ $ | $egin{array}{c} 0 \\ 0 \\ 400 \\ 0 \\ 0 \\ 0 \\ 0 \\ 21246 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ $ | 0 400 0 23902 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 400 0 20598 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | $egin{array}{c} 0 \\ 0 \\ 400 \\ 0 \\ 0 \\ 0 \\ 23173 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ $ | $\begin{smallmatrix}&&&0\\&&&&0\\&&&&0\\&&&&&&$ | $egin{array}{c} 0 \\ 400 \\ 0 \\ 0 \\ 0 \\ 0 \\ 28839 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ 0 \\ $ | 0 400 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | 0 400 0 0 4125 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 |
| TRQC OVCS POVC POVC | CUP 1783 STP 1784 C21 1785 C22 1786 CLMT2 1787 | 2160 2161 2162 2163 2164 2165 | 0 0 0 85 | ō õ | 0 0 0 0 165 | 0 0 0 0 185 | 0 0 0 0 165 | 0 0 0 0 185 | | 185 ice of th | 165 ne Upda | | | 0 0 185 ervo |
| | | | | | | | | | | ware fo 0E0) | or Serie | s 30 <i>i</i> /31 | .i /32i (9 | 90D0 |
| 1 | 2006.09.19 |) Tang | g N | ewly de | signed | | | DI | RAW. No. | B-652 | 70EN/0 | | CUST. | |
| Ed. | Date | Desig | gn. | | Desc | ription | | | FA | NUC L | TD | SHEET | 4/8 | |

Attached 2. Pole Position Detection for Detach

(1) Outline

Untill now the axis which was using Pole Position Detection function in Synchronous Built-in Servo Motor was not able to change motor by using detach function. From this revision, it is available to use pole position detection function and detach function together.

Moreover, the function to assure the safety of the axis, in which the Pole Position Detection is not finished, has also been added.

(2) Software version

(Series 30i, 31i, 32i,)

Series 90D0/N(14) and subsequent editions Series 90E0/N(14) and subsequent editions

(3) Caution

1) In the motor which requires pole position detection, it is necessary that each motor and encoder are the same type when motor and encoder are replaced by using detach.

2) This function is only available with the following CNC software. If you use CNC software except the following version, you can't use detach with axis appling pole position detection.

(version 20.2 or later) FS30i-A : G002, G012, G022, G032 FS31i-A5 : G121, G131 FS31i-A : G101, G111 FS32i-A : G201

(version 03.2 or later) FS30i-A : G003, G013, G023, G033 FS31i-A5 : G123, G133 FS31i-A : G103, G113 FS32i-A : G203

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0 & 90E0) | | | |
|-----|------------|---------|----------------|---|-------|-------|--|
| 1 | 2006.09.19 | Tang | Newly designed | DRAW. No. B-65270EN/06-0 | 004 | CUST. | |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 5/8 | |

(4) Procedure for detach

In case of using detach, it is nesseccery that Pole Position Detection is re-executed or AMR offset (No.2139) is rewritten to appropriate value, because the relation between pole position of motor and Z-signal position of encoder is changed. In the before specification, however, NC power off/on operation was required in order to re-execute pole position detection or to rewrite AMR offset after the completion of Pole Position Detection.

From this version, in order to use detach and Pole Position Detection together, re-executing of Pole Position Detection or rewriting of AMR offset after the completion of Pole Position Detection is available without requiring NC power off/on operation.

In the axis applying Pole Position Detection, the detection is executed according to the following procedure.

- 1) Start detach by G124 or parameter No.12#7 (Completion signal Fn159="0")
- 2) Rewrite AMR offset (No.2139) to appropriate value using manual or G10. *1)
- 3) Release detach
- 4) Display alarm DS0650 for a request of pole position detection. *2)
- 5) If abusolute encoder is applied and AMR offset isn't "0", after releasing alarm by reset, command is acceptable.
- (Completion signal Fn159="1")
- 6) If abusolute encoder is applied and AMR offset is "0", after detection and releasing alarm by reset, command is acceptable. (Completion signal Fn159="0", after detection, completion signal Fn159="1")
- 7) If incremental encoder is applied, after detection and releasing alarm by reset, command is acceptable.
 (Completion signal Fn159="0", after detection, completion signal Fn159="1")

If AMR offset is rewritten except during detach, power off request appears.

If abusolute encoder is applied and you require pole position detection after releasing detach, AMR offset should be set to "0".

The setting which alarm DS0650 dosen't appear is possible by parameter. Refer to next section (5).

(5) Enhanced safety

As specification of Pole Position Detection function, torque is not be generated in the axis until Pole Position Detection has finished. (Servo-off state) Therefore, customs need to prepare the ladder program to watch Pole Position Detection completion signal, in order to judge the timing to take off the brake of an axis, or to give moving command to the axis.

When pole position detection is unfinished (No.2213#7=1 and Fn159="0"), the following operation is performed, and even though customs don't process ladder program, the safty still can be assured.

1) Changed into inter lock state. (Each axis is stated in inter lock. To display "inter lock/start lock" =1 on diagnosis display No.0000.)

2) Servo preparation completion signal SA is OFF. (for all axes, SA is off.)

3) Display alarm for request of Pole Position Detection (possible to clear by reset.)

| | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0 & 90E0) | | | |
|-----|------------|---------|----------------|---|-------|-----|--|
| 1 | 2006.09.19 | Tang | Newly designed | DRAW. No. B-65270EN/06 | CUST. | | |
| Ed. | Date | Design. | Description | FANUC LTD | SHEET | 6/8 | |

Note1) By using the parameter showing in this page, when pole position detection is unfinished, it is possible to make servo preparation completion signal SA OFF.

Note2) By using the parameter showing in this page, even if pole position detection is unfinished, it is possible not to display alarm DS0650.

Alarm number and message

| Alarm No. | Message | Cause | | | | | |
|-----------|------------------------|---|--|--|--|--|--|
| DS0650 | Pole Detection Request | Pole position detection is unfinished (Fn159=0) in | | | | | |
| | | absolute axis (No.1815#5=1). | | | | | |
| | | Pole position detection has just changed unfinished | | | | | |
| | | (Fn159=0) after detection completed once in | | | | | |
| | | incremental axis (No.1815#5=0). | | | | | |

Parameter

1

Ed.

| | #7 | #6 | #5 | #4 | #3 | #2 | #1 | #0 |
|------------------------|----|----|----|----|----|----|-----|-----|
| 1809 (FS 30 <i>i</i>) | | | | | | | PAD | SAN |

| | | SAI | N (#0) | unfinished (No.2213#7 signal SA <fn000.6> for</fn000.6> | 1 a | If there is the axis which pole position detection is and Fn159="0"), servo preparation completion e path belonging to the axis and servo preparation axis SA8-SA1 <fn186.7-fn186.0> belonging to the</fn186.7-fn186.0> |
|----|------------|---------|-----------|---|--------------------------------------|--|
| | | | | brake should be releated (Fn159=1) and serve | ısed pı elea | detection is applied to gravity axis, basically a ed depending on detection completion signal preparation completion signal SA. If you ease a brake by servo preparation completion arameter. |
| | | PA | O (#1) | unfinished (No.2213#7= 0: Display alarn | 1 an DS | if there is the axis which pole position detection is and Fn159="0"), S0650 (Pole detection request) m DS0650 (Pole detection request) |
| | | | | Note 1) The appearance co On condition that p absolute axis (No.18 On condition that unfinished (Fn159= axis (No.1815#5=0). 2) If this alarm occur | ndit ole p 15# 0) a s, p | ition of this alarm is deferent as follows. position detection is unfinished (Fn159=0) in |
| | | | | | | Notice of the Update of Digital Servo Software for Series 30 <i>i</i> /31 <i>i</i> /32 <i>i</i> (90D0 & 90E0) |
| | 2006.09.19 | Tang | Newly dea | signed | | DRAW. No. B-65270EN/06-004 CUST. |
| l. | Date | Design. | | Description | | FANUC LTD SHEET 7/8 |

Attached 3. About Synchronous Axes Automatic Compensation

(1) Outline

Synchronous Axes Automatic Compensation Function is the function to compensate slowly a commanded position of slave axis to reduce a difference of torque command between master axis and slave axis by observing it. By applying this function, the current generated by pulling axes each other can be reduced and the heat produced as the result also can be reduced.

From this version, Synchronous Axes Automatic Compensation Function is available for servo soft of FS 30*i*, 31*i*, 32*i*. Please refer parameter manual B-65270EN/06 [4.18 SYNCHRONOUS AXES AUTOMATIC COMPENSATION] for details.

Moreover, Compensation Maintenance Function to stop update the compensation by DI signal has been added. Please use this function when you need to stop update of compensation temporarily and to give priority to the stability of axis feed, like at the time of finish cutting.

(2) Software version

(Series 30i, 31i, 32i,)

Series 90D0/N(14) and subsequent editions Series 90E0/N(14) and subsequent editions

(3)Parameter Setting

In order to use Compensation Maintenance Function of Synchronous Axes Automatic Compensation Function, you need to set the following bit parameter SYNDI and use the PMC signal G323. And you have to set these parameters to even-axis only (slave-axis).

